



9950 Cotton Picker



 
JOHN DEERE

TECHNICAL MANUAL 9950 Cotton Picker

TM1349 (01Mar89) English

TM1349 (01Mar89)

LITHO IN U.S.A.
ENGLISH



Contents

9950 COTTON PICKER TECHNICAL MANUAL TM-1349 (MAR-89)

SECTION AND GROUP CONTENTS

SECTION 10—GENERAL

- Group 00—Safety
- Group 05—General Specifications
- Group 10—Predelivery, Delivery and After-Sale Services
- Group 15—Fuels and Lubricants

SECTION 20—ENGINE REPAIR

- Group 05—Remove/Install Engine
- Group 10—Remove/Install Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Remove/Install Air Intake System
- Group 10—Remove/Install Diesel Fuel System
- Group 15—Control Linkage

SECTION 40—ELECTRICAL REPAIR

- Group 04—Starter Circuit Replacement
- Group 05—Motorola Charging Circuit
- Group 06—Nippondenso Charging Circuit
- Group 10—Monitor System
- Group 15—Lights, Instruments and Accessory Circuit
- Group 20—Connector Repair

SECTION 50—POWER TRAIN REPAIR

- Group 05—Eaton Hydrostatic Drive
- Group 06—Sundstrand Hydrostatic Drive
- Group 10—Transmission
- Group 14—Remove/Install Final Drive
- Group 15—Axle
- Group 16—Differential

SECTION 60—STEERING/BRAKES REPAIR

- Group 04—Remove/Install Steering Components
- Group 05—Steering Column
- Group 06—Steering Metering Pump
- Group 07—Steering Valve
- Group 08—Steering Motor
- Group 10—Brakes
- Group 14—Remove/Install Brake Accumulator
- Group 15—Brake Accumulator Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05—Reservoir
- Group 10—Hydraulic Pump—22.6 cm³ (1.38 cu. in.)
- Group 11—Hydraulic Pump—40 cm³ (2.4 cu. in.)
- Group 15—Main Control Valve
- Group 20—Hydraulic Cylinders
- Group 25—Hydraulic Motors
- Group 30—Height Control
- Group 35—Pressure Control Valve (S.N. -4000)
- Group 40—Basket Compactor/Conveyor Control Valve

SECTION 80—AXLES AND WHEEL REPAIR

- Group 05—Guide Axle
- Group 10—Drive Wheel

SECTION 90—OPERATOR STATION REPAIR

- Group 05—Air Conditioning System
- Group 06—Air Conditioning System Service
- Group 10—Air Intake (Pressurizer) System
- Group 15—Heating System
- Group 20—Seat
- Group 25—Miscellaneous

SECTION 100—PICKING UNIT REPAIR

- Group 05—Picking Units Removal/Installation
- Group 10—Grid Bars and Pressure Plates
- Group 15—Spindles and Picker Bars
- Group 20—Picker Drums, Drive Shafts and Gears
- Group 25—Idler Gears and Bearings
- Group 30—Doffers
- Group 35—Moistener Column
- Group 40—Gear Cases, Universal Joints and Countershafts
- Group 45—Picking Unit Cabinets and Cam Tracks

SECTION 110—PICKING UNIT LUBRICATION SYSTEM REPAIR

- Group 05—Lubrication System
- Group 10—Transfer Pump

SECTION 120—WATER SYSTEM REPAIR

- Group 05—Water System

SECTION AND GROUP CONTENTS—Continued

SECTION 130—AIR SYSTEM REPAIR

Group 05—Air System

SECTION 140—BASKET UNLOADING AND ME- TERING SYSTEM REPAIR

Group 05—Basket Unloading System

SECTION 199—SPECIAL TOOLS

Group 05—Picking Unit Repair Tools

Group 10—Fabricated Tools

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 05—Air Intake System

Group 10—Diesel Fuel System

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 05—System Operational Checks

Group 10—Electrical Diagnosis

Group 15—Electrical System Checks

Group 20—Electrical System Adjustments

Group 25—Electrical System Diagrams

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 05—Eaton Hydrostatic Drive System

Group 06—Sundstrand Hydrostatic Drive System

Group 10—Transmission

Group 15—Axle and Differential

SECTION 260—STEERING/BRAKES OPERATION AND TESTS

Group 05—Steering

Group 10—Brakes

SECTION 270—HYDRAULIC OPERATION AND TESTS

Group 05—Hydraulic System

Group 10—Hydraulic Pump

Group 15—Main Control Valve

Group 20—Hydraulic Cylinders

Group 25—Hydraulic Motors

Group 30—Height Control

Group 35—Pressure Control Valve

Group 40—Basket Compactor/Conveyor Control Valve

SECTION 290—OPERATOR STATION OPERATION AND TESTS

Group 05—Air Conditioning System Operation

Group 10—Air Conditioning System Diagnosis and Tests

Group 15—Air Intake (Pressurizer) System

Group 20—Heating System

SECTION 300—PICKING UNIT OPERATION AND TESTS

Group 05—Picking Unit System

SECTION 310—PICKING UNIT LUBRICATION SYS- TEM OPERATION AND TESTS

Group 05—Lubrication System

SECTION 320—WATER SYSTEM OPERATION AND TESTS

Group 05—Water System

SECTION 330—AIR SYSTEM OPERATION AND TESTS

Group 05—Air System

SECTION 399—SPECIAL TOOLS

Group 05—Purchased Tools

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1988
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
1986 and 1988

N01;0000 -AC 060389

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com