


84 Loader Repair

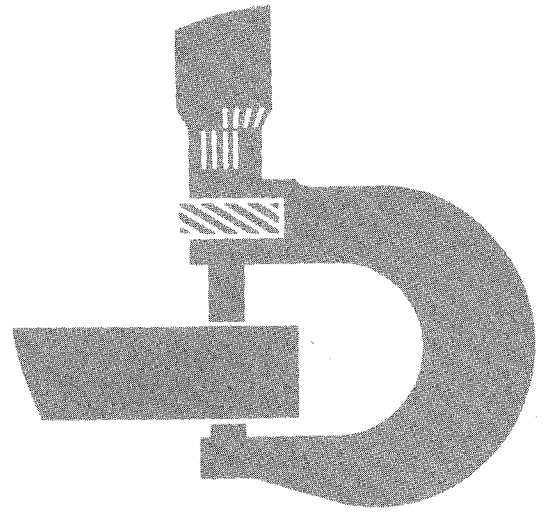

TECHNICAL MANUAL

TM1398 (08MAY90)

LITHO IN U.S.A.

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

**IMPORTANT: Please remove this page and route
through your service department.**

This is a complete revision for TM1398, 84 Loader.

To make miscellaneous additions and corrections.

To update material per earlier and later units throughout
manual.

Contents

SECTION I—GENERAL INFORMATION

- Group I—Safety
- Group II—General Specifications
- Group III—Torque Values
- Group IV— Fuels and Lubricants
- Group V—Inspection Procedures

SECTION 01—WHEELS

- Group 0110—Powdered Wheels and Fastenings

SECTION 02—AXLES AND SUSPENSION SYSTEMS

- Group 0200—Removal and Installation
- Group 0210—Differential or Bevel Drive
- Group 0225—Input Drive Shafts and U-Joints
- Group 0250—Axle Shaft, Bearings, and Reduction Gears

SECTION 03—TRANSMISSION

- Group 0300—Removal and Installation
- Group 0315—Controls Linkage
- Group 0350—Gear, Shafts, Bearings, and Power Shift Clutch
- Group 0360—Hydraulic System

SECTION 04—ENGINE

- Group 0400—Removal and Installation

SECTION 05—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling System
- Group 0515—Speed Controls and Manual Fuel Shut-off Linkage
- Group 0520—Intake System
- Group 0560—External Fuel Supply Systems

SECTION 09—STEERING SYSTEM

- Group 0960—Hydraulic System

SECTION 10—SERVICE BRAKES

- Group 1011—Active Elements
- Group 1015—Controls Linkage
- Group 1060—Hydraulic System

SECTION 11—PARK BRAKE

- Group 1111—Active Elements
- Group 1115—Controls Linkage

SECTION 16—ELECTRICAL SYSTEMS

- Group 1672—Alternator, Regulator, and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1675—Systems Control

SECTION 17—FRAME, CHASSIS

- Group 1740—Frame Installation
- Group 1749—Chassis Weights

SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

SECTION 19—SHEET METAL AND STYLING

- Group 1910—Hood or Engine

SECTION 31—LOADER

- Group 3102—Bucket
- Group 3115—Controls Linkage
- Group 3140—Frames
- Group 3160—Hydraulic System

SECTION 99—DEALER FABRICATED TOOLS

- Group 9900—Dealer Fabricated Tools

Alphabetical Index

Section I GENERAL INFORMATION

Contents

Page

Group I—Safety

Park Machine Safely	I-I-3
Service Machine Safely	I-I-4
Use Seat Belt	I-I-6
Live with Safety	I-I-9

Group II—General Specifications

Machine	I-II-1
Engine	I-II-2
Fluid Capacities	I-II-4

Group III—Torque Values

Group IV— Fuels and Lubricants

Engine Oil	I-IV-2
Transmission Oil	I-IV-3
Differential Oil	I-IV-4
Hydraulic Oil	I-IV-5
Grease	I-IV-6

Group V—Inspection Procedures

PIP I	I-V-6
PIP II	I-V-8

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



O53,FLAME -19-26JAN90


TS227 -UN-23AUG88

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

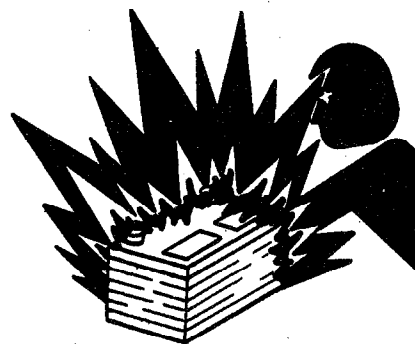

O53,SPARKS -19-26JAN90


TS204 -UN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

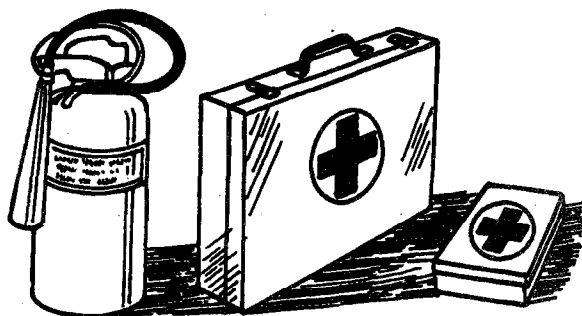

O53,FIRE2 -19-26JAN90

TS291 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com