

655B and 755B Crawler Loader Repair

For complete service information also see:

655B and 755B Crawler Loader

Operation and Test	TM1333
6068 Engine	CTM8
6414 Engine	CTM4
Starting Motor and Actuator	CTM77
Undercarriage Appraisal Manual	SP326

**John Deere Dubuque Works
TM1478 (11MAY94)**

LITHO IN U.S.A.
ENGLISH

Contents

SECTION 00—GENERAL INFORMATION

- Group 0001—Safety Information
- Group 0002—General Specifications
- Group 0003—Torque Values
- Group 0004—Fuels and Lubricants

SECTION 01—TRACKS

- Group 0130—Track System

SECTION 02—AXLES AND SUSPENSION SYSTEMS

- Group 0201—Drive Axle Housing and Support
- Group 0250—Axle Shaft, Bearings and Reduction Gears

SECTION 03—TRANSMISSION

- Group 0300—Removal and Installation
- Group 0315—Controls Linkage
- Group 0325—Input Drive Shafts And U-Joints
- Group 0360—Hydraulic System (Hydrostatic Transmission)

SECTION 04—ENGINE

- Group 0400—Removal and Installation
- Group 0416—Turbocharger
- Group 0417—Water Pump
- Group 0418—Thermostats
- Group 0421—Fuel Transfer Pump
- Group 0429—Fan Belt Tightener

SECTION 05—ENGINE AUXILIARY SYSTEM

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0530—External Exhaust System
- Group 0560—External Fuel Supply System

SECTION 07—CLUTCH (COLD WEATHER DISCONNECT)

- Group 0715—Controls Linkage
- Group 0752—Elements

SECTION 08—SPLITTER DRIVE

- Group 0851—Gears, Shafts and Bearings

SECTION 11—PARK BRAKE

- Group 1100—Removal and Installation
- Group 1111—Active Elements
- Group 1115—Controls Linkage
- Group 1160—Hydraulic System

SECTION 15—EQUIPMENT ATTACHING

- Group 1511—Drawbar
- Group 1512—Towbar

SECTION 16—ELECTRICAL SYSTEM

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1675—System Controls
- Group 1676—Instruments and Indicators
- Group 1677—Motors and Actuators

SECTION 17—FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740—Frame Installation
- Group 1746—Frame Bottom Guards
- Group 1749—Chassis Weights

SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

SECTION 19—SHEET METAL AND STYLING

- Group 1910—Hood or Engine Enclosure
- Group 1921—Grille and Grille Housing

Continued on next page

**SECTION 20—SAFETY, CONVENIENCE AND
MISCELLANEOUS**

Group 2003—Fire Extinguisher

Group 2004—Horn and Warning Devices

Group 2006—Cigar Lighter

SECTION 31—LOADER

Group 3102—Bucket

Group 3115—Controls Linkage

Group 3140—Frames

Group 3160—Hydraulic System

SECTION 99—DEALER FABRICATED TOOLS

Group 9900—Dealer Fabricated Tools

Index

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com