

# **6100, 6500, 6600 Self-Propelled Sprayers**

**For complete service information also see:**

**3029, 4039, 4045,  
6059 and 6068 Engines . . . . . CTM8**

**Alternators and Starting Motors . . . . . CTM77**

**John Deere Des Moines Works  
TM1511 (05DEC97)**

LITHO IN U.S.A.  
ENGLISH

# Contents

## SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuels and Lubricants

## SECTION 20—ENGINE REPAIR

- Group 05—Remove and Install Engine
- Group 10—Cooling System

## SECTION 30—FUEL AND AIR SYSTEMS

- Group 05—Air Intake and Exhaust
- Group 10—Diesel Fuel System

## SECTION 40—ELECTRICAL REPAIR

- Group 05—Battery
- Group 10—Starting System
- Group 15—Charging System
- Group 20—Engine Electrical Components
- Group 25—Lights, Instruments, and Accessory Circuit Repair
- Group 30—Connector Repair
- Group 35—Machine Monitor System
- Group 40—Solution Control/Monitor System
- Group 45—Solution Pump Electric Clutch
- Group 50—Retractable Ladder

## SECTION 50—POWER TRAIN REPAIR

- Group 05—Remove and Install Hydrostatic Components
- Group 10—Hydrostatic Drive Repair
- Group 15—Power Wheel Repair

## SECTION 60—STEERING AND BRAKES

- Group 05—Remove and Install Steering Components
- Group 10—Steering Column Repair
- Group 15—Steering Valve Repair
- Group 20—Steering Motor—Single Wheel
- Group 25—Steering Cylinder—Wide Axle
- Group 30—Brake System Repair
- Group 35—Front Wheel and Axle

## SECTION 70—HYDRAULIC SYSTEM

- Group 05—Hydraulic Pump
- Group 10—Hydraulic Valves
- Group 15—Hydraulic Cylinders
- Group 20—Hydraulic Filter/Manifold
- Group 25—Oil Cooler
- Group 30—Hydraulic Reservoir

## SECTION 80—SOLUTION SPRAY SYSTEM

- Group 05—Nozzle Repair
- Group 10—Solution Tank
- Group 15—Solution Pump
- Group 20—Solution Control Valves

## SECTION 90—OPERATOR'S STATION REPAIR

- Group 05—R-12 Air Conditioning System Service
- Group 06—R134a Air Conditioning System Service
- Group 10—R-12 Air Conditioning System Repair
- Group 11—R134a Air Conditioning System Repair
- Group 15—Air Intake (Pressurizer) System Repair
- Group 20—Seat Repair
- Group 25—Operator's Cab
- Group 30—Controls
- Group 35—Cab Heater (If Equipped)

## SECTION 220—ENGINE OPERATION AND TESTS

- Group 10—Diagnostic Information

## SECTION 230—FUEL/AIR OPERATION AND TESTS

- Group 10—Diagnostic Information

## SECTION 240—ELECTRICAL SYSTEM OPERATION, TESTS AND ADJUSTMENTS

- Group 01—Theory of Operation
- Group 02—Electrical Diagrams
- Group 03—Diagnostic Information
- Group 05—Charging System
- Group 10—Starting System
- Group 15—Lights and Accessories
- Group 16—Fuses and Relays

Continued on next page

10  
20  
30  
40  
50  
60  
70  
80  
90  
220

- Group 20—Machine Monitor System
- Group 24—Agitation Solenoid Valve System—6600
- Group 25—Solution Control System without (ERC)
- Group 26—Electronic Rate Control (ERC) Solution System
- Group 30—Air Conditioning System
- Group 31—Pressurizer/Blower System
- Group 35—Fuel Control System
- Group 40—Tread Adjust System (If Equipped)
- Group 45—Rear Fold Boom Control System
- Group 46—Front Fold Boom Control System
- Group 50—Ground Speed Control System
- Group 55—Auxiliary Hydraulics System (If Equipped)
- Group 60—Windshield Wiper System
- Group 65—Retractable Ladder System—6500, 6600
- Group 70—Air Seat System (If Equipped)

**SECTION 250—POWER TRAIN OPERATION AND TESTS**

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—System Tests
- Group 20—System Adjustments
- Group 25—Theory of Operation

**SECTION 260—STEERING/BRAKES OPERATION, TESTS AND ADJUSTMENTS**

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—System Tests
- Group 20—Adjustments
- Group 25—Theory of Operation

**SECTION 270—HYDRAULIC SYSTEM OPERATION, TESTS AND ADJUSTMENTS**

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—System Tests
- Group 20—System Adjustments
- Group 25—Theory of Operation

**SECTION 280—SOLUTION SYSTEM OPERATION, TESTS AND ADJUSTMENTS**

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—Tests
- Group 20—Adjustments
- Group 25—Theory of Operation

**SECTION 281—FOAM MARKER SYSTEM OPERATION, TESTS AND ADJUSTMENTS**

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—Tests
- Group 25—Theory of Operation

**SECTION 290—OPERATOR'S STATION OPERATION, TESTS AND ADJUSTMENTS**

- Group 05—Operator's Station Operational Checks
- Group 10—Operator's Station Diagnostic Information
- Group 15—Operator's Station Tests
- Group 20—Adjustments
- Group 25—Operator Station Theory of Operation
- Group 30—Heater Theory of Operation

**SECTION 299—DEALER FABRICATED TOOLS**

- Group 00—Dealer Fabricated Tools

**Index**

# Section 10 GENERAL INFORMATION

## Contents

### Page

**Group 05—Safety** . . . . . 10-05-1

### **Group 10—General Specifications**

#### Machine Specifications

6100 . . . . . 10-10-1

6500 . . . . . 10-10-6

6600 . . . . . 10-10-11

#### Dimensions

6100 . . . . . 10-10-16

6500 Single Wheel . . . . . 10-10-18

6500 Wide Axle . . . . . 10-10-20

6600 . . . . . 10-10-21

Metric Cap Screw Torque Values . . . . . 10-10-24

Unified Inch Cap Screw Torque Values . . 10-10-25

#### Flat Face O-Ring Seal Fitting Torque

Chart . . . . . 10-10-26

Identification Numbers . . . . . 10-10-27

### **Group 15—Fuels and Lubricants**

Diesel Fuel . . . . . 10-15-1

Diesel Engine Oil . . . . . 10-15-2

Hydrostatic and Hydraulic Oils . . . . . 10-15-3

Final Drives . . . . . 10-15-4

Extreme Pressure Grease . . . . . 10-15-4

Hydraulic Brake Fluid . . . . . 10-15-5

Lubricant Storage . . . . . 10-15-5

Alternative and Synthetic Lubricants . . . . 10-15-5

Engine Coolant . . . . . 10-15-6



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**