

2000, 2100, 2200, 2300 and 2400 Tractors Technical Manual



TECHNICAL MANUAL 2000, 2100, 2200, 2300 and 2400 Tractors Technical Manual

TM1563 (11MAY94) English

JDI GmbH-ISB
TM1563 (11MAY94)

LITHO IN U.S.A.
ENGLISH



Contents

SECTION 05—Safety

Group 05—Safety

SECTION 10—General Information

Group 05—Specifications

Group 10—Fuels, Lubricants and Coolants

SECTION 15—Component Removal/Installation

Group 00—Special Tools and Specifications

Group 05—Separating Engine From Transmission

Group 10—Transmission

Group 15—Final Drives

Group 20—Differential Housing

Group 25—Engine

SECTION 20—Engine Repair

Group 05—Special Tools and Specifications

Group 10—Clutch

Group 15—Engine Mounting

Group 20—Cylinder Head and Valves

Group 25—Crankshaft, Pistons, Rods and Liners

Group 30—Camshaft and Timing Gear Train

Group 35—Cooling System

Group 40—Air Intake and Exhaust System

Group 45—Fuel System

Group 50—Lubrication System

Group 55—Air Compressor

SECTION 40—Electrical System—Repair

Group 05—General Information

Group 10—System Diagrams and Schematics

Group 15—Battery

Group 20—Harness Repair

Group 25—Alternator

Group 30—Starting Motor

Group 35—Lights

Group 40—Instruments and Switches

Group 45—Sensors

SECTION 50—Mechanical Shift Transmission

Group 05—Special Tools and Specifications

Group 10—Clutch Housing

Group 15—Transmission Cover

Group 20—Gears and Shafts

SECTION 55—Power Train Components

Group 05—Driveshaft (MFWD)

Group 10—Pinion Housing (MFWD)

Group 15—MFWD Automatic Differential Assembly (Limited-Slip)

Group 20—Wheel Reduction—Gear Assembly (MFWD)

Group 25—Front Wheel Drive Axles (MFWD)

Group 30—MFWD Drop Box

Group 35—Rear Differential Housing

Group 40—Final Drive

Group 45—PTO Shaft

SECTION 60—Brakes and Steering

Group 00—Special Tools

Group 05—Bleed Brakes

Group 10—Brake Adjustment

Group 15—Disc Brakes

Group 20—Master Cylinder

Group 25—Proportional Valve

Group 30—Slave Cylinder

Group 35—Troubleshooting Brake System

Group 40—Hydrostatic Steering Unit Upper Steering Shaft

Group 45—Power Steering Reservoir

Group 50—Steering Pump

SECTION 70—Main Hydraulic System

Group 00—Special Tools and Specifications

Group 05—Main Hydraulic Pump

Group 10—Internal Hydraulics Cover

Group 15—Rockshaft Cylinder

Group 20—Hydraulics Distributor

Group 25—Hydraulic Control Levers

Group 30—Rockshaft

Group 35—Draft Link Torsion Bar

SECTION 80—Miscellaneous

Group 05—Wheels and Tires

Group 10—Ballast

SECTION 90—Operator's Station

Group 10—Seat

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1563-19-11MAY94

COPYRIGHT© 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

Contents

05

Group 15—Open Station Floor
Group 20—Open Station Frame
Group 25—Cab

10

Index

15

20

40

50

55

60

70

80

Section 05 Safety

Contents

Page

Group 05—Safety	05-05-1
---------------------------	---------

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

05
05
1
-JUN-23AUG88
TS227

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-03MAR93


-JUN-23AUG88
TS204

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

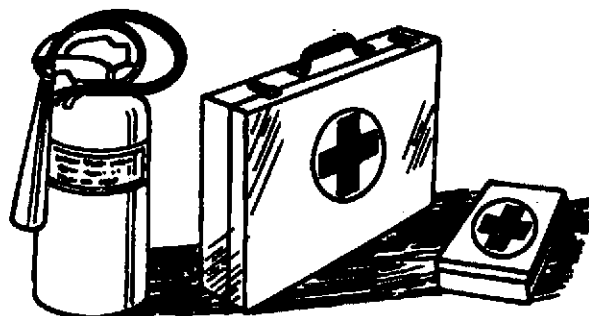

DX,FIRE2 -19-03MAR93

-JUN-23AUG88
TS261

05
05
2

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

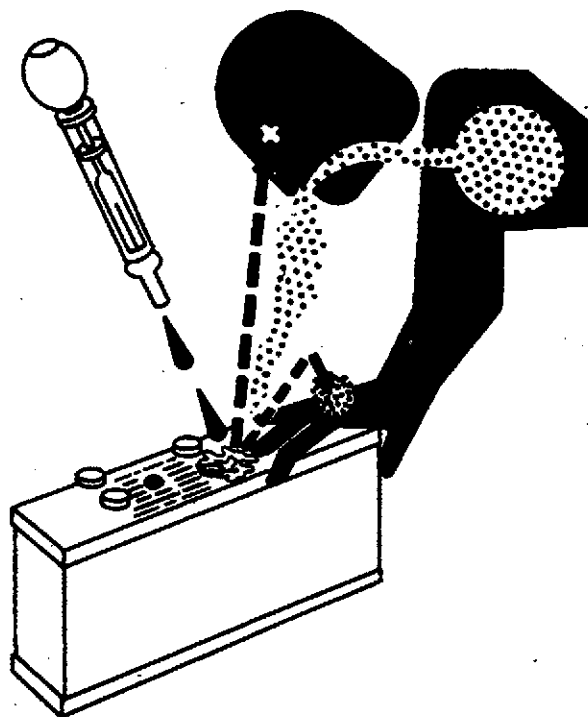

15203 -UN-23AUG88

DX, POISON -19-21APR93

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com