


535 Log Loader



SERVICE MANUAL

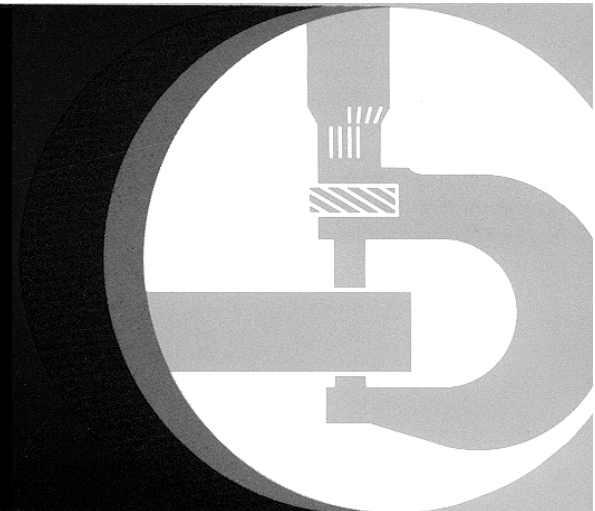

For complete service information also see:


POWERTECH® 8.1 L (6081)	
Diesel Engines Repair	CTM86
POWERTECH® 8.1 L (6081) Diesel	
Engines Operation and Diagnostics.....	CTM134
Alternators and Starting Motors	CTM77

John Deere Dubuque Works
TM1876 (01DEC00)

LITHO IN U.S.A.
ENGLISH

0060 Component Locators


1. General Component Locator

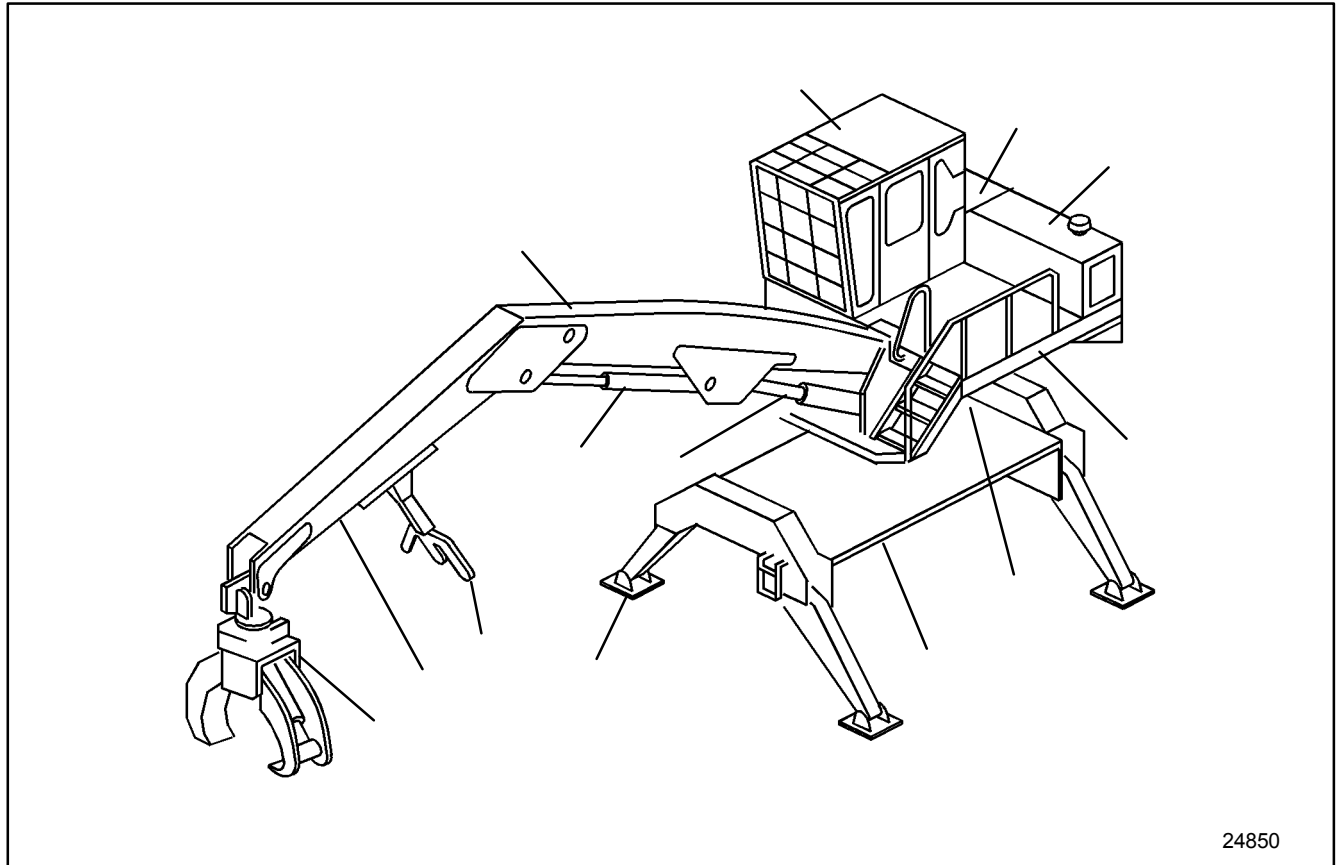

24850


- | | |
|-----------------------------|------------------------|
| 1. Main Boom | 8. Main Boom Cylinders |
| 2. Cab | 9. Jib Boom Cylinder |
| 3. Hydraulic Tank Enclosure | 10. Stabilizer |
| 4. Engine Enclosure | 11. Heel Bar |
| 5. Upper frame (Turntable) | 12. Jib Boom |
| 6. Swing Bearing | 13. Grapple |
| 7. Lower Frame | |

2. Lower Frame Component Locator

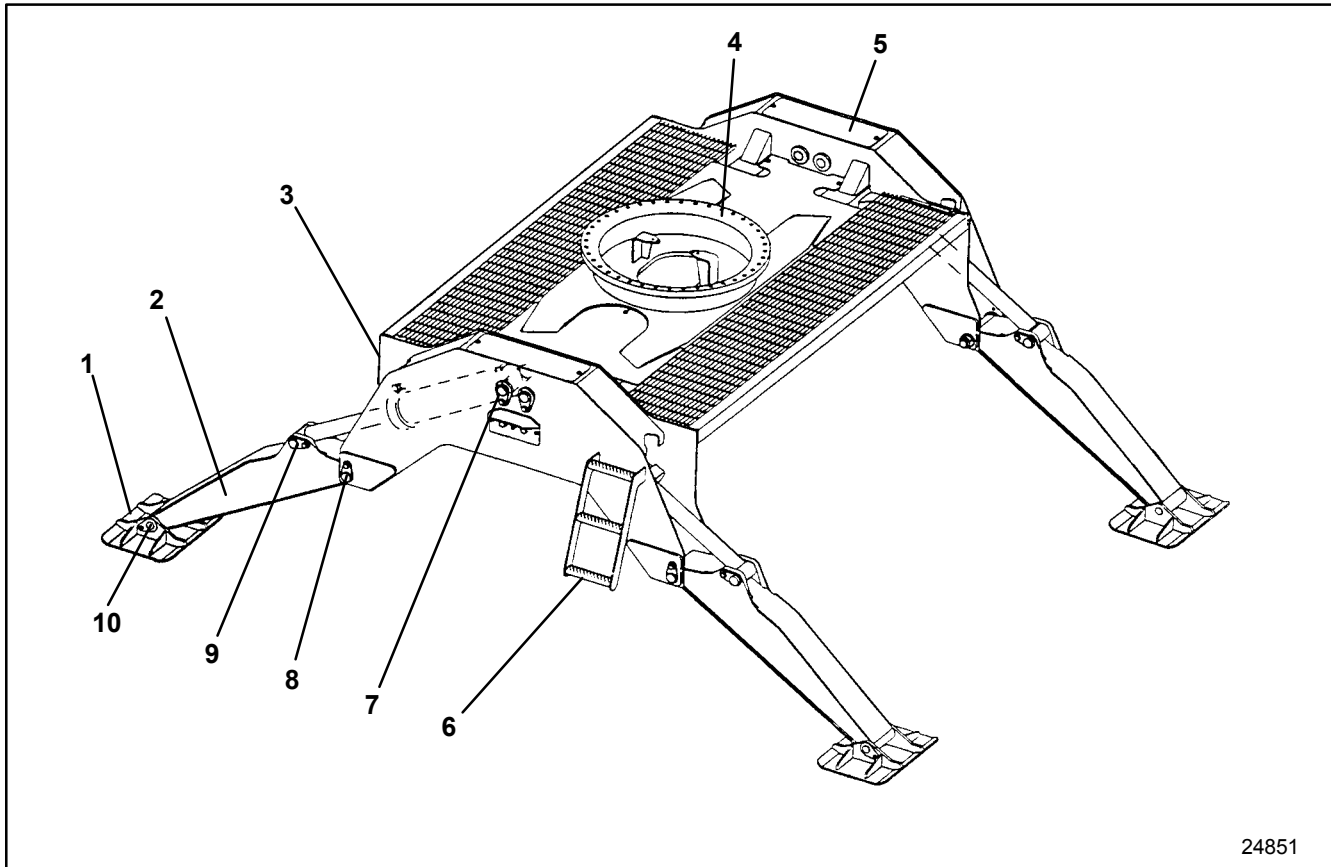

- | | |
|------------------------------|----------------------------------|
| 1. Stabilizer Pad | 6. Access Steps |
| 2. Stabilizer | 7. Upper Stabilizer Cylinder pin |
| 3. Lower Frame (Base) | 8. Stabilizer Pivot Pin |
| 4. Swing Bearing | 9. Lower Stabilizer Cylinder Pin |
| 5. Stabilizer Cylinder Cover | 10. Stabilizer Pad Pivot Pin |

3. Upper Frame Component Locator

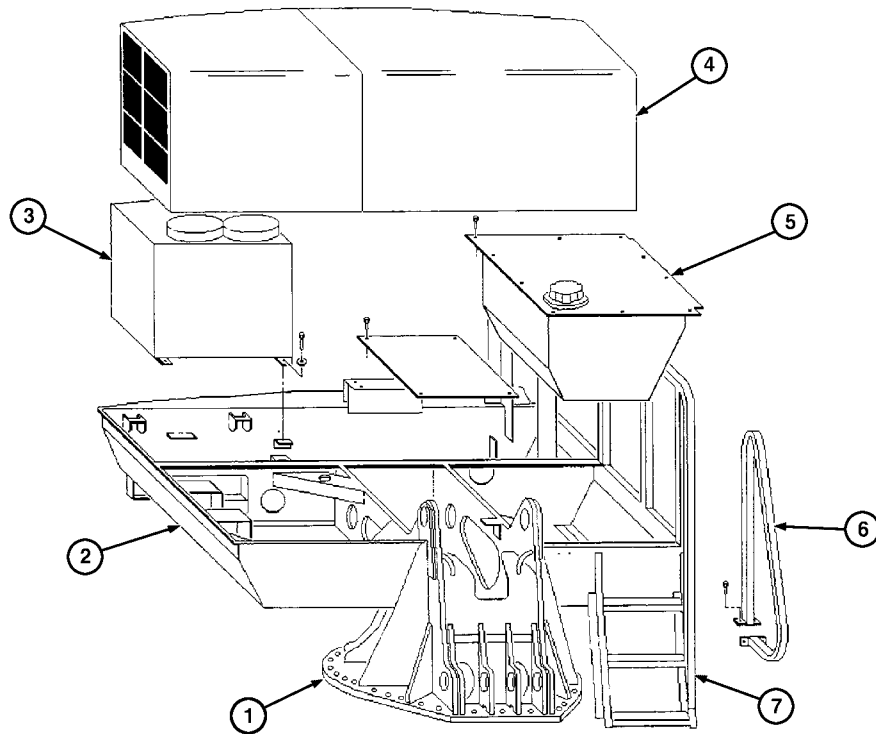

TJ302

- 1. Turntable Pedestal
- 2. Upper Frame
- 3. Hydraulic Tank
- 4. Engine Compartment Enclosure

- 5. Fuel Tank
- 6. Handrail
- 7. Access Steps

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com