

TM2328 Energy Wood Harvester 1490D

TECHNICAL MANUAL TM2328

TM2328 15JAN05 (ENGLISH)

For complete service information also see:

1490D Operator's Manual	OMF069420
Deere engine 6068 HTJ77 Manual	CTM 104
Fuel system Manual for 4,5 and 6.8 l diesel engines	CTM 331
TMC Workshop	OMF064497
Timbermatic 700 / 900	OMF069483

**Worldwide Construction
And Forestry Division**

Litho in Finland

Contents

SECTION 00—General Information

- Group 0010—Safety features
- Group 0020—Safety - General Safety Precautions
- Group 0030—Safety - Operating Precautions
- Group 0040—Safety - Maintenance Precautions
- Group 0050—Specifications - General
- Group 0051—Specifications - Base Machine
- Group 0052—Specifications - Power Train
- Group 0053—Specifications - Hydraulics
- Group 0054—Specifications - Tires
- Group 0054—Specifications - Booms
- Group 0055—Specifications - Maintenance
- Group 0056—Specifications - Fluids and Lubricants
- Group 0057—Transporting and Towing

SECTION 01—Wheels

- Group 0110—Wheels Service

SECTION 02—Power Train

- Group 0210—Theory of Operation
- Group 0220—Transfer case (High / Low Gear)
- Group 0230—Drive shaft
- Group 0235—Drive Lines Troubleshooting
- Group 0240—Axles / Bogie
- Group 0245—NAF Service Manuals and Repair instructions
- Group 0250—Brakes - General
- Group 0255—Brakes - Service
- Group 0256—Brake Hydraulics Troubleshooting

SECTION 03—Hydraulic systems

- Group 0310—General
- Group 0315—Hydraulic Cooling System Troubleshooting
- Group 0320—Drive Hydraulics Service
- Group 0325—Checking and Adjusting Drive Hydraulics
- Group 0326—Hydrostatic Drive System Troubleshooting
- Group 0327—Hydrostatic Drive Pump Troubleshooting
- Group 0328—Hydrostatic Drive Motor Troubleshooting
- Group 0330—Work Hydraulics
- Group 0335—Work Hydraulics Service

- Group 0340—Work Hydraulics Checking and Adjusting
- Group 0350—Hydraulic Cylinders
- Group 0380—Hydraulic System - Appendix Manuals

SECTION 031—Hydraulic Diagrams

- Group 031-1—Hydraulic Diagrams

SECTION 04—Engine

- Group 0410—Engine mounting and dismounting
- Group 0420—Engine
- Group 0430—Engine Troubleshooting

SECTION 16—Electrical-System

- Group 1610—Main Electrical System
- Group 1630—Electrical Sensors
- Group 1640—Control Systems
- Group 1660—Alternator
- Group 1680—Starter Motor

SECTION 1615—Electrical Schematics

- Group 1615-1—Electrical Schematics

SECTION 17—Frames

- Group 1710—Frame installation
- Group 1720—Frame Hinge
- Group 1730—Service - Frame Joint
- Group 1740—Service - Frame Brake
- Group 1750—Operational Checks
- Group 1760—Steering

SECTION 18—Cabin

- Group 1810—Cabin Environment
- Group 1820—Cabin Service
- Group 1830—Cab Tilt Hydraulics Troubleshooting

SECTION 19—Heating and Air Conditioning System

- Group 1910—General
- Group 1920—Air Conditioning / Heater Components
- Group 1930—Diagnosing Air Conditioning / Heater System

Continued on next page

00

01

02

03

031

04

16

1615

17

18

SECTION 37 —Boom

- Group 3710— Boom - General
- Group 3720—Boom - Installation
- Group 3730—Boom Parts- Removal and Installation
- Group 3740—Boom Components - Removal and installation
- Group 3750—Boom - Diagnostic Information
- Group 3760—Boom - Overall maintenance

SECTION 38—Decking Blade

- Group 3810—General
- Group 3820— Removal and Installation
- Group 3830—Service
- Group 3840—Diagnostic information

SECTION 40—Grapple

- Group 4010—Theory of Operation
- Group 4020—Removal and Installation
- Group 4030—Grapple Service
- Group 4040—Grapple Rotator
- Group 4050—Diagnostics

SECTION 44—Bundler Unit

- Group 4410— General
- Group 4420—Componets
- Group 4430—Diagnostic Information
- Group 4440—Overall maintenance
- Group 4450-1—Repairs - Saw Unit
- Group 4450-2—Repairs - Twine magazine
- Group 4450-3—Repairs - Compactor Units
- Group 4450-4—Repairs - Swing Unit
- Group 4450-5—Repairs - Feed motor
- Group 4450-6—Repairs - Sensors

SECTION 45—Tool Drawings

- Group 4510—Dealer Fabricated Tools

SECTION 80—Optional Equipments

- Group 8010— Engine Preheater
- Group 8030—Fire Extinguisher
- Group 8040—Tropical Kit
- Group 8050—Extra fuel tank

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com