

2150 AND 2255 TRACTORS

 


TECHNICAL MANUAL 2150 AND 2255 TRACTORS

TM4401 (01NOV87) English

JOHN DEERE WERKE MANNHEIM
TM4401 (01NOV87)

LITHO IN THE U.S.A.
ENGLISH



2150 AND 2255 TRACTORS TECHNICAL MANUAL TM-4401 (Nov-87)

CONTENTS

SECTION 10 - GENERAL

- Group 00 - Specifications and Special Tools
- Group 05 - Pre-delivery, Delivery and After-Sales Inspections
- Group 10 - Lubrication and Periodic Service
- Group 15 - Engine and Tractor Tune-Up
- Group 20 - Tractor Separation

SECTION 20 - ENGINE

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, Diagnosing Malfunctions
- Group 10 - Cylinder Head, Valves and Camshaft
- Group 15 - Cylinder Block, Liners, Pistons and Connecting Rods
- Group 20 - Crankshaft, Main Bearings and Flywheel
- Group 25 - Timing Gear Train
- Group 30 - Engine Lubrication System
- Group 35 - Engine Cooling System

SECTION 30 - FUEL AND AIR INTAKE SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Diagnosing Malfunctions
- Group 10 - Fuel Tank, Fuel Transfer Pump and Fuel Filter
- Group 15 - Roto Diesel Fuel Injection Pump
- Group 20 - Fuel Injection Nozzles
- Group 25 - Cold Weather Starting Aid
- Group 30 - Speed Control Linkage
- Group 35 - Air Cleaner

SECTION 40 - ELECTRICAL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 06 - Connector Repair
- Group 10 - Wiring Harnesses
- Group 15 - Controls and Instruments
- Group 20 - Lighting Systems
- Group 25 - Wiring Diagram
- Group 30 - Starting Motor
- Group 35 - Alternator

COPYRIGHT® 1988
DEERE & COMPANY
Moline, Illinois
All rights reserved
Previous Edition
Copyright® 1982, 1984, 1985
DEERE & COMPANY

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

CONTENTS - Continued

SECTION 50 - POWER TRAIN

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Operation and Lubricating System
- Group 10 - Clutch Operating Linkages
- Group 15 - Engine Clutch
- Group 20 - Hi-Lo Shift Unit
- Group 25 - Reverser Transmission
- Group 30 - Transmission Shift Linkages
- Group 35 - Synchronized Transmission and Transmission Oil Pump
- Group 40 - Collar Shift Transmission and Transmission Oil Pump
- Group 45 - Differential
- Group 50 - Final Drives
- Group 55 - Independent PTO
- Group 60 - Continuous-Running PTO
- Group 65 - Mechanical Front Wheel Drive

SECTION 60 - STEERING SYSTEM AND BRAKES

- Group 00 - Specifications and Special Tools
- Group 05 - Power Steering
- Group 10 - Brakes

SECTION 70 - HYDRAULIC SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 10 - Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 - Hydraulic Pump
- Group 20 - Rockshaft
- Group 25 - Selective Control Valves (Poppet Valve Type) and ISO Coupler
- Group 26 - Selective Control Valves (Spool Type) and Quick Coupler
- Group 30 - Remote Cylinder

SECTION 80 - MISCELLANEOUS

- Group 00 - Specifications and Special Tools
- Group 05 - Front Axle
- Group 10 - Front Wheels

SECTION 90 - OPERATOR'S STATION

- Group 00 - Specifications and Special Tools
- Group 05 - Seat
- Group 10 - Roll-Gard® Protective Structure

Section 10 GENERAL

CONTENTS OF THIS SECTION

	Page		Page
GROUP 00 - SPECIFICATIONS AND SPECIAL TOOLS		GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS	
Specifications	10-00-3	Tractor Storage	10-05-1
Serial Numbers	10-00-3	Predelivery Inspection	10-05-2
Model Numbers	10-00-3	Delivery Inspection	10-05-8
Engine	10-00-3	After-Sales Inspection	10-05-9
Engine Clutch	10-00-4		
Cooling System	10-00-4	GROUP 10 - LUBRICATION AND SERVICE	
Fuel System	10-00-4	Lubrication And Service	10-10-1
Electrical System	10-00-5		
Synchronized Transmission	10-00-5	GROUP 15 - TUNE-UP	
Collar Shift Transmission	10-00-5	Preliminary Engine Testing	10-15-1
Hi-Lo Shift Unit	10-00-5	Dynamometer Test	10-15-1
Reverser Transmission	10-00-5	Testing Compression Pressure	10-15-2
Differential and Final Drives	10-00-6	Engine Tune-Up	10-15-3
Differential Lock	10-00-6	Checking Tractor Operation	10-15-8
PTO	10-00-6	Standard Torques	10-15-9
Mechanical Front Wheel Drive	10-00-7		
Power Steering	10-00-7	GROUP 20 - TRACTOR SEPARATION	
Foot Brakes	10-00-7	Separating Between Engine And	
Handbrake	10-00-7	Tractor Front End	10-20-1
Hydraulic System	10-00-7	Removal and Installation of Engine	10-20-7
Capacities	10-00-7	Removal and Installation of	
Travel Speeds	10-00-8	Clutch Housing	10-20-8
Front and Rear Wheels	10-00-8	Removal and Installation of	
Dimensions and Weights	10-00-8	Final Drives	10-20-11
Predelivery, Delivery and		Removal and Installation of	
After-Sales Inspections	10-00-9	Rockshaft	10-20-12
Lubrication and Service	10-00-10		
Tune-Up	10-00-11		
Tractor Separation	10-00-12		
Standard Torques	10-00-13		
Special Tools	10-00-15		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com