


**2955, 3055,
3155 and 3255
Tractors**

**TECHNICAL
MANUAL**

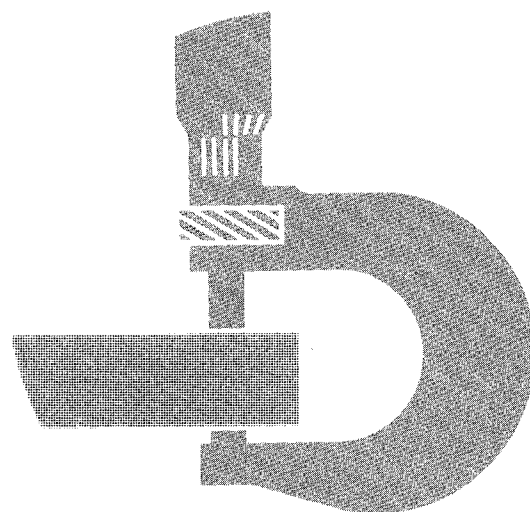

2955, 3055, 3155 AND 3255 TRACTORS TECHNICAL MANUAL TM4449 (DEC-91)

SECTION CONTENTS IN GROUPS – REPAIR

05 – SAFETY

10 – GENERAL

- 05 – Specifications
- 10 – Predelivery, delivery and after-sales inspections
- 15 – Lubrication and service
- 20 – Tune-up
- 25 – Tractor separation

20 – ENGINE, VISCOUS FAN DRIVE AND FAN

- 05 – Radiator, viscous fan drive and fan

30 – FUEL AND AIR INTAKE SYSTEM

- 05 – Fuel tank, auxiliary tank and water trap
- 10 – Cold weather starting aids
- 15 – Speed control linkage
- 20 – Air cleaner

40 – ELECTRICAL SYSTEM

- 05 – Wiring harnesses
- 10 – Controls and instruments (without SOUND-GARD body)
- 15 – Controls and instruments (with SOUND-GARD body)
- 20 – Lighting system
- 25 – Starting motor
- 30 – Alternator

50 – POWER TRAIN

- 05 – Clutch operating systems
- 10 – Engine clutch
- 15 – Hi-Lo shift unit
- 20 – Creeper transmission
- 25 – Transmission – console shift
- 30 – Transmission – center shift
- 35 – Synchronized transmission and transmission oil pump
- 40 – Differential
- 45 – Final drives
- 50 – PTO
- 55 – Front wheel drive u.j. drive shaft and disk clutch

60 – STEERING SYSTEM AND BRAKES

- 05 – Hydrostatic steering
- 10 – Steering cylinder (without front wheel drive)
- 15 – Hydraulic brakes
- 20 – Handbrake

70 – HYDRAULIC SYSTEM

- 05 – Valves
- 10 – Hydraulic pumps
- 15 – Rockshaft
- 25 – Selective control valves (spool type)
- 30 – Selective control valves (poppet valve type)

COPYRIGHT© 1991 DEERE & CO.
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual
PREVIOUS EDITIONS
COPYRIGHT© 1987, 1989

INHALT-LB601AE-010991

SECTION CONTENTS IN GROUPS (REPAIR)

70 – HYDRAULIC SYSTEM (CONTD.)

- 35 – ISO breakaway couplers
- 40 – ISO quick couplers
- 45 – Remote cylinder

80 – MISCELLANEOUS

- 05 – Front axle
- 10 – Front and rear wheels

90 – OPERATOR'S STATION

- 05 – Safe handling of refrigerants
- 06 – Servicing air conditioning system
- 07 – Compressor (up to tractor serial no. 663 473L)
- 08 – Compressor (from tractor serial no. 663 474L)
- 09 – Components of air conditioning system
- 10 – Cab ventilation and heating
- 15 – Operator's seats
- 20 – SOUND-GARD body
- 25 – 4-post ROLL-GARD
- 30 – 2-post ROLL-GARD
- 35 – Foldable ROPS

INHALT-LB602AE-010991

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com