

# **5300N, 5400N and 5500N Tractors**

**For complete service information also see:**

**Engines . . . . . CTM3274**

**John Deere Werke Mannheim**

**TM4598 (10JAN00)**

**European Version**

Printed in Germany  
**ENGLISCH**

# Contents

## **SECTION 05—SAFETY**

Group 05—Safety

## **SECTION 10—GENERAL SPECIFICATIONS**

Group 05—Machine Specifications  
Group 10—Fuel, Lubricants and Coolant  
Group 15—Serial Number Locations

## **SECTION 20—ENGINE — REPAIR**

Group 00—Removal and Installation of Engine Components

## **SECTION 30—FUEL AND AIR INTAKE SYSTEMS — REPAIR**

Group 05—Fuel System  
Group 10—Speed Control Linkage  
Group 15—Air Intake System

## **SECTION 40—ELECTRICAL SYSTEM — REPAIR**

Group 05—Battery, Starting Motor and Alternator  
Group 10—Switches and Sending Units  
Group 15—Wiring Harnesses

## **SECTION 50—POWER TRAIN — REPAIR**

Group 00—Removal and Installation of Power Train Components  
Group 05—Clutch  
Group 10—Hi-Lo System (24/24-Speed Transmission)  
Group 15—Power Take-Off  
Group 20—Differential  
Group 25—Final Drives  
Group 30—Mechanical Front Wheel Drive  
Group 35—MFWD Clutch - 12/12-Speed Transmission  
Group 40—MFWD Clutch - 24/24-Speed Transmission  
Group 45—Transmission

## **SECTION 60—STEERING AND BRAKE SYSTEMS — REPAIR**

Group 05—Steering System  
Group 10—Brake System

## **SECTION 70—HYDRAULIC SYSTEM — REPAIR**

Group 05—Hydraulic Pump and Filter  
Group 10—Rockshaft  
Group 15—Selective Control Valves

## **SECTION 80—MISCELLANEOUS — REPAIR**

Group 05—Front Axle (without MFWD)  
Group 10—Front Wheel Bearings  
Group 15—Three-Point Hitch

## **SECTION 90—OPERATOR'S STATION — REPAIR**

Group 05—Operator's Seat and Support  
Group 10—Roll-Gard  
Group 15—Fenders  
Group 20—Cab Components  
Group 25—Air Conditioning System

## **SECTION 240—ELECTRICAL SYSTEM — OPERATION AND TESTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests and Adjustments  
Group 20—Wiring Diagrams

## **SECTION 250—POWER TRAIN — OPERATION AND TESTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests and Adjustments

## **SECTION 260—STEERING AND BRAKE SYSTEMS — OPERATION AND TESTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests and Adjustments

## **SECTION 270—HYDRAULIC SYSTEM — OPERATION AND TESTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis  
Group 20—Tests

Continued on next page

Group 25—Adjustments  
Group 30—Hydraulic System Schematic

**SECTION 290—OPERATOR'S STATION**

Group 05—Air Conditioning System Components  
Group 05—Air Conditioning System - Theory of  
Operation

**SECTION 299—SPECIAL TOOLS —  
SELF-MANUFACTURED**

Group 05—Manufacturing the Tools

**Index**

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.  
You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:  
[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)