



Please cut where indicated and insert the label into the plastic pocket on the spine of the binder.

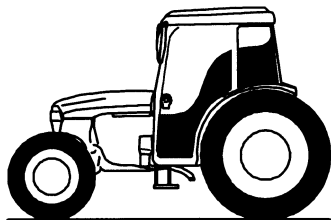

**TNV, TNN
TRACTOR
REPAIR**

**TN55V, TN65V, TN75V,
TN65N, TN75N**

**Vol. 1
86627058**

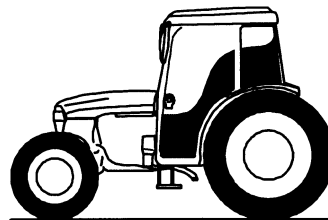


**TNV, TNN
TRACTOR
REPAIR**

**TN55V, TN65V, TN75V,
TN65N, TN75N**

**Vol. 1
86627058**



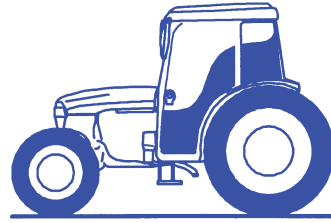

NEW HOLLAND

TN55V TN65V

TN75V TN65N

TN75N

**REPAIR
MANUAL**

Section 00 - General

Section 10 - Engine

Section 18 - Clutch

Section 21 - Transmissions



NEW HOLLAND

SERVICE

TN55V, TN65V, TN75V, TN65N, TN75N REPAIR MANUAL CONTENTS



SECTION 00 - GENERAL

SECTION 10 - ENGINE

SECTION 18 - CLUTCH

SECTION 21 - TRANSMISSIONS

SECTION 23 - DRIVE LINES

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

SECTION 27 - REAR MECHANICAL WHEEL DRIVE

SECTION 31 - MECHANICAL POWER TAKE-OFF

SECTION 33 - BRAKING SYSTEM

SECTION 35 - HYDRAULIC SYSTEMS

SECTION 41 - STEERING

SECTION 44 - AXLES AND WHEELS

SECTION 50 - CAB AIR CONDITIONING SYSTEM

SECTION 55 - ELECTRICAL SYSTEM

SECTION 90 - PLATFORM, CAB, BODYWORK

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNV/TNN Tractors.

GENERAL INSTRUCTIONS**IMPORTANT NOTICE**

All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary. Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.

BATTERY

Before carrying out any kind of service operations, disconnect and isolate the battery negative lead, unless otherwise requested for specific operations (e.g.: operations that require the engine running). Once the specific operation has been completed, disconnect the lead in order to complete the operation.

SHIMMING

For each adjustment operation, select adjusting shims and measure individually using a micrometer, then add up the recorder values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value indicated for each on shim.

ROTATING SHAFT SEALS

For correct rotating shaft seal installation, proceed as follows:

- before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes;
- thoroughly clean the shaft and check that the working surface on the shaft is not damaged;
- position the sealing lip facing the fluid; with hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will deviate the fluid towards the inner side of the seal;
- smear the sealing lip with a thin layer of lubricant (use oil rather than grease) and fill the gap between the sealing lip and the dust lip on double lip seals with grease;
- insert the seal in its seat and press down using a flat punch; do not tap the seal with a hammer or mallet;
- whilst inserting the seal, check that the it is perpendicular to the seat; once settled, make sure that it makes contact with the thrust element, if required;
- to prevent damaging the seal lip on the shaft, position a protective guard during installation operations.

“O-RING” SEALS

Lubricate the O-RING seals before inserting them in the seats, this will prevent them from overturning and twisting, which would jeopardise sealing efficiency.

SEALING COMPOUNDS

Apply one of the following sealing compounds on the mating surfaces marked with an X: LOCTITE 518 or LOCTITE 5205.

Before applying the sealing compound, prepare the surfaces as follows:

- remove any incrustations using a wire brush;
- thoroughly de-grease the surfaces using one of the following cleaning agents: trichlorethylene, petrol or a water and soda solution.

BEARINGS

When installing bearings it is advised to:

- heat the bearings at 80 to 90 °C (176 to 194 °F) before fitting on the shafts;
- allow the bearings to cool before installing them from the outside.

SPRING PINS

When fitting split socket spring pins, ensure that the pin notch is positioned in the direction of the force required to stress the pin.

Spiral spring pins do not require special positioning

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com