

Product: EXCAVATOR

Model: 320D2 GC EXCAVATOR YBJ

Configuration: 320D2 GC Excavator YBJ00001-UP (MACHINE) POWERED BY C4.4 Engine

Disassembly and Assembly

320D2 GC Excavator Machine Systems

Media Number -M0066452-03

Publication Date -01/09/2015

Date Updated -24/10/2018

i06553902

Travel Motor - Disassemble

SMCS - 4351-015

S/N - PFE1-UP

S/N - YBJ1-UP

S/N - ZBH1-UP

Disassembly Procedure

Start By:

- a. Remove the travel motor.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat[®] products.

Dispose of all fluids according to local regulations and mandates.

1. Thoroughly clean the outside of the travel motor prior to disassembly.

2. Fasten the travel motor to a suitable holding fixture in a vertical position. The weight of the travel motor is 60 kg (132 lb).
3. Put an alignment mark across the head and the body of the travel motor for assembly purposes. The head must be reinstalled in the head's original position on the body of the travel motor.



Illustration 1

g00510326

Note: During the removal of head (2) from the body of the travel motor, be careful not to scratch or damage the mating surfaces of the components.

4. Remove socket head bolts (1).
5. Remove head (2) from the body of the travel motor.

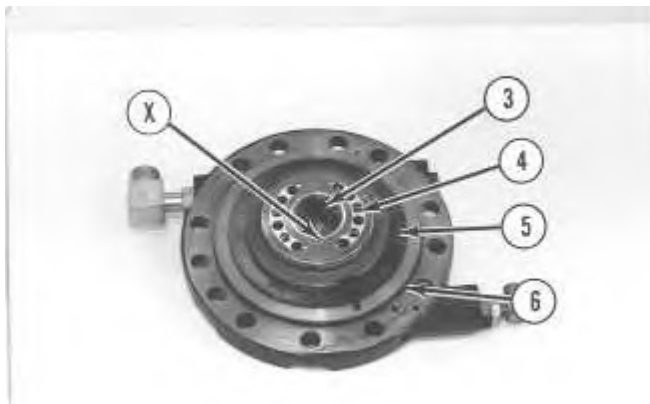


Illustration 2

g00510341



Illustration 3

g00510349

6. Turn over head (2).
7. Remove O-ring seal (6), shims (5), port plate (4), and bearing (3) from the head.
8. Remove the two check valve assemblies from the head.

Note: There is a retainer under spring (9). This retainer is a press fit in head (2). Do not remove the retainer.

9. Insert a dowel rod with a small diameter into hole (X). Tap the dowel rod with a plastic hammer in order to remove spring (9), poppet (8) and seat (7) from the head.



Illustration 4

g00510351

10. Remove three fittings (10) and plugs (11) from the head. Remove the O-ring seal from each fitting.
-

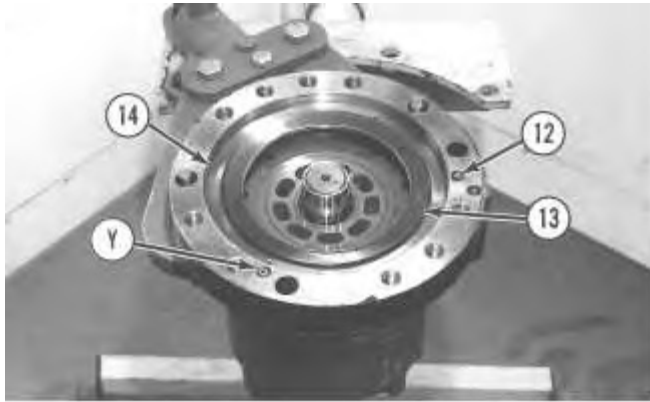


Illustration 5

g00510352

11. Remove three O-ring seals (12) and washer set (13) from the body of the travel motor.
12. Place a shop towel over brake piston (14). Retain brake piston (14) by hand, and apply approximately 525 kPa (75 psi) of shop air pressure to brake release port (Y). Make sure that the shop air pressure is free of water. Brake piston (14) will move up the piston guide, and out of the piston guide. Remove brake piston (14) from the body of the travel motor.

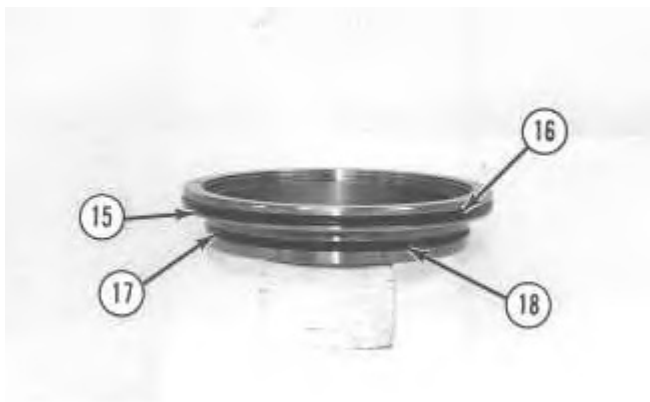


Illustration 6

g00510353

13. Remove O-ring seal (15) from the brake piston. Remove backup ring (16) from the brake piston.
14. Remove O-ring seal (17) from the brake piston. Remove backup ring (18) from the brake piston.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com