OPERATOR'S MANUAL

ROTARY TILLERS

RT 1173


RT 1273

RT 2293

RT 1181

RT 2283

RT1173: Serial Number XFRT11X130882 & Above RT1181: Serial Number XFRT11X130879 & Above RT1273: Serial Number XFRT12X130422 & Above

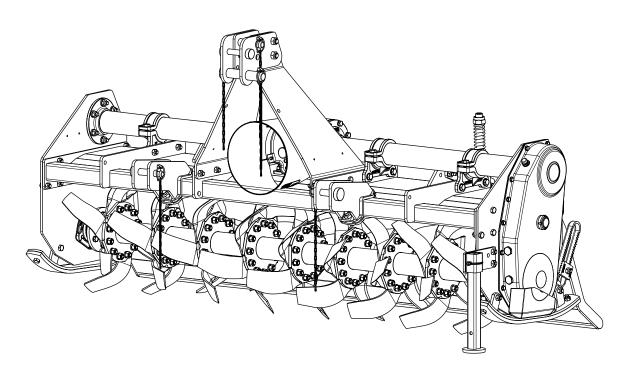



Cod. F07011069 / Rev. 00 (2013-06)

TABLE OF CONTENTS

Technical specification Technical specification Technical specification - Hitch		Change speed Tilling tips During tilling Replacement parts	. 20 . 20
Safety signs Safety-Alert simbol Identification machine Machine safety labels	7	Service Machine Safely Practice safe maintenance Wear appropriate clothing Stay clear of rotating drivelines	. 21
Machine safety labels and positions Machine safety labels and positions	8	Service lubrication Service lubrication	
Preparing the vehicle Preparing the tractor Park vehicle safety Stay clear of rotating drivelines	10	Every 8 work hours Every 50 work hours Every 400 work hours Every 1000 work hours Greasing and lubricant points	. 22 . 22 . 22 . 23
Installing Installing tiller on tractor	12 13 14 14	Lubricants Screw tighteening torques Service Service intervals Replacing tines Tines.	. 23 . 24 . 24
Removing Removing tiller Removing tiller with Quick Coupler		Troubleshooting Using troubleshooting chart Storing machine	. 25
Operating Operate safely Wear appropriate clothing	17	Storing tiller	
Stay clear of rotating drivelines Raising parking stand Lowering parking stand Levelling attachments (side-to-side) Levelling tiller (front-to-rear) Adjusting skid shoes Adjusting levelling board Spring ram	17 17 17 18 18 18	Assembly / Spare parts RT 1173-1181 RT 2283-2293 Lift hook assembly procedure Installing driveline on tiller Spare parts	30 . 32 . 32

TO THE DEALER:

Assembly and proper installation of this product is the responsibility of the Frontier dealer. Read manual instruction and safety rules. Make sure all items on the Dealer's Pre-Delivery Check List in the Operator's Manual are completed before releasing equipment to the owner.

The dealer must complete the Warranty Registration, located on the Frontier website. **Warranty claims** will be denied if the Warranty Registration has not been completed.

TO THE OWNER:

Read this manual before operating your frontier equipment. The information presented will prepare you to do a better and a safer job. Keep this manual handy for ready reference. Require all operators to read this manual carefully and become acquainted with all the adjustment and operating procedures before attempting to operate. Replacement manuals can be obtained from your selling dealer.

The equipment you have purchased has been carefully enginereed and manufactured to provide dependable and satisfactory use. Like all mechanical products, it will require cleaning and upkeep. Lubricate the unit as specified. Observe all safety information in this manual and safety decals on the equipment.

For service, your authorized Frontier dealer has trained mechanics, genuine Frontier service parts, and the necessary tools and equipment to handle all your needs.

Use only genuine Frontier service parts. Substitute parts will void the warranty and may not meet standards required for safe and satisfactory operation. Record the model number and serial number of your equipment in the spaces provided:

Model:	Date of Purchase	_
Serial Number: (see Safety Decal section for location)		

Provide this information to your dealer to obtain correct repair parts.

Throghout this manual, the term **IMPORTANT** is used to indicate that failure to observe can cause damage to equipment. The terms **CAUTION**, **WARNING** and **DANGER** are used in conjunction with the Safety-Alert Symbol, (a triangle with an esclamation mark), to indicate the degree of hazard for items of personal safety.



This Safety-Alert Simbol indicates a hazard and means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed.



Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.


IMPORTANT


Indicates that a failure to observe can cause damage to equipment.


NOTE

Indicates helpful information.

TECHNICAL SPECIFICATIONS

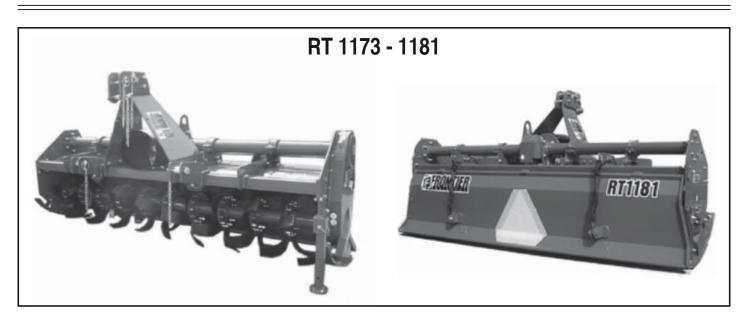

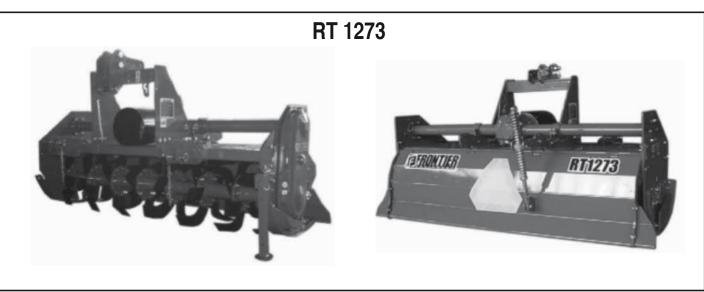

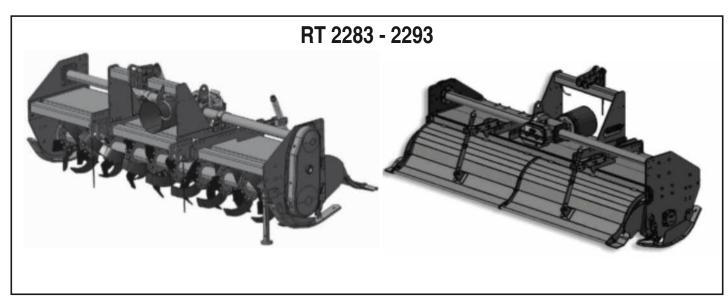

TECHNICAL SPECIFICATIONS

RT 1173 - 1181

Model	Work/width	Tractor HP	Tractor HP	Weight	Side	PTO	Speeds	Input	Hitch	Tines	Rotor	Rotor
	inches	min	max	lbs.	Drive	shaft	gear box	speed		STD	blades	flanges
RT 1173	73	45	60	761	Gear	Slip Clutch	Single	540	Cat. "II" Quick coupler	"C"	6	10
RT 1181	81	50	60	810	Gear	Slip Clutch	Single	540	Cat. "II" Quick coupler	"C"	6	11

RT 1273

Model	Work/width	Tractor HP	Tractor HP	Weight	Side	PTO	Speeds	Input	Hitch	Tines	Rotor	Rotor
	inches	min	max	lbs.	Drive	shaft	gear box	speed		STD	blades	flanges
RT 1273	73	30-70	80	968	Gear	Slip Clutch	Single	540	Cat. "II" Quick coupler	"L"	6	7

RT 2283 - 2293

Model	Work/width inches	Tractor HP min	Tractor HP max	Weight Ibs.	Side Drive	PTO shaft	Speeds gear box	Input speed	Hitch	Tines STD	Rotor blades	Rotor flanges
RT 2283	83	30-70	80	1397	Gear	Slip Clutch	Multi	540	Cat. "II" Quick coupler	"L"	6	8
RT 2293	93	40-80	100	1496	Gear	Slip Clutch	Multi	540	Cat. "II" Quick	"L"	6	9

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com