

220, 222 & 442 Compact Tractors Operator's Manual

9-2171

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

93
m6 293

Operator's Instruction Manual

220, 222 & 442 Compact Tractors

J. I. CASE, CO.

RACINE, WISCONSIN U.S.A.

NOTICE

At the time your Case Dealer delivers your new tractor, he will acquaint you with its operation and maintenance as outlined in the "Delivery Procedure and Warranty Registration". When your Dealer has completed these instructions, he will ask you to sign the report and will then hand you a copy for your records.

NOTE

The "Delivery Procedure and Warranty Registration" also contains a record of the Pre-Delivery Checkup which your Dealer made on your tractor.

A factory completed Quality Audit just prior to crating is further assurance that your new tractor has been manufactured and tested to the highest possible standards and is ready to provide you with long, trouble free service. The inspector's copy of the Quality Assurance Audit Procedure is packed with the tractor.

AFTER DELIVERY CHECKUP

The Authorized Case Dealer from whom you purchased your new tractor will perform the "After Delivery Checkup" outlined on the following page, if you will arrange to bring your tractor to his Service Shop within - - -

60 days after date of delivery or 100 hours of operation (whichever occurs first).

NOTE

The only charge your dealer will make for this inspection will be for oil, filter, or other accessories.

AFTER DELIVERY CHECKUP

(Owner's Name)	(Date Checkup Performed)
(Owner's Address)	
(Dealership)	(Town)
Tractor has been operated days	
(Tractor Model and Serial Number)	

TRACTOR

- | | |
|---|--|
| <input type="checkbox"/> Return to neutral function.
<input type="checkbox"/> Check operation of brake.
<input type="checkbox"/> Check Speed Control Lever for proper "Neutral" and full valve spool travel.
<input type="checkbox"/> Check tire pressure.
<input type="checkbox"/> Tighten cylinder head and adjust tappets.
<input type="checkbox"/> Check ignition timing.
<input type="checkbox"/> Check spark plug.
<input type="checkbox"/> Check full governed no load engine speed and low idle speed.
<input type="checkbox"/> Tighten all hydraulic line connections.
<input type="checkbox"/> Tighten all bolts (including rims). | <input type="checkbox"/> Cooling system engine and heat exchanger fins.
<input type="checkbox"/> Crankcase oil (change oil if necessary).
<input type="checkbox"/> Oil level in hydraulic system reservoir.
<input type="checkbox"/> Oil level in transmission.
<input type="checkbox"/> Lubricate all pressure fittings.
<input type="checkbox"/> Check air cleaner.
<input type="checkbox"/> Check tension of all belts.
<input type="checkbox"/> Lubricate steering gears. Check "free play." Adjust if necessary.
<input type="checkbox"/> Check front wheel toe-in.
<input type="checkbox"/> Battery, starter-generator and lights.
<input type="checkbox"/> Check operation of all instruments and levers. |
|---|--|

DEALER: Question purchaser carefully concerning his experience with tractor and answer any questions concerning maintenance or operation that are not clear to him.

Checkup
Performed by

Signed
Dealer

Original—Dealer
Duplicate—Leave in Operators Manual
for Purchaser

Signed
Customer


TO THE PURCHASER OF A CASE TRACTOR

The care you give your new Case Tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

Your Authorized Case Dealer

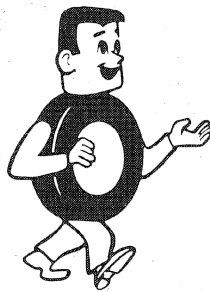

HI FOLKS!-I'm Sammy Safety.
Look for me to point out
important Safety Precautions

To insure efficient and prompt service, please furnish us with the Model, Serial, Engine Model Number and Engine Specification Number of your Tractor in all correspondence or contacts.

Image Removed

Figure 1. Right Hand View of Case 220 Compact Tractor



Figure 2. Left Hand View of Case 222 Tractor with Optional Hydraulic Lift

Image Removed

Figure 3. Left Hand view of Case 442 Tractor

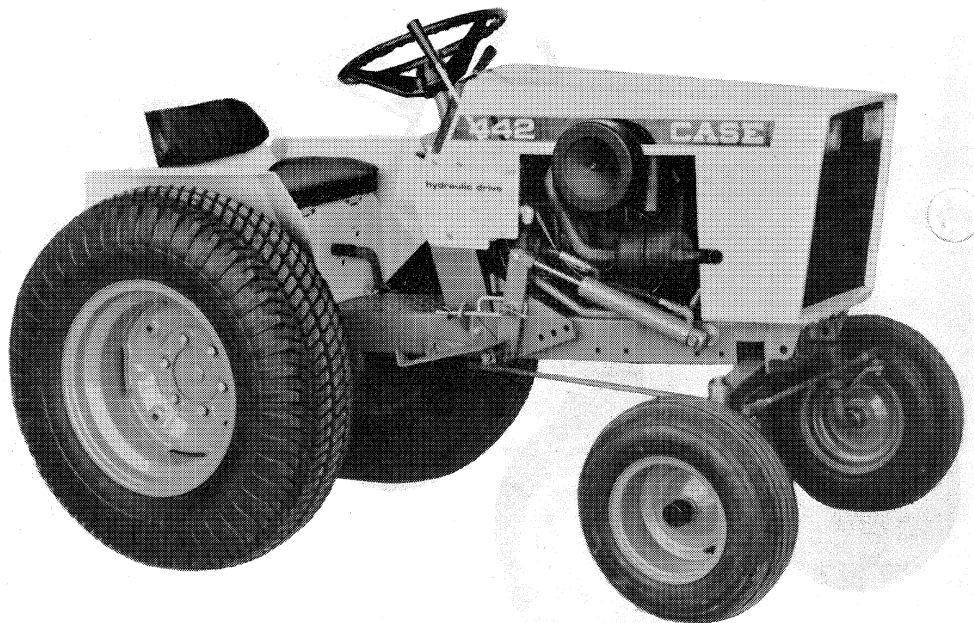


Figure 4. Right Hand View of Case 442 Tractor with Optional Hydraulic Lift

SERIAL NUMBER

When ordering parts from your Authorized Case Dealer and in all contacts or correspondence with your dealer relative to the tractor always specify the Serial, Model and Engine Numbers of your tractor.

The Tractor Model and Serial Numbers are stamped on the number plate located on the instrument panel, Figure 5. The Engine, Model, Serial and Engine Specification Numbers are stamped on a plate fastened to the right hand side of the engine, Figure 6.

TRACTOR MODEL
AND SERIAL NUMBER

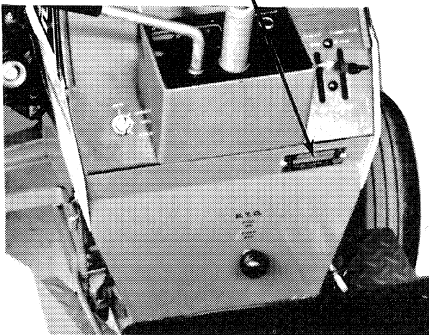


Figure 5.

ENGINE MODEL, SERIAL AND
SPECIFICATION NUMBER

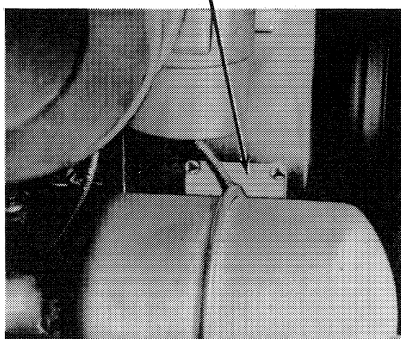


Figure 6.

NOTE

The terms "Right Hand" and "Left Hand" whenever used in this manual apply to the tractor when facing in the direction the tractor will move in forward operation.

For reference, fill in the Serial Number, Model Number and Engine Numbers of your tractor in the spaces provided below.

Tractor Model Number _____

Tractor Serial Number _____

Engine Model Number _____

Engine Serial Number _____

Engine Specification Number _____



Our support email:

ebooklibonline@outlook.com