900 Diesel Wheel Tractor

Operators Manual

9-371

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171E

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as





and (s

if used, are RED.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

© 2001 Case Corporation

Bur 0-00000

March, 1995 (Revised October, 1997)

CASE and IH are registered trade marks of Case Corporation

Operator's Instruction Manual



900 DIESEL WHEEL TRACTOR



NOTICE

At the time your Case Dealer delivers your new tractor, he will acquaint you with its operation and maintenance as outlined in the "Dealer's Delivery Service Report". When your Dealer has completed these instructions, he will ask you to sign the report and will then hand you the yellow copy for your records.

NOTE: The "Dealer's Delivery Service Report" also contains a record of the Pre-Delivery Checkup which your Dealer made on your tractor.

AFTER DELIVERY CHECKUP

The Authorized Case Dealer from whom you purchased your new tractor will perform the "After Delivery Checkup" outlined on the following page, if you will arrange to bring your tractor to his Service Shop within - - -

60 days after date of delivery or 200 hours of operation (whichever occurs first).

NOTE: The only charge your dealer will make for this inspection will be for oil, filters or other accessories.

AFTER DELIVERY CHECKUP (Diesel)

THE A SERVICE DESCRIPTION OF THE PARTY OF TH	tiko (n. 1966 terreta esta distributa esta esta esta esta esta esta esta es	
(Owner's Name)		(Date Checkup Performed)
(Owner's Address)		
(Dealership)	~~~~	(Town)
Tractor has been operated	hours	(Tractor Model and Sorial Number)
☐ Check traction clutch.		☐ Cooling system.
☐ Check PTO clutch.		Crankcase oil (Change oil and
☐ Check brakes.		filter if necessary).
 Operate hydraulic system check oil lever in roc housing. 		 Oil Level in transmission, hydrau- lic system, and steering gear.
Check tire pressure.		 Lubricate all pressure fittings and oil cups.
☐ Tighten cylinder heads and tappets.	adjust	☐ Check air cleaner.
Check fuel injection pump timing.		Check steering, bearing adjustment and front wheel toe-in.
 Fuel filtering system. Check no load full governed engine speed. 		☐ Batteries, starter, generator and lights.
☐ Tighten all bolts.		☐ Check operation of all instruments.
	stions con-	y concerning his experience with tractor accrning maintenance or operation that
	Checkuj	upPerformed by
	Signed.	Dealer Dealer
Original—Dealer Suplicate—Leave in Operators Manual for Purchaser	Signed_	Customex

AFTER DELIVERY CHECKUP (Diesel)

	a de construir de la Contra de Constitue de	
(Owner's Name)		(Date Checkup Performed)
(Owner's Address)		
(Dealership)	(7	ľown)
Tractor has been operated	hours	(Tractor Model and Serial Number)
☐ Check traction clutch.	i	Cooling system.
Check PTO clutch.		Crankcase oil (Change oil and
☐ Check brakes.	. [filter if necessary).
 Operate hydraulic system check oil lever in rock housing. 		Oil Level in transmission, hydrau- lic system, and steering gear.
Check tire pressure.	l	Lubricate all pressure fittings and oil cups.
 Tighten cylinder heads and a tappets. 	djust 	Check air cleaner.
Check fuel injection pump timing.		Check steering, bearing adjust- ment and front wheel toe-in.
☐ Fuel filtering system.☐ Check no load full governed engine speed.		Batteries, starter, generator and lights.
Tighten all bolts	İ	☐ Check operation of all instruments.
		oncerning his experience with tractor erning maintenance or operation that
	Checkup.	Performed by
	Signed	Dealer
Original—Dealer Duplicate—Leave in Operators Manual for Purchaser	Signed	Customer

To the Purchaser of a Case Tractor,

The care you give your new Case tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

Your Authorized Case Dealer

To insure efficient and prompt service, please furnish us with the Model and Serial Number of your tractor in all correspondence or contacts.

TABLE OF CONTENTS

	Page
Serial Number	6
General Specifications	7
Diesel Engine Fuel	
Fuel Specifications for a Suitable Number 2 Diesel Fuel	19
Fuel Recommendations for Cold Weather Operation.	22
Fuel Handling and Storage	23
Lubrication	29
Recommended Lubricants and Approximate Capacities	31
Lubricating Point Locations	32
Engine Lubrication	34
Transmission Lubrication	40
Hydraulic Control System	42
Independent Power Take-Off	44
Hydraulic Power Steering	45
Operating Instructions	47
Run-In Procedure	48
Operating Controls and Instrument Guide	50
Diesel Engine Starting Procedure	60
Stopping Engine	61
Cold Weather Operation	62
Ether Starting Aid	64
Gear Selection	67
Differential Brakes	68
Tire Sizes, Pressures, Rear Wheel Weights	69 and 70
Drawbar	71
Belt Pulley	73
Independent Power Take-off	75
Hydraulic Control Operation	79
Implement Warning Lamp	84

TABLE OF CONTENTS Continued

		Page
Imj	portant Checks During Operation	86
Ser	vice Suggestions	89
Pre	ventive Maintenance	99
	Fuel System	101
	Bleeding Fuel System	104 and 105
	Checking Condition of Fuel Filters	106
	Servicing Fuel Filters	110
-	Air Cleaner	
Tall Tall	Crankcase Breathers	118
	Cooling System	119
	Power Steering Drive Belt	127
	Starting and Lighting Equipment	128
	Traction Clutch Adjustment	135
	Valve Tappet Clearance	137
	Power Take-off Clutch Adjustment	139
	Adjusting Differential Brakes	140
	Repacking and Adjusting Front Wheel, Bearings	141
	Adjusting Steering Mechanism	142
	Storing the Tractor	144
Ind	ex	146
Wai	rantv	148

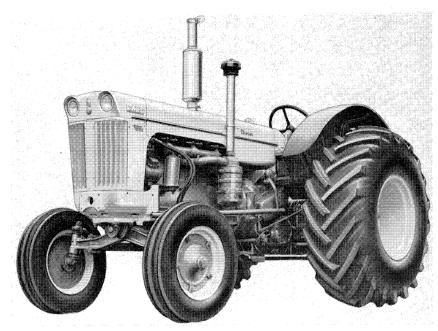


Figure 1. Illustrates Hydraulic Power Steering on Case 900 Diesel Tractor



Figure 2. Illustrates Full Fenders, Wide Swinging Drawbar and Hydraulics

INTRODUCTION

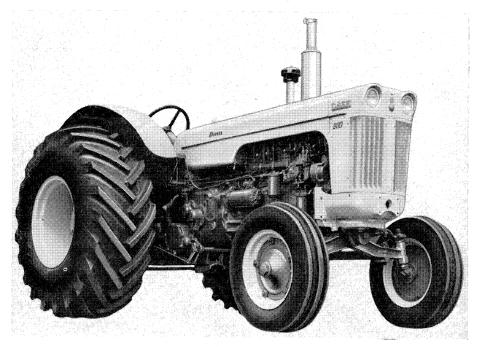


Figure 3.

The Case Model 900 Diesel Tractor is powered by a rugged six cylinder full diesel engine that is noted for its quiet operating characteristics and economy of operation.

The transmission, 6 Speeds forward and 1 reverse, provides a full range of working speeds to handle all implements and tools in any type or condition of soil. The high speed (6th) road gear brings your fields closer to the farm yard in terms of non productive time spent on the road.

Advanced engineering includes the CASE POWRCEL combustion system which produces all of the available power out of each charge of injected fuel. To protect the closely fitted precision parts, the finest filters available have been provided to clean the fuel, the intake air and the crankcase oil.

The four basic rules of Diesel Engine operation, which are the deciding factors in determining the service life and economy of operation that you will receive from your tractor, are as follows:

1. CLEAN FUEL

- (a) Use only Number 2 Diesel Fuel that meets the specifications listed in this manual.
- (b) Follow the instructions regarding the recommended precautions when handling and storing fuel.

2. AIR CLEANER

Service the air cleaner regularly.

3. CRANKCASE OIL

Diesel Engines require the use of a heavy duty engine oil. Select oil that meets the proper service designations recommended in the lubrication section of this manual.

4. PERIODIC CHECKUPS

Your authorized Case Dealer has the service knowledge necessary to keep your tractor in top running condition.

Arrange to have him check your tractor at regular intervals.

NOTE: The terms "Right Hand" and "Left Hand" whenever used in this manual apply to the tractor when facing in the direction the tractor will move in forward operation.

SERIAL NUMBER

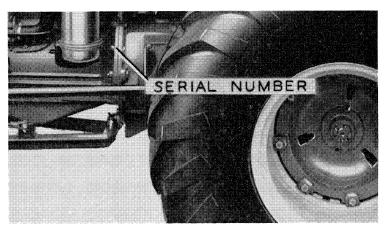


Figure 4. Number Plate on Instrument Panel

When ordering parts from your Authorized Case Dealer and in all contacts or correspondence with your dealer relative to the tractor, always specify the Serial Number and Model of your tractor.

The model and serial number is stamped on the number plate located on the right hand side of the instrument panel. See Figure 5. The serial number is also stamped on the left rear side of the engine block near the air cleaner, Figure 4.

For reference, fill in the Serial number of your 900 Series Diesel Tractor in the space provided below.

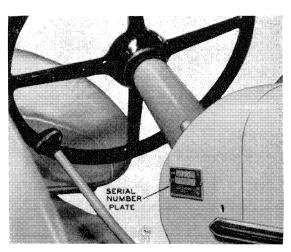


Figure 5

Model Serial No.



Our support email: ebooklibonline@outlook.com