

**200B Series
Wheel Tractors**

Operator's Manual

9-462

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

Operator's Instruction Manual

CASE

REGISTERED IN U. S. PATENT OFFICE

●

"200B" SERIES WHEEL TRACTORS

J. I. Case Co.

RACINE, WISCONSIN - U. S. A.



NOTICE!

At the time your Case Dealer delivers your new tractor, he will acquaint you with its operation and maintenance as outlined in the "Dealer's Delivery Service Report". When your Dealer has completed these instructions, he will ask you to sign the report and will then hand you the yellow copy for your records.

NOTE: The "Dealer's Delivery Service Report" also contains a record of the Pre-Delivery Checkup which your Dealer made on your tractor.

AFTER DELIVERY CHECKUP

The Authorized Case Dealer from whom you purchased your new tractor will perform the "After Delivery Checkup" outlined on the following page, if you will arrange to bring your tractor to his Service Shop within - - -

60 days after date of delivery or 200 hours of operation (whichever occurs first).

NOTE: The only charge your dealer will make for this inspection will be for oil, filters or other accessories.

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name)	(Date Checkup Performed)
(Owner's Address)	
(Dealership)	(Town)
Tractor has been operated..... hours	
(Tractor Model and Serial Number)	

- | | |
|--|---|
| <input type="checkbox"/> Check foot clutch.
<input type="checkbox"/> Check hand clutch (if used).
<input type="checkbox"/> Check shuttle action (if used).
<input type="checkbox"/> Check brakes.
<input type="checkbox"/> Operate Eagle Hitch hydraulic system and check oil level in torque tube.
<input type="checkbox"/> Check tire pressure.
<input type="checkbox"/> Tighten cylinder head and adjust tappets.
<input type="checkbox"/> Check distributor timing (magneto — if so equipped).
<input type="checkbox"/> Check spark plugs and distributor point gap.
<input type="checkbox"/> Check full governed no load engine speed. | <input type="checkbox"/> Tighten all bolts (including rims).
<input type="checkbox"/> Cooling system.
<input type="checkbox"/> Crankcase oil (Change oil and filter if necessary).
<input type="checkbox"/> Oil level in transmission and torque tube.
<input type="checkbox"/> Lubricate all pressure fittings and oil cups.
<input type="checkbox"/> Check air cleaner.
<input type="checkbox"/> Check steering, bearing adjustment and front wheel toe-in.
<input type="checkbox"/> Battery, starter, generator and lights.
<input type="checkbox"/> Check operation of all instruments. |
|--|---|

DEALER: Question purchaser carefully concerning his experience with tractor and answer any questions concerning maintenance or operation that are not clear to him.

Checkup
Performed by

Signed
Dealer

Signed
Customer

ORIGINAL—Dealer
 DUPLICATE—Leave in Operators Manual
 for Purchaser

Dealer's Copy — Leaf 1102

AFTER DELIVERY CHECKUP (Spark Ignition Tractors)

(Owner's Name)	(Date Checkup Performed)
(Owner's Address)	
(Dealership)	(Town)
Tractor has been operated.....hours	
(Tractor Model and Serial Number)	

- | | |
|--|---|
| <input type="checkbox"/> Check foot clutch.
<input type="checkbox"/> Check hand clutch (if used).
<input type="checkbox"/> Check shuttle action (if used).
<input type="checkbox"/> Check brakes.
<input type="checkbox"/> Operate Eagle Hitch hydraulic system and check oil level in torque tube.
<input type="checkbox"/> Check tire pressure.
<input type="checkbox"/> Tighten cylinder head and adjust tappets.
<input type="checkbox"/> Check distributor timing (magneto — if so equipped).
<input type="checkbox"/> Check spark plugs and distributor point gap.
<input type="checkbox"/> Check full governed no load engine speed. | <input type="checkbox"/> Tighten all bolts (including rims).
<input type="checkbox"/> Cooling system.
<input type="checkbox"/> Crankcase oil (Change oil and filter if necessary).
<input type="checkbox"/> Oil level in transmission and torque tube.
<input type="checkbox"/> Lubricate all pressure fittings and oil cups.
<input type="checkbox"/> Check air cleaner.
<input type="checkbox"/> Check steering, bearing adjustment and front wheel toe-in.
<input type="checkbox"/> Battery, starter, generator and lights.
<input type="checkbox"/> Check operation of all instruments. |
|--|---|

DEALER: Question purchaser carefully concerning his experience with tractor and answer any questions concerning maintenance or operation that are not clear to him.

Checkup
Performed by

Signed
Dealer

Signed
Customer

ORIGINAL—Dealer
 DUPLICATE—Leave in Operators Manual
 for Purchaser

To the Purchaser of a Case Tractor,

The care you give your new Case tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.


Should you require additional aid or information, contact us.

Your Authorized Case Dealer


To insure efficient and prompt service, please furnish us with the Model and Serial Number of your tractor and Serial Number of your engine, in all correspondence or contacts.

TABLE OF CONTENTS


	Page
Serial Numbers	6
General Specifications	7- 12
Lubrication	13- 27
Pressure Fittings	16- 17
Engine Lubrication	20- 22
Transmission Lubrication	23
Steering Gear	23
Hydraulic System	25- 27
Operating Instructions	29- 74
Pre-Starting Check List	30
Operating Controls and Instruments	32- 34
Run-In Procedure	35
Engine Starting Procedure	36- 37
Stopping the Engine	37
Differential Brakes	38
Tripl-Range Drive	40- 41
Dual-Range Shuttle	42
Eagle Hitch and Hydraulic System	43- 48
Three-Point Hitch (with Swinging Draft Arms).....	49
Remote (Portable) Cylinder Attachment.....	50- 51
Rear Wheel Spacing	52- 54
Power Adjusted Wheels	55- 56
Front Wheel Spacing	57- 58
Belt Pulley Attachment	59- 61
Constant Running P.T.O.	62- 63
P.T.O. Output Shaft.....	64- 65
Drawbar	66
Tractor Accessories	67- 68
Cold Weather Operation	69- 70
Fuel Storage	71
Important Checks During Operation	72- 73
Service Suggestions	75- 81
Preventive Maintenance	83-109
Cooling System	84- 89
Fuel and Fuel System	91- 93
Governor and Engine Speed	94
Valve Adjustment	95
Ignition and Electrical Equipment	97-106
Front Wheel Bearings	107
Flywheel Clutch and Pedal Linkage	108
Differential Brakes and Adjustment	109
Tractor Storage	110-111
Index, Alphabetical	112-113
Warranty	115

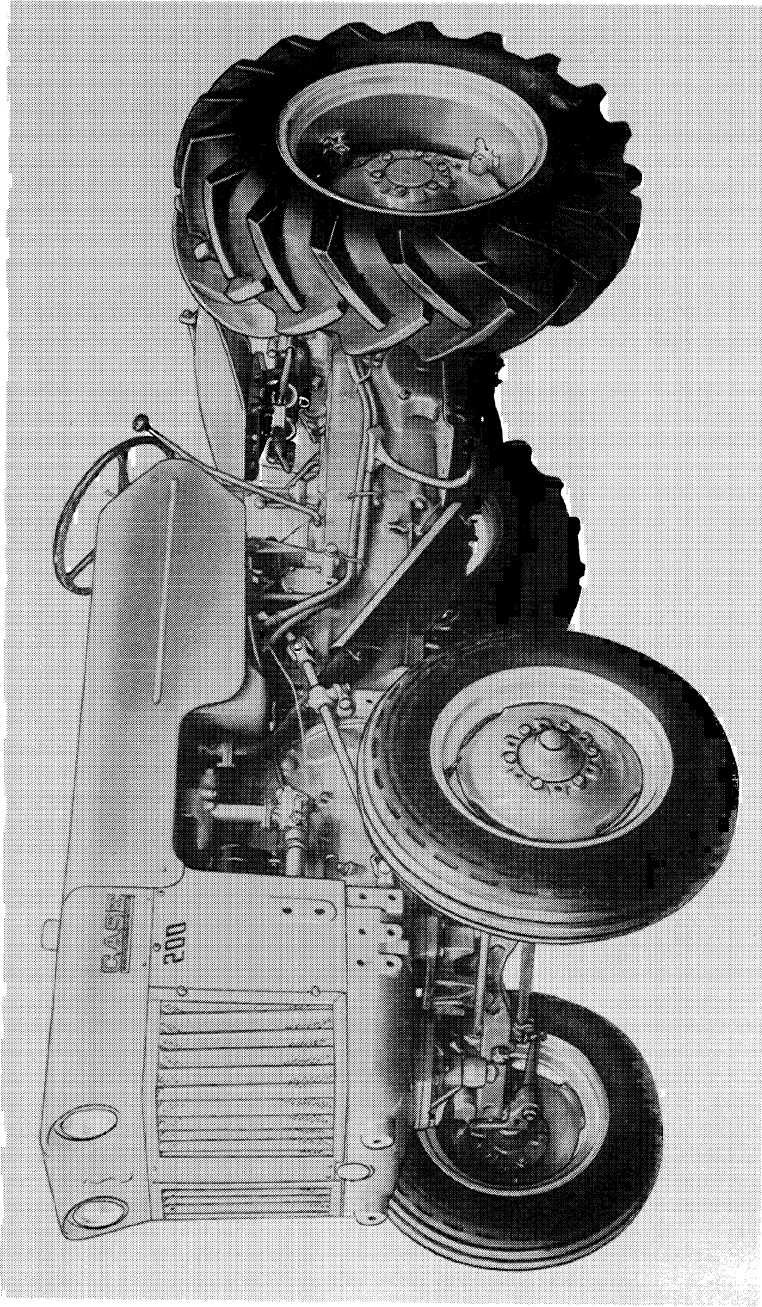

Case Model 210B Utility Tractor

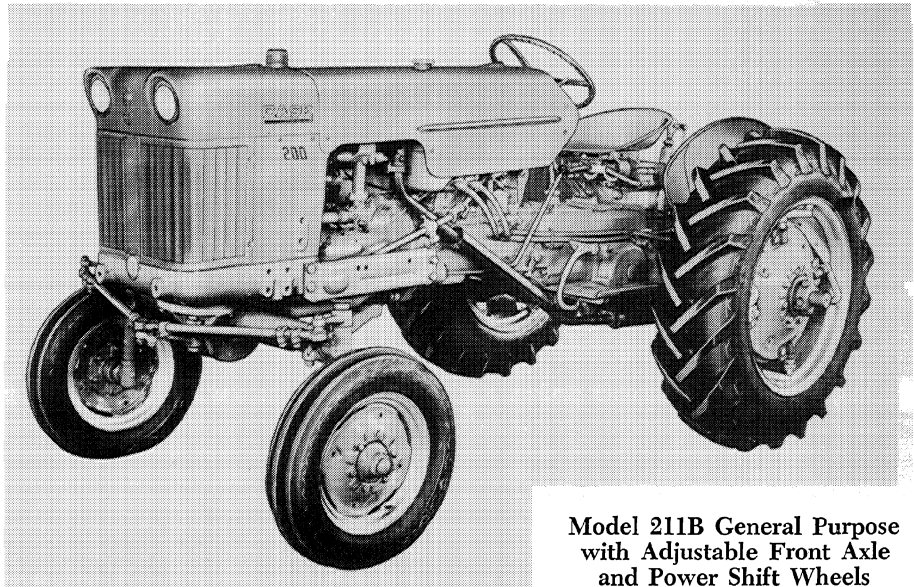

**Model 211B General Purpose
with Adjustable Front Axle
and Power Shift Wheels**

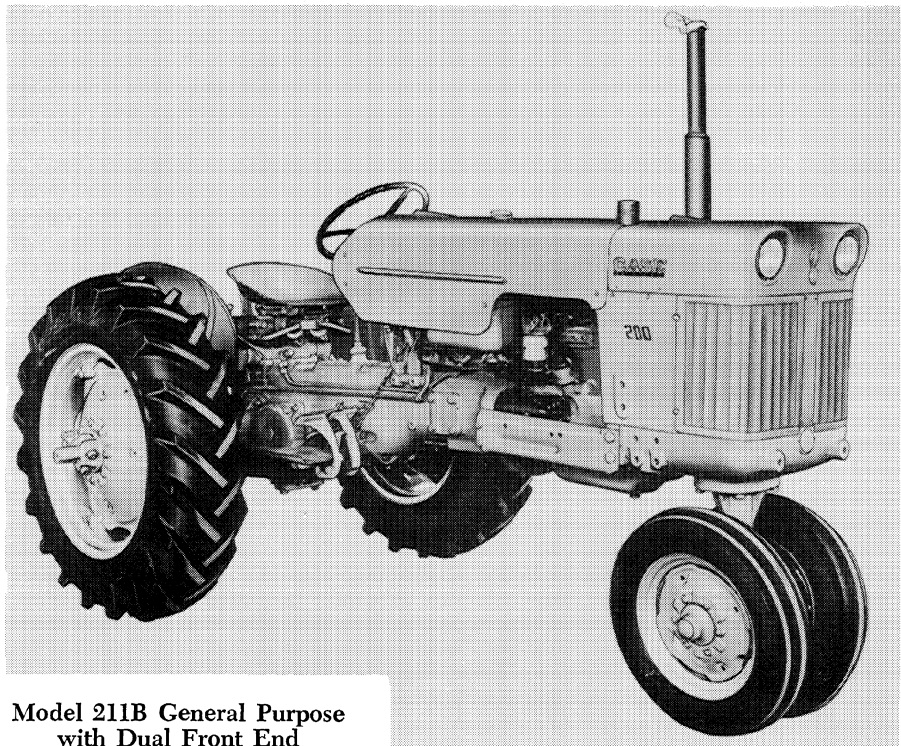

**Model 211B General Purpose
with Dual Front End**

INTRODUCTION

Here's just a few outstanding features of the Case "200B" Series Tractor:

1. **"POWR-TORQ" ENGINE.** A high-compression, heavy-duty power plant with an extremely high torque. What's more it operates on regular grade gasoline.
2. **HEAVY-DUTY CLUTCH.** New clutch design with 50% more "torque-carrying" capacity. Smooth, long-life operation.
3. **SPEED CONTROL.** "All-Speed" friction type hand throttle with finger tip, finger-ease control.
4. **CAM AND LEVER STEERING.** Smooth-as-silk, shockproof steering for accurate, instant control of front wheels.
5. **DIFFERENTIAL BRAKES.** High-capacity 6-inch double-disk, velvet touch, brakes. Simple to adjust, a breeze to service.
6. **HEAVY-DUTY TRANSMISSION.** Standard (4) speed transmission provides speeds of 2.7, 4.0, 5.2, 12.9 m.p.h. forward, and a speed of 3.2 m.p.h. in reverse. A special high speed road gear is also available as a factory installed extra.
7. **TWELVE-SPEED "TRIPL-RANGE" DRIVE (EXTRA).** This remarkable power train provides forward speeds from 1.6 to 21.5 m.p.h. and reverse speeds from 1.9 to 5.4 m.p.h. (see page 11).
8. **DUAL-RANGE SHUTTLE (EXTRA).** Provides (8) speeds forward and (8) speeds in reverse. Provides faster working cycles when using a front end loader since reverse speeds are 25% faster than forward, in any gear. (see page 11).
9. **CONSTANT-RUNNING POWER TAKE-OFF (EXTRA).** This is a "straight-line" power shaft from engine to rear shifter fork. In use, it allows the rear wheels to be stopped, while the P.T.O. shaft rotation remains at a normal 533 r.p.m.
10. **EAGLE-HITCH.** Improved, enclosed, streamlined, assembly with quick, simple implement attaching points. Handier than ever, more compact, more lifting power, greater ease of operation. And for your safety a built-in "hydraulic interlock" to prevent accidental "dropping" of mounted tools. Double control and remote cylinder system can easily be attached at any time.
11. **THREE-POINT HITCH (Swinging Draft Arms).** This is an optional hitch which will accommodate rear-mounted tools other than Case. This hitch is actuated and controlled by the same hydraulic system as the Eagle Hitch linkage.
12. **KEY STARTING.** Combination ignition switch and removable starting key.
13. **CHOICE OF MODELS.** 1. A low-silhouette Model "210B" utility tractor with a solid front axle. 2. A standard general purpose Model "211B" with dual front wheels. This model is also available with an adjustable front axle as extra equipment.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com