



# Service Repair Manual

## **Models**

326D2 and 326D2 L Excavator

---

Product: EXCAVATOR

Model: 326D2 EXCAVATOR JFG

Configuration: 326D2 L Excavator JFG00001-UP (MACHINE) POWERED BY C7.1 Engine

## **Disassembly and Assembly 326D2, 329D2 and 330D2 Excavators Machine Systems**

Media Number -UENR6134-08

Publication Date -01/09/2018

Date Updated -12/09/2018

i01219550

## **Travel Motor - Disassemble**

SMCS - 4351-015

S/N - DTG1-UP

S/N - EBP1-UP

S/N - EX71-UP

S/N - FEX1-UP

S/N - HSP1-UP

S/N - JFG1-UP

S/N - KER1-UP

S/N - LJE1-UP

## **Disassembly Procedure**

### **Start By:**

- a. Remove the travel motor.

**Reference:** Refer to Disassembly and Assembly, "Travel Motor - Remove" in this manual.

---

### **NOTICE**

**Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.**

**Refer to Special Publication, NENG2500, "Caterpillar Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Caterpillar products.**

**Dispose of all fluids according to local regulations and mandates.**

---

1. Thoroughly clean the outside of the travel motor prior to disassembly.
2. Fasten the travel motor to a suitable holding fixture in a vertical position. The weight of the travel motor is 60 kg (132 lb).
3. Put an alignment mark across the head and the body of the travel motor for assembly purposes. The head must be reinstalled in the head's original position on the body of the travel motor.

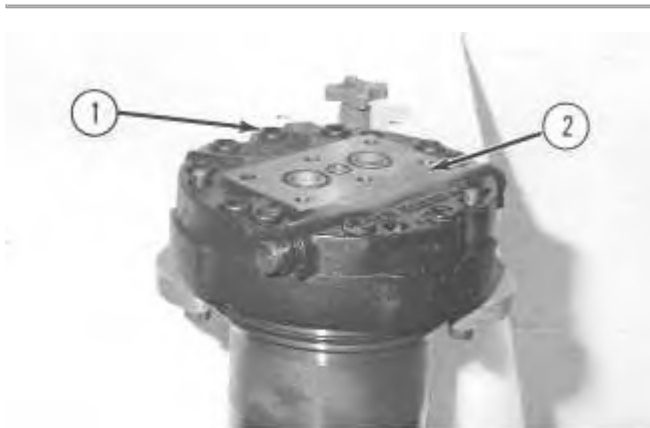


Illustration 1

g00510326

**Note:** During the removal of head (2) from the body of the travel motor, be careful not to scratch or damage the mating surfaces of the components.

4. Remove socket head bolts (1).
5. Remove head (2) from the body of the travel motor.

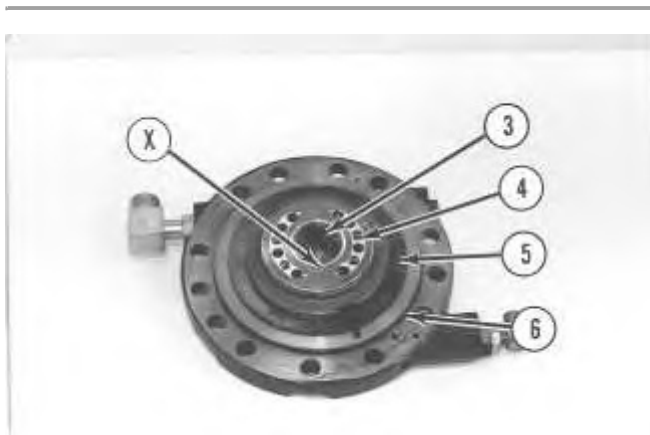


Illustration 2

g00510341

---



---

Illustration 3

g00510349

6. Turn over head (2).
7. Remove O-ring seal (6), shims (5), port plate (4), and bearing (3) from the head.
8. Remove the two check valve assemblies from the head.

**Note:** There is a retainer under spring (9). This retainer is a press fit in head (2). Do not remove the retainer.

9. Insert a dowel rod with a small diameter into hole (X). Tap the dowel rod with a plastic hammer in order to remove spring (9), poppet (8) and seat (7) from the head.



---

Illustration 4

g00510351

10. Remove three fittings (10) and plugs (11) from the head. Remove the O-ring seal from each fitting.
-

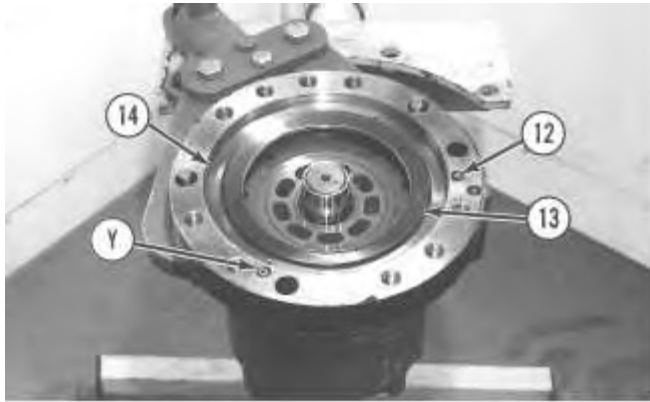


Illustration 5

g00510352

11. Remove three O-ring seals (12) and washer set (13) from the body of the travel motor.
12. Place a shop towel over brake piston (14). Retain brake piston (14) by hand, and apply approximately 525 kPa (75 psi) of shop air pressure to brake release port (Y). Make sure that the shop air pressure is free of water. Brake piston (14) will move up the piston guide, and out of the piston guide. Remove brake piston (14) from the body of the travel motor.

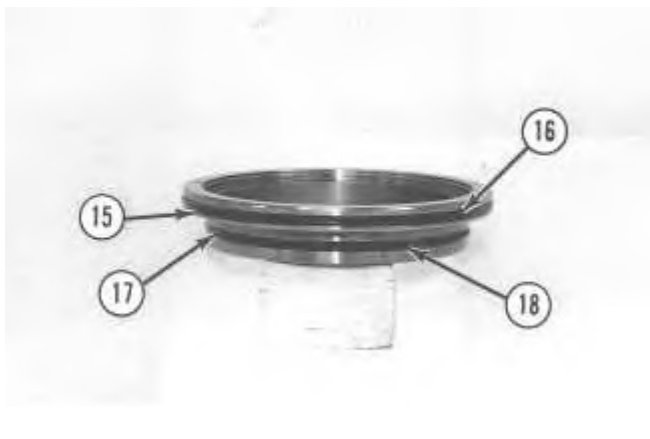


Illustration 6

g00510353

13. Remove O-ring seal (15) from the brake piston. Remove backup ring (16) from the brake piston.
14. Remove O-ring seal (17) from the brake piston. Remove backup ring (18) from the brake piston.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)