



# Service Repair Manual

## **Models**

329E Excavator

---

Product: MOBILE HYD POWER UNIT

Model: 329E MOBILE HYD POWER UNIT K2L

Configuration: 329E Mobile Hydraulic Power Unit K2L00001-UP (MACHINE) POWERED BY C7.1 Engine

## Disassembly and Assembly 324E and 329E Excavators and 329E MHPU Mobile Hydraulic Power Unit Machine Systems

Media Number -KENR9844-04

Publication Date -01/04/2015

Date Updated -14/04/2015

i04216221

### Travel Motor - Disassemble

SMCS - 4351-015

S/N - JCZ1-UP

S/N - K2L1-UP

S/N - KTE1-UP

S/N - LDG1-UP

S/N - PNW1-UP

S/N - PTY1-UP

S/N - RDX1-UP

S/N - RLD1-UP

S/N - TLF1-UP

S/N - TST1-UP

S/N - WJK1-UP

S/N - ZCD1-UP

### Disassembly Procedure

Table 1

| Required Tools |             |                  |     |
|----------------|-------------|------------------|-----|
| Tool           | Part Number | Part Description | Qty |
|                |             |                  |     |

|   |         |   |   |
|---|---------|---|---|
|   | 1U-7506 | Adapter                                       | 1 |
| A | 8T-4244 | Nut   | 6 |
|   | 8T-4223 | Hard Washer                                   | 6 |
|   | -       | Threaded RodM12 x 1.75 by 250 mm (10 in) long | 1 |
|   | 8T-0651 | Bolt  | 1 |
| B | 8T-4167 | Hard Washer                                   | 1 |
| C | 3E-3882 | Eyebolt                                       | 1 |
| D | 1P-1859 | Retaining Ring Pliers                         | 1 |
| E | 1P-0510 | Driver Gp                                     | 1 |
|   | 9S-9152 | Bearing Puller Gp                             | 1 |
| F | 1P-1861 | Retaining Ring Pliers                         | 1 |

**Start By:**

- A. Remove the travel motor. Refer to Disassembly and Assembly, "Travel Motor - Remove".

---

**NOTICE**

**Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.**

**Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.**

**Dispose of all fluids according to local regulations and mandates.**

---

1. Thoroughly clean the outside of the travel motor prior to disassembly.
  2. Fasten the travel motor in Tooling (A) in a vertical position. The weight of the travel motor is approximately 60 kg (132 lb).
  3. Put an alignment mark across the head and the body of the travel motor for assembly purposes. The head must be reinstalled in the head's original position on the body of the travel motor.
-



Illustration 1

g00887295

**Note:** During the removal of head (2) from the travel motor, be careful not to damage the mating surfaces of the components.

**⚠ WARNING**

**Spring force can cause personal injury or death.**

**Do not repair until you have read the Operation and Maintenance Manual.**

4. Remove bolts (1) .
5. Remove head (2) from the body of the travel motor.

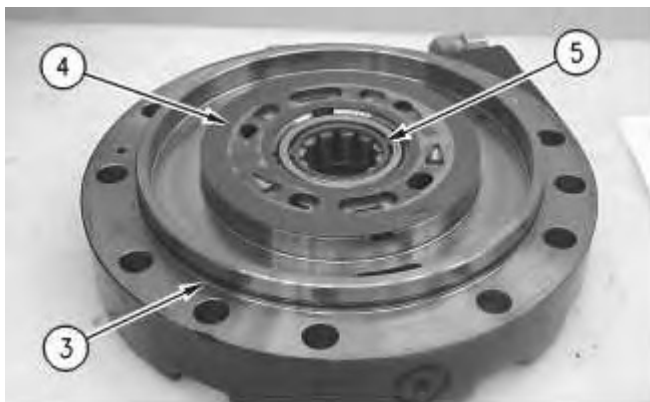


Illustration 2

g00887302

6. Remove O-ring seal (3), port plate (4), and bearing (5) .

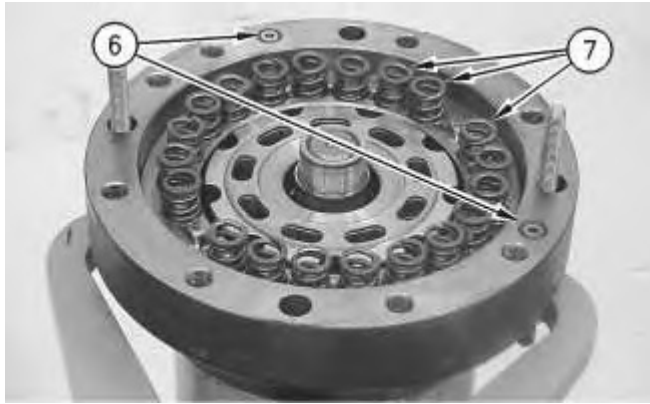


Illustration 3

g00887311

7. Remove O-ring seals (6). Remove springs (7) .

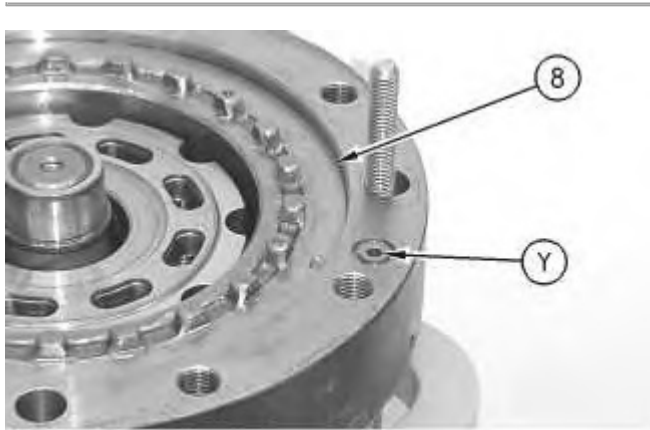


Illustration 4

g00887331

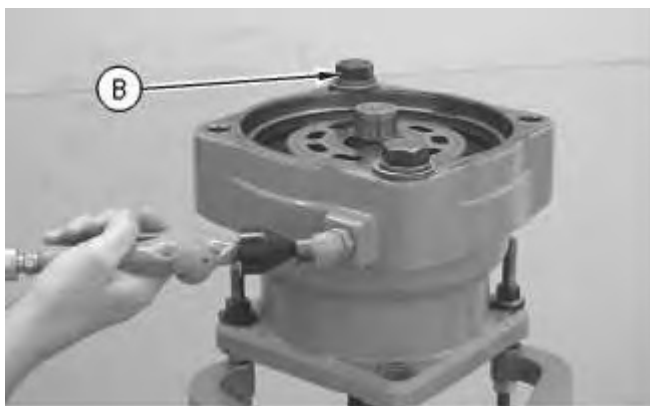


Illustration 5

g00890074

This is an example of the use of Tooling (B) .

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)