



# Service Repair Manual

## **Models**

345D L Excavator

---

Product: EXCAVATOR

Model: 345D L EXCAVATOR RGG

Configuration: 345D L Excavators RGG00001-UP (MACHINE) POWERED BY C13 Engine

## Disassembly and Assembly

### 345D, 349D and 349D2 Excavators and 345D MHPU and 349D MHPU Mobile Hydraulic Power Units Machine Systems

Media Number -REN9574-10

Publication Date -01/08/2014

Date Updated -18/09/2018

i02407350

## Travel Motor - Disassemble

SMCS - 4351-015

## Disassembly Procedure

### Start By:

- a. Remove the travel motor. Refer to Disassembly and Assembly, "Travel Motor - Remove" .

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	3E-3879	Eyebolt	1
B	1P-0074	Slide Hammer Puller	1
C	6V-3010	Puller Group	1
D	4C-8359	Eyebolt	1
E	9S-9152	Bearing Puller	1
F	1P-1862	Pliers	1
G	1P-0510	Driver Group	1
H	1U-7600	Slide Hammer Puller	1

---

## NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair

**of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.**

**Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat<sup>®</sup> products.**

**Dispose of all fluids according to local regulations and mandates.**

---

---

### **NOTICE**

**Failure to properly assemble parts or failure to follow established procedures can lead to damage to the parts and assembly.**

**To avoid damage to parts, always identify and mark the parts so that they can be installed into the same location. Never force parts during assembly. Keep parts clean and lubricated.**

---

---

### **NOTICE**

**Keep all parts clean from contaminants.**

**Contamination of the hydraulic system with foreign material will reduce the service life of the hydraulic system components.**

**To prevent contaminants from entering the hydraulic system, always plug or cap the lines, fittings, or hoses as they are disconnected. Cover any disassembled components and clean them properly before assembly.**

**Clean the hydraulic system properly after any major component exchange or especially after a component failure, to remove any contamination.**

---

**Note:** If a failure occurs, an accurate diagnosis of the cause can prevent a recurrence. Information is available to analyze failures for piston pumps and motors. Refer to Special Publication, SEBD0641, "Analyzing Axial Piston Pump and Motor Failures".

**Note:** Inspect all parts. If any parts are worn or damaged use new parts for replacement. The installation of used parts during reconditioning is acceptable. Reuse and salvage information is available on piston pumps. Refer to Guideline for Reusable Parts and Salvage Operations, SEBF8032, "Piston Pumps and Motors". During reconditioning, correct any conditions that might have caused the original failure.

1. Thoroughly clean the outside of the travel motor prior to disassembly. Fasten the travel motor to a suitable holding fixture in a vertical position. The weight of the travel motor is 141 kg (310 lb).



Illustration 1

g00627438

2. Remove displacement change valve (1) from the head of the travel motor.



Illustration 2

g00624938

3. Remove O-ring seals (2) and rings (3) from the displacement change valve.



Illustration 3

g00628657

## **WARNING**

**Personal injury can result from being struck by parts propelled by a released spring force.**

**Make sure to wear all necessary protective equipment.**

**Follow the recommended procedure and use all recommended tooling to release the spring force.**

---

4. Remove plugs (5) from the head. Remove an O-ring seal from each plug.
5. Remove outer bolts (4) from the head of the travel motor.

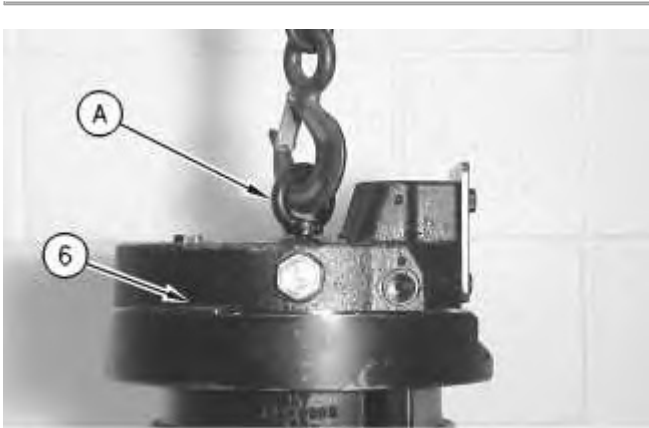


Illustration 4

g00624949

6. Use Tooling (A) and a suitable lifting device to remove the head of the travel motor from the travel motor housing. The weight of head (6) is approximately 43 kg (95 lb).

**Note:** There are pins (7) that may fall out of the inside of the head when the head is removed.

**Note:** Be careful during the removal of head (6) from the travel motor housing. Be careful not to scratch mating surfaces or damage the mating surfaces of the components.

---



Illustration 5

g00624953

7. Turn over the head. If pins (7) are in the bottom side of the head, remove the pins.

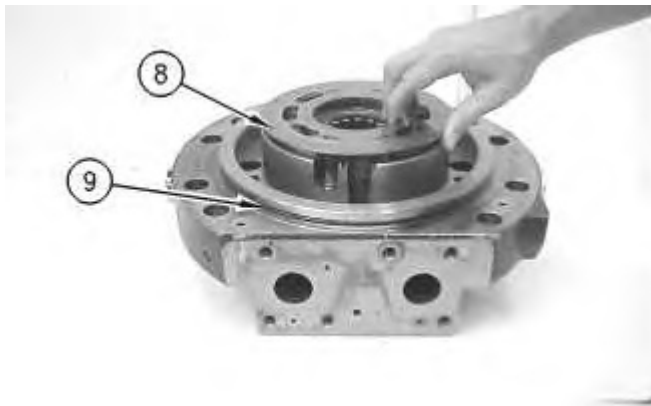


Illustration 6

g00627405

8. Remove port plate (8) and O-ring seal (9) from the head.

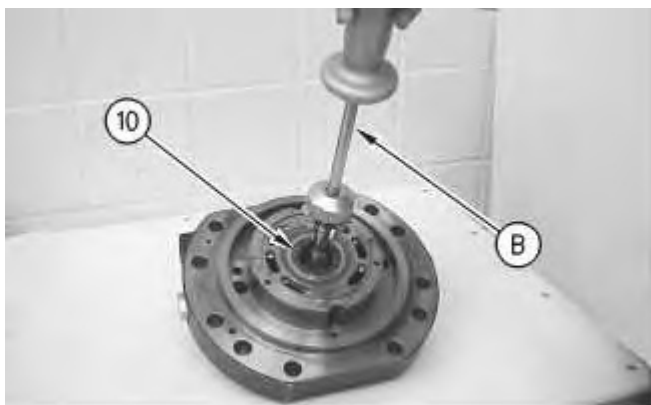


Illustration 7

g00625967

9. Use Tooling (B) in order to remove bearing (10) from the head of the travel motor.

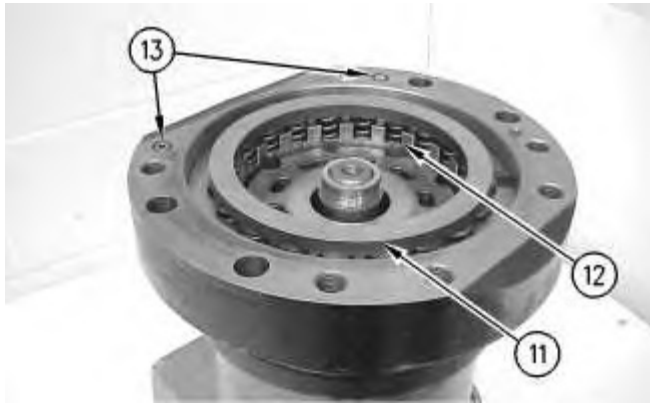


Illustration 8

g00627391

10. Remove plate (11) and remove springs (12) from the travel motor housing.
11. Remove O-ring seals (13) from the upper surface of the travel motor housing.

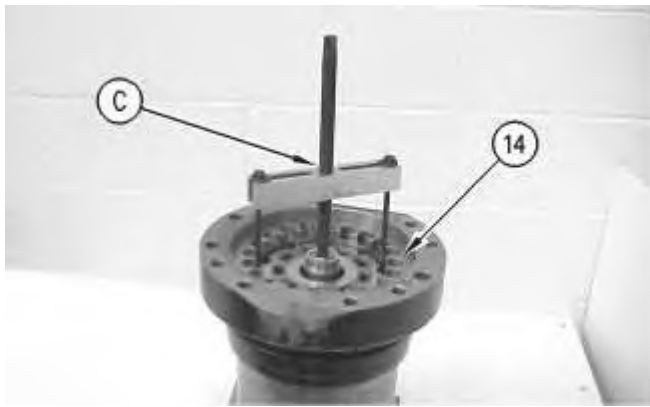


Illustration 9

g00627377

12. Install Tooling (C) on the brake piston (14). Remove the brake piston.

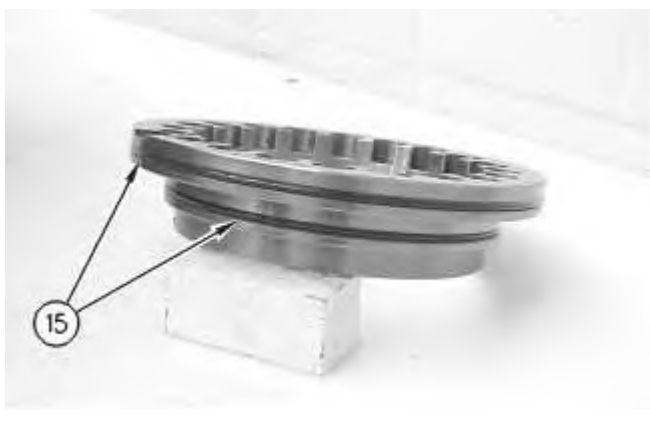


Illustration 10

g00625888

13. Remove O-ring seals (15) and the backup rings from the brake piston.

**Note:** Make sure that you take note of the location of the O-rings versus the backup rings.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)