



# Service Repair Manual

## **Models**

CS-573E and CP-573E  
Vibratory Compactor

---

Product: VIBRATORY COMPACTOR

Model: CP-573E VIBRATORY COMPACTOR ASZ

Configuration: CS-573E CP-573E Vibratory Compactor ASZ00001-UP (MACHINE) POWERED BY 3056E Engine

## Disassembly and Assembly

### CP-563E, CP-573E, CS-563E, CS-573E and CS-583E Paving Compactors Machine Systems

Media Number -KENR3604-04

Publication Date -01/09/2008

Date Updated -22/09/2008

i02540039

## Final Drive Planetary (Drum Propel) - Assemble

SMCS - 5655-016

## Assembly Procedure

Table 1

| Required Tools |             |                            |     |
|----------------|-------------|----------------------------|-----|
| Tools          | Part Number | Part Description           | Qty |
| A              | 8B-7548     | Push-Puller Tool Gp        | 1   |
|                | 1P-0520     | Driver Gp                  | 1   |
|                | 8T-0207     | Bolt                       | 2   |
|                | 5P-8247     | Hard Washer                | 2   |
| B              | 136-1452    | Retaining Ring Pliers      | 1   |
| D              | 138-7574    | Link Bracket               | 2   |
| E              | 220-5726    | Duo-Cone Seal Installer As | 1   |
| F              | 5P-0960     | Molybdenum Grease          | 1   |
| G              | 9S-3263     | Thread Lock Compound       | 1   |
| H              | 8T-5096     | Dial Indicator Gp          | 1   |

**Note:** All of the components must be cleaned and inspected before assembly. If any of the components are beyond recommended limits, replace the components. Lubricate all moving parts with clean hydraulic oil during assembly. Assemble the final drive planetary with new seals.

---

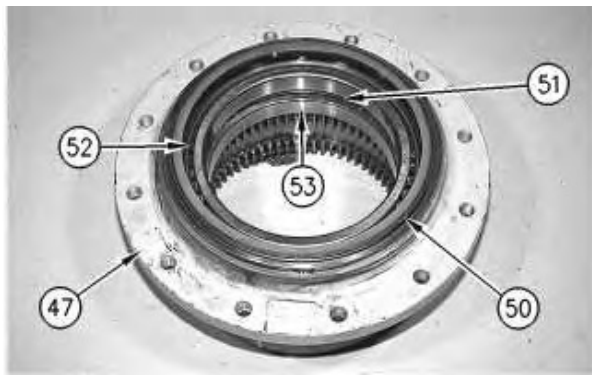


Illustration 1

g00978764

1. Install retaining rings (51) , bearing cups (53) and bearings (52) in housing (47) .
2. Use Tooling (E) to install Duo-Cone Seal (50) in housing (47) . Refer to Disassembly and Assembly, "Duo-Cone Conventional Seals - Install" for the correct procedure.

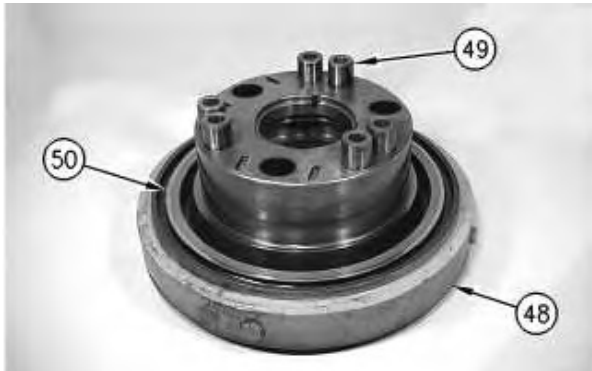


Illustration 2

g00978762

3. Use Tooling (E) to install Duo-Cone Seal (50) in hub (48) . Refer to Disassembly and Assembly, "Duo-Cone Conventional Seals - Install" for the correct procedure.
4. Install bushings (49) in hub (48) .

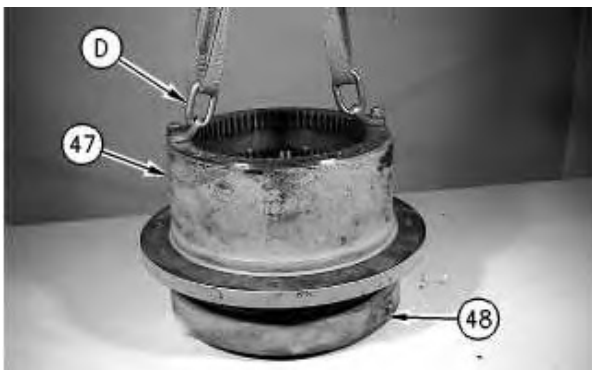


Illustration 3

g00978761

5. Use Tooling (D) and a suitable lifting device in order to install housing (47) on hub (48) . The weight of the hub is 43 kg (95 lb).

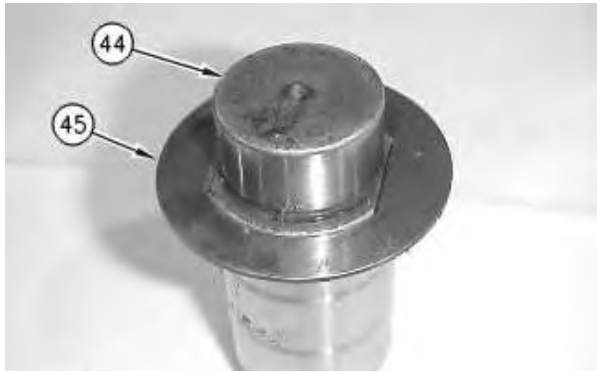


Illustration 4

g00978891

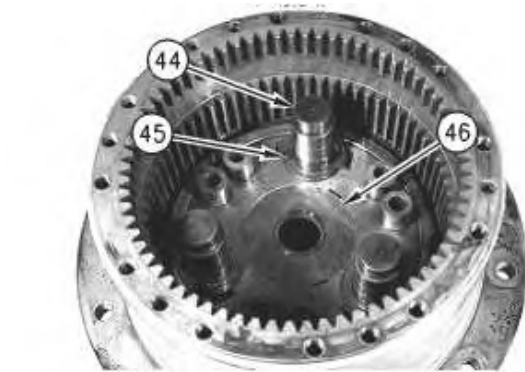


Illustration 5

g00978758

**Note:** Planetary gear pins (44) are not symmetrical. Install the longer end of the planetary gear pins in hub (48) .

**Note:** Planetary gear pins (44) and the bores in hub (48) must be clean in order to allow proper installation.

6. Apply Tooling (F) on the shoulders of planetary gear pins (44) . Install antirotation washers (45) on planetary gear pins (44) .
  7. Install antirotation washers (45) and planetary gear pins (44) in hub (48) .
  8. Install retaining disc (46) .
-

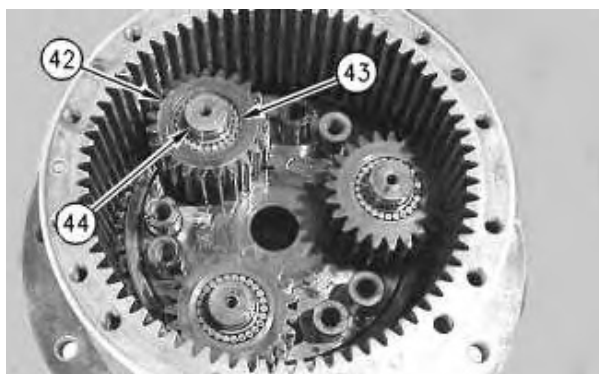


Illustration 6

g00978851

9. Apply Tooling (F) to needle bearings (43) . Install 75 needle bearings (43) on planetary gear pin (44) . There are three rows of needle bearings (43) on planetary gear pin (44) . Each row contains 25 needle bearings. Install planetary gear (42) on the needle bearings and the planetary gear pin.
10. Repeat Step 9 and install the remaining needle bearings and the remaining planetary gears.



Illustration 7

g00977635

11. Install antirotation washers (41) .

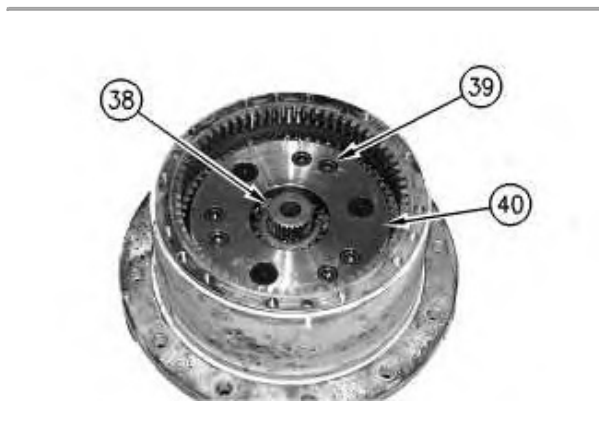


Illustration 8

g00832581

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)