



Service Repair Manual

Models

D7H TRACK-TYPE TRACTOR

Product: TRACK-TYPE TRACTOR

Model: D7H TRACK-TYPE TRACTOR 2SB

Configuration: D7H & D7H LGP TRACTOR / DIRECT DRIVE / 2SB00001-UP (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly D7H TRACTOR POWER TRAIN

Media Number -SEN4176-01

Publication Date -01/06/1993

Date Updated -23/08/2012

SEN41760019

Final Drives

SMCS - 4050-016; 4050-011; 4050-012; 4050-015


Remove Final Drives

Tools Needed		A	B
8T3045	Adapter	1	
8T3207	Lifting Bracket		1
5P8622	Shackle		1
1D4615	Bolt (3/4"-10 × 5 1/2")		2
1B4331	Nut		2
5P8248	Washer		4

Start By:


a. separate track

NOTE: The final drive planet carriers can be removed in chassis. See topic Remove Final Drive Planet Carriers (In Chassis).

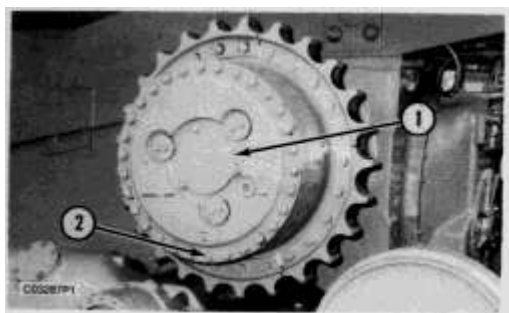

1. Turn the final drive until drain plug (2) is on the bottom as shown. Remove drain plug (2) and drain approximately **11.4 liter (3 U.S. gal.)** of oil from the final drive.

2. Remove cover (1) from the final drive. Remove the O-ring seal from the cover.

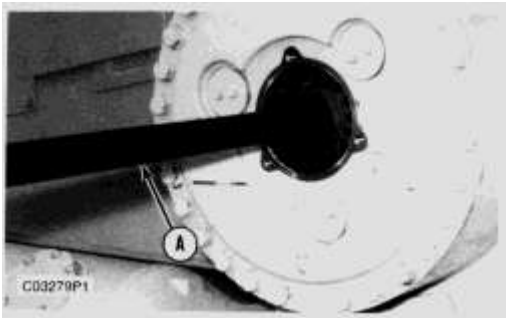


3. Remove the retainer from the sun gear.

4. Install tool (A), and remove the outer axle.




WARNING


Make sure that the short support of tooling (B) is on the bottom and the long support is on the top when distance (X) is made.

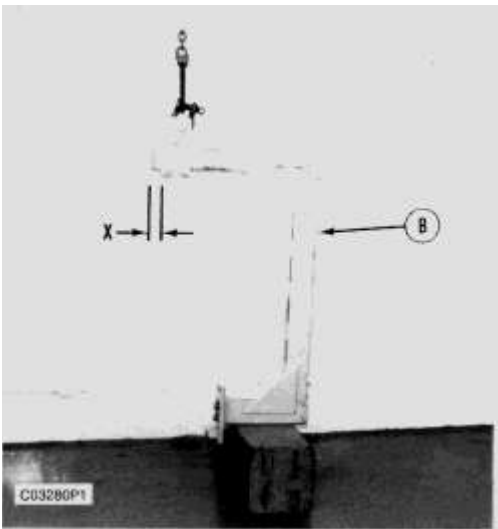

5. Adjust the top bracket on tooling (B) so distance (X) is **38 mm (1.5 in)**. The lower mounting bracket must be installed with the spacers outward as shown.

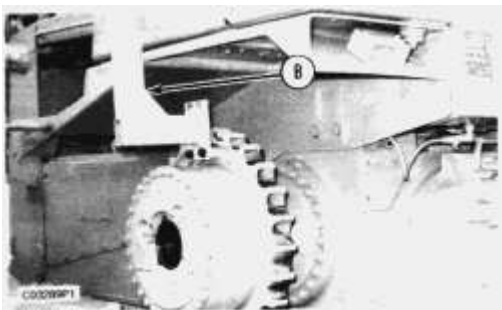

6. Remove two bolts from the sprocket segments. Fasten a hoist, and install tooling (B) on the final drive.

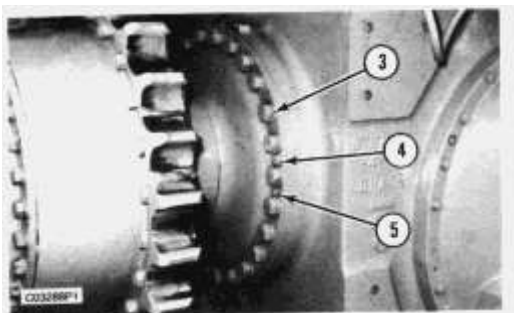

WARNING

Do not remove two bolts (5) that hold the steering clutch and brake to the frame.

7. Remove bolts (3) that hold the final drive and steering clutch and brake to the frame.

8. The weight of the final drive is **625 kg (1375 lb)**. Remove two bolts (4) that hold the fuel drive and steering clutch and brake together.

9. Use tooling (B), and remove the final drive from the machine.


10. Remove the O-ring seal from either the face of the steering clutch or the final drive hub.

Install Final Drives


Tools Needed		A	B
8T3207	Lifting Bracket	1	
5P8622	Shackle	1	
1D4615	Bolt (3/4"-10 x 5 1/2" long)	2	
1B4331	Nut	2	
5P8248	Washer	4	
8T3045	Adapter		1

1. Inspect the condition of O-ring seals, and replace if necessary.


2. Put the O-ring seal in position on the face of the steering clutch.

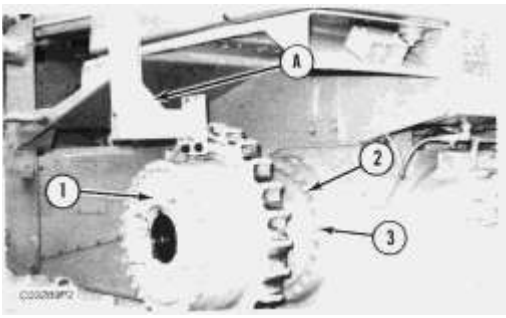

3. Fasten a hoist, and install tooling (A) on final drive (1). Make an adjustment to tooling (A) if necessary to put the final drive in a level position. Put final drive (1) in position on the machine.
4. Install two bolts (3) that hold the final drive to the steering clutch and brake.
5. Install bolts (2) that hold the final drive and steering clutch and brake to the frame. Tighten bolts (2) to a torque of **$650 \pm 50 \text{ N}\cdot\text{m}$ ($480 \pm 37 \text{ lb ft}$)**. Remove tooling (A).
6. Put **SAE 30** oil on the threads of the segment bolts. Install the bolts and nuts with the head of the bolts and washers against the final drive. Tighten the nuts to a torque of **$300 \pm 50 \text{ N}\cdot\text{m}$ ($221 \pm 37 \text{ lb ft}$)**. Tighten the nuts 1/3 turn more. Final torque must be a minimum of **$570 \text{ N}\cdot\text{m}$ (420 lb ft)**.

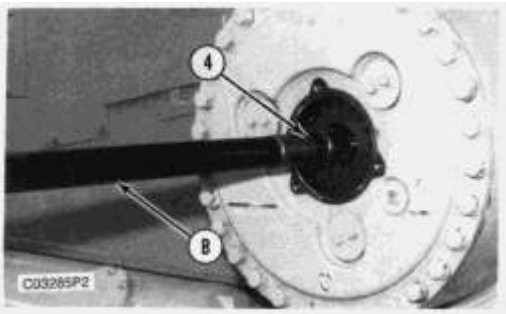

7. Install tool (B) on the outer axle, and install outer axle (4) into the final drive. Make sure the thrust button that goes between the inner and outer axles is installed into the end of the outer axle.

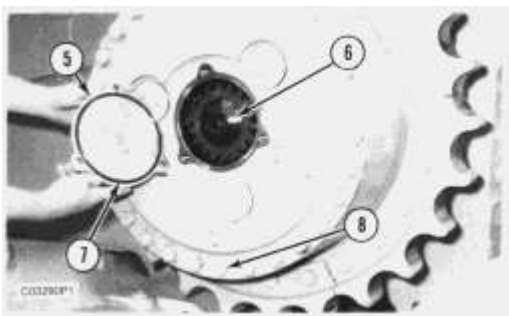

8. Install retainer (6) into the sun gear.
9. Install O-ring seal (7) on cover (5), and install the cover on the final drive.
10. Rotate final drive so drain plug (8) is toward the bottom. Fill the final drive with oil to the bottom of the fill plug hole. see the Operator And Maintenance Guide for the type and capacity of oil that should be used.

End By:

a. connect track


Disassemble Final Drives

Tools Needed		A	B	C	D	E	F	G
5P9736	Link Bracket	3						
1P510	Driver Group		1					
8B7548	Puller Assembly			1				
8H684	Ratchet Box Wrench			1				
8B7554	Bearing Cup Puller Attachment			1				
6V2156	Link Bracket				2		3	
1P520	Driver Group					1		1
6V3160	Cylinder Group							1
1D4620	Bolts, 3/4"-10 x 7"							4
FT1934	Beam							1
5P8248	Washers							4
6V9061	Pump Group (or electric)							1

Tools Needed		H
6V2157	Link Bracket	2

Start By:



a. remove final drives

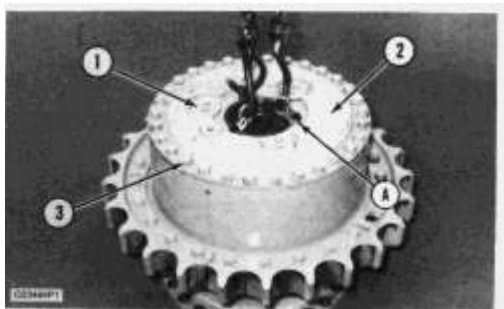

1. Install tooling (A) on the planet carrier. Fasten a hoist to tooling (A).

2. The weight of the planet carrier is **105 kg (230 lb)**. Remove bolts (3) that hold the planet carrier to the hub. Remove planet carrier (2) from the hub.


3. Remove the six bolts that hold three plates (1). Remove the O-ring seal from each plate.

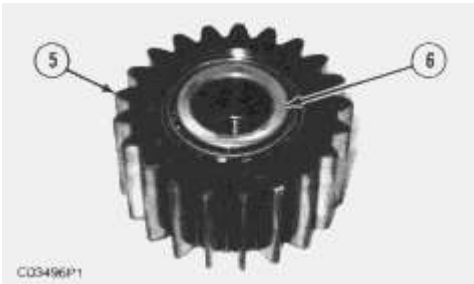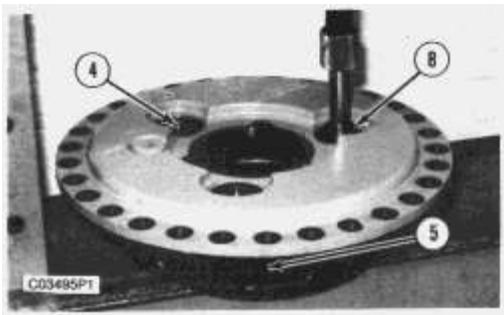


4. Use tooling (B) and a press, and remove three shafts (4) from the planet carrier.

5. Remove gears (5) from the planet carrier.

6. Remove bearing cones (6) from each side of gears (5).

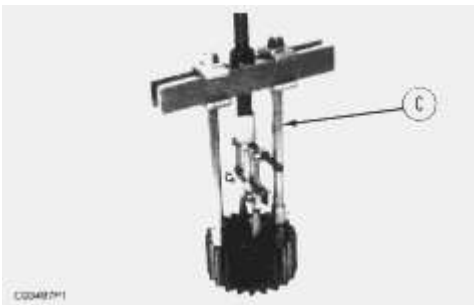

7. Use tooling (C), and remove the bearing cups from each side of gears (5).

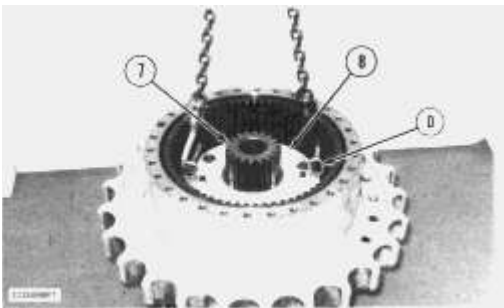

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com