




Bobcat®

Service Manual

319 Compact Excavator

S/N 563311001 & Above

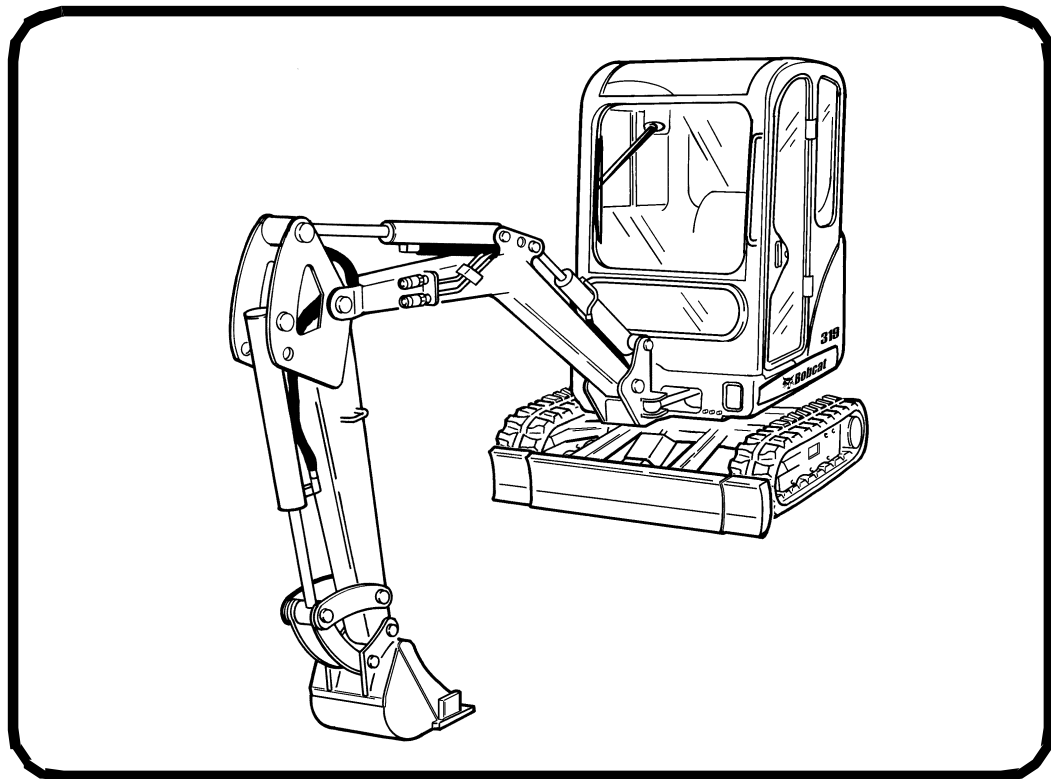

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

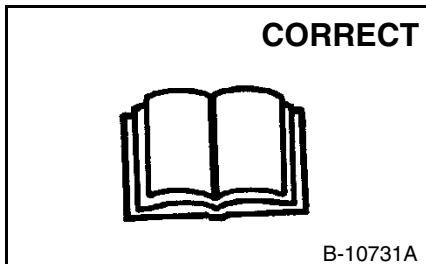


B-10731A

- ⚠ Never service the Bobcat Compact Excavator without instructions.

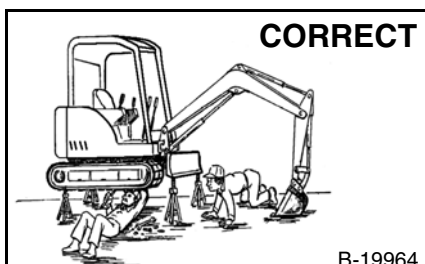


B-19964

- ⚠ Use the correct procedure to lift and support the excavator.

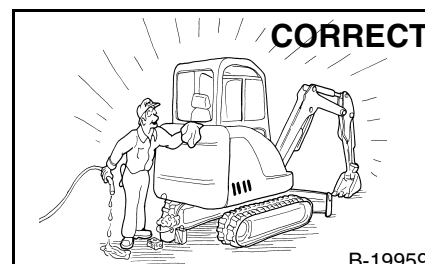


B-19959

- ⚠ Cleaning and maintenance are required daily.

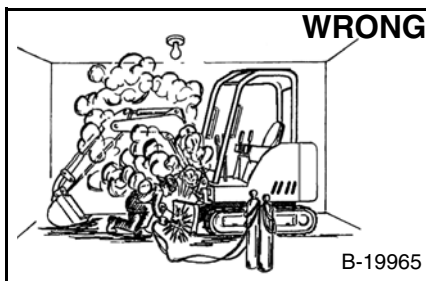


B-19965

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

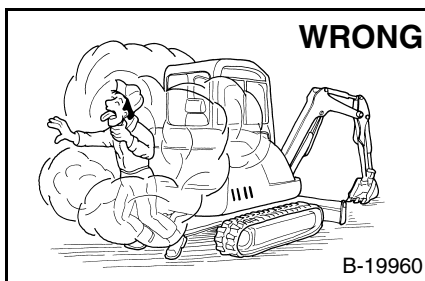


B-19960

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

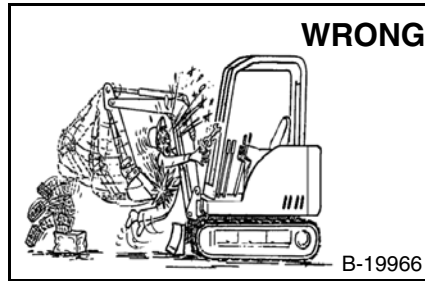


B-19966

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

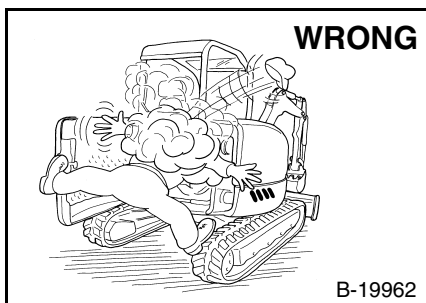


B-19962

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

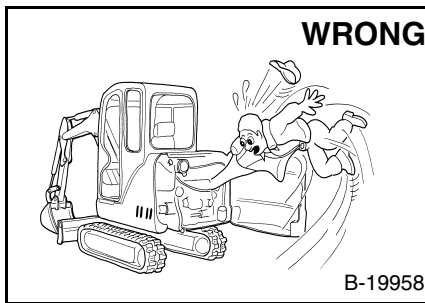

B-19958

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

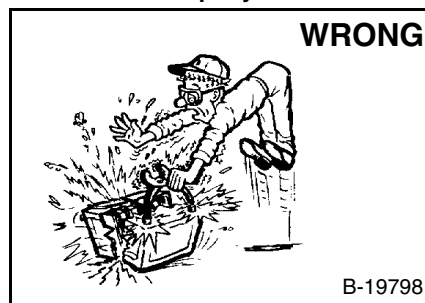

B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0805

ALPHABETICAL INDEX

AIR CLEANER	60-01	LEFT CONSOLE	40-01
AIRCLEANER SERVICE	10-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
ALTERNATOR	50-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
ALTERNATOR BELT	10-01	LIFTING THE EXCAVATOR	10-01
ARM	40-01	LIGHTS.....	50-01
ARM CYLINDER	20-01	LUBRICATING THE EXCAVATOR	10-01
		LUBRICATION SYSTEM.....	60-01
BATTERY.....	50-01		
BLADE	30-01	MAIN RELIEF VALVE	20-01
BLADE CONTROL.....	40-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
BLADE CYLINDER	20-01	MICROSWITCH	50-01
BLADE/TRACK EXPANSION SOLENOID BLOCK.....	20-01		
BOOM	40-01	OIL COOLER.....	20-01
BOOM CYLINDER.....	20-01	OPERATOR CAB ROPS/TOPS	10-01
BOOM SWING CYLINDER.....	20-01		
BUCKET	40-01	PORT RELIEF VALVES.....	20-01
BUCKET CYLINDER	20-01	PRESSURE REDUCING VALVE.....	20-01
		PIVOT PINS	10-01
CAB.....	40-01		
CAMSHAFT AND TIMING GEARS.....	60-01	REGULATOR MAINTENANCE	70-01
CANOPY	40-01	RIGHT CONSOLE	40-01
CONTROL LINKAGE ASSEMBLY.....	40-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
CONVERSIONS	SPEC-01		
CRANKSHAFT AND PISTONS	60-01	SEAT AND SEAT MOUNT	40-01
CROSSPORT RELIEF VALVES	20-01	SEAT BELT	10-01
CYLINDER HEAD.....	60-01	SERVICE SCHEDULE	10-01
		SPARK ARRESTOR MUFFLER.....	10-01 & 60-01
ELECTRICAL SYSTEM.....	50-01	STARTER	50-01
ENGINE COOLING SYSTEM.....	10-01 60-01	STOPPING THE ENGINE AND LEAVING THE	
ENGINE INFORMATION	60-01	EXCAVATOR	10-01
ENGINE LUBRICATION SYSTEM.....	10-01	SWING CIRCLE GEAR	30-01
ENGINE SPEED CONTROL	60-01	SWING FRAME	40-01
319 EXCAVATOR SPECIFICATIONS.....	SPEC-01	SWING MOTOR	20-01
EXCAVATOR STORAGE AND RETURN TO		SWIVEL JOINT	20-01
TO SERVICE	10-01		
		TAILGATE.....	10-01, 40-01
FLOOR MAT AND FLOOR PANELS	40-01	TORQUE SPECIFICATIONS	SPEC-01
FLYWHEEL AND HOUSING.....	60-01	TRACK FRAME COMPONENTS	30-01
FUEL LEVEL SENDER.....	50-01	TRACK FRAME EXPANSION CYLINDER	20-01
FUEL SYSTEM	10-01, 60-01	TRANSPORTING THE EXCAVATOR ON A	
FUEL TANK.....	40-01	TRAILER	10-01
		TRAVEL MOTOR.....	10-01 & 20-01
HEATER COIL	70-01		
HEATER FAN.....	70-01	UPPERSTRUCTURE	40-01
HEATER SYSTEM.....	70-01	UPPERSTRUCTURE SLEW LOCK.....	10-01, 40-01
HEATER UNIT	70-01		
HEATER VALVE.....	70-01		
HORN	40-01		
HYDRAULIC CONNECTION			
SPECIFICATIONS	SPEC-01		
HYDRAULIC CONTROL VALVE	20-01		
HYDRAULIC FILTER	20-01		
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC PUMP	20-01		
HYDRAULIC RESERVOIR	20-01		
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		

CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT.....	X
EXCAVATOR IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
UNDERCARRIAGE.....	30-01
UPPERSTRUCTURE & SWING SECTION	40-01
ELECTRICAL SYSTEM AND ANALYSIS	50-01
ENGINE SERVICE	60-01
HEATER	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**UNDER-
CARRIAGE**

**UPPER-
STRUCTURE &
SWING SECTION**

**ELECTRICAL
SYSTEM AND
ANALYSIS**

**ENGINE
SERVICE**

HEATER


SPECIFICATIONS

FOREWORD


This manual is for the Bobcat Hydraulic Excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOGS is in good condition and is not modified.

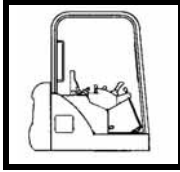


2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

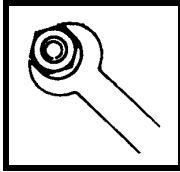

3. The seat belt must be correctly installed, functional and in good condition.

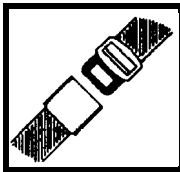


4. Inspect for loose or broken parts or connections.

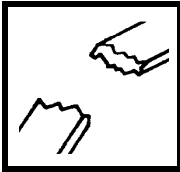


5. Machine signs must be legible and in the correct location.



6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

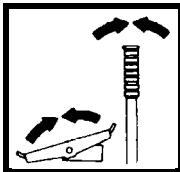


7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

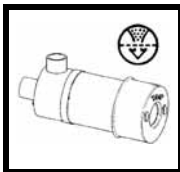


8. Check the electrical charging system.




9. Safety treads must be in good condition.

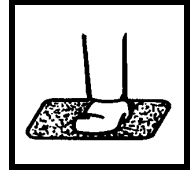


10. Check for correct function of indicator lamps (Optional on some models).

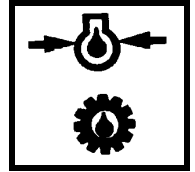


11. Check hydraulic fluid level, engine oil level and fuel supply.

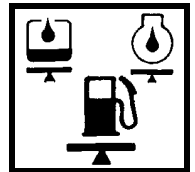


12. Inspect for fuel, oil or hydraulic fluid leaks.

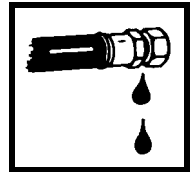


13. Lubricate the excavator.

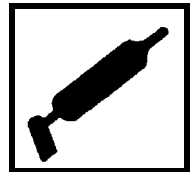

14. Check the condition of the battery and cables.

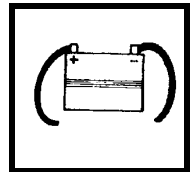

Recommend to the owner that all necessary corrections be made before the machine is returned to service.

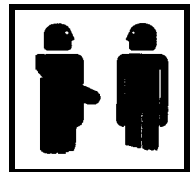

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

Figure 1

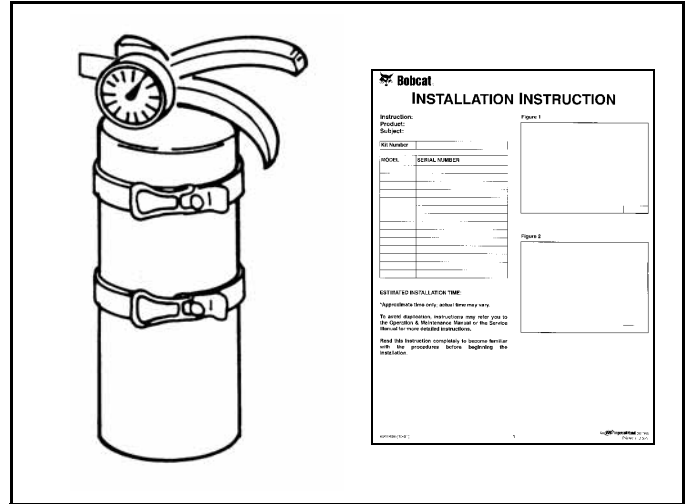

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].


DELIVERY REPORT

Figure 3

The diagram shows a form titled "DELIVERY REPORT". The form is divided into several sections. At the top, there is a header section with the title "DELIVERY REPORT" and several lines of text. Below this, there is a section with a dark background and the word "WARNING" in white. The main body of the form consists of two columns of horizontal lines, representing text input fields. At the bottom right of the form, there is a small box containing the text "B-16315".

The delivery report must be filled out by the dealer and signed by the owner or operator when the Bobcat Excavator is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 3]**.

EXCAVATOR IDENTIFICATION

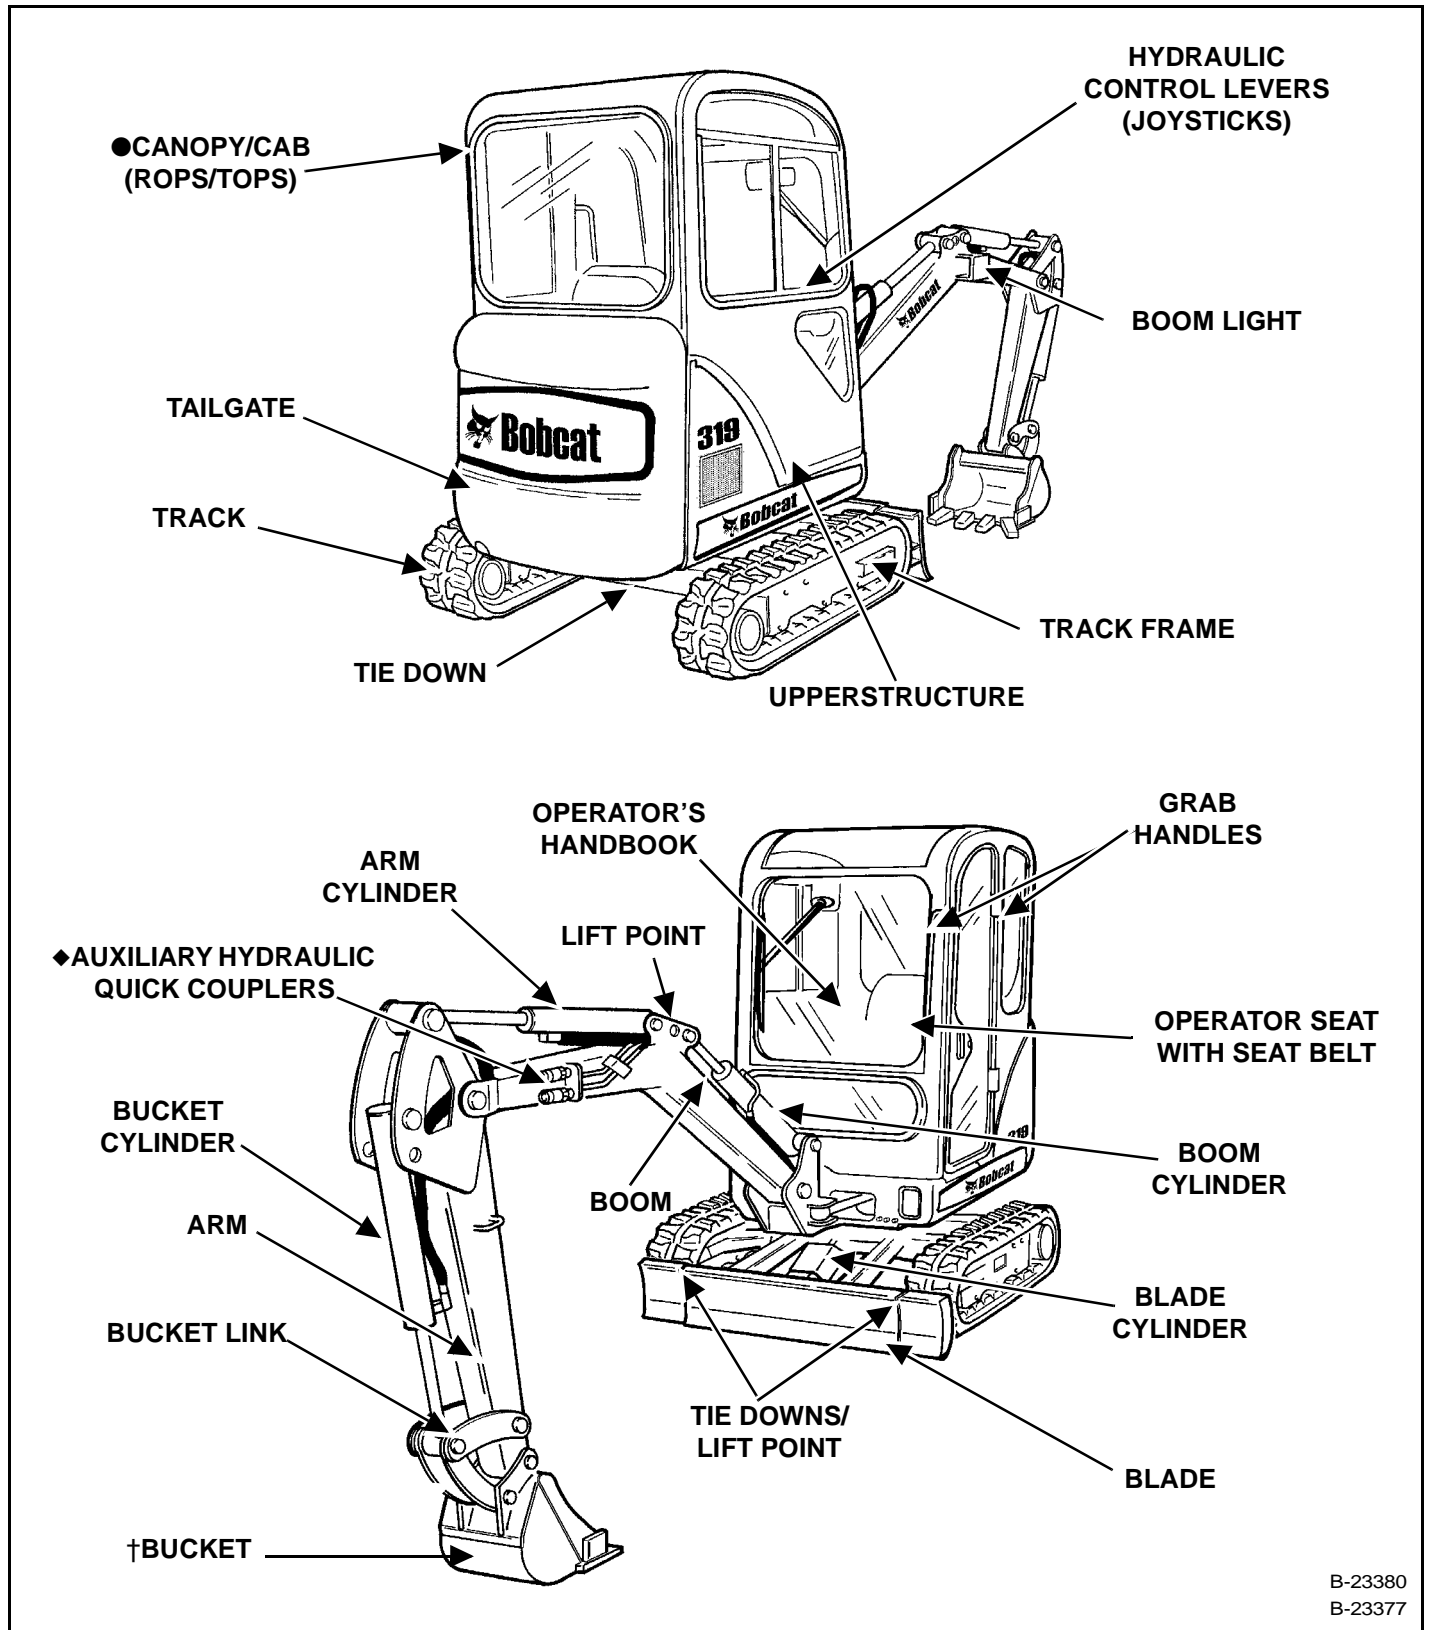

B-23380
B-23377

- ◆ OPTIONAL OR FIELD ACCESSORY (Not Standard Equipment)
- † BUCKET - Several different buckets and other attachments are available from the Bobcat Loader.
- ROPS, TOPS - (Roll Over Protective Structure / Tip Over Protective Structure) as standard equipment. The ROPS/ TOPS meets SAE J1040, ISO 3471 and ISO 12117.

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE	10-60-1
Daily Check	10-60-1
Replacing Filter Elements	10-60-1
ALTERNATOR BELT	10-140-1
Belt Adjustment	10-140-1
Belt Replacement.	10-140-2
ENGINE COOLING SYSTEM	10-70-1
Checking Level	10-70-1
Cleaning.	10-70-1
Removing And Replacing Coolant.	10-70-2
ENGINE LUBRICATION SYSTEM	10-90-1
Checking And Adding Engine Oil.	10-90-1
Engine Oil Chart.	10-90-1
Removing And Replacing Oil And Filter.	10-90-2
EXCAVATOR STORAGE AND RETURN TO SERVICE	10-170-1
Return to Service	10-170-1
Storage	10-170-1
FUEL SYSTEM	10-80-1
Draining The Fuel Tank	10-80-2
Filling The Fuel Tank	10-80-1
Fuel Filters	10-80-2
Fuel Specifications.	10-80-1
Removing Air From The Fuel System	10-80-3
HYDRAULIC SYSTEM	10-100-1
Checking And Adding Fluid	10-100-1
Hydraulic Fluid Chart	10-100-1
Removing And Replacing Hydraulic Filter	10-100-2
Removing And Replacing Hydraulic Fluid	10-100-2
LIFTING AND BLOCKING THE EXCAVATOR	10-10-1
Procedure	10-10-1
LIFTING THE EXCAVATOR	10-12-1
Procedure	10-12-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

LUBRICATING THE EXCAVATOR	10-110-1
Lubrication Locations	10-110-1
OPERATOR CAB (ROPS / TOPS)	10-20-1
Cab Door	10-20-1
Description	10-20-1
Front Window	10-20-2
Front Wiper	10-20-4
Heater	10-20-6
Right Side Window	10-20-5
Window Washer Reservoir	10-20-4
PIVOT PINS	10-160-1
Inspection And Maintenance	10-160-1
SEAT BELT	10-150-1
Inspection And Maintenance	10-150-1
SERVICE SCHEDULE	10-50-1
Chart	10-50-1
SPARK ARRESTOR MUFFLER	10-130-1
Cleaning Procedure	10-130-1
STOPPING THE ENGINE AND LEAVING THE EXCAVATOR ...	10-180-1
Emergency Exits	10-180-2
Procedure	10-180-1
TAILGATE	10-40-1
Adjusting The Bumper	10-40-1
Adjusting The Latch	10-40-1
Opening And Closing	10-40-1
TRANSPORTING THE EXCAVATOR ON A TRAILER	10-30-1
Fastening	10-30-1
Loading And Unloading	10-30-1
TRAVEL MOTOR	10-120-1
Checking And Adding Oil	10-120-1
Removing And Replacing Oil	10-120-1
UPPERSTRUCTURE SLEW LOCK	10-11-1
Operation	10-11-1

LIFTING AND BLOCKING THE EXCAVATOR

Procedure

Always park the machine on a level surface.

Figure 10-10-1



Raise one side of the machine (approximately 4 in.) using the boom and arm as shown in **[Figure 10-10-1]**.

Raise the blade fully and install jackstands under the blade and the track frame. Lower the machine until all machine weight is on the jackstands.

Stop the engine.

WARNING

Put jackstands under the blade and rear corners of the undercarriage before working under the machine. Failure to block up the machine may allow it to move or fall and result in injury or death.

W-2218-1195

WARNING

AVOID INJURY


Keep fingers and hands out of pinch points when checking the track tension.

W-2142-0903

UPPERSTRUCTURE SLEW LOCK

Operation


Figure 10-11-1

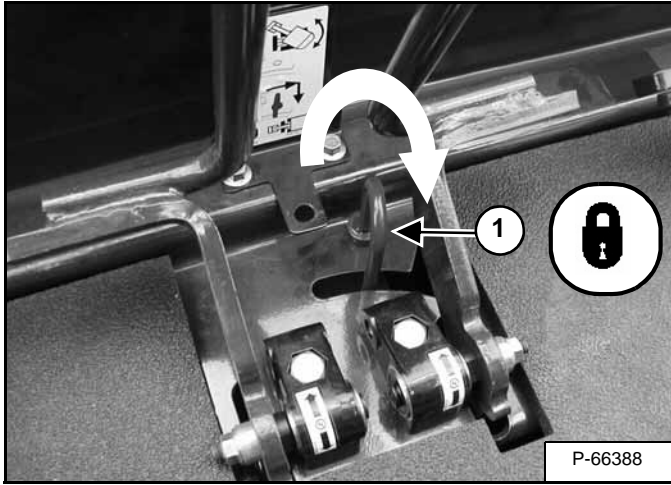

Move the lever (Item 1) [Figure 10-11-1] *down* to engage the Slew Lock. When the Slew Lock is engaged (locked), the upperstructure of the excavator is locked to the track frame and will not rotate. The upper structure must be parallel to the track frame to engage the Slew Lock.

NOTE: The upperstructure must be in the straight forward or straight rearward position for the upperstructure to lock.

Figure 10-11-2

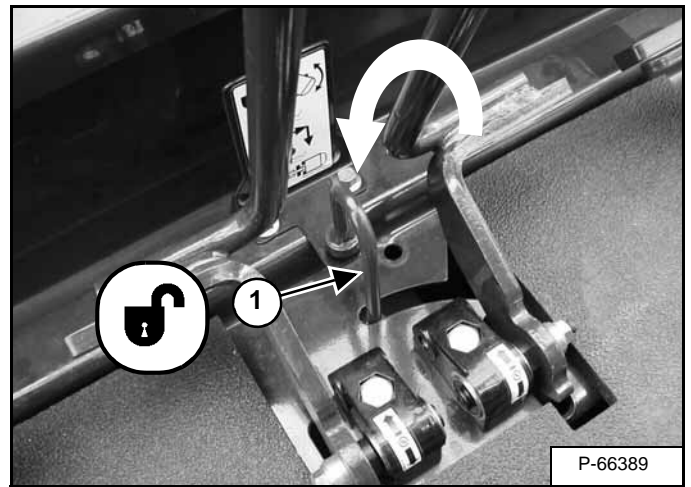

Move the lever (Item 1) [Figure 10-11-2] *up* to disengage the upperstructure from the track frame. Secure the lever in the unlocked position.

! WARNING

AVOID INJURY


The upperstructure slew lock lever must be engaged when transporting the machine.

W-2197-0904

LIFTING THE EXCAVATOR

Procedure

Figure 10-12-1

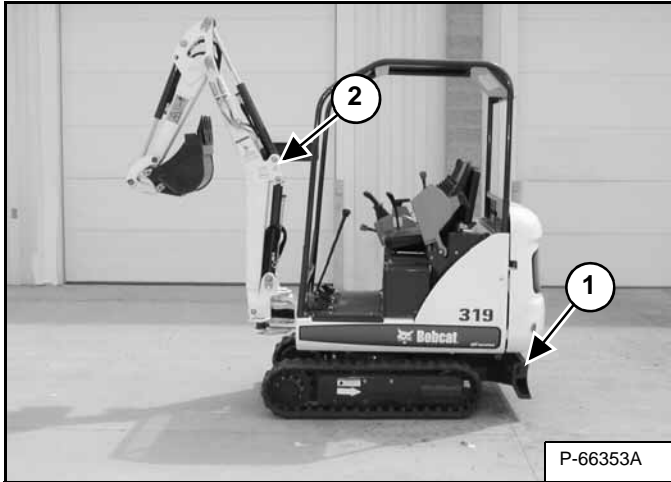

Fully extend the bucket and arm cylinders, and fully retract the boom cylinder so that the excavator is in the position shown [Figure 10-12-1].

Engage the UPPERSTRUCTURE SLEW LOCK. (See Operation on Page 10-11-1.)

Raise the blade all the way.

Put all the control levers in neutral.


WARNING

AVOID INJURY OR DEATH

- Use a lifting fixture with sufficient capacity for the weight of the excavator plus any added attachments.
- Maintain center of gravity and balance when lifting.
- Do not swing boom or upperstructure. Engage the swing locking lever.
- Never lift with operator on machine.


W-2202-0595

Figure 10-12-2

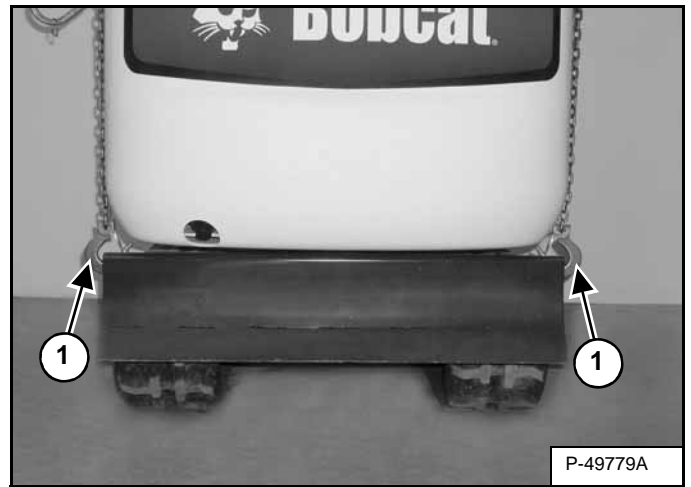

Fasten chains to the ends of the blade (Item 1) [Figure 10-12-1] and [Figure 10-12-2] and up to a lifting fixture above the canopy/cab. The lifting fixture must extend over the sides of the canopy/cab to prevent the chains from hitting the ROPS/TOPS.

Figure 10-12-3

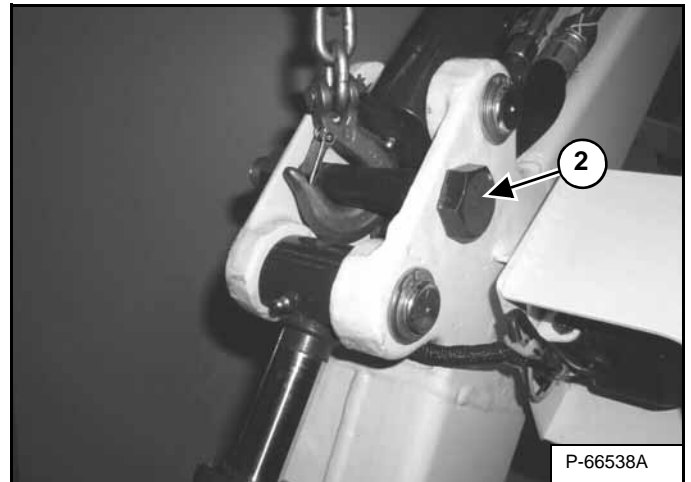

Install a 1 in. (25 mm) bolt and nut (Grade 5 or 8) through the holes at the boom (Item 2) [Figure 10-12-1] and [Figure 10-12-3]. Fasten a chain from the bolt to the lift fixture.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com