



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

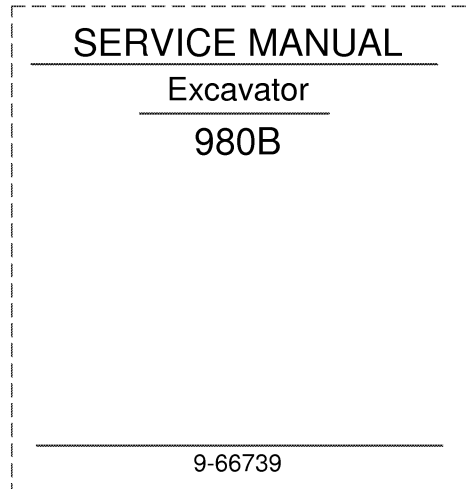


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

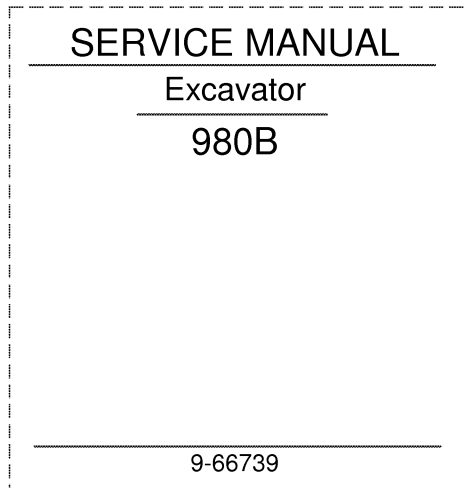

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

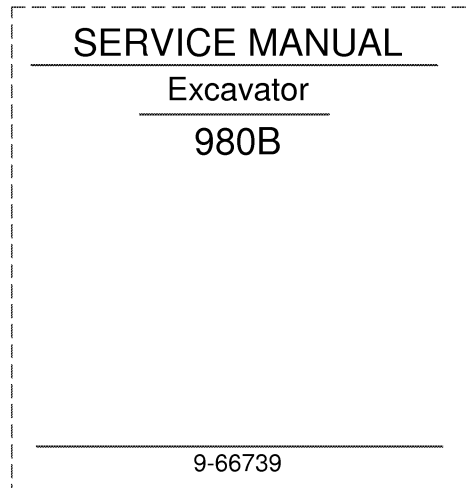

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

980B EXCAVATOR TABLE OF CONTENTS

SERIES/SECTION	SECTION NO.	FORM NO.
10 SERIES - GENERAL		
General Engine Specifications	1010	9-80325
Detailed Engine Specifications	1020	9-76875
Detailed Fuel System Specifications	1030	9-76115
Maintenance and Lubrication	1050	9-66736
Torque Charts	1051	9-66015
General Cleaning Instructions	1055	9-66735
Safety Rules	1056	9-66735
20 SERIES - ENGINE		
Engine Diagnosis	2001	9-76365
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, Backlash and Adjustment	2015	9-76166
Cylinder Block, Sleeves, Pistons and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel and Oil Seal Replacement	2035	9-76187
Lubricating System	2046	9-76805
Air Cleaner	2051	9-66736
Cooling System	2055	9-76335
Turbocharger System	2065	9-76265
Turbocharger Failure Analysis	2565	9-78235
30 SERIES - FUEL SYSTEM		
Fuel System and Filters	3010	9-75297
Fuel Injector Pumps	3012	9-74937
Fuel Injectors	3013	9-74959
Fuel Tank, Fuel Lines, and Fuel Storage	3052	9-66736
40 SERIES - HYDRAULICS		
Hydraulic System Maintenance	4201	9-66737
System Description, Diagnostic Tests and Checks	4202	9-66736
Hydraulic Diagrams After PIN 6204050. System Description, Tests and Adjustments, and Flowmeter Tests After PIN 6204050	4202, Sup. 1	9-66735
Hydraulic Pump	4205	9-66736
Control Valves	4207	9-66736
Servicing the Hydreco Valves	4207, Sup. 1	9-66737A
Swing Motor Circuit, Swing Motor, Crossover Relief Valve	4210	9-66736
Swing Motor - Machines After PIN 6204050	4210, Sup. 1	9-66735
Hoist Cylinder Circuit	4211	9-66736
Crowd Cylinder Circuit	4212	9-66736
Tool Cylinder Circuit	4213	9-66736
Leveler Circuit, Leveler Lock Valve	4215	9-66736

SERIES/SECTION**SECTION NO.****FORM NO.****40 SERIES - HYDRAULICS**

Track Drive Circuits, Drive Motors,

Drive Range Solenoid Valve, Hydraulic

Swivel and Inner Swivel	4216	9-66736
Power Sensing Valve	4218	9-66735
Monoblock Valve	4219	9-66736
Hydraulic Cylinders	4290	9-66736

50 SERIES - TRACK AND SUSPENSION

Track Frames	5306	9-66736
--------------------	------	---------

60 SERIES - POWER TRAIN

Final Drive Transmission and Digging Brake	6317	9-66736
--	------	---------

80 SERIES - ELECTRICAL

System Description and Troubleshooting	8002	9-66736
Electrical System - After PIN 6204050	8002, Sup. 1	9-66735
Batteries	8004	9-66736
Starter, Starter Solenoid and Magnetic		
Switches	8015	9-72536
Alternator	8016	9-66736

90 SERIES - MOUNTED EQUIPMENT

Swing Gearbox and Brake	9210	9-66738
Procedure for Assembly of Swing Gear Box S955769.	9210, Sup. 1	9-66735
Booms and Tool	9211	9-66735
Carbody and Leveler	9215	9-66736
Turntable Swing	9216	9-66736

Section 1055

GENERAL CLEANING INSTRUCTIONS

GENERAL CLEANING INSTRUCTIONS

Complete Assemblies

Completely assembled components may be steam cleaned on the outside only, to make for easier removal and disassembly. All openings and breathers must be closed or plugged to prevent possibility of water entering the component.



WARNING: To prevent injury from burns always use a non-flammable solvent for cleaning component parts. DO NOT USE gasoline or other flammable substances.

Rough Parts

Rough parts such as housings, castings, etc., may be cleaned in hot solution tanks with mild alkali solutions, providing these parts do not have ground or polished surfaces. The parts should remain in the tank long enough to be thoroughly cleaned and heated. This will aid the evaporation of rinse water. The parts should be thoroughly rinsed after cleaning to remove all traces of alkali.

Finished or Machined Parts

Parts having ground or polished surfaces such as gears, bearings, shafts and collars, should be cleaned in non-flammable solvent.

IMPORTANT: DO NOT clean machined parts in hot solution tanks with water and alkaline solutions such as sodium hydroxide, orthosilicates or phosphates.

Rubber Parts

Clean rubber parts by washing in clean denatured alcohol. DO NOT use mineral base cleaning solvents such as acetone or paint thinner on any rubber parts. If a mineral base solvent is used, the rubber will start to deteriorate and continue to deteriorate after the part is put back into service. The continued deterioration of the rubber could cause the part to fail.

Drying

All parts cleaned must be thoroughly dried immediately. Use moisture-free compressed air or soft lintless absorbent wiping rags. The rags should be free of abrasive materials such as metal filings, contaminated oil or lapping compound. Bearings may be dried using compressed air, provided the air is directed across the bearings to avoid spinning. Do not spin bearings when drying. Bearings may be rotated slowly by hand to speed the drying process.



CAUTION: When using compressed air keep stream from direction of face. Use only low air pressure.

Corrosion Prevention

Parts that have been cleaned, dried, inspected and are to be immediately reassembled should be coated with a light oil to prevent corrosion. If these parts are to be stored for any length of time, they should be treated with a good RUST PREVENTIVE and wrapped in special paper or other material to prevent corrosion.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com