



# Service Repair Manual

## **Models**

# 259D COMPACT TRACK LOADER

---

Product: COMPACT TRACK LOADER  
Model: 259D COMPACT TRACK LOADER FTK  
Configuration: 259D Compact Track Loader FTK00001-UP (MACHINE)

## Disassembly and Assembly

### C2.6 and C3.3B Engines for Caterpillar Built Machines

Media Number -UENR0137-11

Publication Date -01/08/2015

Date Updated -12/07/2018

i05242932

## Camshaft Gear - Remove and Install

SMCS - 1210-010-GE

### Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-0510	Driver Group	1
B	8B-7551	Puller Assembly	1
C	8H-0663	Bearing Puller	1

#### Start By:

- Remove the camshaft.

**Note:** Refer to Specification UENR0995 "Engine Design" for non-specified engine Torque Values.

---

### NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Dispose of all fluids according to local regulations and mandates.

---

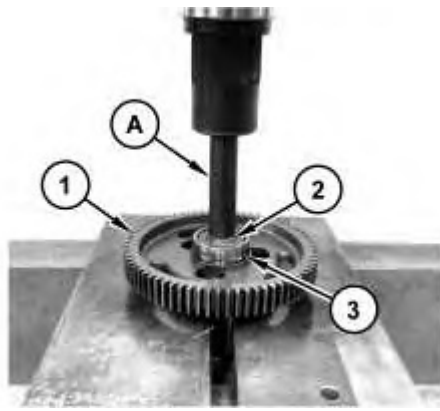


Illustration 1

g02796778

1. Use Tooling (A) in order to remove camshaft gear (1) from camshaft (2).
2. If necessary, apply heat to raise the temperature of the race (3) of the roller bearing to remove.




Illustration 2

g02796779

3. Remove plate (5) from camshaft (2).
4. If necessary, remove the key (4) from the nose of camshaft (2).

## Installation Procedure

1. Install camshaft gear (1) in the reverse order of removal.
-

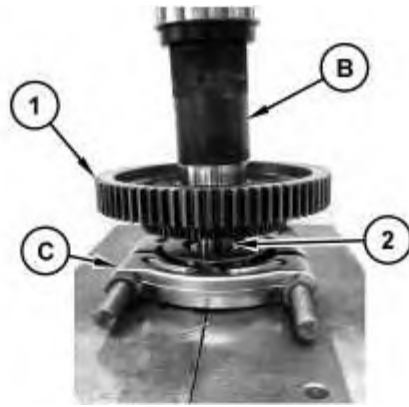

---

Illustration 3

g02807848

- a. Use Tooling (B) and Tooling (C) in order to install camshaft gear (1) onto camshaft (2).
- b. Ensure that the camshaft gear and the key are clean and free from wear and damage.

Product: COMPACT TRACK LOADER  
Model: 259D COMPACT TRACK LOADER FTK  
Configuration: 259D Compact Track Loader FTK00001-UP (MACHINE)

## Disassembly and Assembly

### C2.6 and C3.3B Engines for Caterpillar Built Machines

Media Number -UENR0137-11

Publication Date -01/08/2015

Date Updated -12/07/2018

i05242933

## Engine Oil Pan - Remove and Install

SMCS - 1302-010

### Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	-	LOCTITE 38364 Flange Sealant	1

**Note:** Refer to Specification UENR0995 "Engine Design" for non-specified engine Torque Values.

1. Refer to Operation and Maintenance Manual, "Engine Oil and Filter - Change" for the proper draining and filling procedures.



Illustration 1

g02797578

2. Remove bolts (2) and remove oil pan (1).

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)