

120 CORN SNAPPER



JOHN DEERE

OPERATORS MANUAL

120 CORN SNAPPER

OMN159099 A9 English

OMN159099 A9

LITHO IN THE U.S.A.
ENGLISH



To the purchaser

This manual contains useful information on how to operate your new John Deere 120 Corn Snapper.

A corn snapper must be built to handle a wide range of conditions. Average conditions can be handled by the 120 Snapper with regular equipment. Unusual conditions can be handled by installing special equipment.

Field conditions vary from year to year, from day to day, and even from hour to hour. Different varieties of corn present widely different snapping problems. A careful study of the adjustments on your corn snapper and what they accomplish will allow you to do a good job under varied operating conditions.


Your new snapper will do quality work in direct proportion to the care you use in operating and servicing it. Follow the instructions in this manual.

If you need information not covered in this manual, see your John Deere dealer. He has the latest information on how to get the best service from your machine and can give you prompt service in the field or in his shop.

When in need of parts, go to your John Deere dealer. He carries genuine John Deere parts for your 120 Corn Snapper.

Be prepared to give him the serial number of your machine and the year purchased. This information should be recorded below as soon as you have received your new corn snapper.

The warranty on this corn snapper appears on your copy of the purchase order which you should have received from your dealer when you purchased the corn snapper.

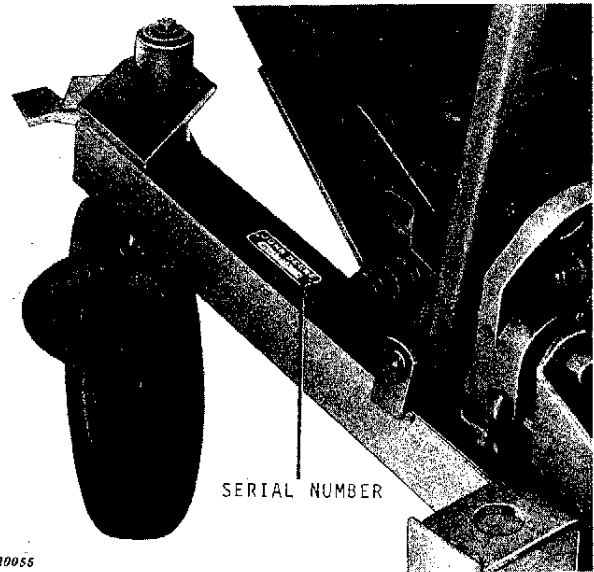


Serial Number

Date Purchased




contents

	Page		Page
SPECIFICATIONS	3	ATTACHMENTS	22
OPERATION	4-15	ASSEMBLY	23-32
Breaking in the new snapper	4	Shipping bundles	23-28
In the field	4	Assembling snapper	29-32
Tractor engine-PTO speed	4	CONNECTING SNAPPER TO TRACTOR	33-55
Ground speed	5	John Deere 2010, 2510, 2520, 3010,	
Making adjustments	5	3020, 4010, 4020, 530, 630, 730, 520,	
Fire safety	5	620, 720, 50, 60, 70, A, B, and G	
Field losses	5	Tractors equipped with rear rock-	
Gatherers	6-7	shaft	33-35
Gatherer points	6	John Deere 1020, 1520, and 2020 Trac-	
Tilting gatherers	6	tors	36-37
Hand tilt	6	John Deere 50, 60, 70, A, B, and G	
Gatherer chains	6-7	Tractors without Powr-Trol	38-39
Chain guide	7	John Deere 40, 420, and 430 Tricycle	
Gatherer throat opening	7	Tractors; 40 Utility Tractor; 420,	
Snapping rolls	8-9	430, and 435 Row-Crop Utility Trac-	
Timing snapping rolls	8	tors; 1010 Row-Crop and Row-Crop	
Adjusting snapping roll spacing	8	Utility Tractors	39-41
Snapping roll bearings	9	John Deere 1010 Single Row-Crop	
Adjusting snapping roll remote con-		Tractors with manually adjusted	
trol lever	9	rear wheels; 330, 430, 320, 420, and	
Trash knives	9	Standard Tractors	41-43
First elevator	10	John Deere 1010 Single Row-Crop	
Clean-out door	10	Tractors with power adjusted rear	
Elevator chain	10	wheels and with demountable rims	44
Cleaning fan	11	John Deere MT Tractor	45-46
Wagon elevator	11-12	John Deere M Tractor	46-48
Adjusting conveyor chain	11	Farmall Tractors	48-51
Elevator throw-out clutch	11	Ford and Ferguson Tractors	52-54
Clean-out door	11	Allis Chalmers Tractors	55
Height of elevator	12		
Rubber tires	12		
Slip clutches	13		
Drive chains	13-14		
Safety suggestions	14		
Before and after storage	15		
LUBRICATION	16-19		
TROUBLE SHOOTING	20-21		

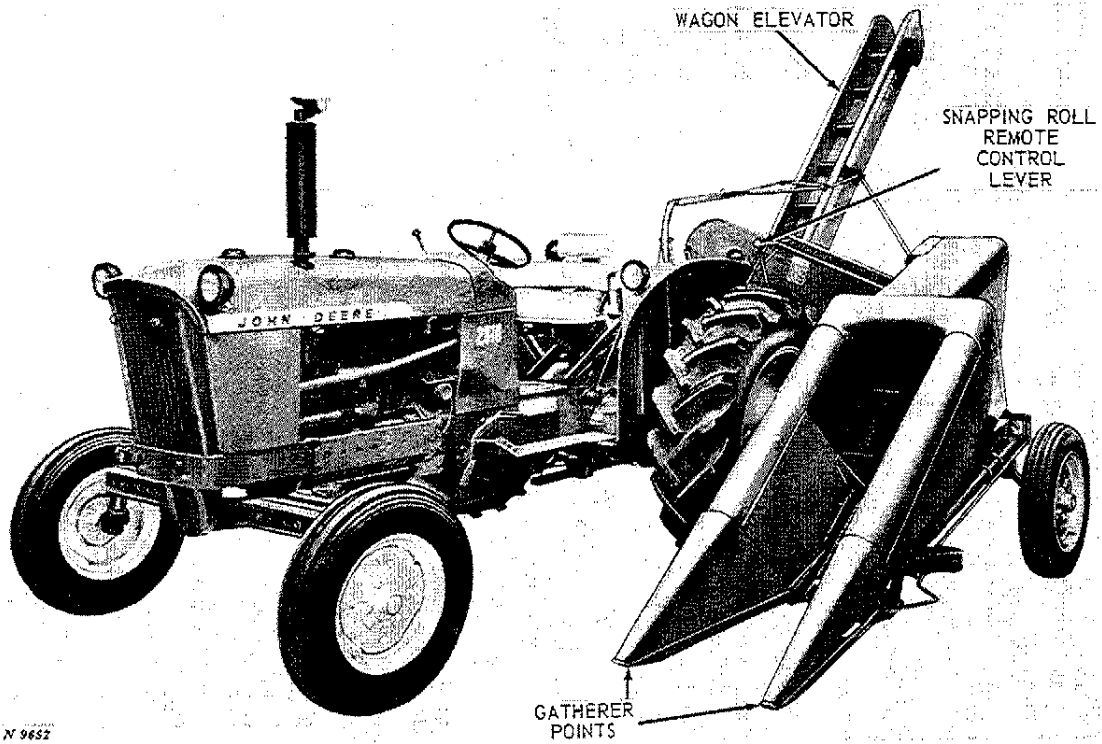

John Deere 120 Corn Snapper and 2010 Row-Crop Utility Tractor

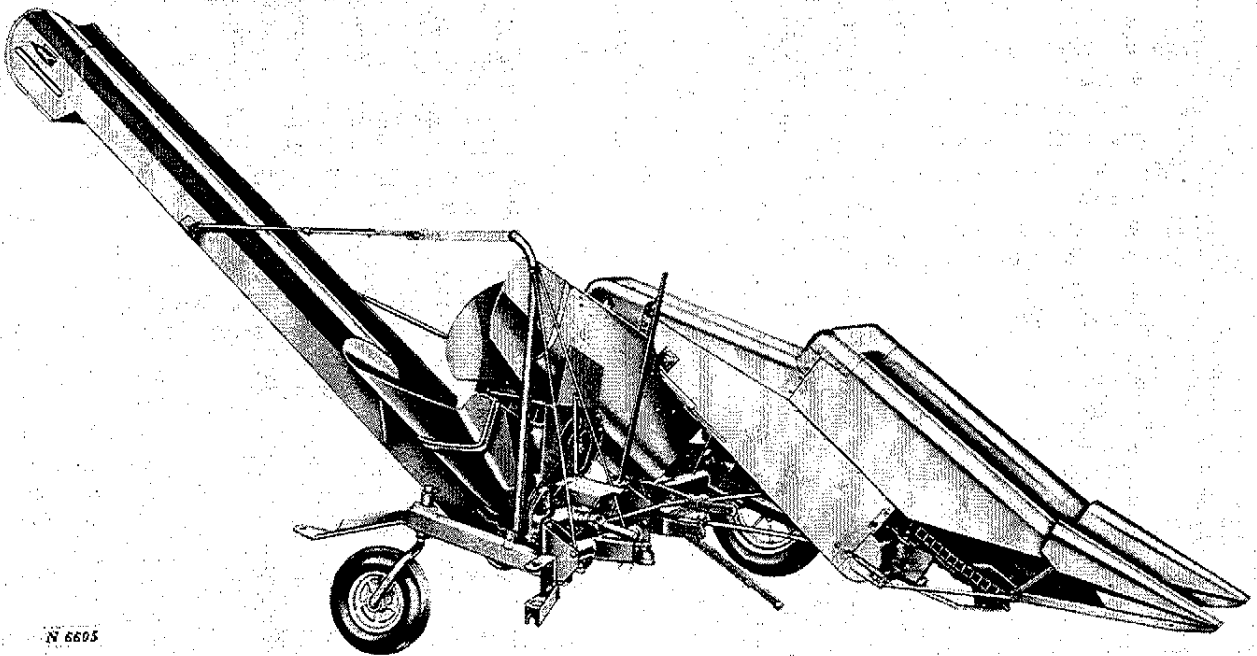

John Deere 120 Corn Snapper



specifications

Type

One-row, left-hand machine.

Tractors used

John Deere 1010, 1020, 1520, 2010, 2020, 2510, 2520, 3010, 3020, 4010, 4020 and older tractors. Most models of Allis Chalmers, Farmall, Ford and Ferguson Tractors.

Drive

540 or 1000 rpm PTO

Snapping rolls

Spiral type with aggressive cams at rear, 41 inches long.

Gatherer points

Adjustable, hinged above gathering chains.

Gatherer chains

Two steel link chains, enter gatherer throat opening 12 inches ahead of snapping roll points.

Tire size

5.50 x 16 Carrier wheel, 4.00 x 8 Caster wheel.

Dimensions

Minimum clearance between gatherer chains and ground—0 inch.

First elevator—8-1/2 inches wide.

Wagon elevator—7-1/2 inches deep,
8-1/4 to 10-1/4 inches wide,
17 feet 9 inches long.

Over-all transport width—10 feet 6 inches.

Over-all snapper width—8 feet 8 inches.

Wagon elevator height—About 9 feet.

Special equipment

Gatherer fender sticks

Flareboards for wagon

Gatherer extensions

1000 RPM conversion parts

Remote adjustment for snapping rolls

(Specifications and design subject to change without notice.)

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com