




NEW HOLLAND

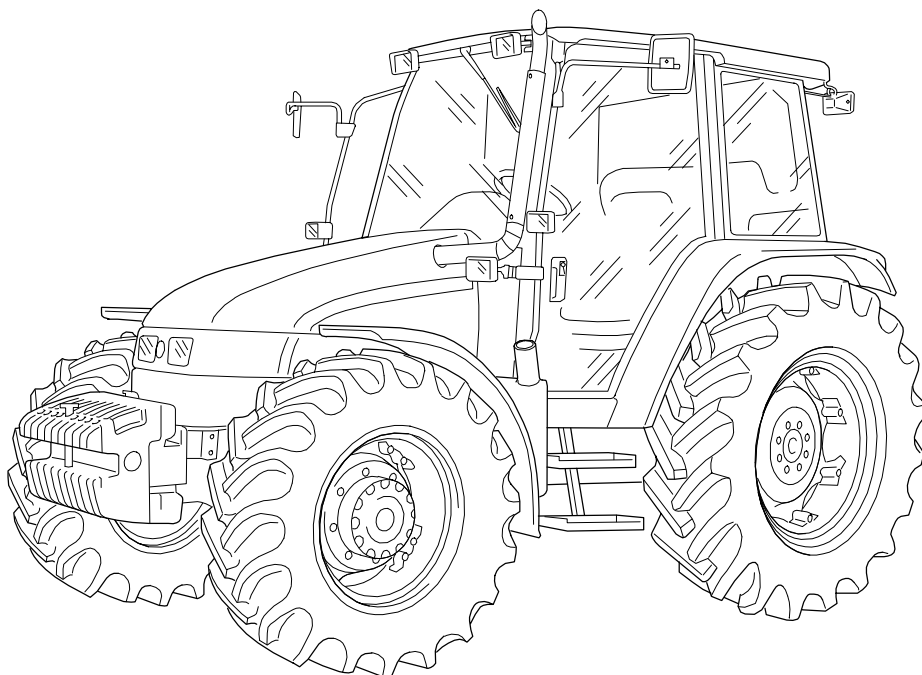

TRACTORS

TL70A - TL80A - TL90A - TL100A SERVICE MANUAL

SECTIONS

GENERAL GUIDELINES	00
ENGINE	10
CLUTCH	18
TRANSMISSION	21
DRIVE LINES	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
CAB AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
PLATFORM, CAB, BODYWORK	90

S E R V I C E

CONTENT VOLUME 1

	Page	Date		Page	Date
00 - GENERAL GUIDELINES			Checks and measurements - pistons	86 to 89	03-06
General instructions	1-2	03-06	Checks and measurements - camshaft, tappets and valves	90 to 93	03-06
Safety regulations	3-4-5	03-06	Checks and measurements - cylinder head	94	03-06
Consumables	6	03-06	Functional testing on low engine oil pressure indicator	95	03-06
10 - ENGINE			Checks and measurements - cooling system ..	96	03-06
Summary	1	03-06	Replacing crankshaft front seal	97 to 99	03-06
General specifications	2 to 4	03-06	Replacing crankshaft rear seal	100 to 102	03-06
Fuel system data	5	03-06	Adjusting tappet, valve and rocker arm clearance	103 to 105	03-06
Crankshaft and engine block data	6	03-06	Removal-Installation - injectors	106 to 108	03-06
Connecting rod data	7	03-06	Removal - Installation - Bosch injection pump	109 to 113	03-06
Piston data	7-8	03-06	Bosch injection pump - timing	114 to 118	03-06
Timing gear data	8-9	03-06	Bosch injection pump - air bleeding	118	03-06
Cylinder head data	9-10	03-06	Removal-Installation - coolant pump	119-120	03-06
Tightening Torques	11-12	03-06	Removal-Installation - thermostat valve	121-122	03-06
Tools	13	03-06	Removal-Installation - radiator	123 to 128	03-06
View of 4-cylinder engine mod. TL70A and TL80A ..	14	03-06	Coolant pump drive belt adjustment	129 to 130	03-06
View of 4-cylinder engine mod. TL90A and TL100A .	15	03-06	18 - CLUTCH		
Engine cooling and lubrication diagrams	16-17	03-06	Summary	1	03-06
Component parts of cylinder head mod. TL70A and TL80A	18	03-06	Data	2	03-06
Component parts of cylinder head mod. TL90A and TL100A	19	03-06	Tightening Torques	3	03-06
Component parts of additional counterweights	20	03-06	Tools	3	03-06
Troubleshooting	21 to 24	03-06	Cross-sectional views ...	4	03-06
Engine removal-installation	25 to 44	03-06	Troubleshooting	5	03-06
Engine disassembly-assembly	45 to 78	03-06	Checks and measurements - clutch	6-7	03-06
Checks and measurements - cylinder block and liners	79 to 81	03-06	Adjustments - clutch pedal	8	03-06
Checks and measurements - crankshaft, bearings and flywheel	82 to 83	03-06	Removal-Installation - clutch	9 to 11	03-06
Checks and measurements - connecting rods .	84 to 85	03-06	Clutch Overhaul	12 to 15	03-06

	Page	Date		Page	Date
Adjustments – clutch disengagement levers	16	03-06	Control rod adjustments ..	36	03-06
21 - TRANSMISSIONS			Removal-Installation – Dual Command (2 Speed Power Shift) solenoid valve	37 to 40	03-06
CHAPTER 1 - Transmission and range gear (12x4)			Working pressure test	40	03-06
Summary	1	03-06	Removal-Installation – Dual Command (2 Speed Power Shift) control valve	41 to 44	03-06
Data	2	03-06	Disassembly-Assembly – Dual Command (2 Speed Power Shift) control valve .	45-46	03-06
Tightening Torques	3	03-06	Transmission longitudinal cutaway section view	47	03-06
Tools	4-5	03-06	CHAPTER 4 - Reverser and creeper unit		
Cross-sectional views ...	6-7	03-06	Summary	1	03-06
Description & Operation ..	8	03-06	Data	2	03-06
Troubleshooting	8	03-06	Tightening torque	3	03-06
Transmission longitudinal cutaway section view	9	03-06	Tools	4 to 5	03-06
CHAPTER 2 - Reverser			Cross-sectional views ...	6 to 7	03-06
Summary	1	03-06	Description & Operation ..	8	03-06
Data	2	03-06	Troubleshooting	8	03-06
Tightening Torques	3	03-06	Replacing clutch casing-reverser and creeper unit .	9 to 13	03-06
Tools	4	03-06	End float adjustment between shaft and support ..	14 to 15	03-06
Cross-sectional views ...	4-5	03-06	Transmission longitudinal cutaway section view	16	03-06
Description & Operation ..	6	03-06	CHAPTER 5 - Power Shuttle transmission with Dual Command (2 Speed Power Shift) function		
Troubleshooting	6	03-06	Summary	1	03-06
Disassembly-Assembly – clutch casing-reverser ...	7 to 10	03-06	Data	2-3	03-06
Transmission longitudinal cutaway section view	11-12	03-06	Tightening torque	4-5	03-06
CHAPTER 3 - Dual Command (2 Speed Power Shift)			Tools	6-7	03-06
Summary	1	03-06	Cross-sectional views ...	8 to 10	03-06
Data	2-3	03-06	Description & Operation ..	11 to 17	03-06
Tightening Torques	4	03-06	Range and gear lever position sensor adjustment	18-19	03-06
Tools	5	03-06	Disassembly-Assembly – clutch casing with power shuttle and Dual Command (2 Speed Power Shift)	20 to 26	03-06
Cross-sectional views ...	6 to 8	03-06	Disassembly-Assembly – clutch (A) and (B)	27-32	03-06
Description & Operation ..	10 to 15	03-06			
Troubleshooting	16-17	03-06			
Removal-Installation – clutch casing with Dual Command (2 Speed Power Shift)	18 to 26	03-06			
Disassembly-Assembly – clutch casing with Dual Command (2 Speed Power Shift)	27 to 35	03-06			

	Page	Date		Page	Date
Calibrations	33	03-06	Disassembly-Assembly - front epicyclic final drive with brake	40-41	03-06
HH MENU access	33-34	03-06	Replacing wheel hub seal with brake.	42	03-06
Clutch calibration H1 menu transmission	35 to 37	03-06	Replacing steering knuckle pins and bearings	43	03-06
Transmission fault codes .	38 to 40	03-06	Stub axle adjustments	44-45	03-06
23 - DRIVE LINES			Adjustments - bevel drive	46 to 52	03-06
Summary	1	03-06	27 - REAR MECHANICAL TRANSMISSION		
Data	2	03-06	Summary	1	03-06
Tightening Torques	3	03-06	Data	2-3	03-06
Tools	3	03-06	Tightening Torques	3-4	03-06
Cross-sectional views ...	4	03-06	Tools	5 to 9	03-06
Description & Operation ..	5	03-06	Cross-sectional views ...	10 to 14	03-06
Troubleshooting	6	03-06	Description & Operation ..	15	03-06
Removal-Installation - services control valve	7 to 9	03-06	Troubleshooting	16-17	03-06
Disassembly-Assembly - services control valve	10 to 11	03-06	Removal-Installation - transmission-gearbox casing	18 to 31	03-06
Removal-Installation - drive gear casing	12 to 16	03-06	Disassembly-Assembly - transmission-gearbox casing	32 to 39	03-06
Disassembly-Assembly - drive gear casing	17 to 20	03-06	Gearbox driving shaft end float adjustment	40	03-06
25 - FRONT MECHANICAL TRANSMISSION			Adjustments - differential lock engagement sleeve position	41	03-06
Summary	1	03-06	Determining the bevel pinion positioning adjustment ring	42 to 43	03-06
Data	2 to 4	03-06	Tapered roller bearings adjustment for pinion shaft	44	03-06
Tightening Torques	4-5	03-06	Adjusting the bevel crown wheel bearings and checking the clearance between the sides of the bevel drive teeth	45 to 48	03-06
Tools	6 to 8	03-06	Differential pinion and side gear backlash adjustment .	49-50	03-06
Cross-sectional views ...	9 to 13	03-06	Differential lock pedal travel adjustment	51	03-06
Description & Operation ..	14-15	03-06	Removal-Installation - final drive	52 to 55	03-06
Rules for correctly fitting the axle support to the engine	16	03-06	Disassembly-Assembly - epicyclic final drive	55	03-06
Troubleshooting	17	03-06	Disassembly-Assembly - drive wheel shaft	56-57	03-06
Removal-Installation - front axle	18 to 21	03-06			
Disassembly-Assembly - front axle	22 to 30	03-06			
Overhaul - front differential	31	03-06			
Overhaul - front axle differential with LIM-SLIP	32-33	03-06			
Overhaul - differential lock unit	34-35	03-06			
Disassembly-Assembly - front epicyclic final drive without brake	36 to 38	03-06			
Replacing wheel hub seal without brake.	39	03-06			

	Page	Date		Page	Date
31 - POWER TAKE-OFF			Hydraulic diagram - brakes	5	03-06
CHAPTER 1 - Mechanical power take-off			Pilot valve operation	6	03-06
Summary	1	03-06	Troubleshooting	7	03-06
Data	2 to 4	03-06	Adjustments - parking handbrake travel	8	03-06
Tools	5	03-06	Removal-Installation/Dis- assembly-Assembly park- ing brake casing	9 to 11	03-06
Tightening Torques	5-6	03-06	Service brake circuit air bleeding	12	03-06
Cross-sectional views ...	7 to 9	03-06	Removal-Installation - service brake pump	13-14	03-06
Description & Operation ..	10-11	03-06	Adjusting the height of the service brake pedals	14	03-06
Troubleshooting	11	03-06	Removal-Installation - service brake	15 to 19	03-06
Removal-Installation - power take-off	12 to 14	03-06	CHAPTER 2 - Trailer Air Brakes		
Disassembly-Assembly - power take-off	15 to 17	03-06	Summary	1	03-06
CHAPTER 2 - Electro-hydraulic power take-off			Data	1	03-06
Summary	1	03-06	Tightening Torques	2	03-06
Data	2 to 5	03-06	Tools	2	03-06
Tools	5	03-06	Cross-sectional views ...	3 to 6	03-06
Tightening Torques	6	03-06	Description & Operation ..	6-7	03-06
Cross-sectional views ...	7 to 12	03-06	Operation of single trailer brake circuit components .	8 to 13	03-06
Description & Operation ..	13 to 22	03-06	Troubleshooting	14	03-06
Additional PTO controls for cab-version tractors with Power Shuttle trans- missions	23-24	03-06	Pressure tests	15 to 19	03-06
Troubleshooting	25	03-06	35 - HYDRAULIC SYSTEMS		
Replacing the power take- off brake	26-27	03-06	CHAPTER 1 - Rear mechanical hydraulic lift		
Removal-Installation - power take-off	28 to 31	03-06	Summary	1	03-06
Disassembly-Assembly - power take-off	32 to 38	03-06	Data	2 to 6	03-06
33 - BRAKES			Tightening Torques	7-8	03-06
CHAPTER 1 - Brakes			Tools	9	03-06
Summary	1	03-06	Cross-sectional views ...	10-11	03-06
Data	1	03-06	Description & Operation ..	12 to 15	03-06
Tightening Torques	2	03-06	Troubleshooting	16-17	03-06
Cross-sectional views ...	3-4	03-06	Hydraulic lift pump compo- nents	18-19	03-06
Tools	4-5	03-06	Pump seal kit replacement	19	03-06
Description & Operation ..	4	03-06	Disassembly-Assembly - LIFT-O-MATIC control ...	20	03-06
			Adjustments - lift rod mechanism	21-22	03-06

	Page	Date		Page	Date
LIFT-O-MATIC device upward travel adjustment . . .	23	03-06	Removal-Installation – BOSCH auxiliary control valves	19 to 21	03-06
Disassembly-Assembly – external lift controls	24	03-06	Disassembly-Assembly – BOSCH auxiliary control valves	22 to 26	03-06
Removal-Installation – lift .	25 to 31	03-06	CHAPTER 4 – Trailer brake auxiliary control valve		
Disassembly-Assembly – lift	32 to 36	03-06	Summary	1	03-06
Adjusting the lift	37 to 42	03-06	Cross-sectional views . . .	1	03-06
Removal-Installation – lift control valve	43-44	03-06	Description & Operation . .	1-9	03-06
Disassembly-Assembly – lift control valve	45 to 49	03-06	Troubleshooting	10 to 12	03-06
Lift pressure relief valve – removal/installation and setting	50	03-06	CHAPTER 5 – Supplementary Cylinder		
CHAPTER 2 – Open centre system auxiliary control valves			Summary	1	03-06
Summary	1	03-06	Data	1	03-06
Data	1	03-06	Cross-sectional views . . .	1	03-06
Tools	1	03-06	Description & Operation . .	1	03-06
Tightening Torques	2	03-06	Removal-Installation/Disassembly-Assembly – supplementary cylinder . . .	2	03-06
Cross-sectional views . . .	3 to 5	03-06	CHAPTER 6 – Electronic Lift		
Description & Operation . .	6 to 9	03-06	Summary	1	03-06
Disassembly-Assembly – auxiliary control valves . . .	10-11	03-06	Precautions	1	03-06
Rod hardening test	11	03-06	Data	2-3	03-06
Blow-by test	12	03-06	Tightening Torques	4	03-06
Adjustment of the automatic detent release pressure	12	03-06	Tools	4	03-06
Removal-Installation – flow control valve	13	03-06	View of electronic lift components	5	03-06
Adjustments – flow control valve	14-15	03-06	Electronic lift control layout	6-7	03-06
CHAPTER 3 – Auxiliary control valves (BOSCH)			Description & Operation . .	8 to 11	03-06
Summary	1	03-06	Anti-damping device for implements carried on the lift	12 to 13	03-06
Data	2	03-06	Fault code decoding	13 to 14	03-06
Tools	2	03-06	Diagnostics	14 to 54	03-06
Tightening Torques	3	03-06	Lift electronic control unit .	55	03-06
View of BOSCH auxiliary control valve components .	4	03-06	Removal-Installation – electronic lift control panel	56	03-06
Description & Operation . .	4-5	03-06	Lift arm potentiometer replacement	57	03-06
Control valve components	6 to 9	03-06	Removal – Installation – draft sensor	58-59	03-06
Description & Operation . .	10 to 18	03-06	Calibration of the electronic lift arms potentiometer	60-61	03-06

	Page	Date
Removal-Installation - electronic lift	62 to 67	03-06
Removal-Installation - hy- draulic control valve	68-69	03-06

**CHAPTER 7 - Ventral control valves
for Walvoil-type open
centre system**

Summary	1	03-06
Ventral control valve spec- ifications	1	03-06
Tightening Torques	2	03-06
Ventral control valve	3-4	03-06
Ventral control valve joy- stick	5 to 7	03-06
Control valve circuit	8	03-06
Hydraulic diagram	9	03-06
Description and operation of ventral control valve . . .	10 to 18	03-06

CONTENTS VOLUME 2

	Page	Date		Page	Date
35 – HYDRAULIC SYSTEMS(*)			41 – STEERING		
CHAPTER 8 – Front Loader			Summary	1	03-06
Summary	1	03-06	Data	2 to 4	03-06
Specifications	2-3	03-06	Tightening Torques	5	03-06
Maximum permissible front axle weights	3	03-06	View of hydraulic pump components	5	03-06
Tightening Torques	4	03-06	View of hydrostatic steering control valve components	6	03-06
Diagrams	5 to 7	03-06	Description & Operation ..	7 to 10	03-06
Ventral control valve specifications	8-9	03-06	Fault diagnosis	11-12	03-06
Ventral control valve joystick	10 to 12	03-06	Tools	12	03-06
System switching full and dipped beam headlights on lights fitted on handrails ..	13 to 16	03-06	Removal-Installation – hydrostatic steering control valve	13 to 17	03-06
Ballasting the tractor for front loader operation	17	03-06	Disassembly-Assembly – hydrostatic control valve ..	18 to 31	03-06
Loader general description	18 to 27	03-06	Hydrostatic steering control valve bench testing ...	32-33	03-06
Loader installation – removal	28 to 32	03-06	Pressure relief valve testing	33	03-06
Implement installation – removal	33 to 36	03-06	Power steering pump components	34-35	03-06
Lift arm types and functions	37 to 45	03-06	Disassembly – Assembly of hydraulic pump to replace seal kit	35	03-06
Smooth ride control	46 to 48	03-06	Removal-Installation – steering cylinder	36-37	03-06
Multi Quick coupler connection – disconnection ..	49 to 60	03-06			
Hydraulic functions and flow diagram of loaders ..	61 to 71	03-06	44 – AXLES AND WHEELS		
Hydraulic Flow Diagrams ..	72 to 88	03-06	Summary	1	03-06
Repair instructions	89 to 94	03-06	Data	1	03-06
Hydraulic components ...	95 to 99	03-06	Front wheel track diagram	2	03-06
Troubleshooting	100 to 105	03-06	Cross-sectional views ...	3	03-06
			Tightening Torques	4-5	03-06
			Tools	5	03-06
			Fault diagnosis	5	03-06
			Disassembly-Assembly – wheel axle hub	6 to 8	03-06
			Removal-Installation – front axle	9 to 11	03-06
			Stub axle hub overhaul ...	12 to 14	03-06
			Checking leading wheel alignment	15-16	03-06

(*) Chapters prior to section **35** are in **volume 1**.

	Page	Date		Page	Date
50 – SUBSIDIARY PARTS			Control panel	2–3	03–06
Summary	1	03–06	Analog/digital instruments	4	03–06
Safety regulations	2	03–06	Liquid crystal display	5 to 7	03–06
Data	3–4	03–06	Access to the setup menu via keypad	8–13	03–06
Tools	4	03–06	Calling up functions from keypad	13 to 16	03–06
Operating principles	5–6	03–06	Access to the setup menu with the CAL button	17–18	03–06
Conditioning system com- ponents	7 to 11	03–06	Calling up functions with the CAL button	18	03–06
Warnings for air condition- ing system repair oper- ations	11	03–06	Transmitters, sensors and switches	19–26	03–06
Cab controls	12 to 14	03–06	Maintenance	26	03–06
Instructions for use – air conditioning system	15	03–06	CHAPTER 2 – Components		
Air-conditioning system charging and evacuation recovery/recycling station	15	03–06	Summary	1	03–06
Leak detector	16	03–06	Introduction	1	03–06
Air conditioning system maintenance	17	03–06	Dashboard controls	2 to 8	03–06
Troubleshooting	18	03–06	Right mudguard controls . .	9 to 11	03–06
Fault diagnosis	19 to 22	03–06	In-Cab Controls	12 to 14	03–06
System functional testing .	23	03–06	Controls on right-hand cab upright	15–16	03–06
Checking for and eliminat- ing gas leaks	24	03–06	External controls	17	03–06
Compressor drive belt ten- sion adjustment	25–26	03–06	Maintenance	18–19	03–06
Removal-Installation – compressor	27 to 29	03–06	CHAPTER 3 – Components		
Heating and air condition- ing systems piping re- placement	30–31	03–06	Summary	1	03–06
Air conditioning piping re- placement	32 to 37	03–06	Technical data	1	03–06
Condenser replacement	38	03–06	Tightening Torques	1	03–06
Dryer filter replacement . .	39–40	03–06	Description and Operation	2	03–06
Removal-Installation – heater unit	41 to 43	03–06	Fault diagnosis	3	03–06
Replacing the air-condi- tioner evaporator	44 to 46	03–06	Starting and recharging cir- cuit (pre-modification) . . .	4–5	03–06
Removal-Installation – electric fan	47–48	03–06	Starting and recharging cir- cuit (post-modification) . .	6–7	03–06
55 – ELECTRICAL SYSTEM			System testing	8 to 10	03–06
CHAPTER 1 – Instruments			Starter motor removal, in- stallation and overhaul . . .	10 to 13	03–06
Summary	1	03–06	Bench testing	13–14	03–06
			CHAPTER 4 – Charging system		
			Summary	1	03–06
			Technical data	1	03–06
			Tightening Torques	1	03–06
			Description and Operation	2–3	03–06
			System testing and troubleshooting	4 to 9	03–06

	Page	Date		Page	Date
Removal, Installation and Overhaul	10	03-06	Power Shuttle ISO deck version	107 to 130	03-06
Alternator components ...	11	03-06	Power Shuttle NASO deck version	131 to 154	03-06
Tests	12 to 14	03-06	Dual Command (2 Speed Power Shift) ISO deck version	155 to 178	03-06
Disassembly	15	03-06	Dual Command (2 Speed Power Shift) NASO deck version	179 to 202	03-06
Electronic voltage regulator	15 to 16	03-06	Control unit input – output diagrams	203 to 208	03-06
Inductor winding insulation test	16-17	03-06			
Overhaul, installation	17-18	03-06			
CHAPTER 5 – Battery			CHAPTER 7 – Electrical circuits (post-modification)		
Summary	1	03-06	Summary	1	03-06
Technical data	1	03-06	Maxi power fuses box	02 to 04	03-06
Description & Operation ..	1	03-06	Fuse and relay box	04 to 22	03-06
Removal-Installation – battery	2-3	03-06	Power sockets	23	03-06
Battery maintenance	4 to 5	03-06	Grid Heater	24	03-06
Battery Charging	5-6	03-06	Electronic flasher	24	03-06
Battery testing	6 to 8	03-06	How to use the linear wiring diagrams	25 to 27	03-06
Battery problems – frequent causes	8	03-06	Ground location points ...	28-29	03-06
CHAPTER 6 – Electrical circuits (pre-modification)			Electric wire colour code .	30	03-06
Summary	1	03-06	Symbols used in electrical circuits	31-32	03-06
Maxi power fuses box	2 to 4	03-06	Wiring diagram components	33 to 40	03-06
Fuse and relay box	4 to 16	03-06	Power Shuttle cab version	41 to 76	03-06
Power sockets	17	03-06	Dual Command (2 Speed Power Shift) cab version .	77 to 112	03-06
Operator safety circuit ...	18	03-06	Power Shuttle ISO deck version	113 to 136	03-06
Grid Heater	18-19	03-06	Power Shuttle NASO deck version	137 to 160	03-06
Electronic flasher	19	03-06	Dual Command (2 Speed Power Shift) ISO deck version	161 to 184	03-06
Ground location points ...	20-21	03-06	Dual Command (2 Speed Power Shift) NASO deck version	185 to 207	03-06
How to use the linear wiring diagrams	22 to 24	03-06	Control unit input – output diagrams	208 to 214	03-06
Symbols used in electrical circuits	25-26	03-06			
Electric wire colour code .	26	03-06			
Wiring diagram components	27 to 34	03-06			
Power Shuttle cab version	35 to 70	03-06			
Dual Command (2 Speed Power Shift) cab version .	71 to 106	03-06			

CONTENTS VOLUME 3

	Page	Date		Page	Date
55 - ELECTRICAL SYSTEM (*)			14001-15000 (Analog-digital control panel)	336 to 404	03-06
			Electronically controlled hydraulic lift (EDC)	405 to 482	03-06
CHAPTER 8 - Connectors			CHAPTER 11 - HH menu and calibrations		
Summary	1	03-06	Summary	1	03-06
Electrical circuits components	2 to 6	03-06	Calibrations	2	03-06
Wirings (pre-modification)	7 to 26	03-06	HH MENU access	3-4	03-06
Wirings (post-modification)	27 to 46	03-06	HH MENU of the control panel	5 to 11	03-06
List of connectors	47 to 94	03-06	HH MENU of the transmission	12 to 25	03-06
CHAPTER 9 - Components Testing			HH MENU of the advanced keypad	25-26	03-06
Summary	1	03-06	90 - BODYWORK AND DRIVING POSITION		
Tests on switches, sensors and pressure switches	02 to 18	03-06	Summary	1	03-06
Removal-Installation wind-screen wiper motor	19	03-06	Removal-Installation - bonnet	2-3	03-06
CHAPTER 10 - Error codes			Removal-Installation - platform	4 to 11	03-06
Summary	1	03-06	Removal-Installation - driver's seat	12	03-06
Introduction	2	03-06	Cab Removal-Installation	13 to 25	03-06
Special Attachments	3	03-06	Removal-Installation - door	26	03-06
Repairing the wiring	3	03-06	Replacement of glued cab windows	27-28	03-06
Digital multimeter	6 to 8	03-06	Replacement of cab rear window	29 to 31	03-06
Electrical test procedures	9-11	03-06	Replacement of seal on left-hand upright	32	03-06
Circuit components	11 to 20	03-06	Replacement of seal on right-hand upright	33-34	03-06
CAN system	21	03-06	Replacement of fixed padding on right-hand wall	35 to 37	03-06
Control unit location	21	03-06	Replacement of fixed padding on left-hand wall	38-39	03-06
Error code display	22 to 24	03-06	Replacing hydraulic control lever guard	40-41	03-06
"H" menu diagnostic mode	24	03-06	Replacing cab ceiling fittings	42-43	03-06
Error codes lists	25 to 30	03-06			
Error codes charts					
Calibration U-Codes	31 to 34	03-06			
2001-3000 (Transmission)	35 to 280	03-06			
5001-6000 (Rear PTO)	281 to 308	03-06			
6001-7000 (4WD)	309 to 319	03-06			
7001-8000 (Differential lock)	320 to 335	03-06			

(*) Chapters prior to section **55** are in **volume 2**.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com