John Deere Impel-R-Feed Fertilizer Attachment for 1800 Surflex Disk Tillers Equipped with a Seeding Attachment

JOHN DEERE

OPERATORS MANUAL

John Deere Impel-R-Feed Fertilizer Attachment for 1800 Surflex Disk Tillers Equipped with a Seeding Attachment

OMW15616 G7 English

OMW15616 G7

LITHO IN U.S.A.
ENGLISH

DCY

OMW15616 G7

TO THE PURCHASER

The successful operation of your Impel-R-Feed Fertilizer Attachment, which is designed to give you many years of satisfactory service, depends upon the care given it and how it is operated.

This manual has been prepared to assist you in operating and adjusting the Fertilizer Attachment.

It will be worth your while to read this manual carefully and to see that your operators follow the instructions in it.

If you find that you need information not covered in this manual, see your John Deere dealer. He can give your prompt "know-how" service in the field or in his shop.

When in need of parts, go to your John Deere dealer. Be sure to give him a complete description of the part, the model and size of the disk tiller and seeding attachment, and the year purchased. This information should be recorded at the bottom of this page as soon as you have received your Fertilizer Attachment.

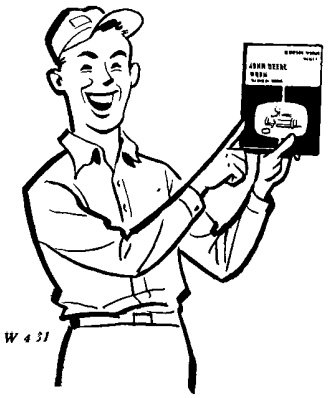

Location Reference:

Right-hand and left-hand reference is determined by standing at the rear of the tiller and facing the direction of travel.

Study this manual carefully. After you are thoroughly familiar with its contents, keep it in a safe place for future reference.

Impel-R-Feed Fertilizer Attachment
Disk Tiller and Seeding Attachment Size and Model _____
Date Purchased. . . . . _____, 19 _____

CONTENTS

	Page
SPECIFICATIONS	2
OPERATION	3-9
Preparing Fertilizer Attachment for Use	3
Handling Fertilizer	3
Shifter Lever Setting	4
Fertilizer Chart	4
Fertilizer Drive	5
Checking Drive	5
Engaging Fertilizer Drive	5
Disengaging Fertilizer Drive	5
Fertilizer Box Baffle Clips	5
Cleaning	6
Daily Cleaning	6
Removing and Cleaning Slides	6-7
Adjusting Fertilizer Slide	7
Preparing Fertilizer Attachment for Storage	8
Transporting	9
Safety Suggestions	9
LUBRICATION	10
SHIPPING BUNDLES	11
ASSEMBLY	11-15

SPECIFICATIONS

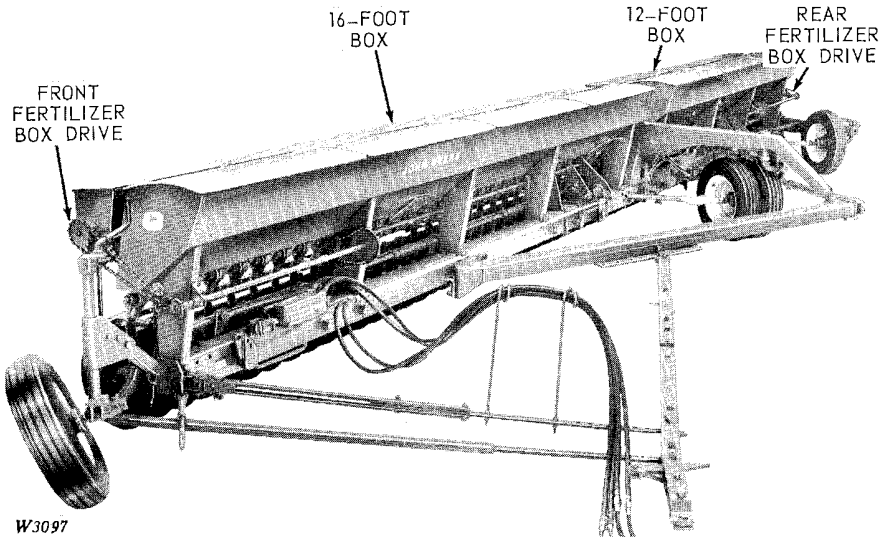

28-Foot 1800 Surflex Tiller Seeder with Fertilizer Attachment

Fertilizer Box	Capacity (Based on 80 Lbs. per Bu.)	No. of Tiller Land Wheel Revolutions Per Acre
12-foot	480 lbs.	533
16-foot	640 lbs.	400
24-foot	960 lbs.	266
28-foot	1120 lbs.	228
32-foot	1280 lbs.	200

(Specifications and design subject to change without notice.)

Thank you so much for reading.

Please click the “Buy Now!” button below to download the complete manual.

After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com