155
REAR BLADE

JOHN DEERE

OPERATORS MANUAL

155
REAR BLADE

OMW38929 A8 English

JOHN DEERE WELLAND WORKS
OMW38929 A8

LITHO IN THE U.S.A.
ENGLISH

Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.

Right-hand and left-hand sides are determined by facing in the direction the implement will travel when going forward.

Write product identification numbers in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

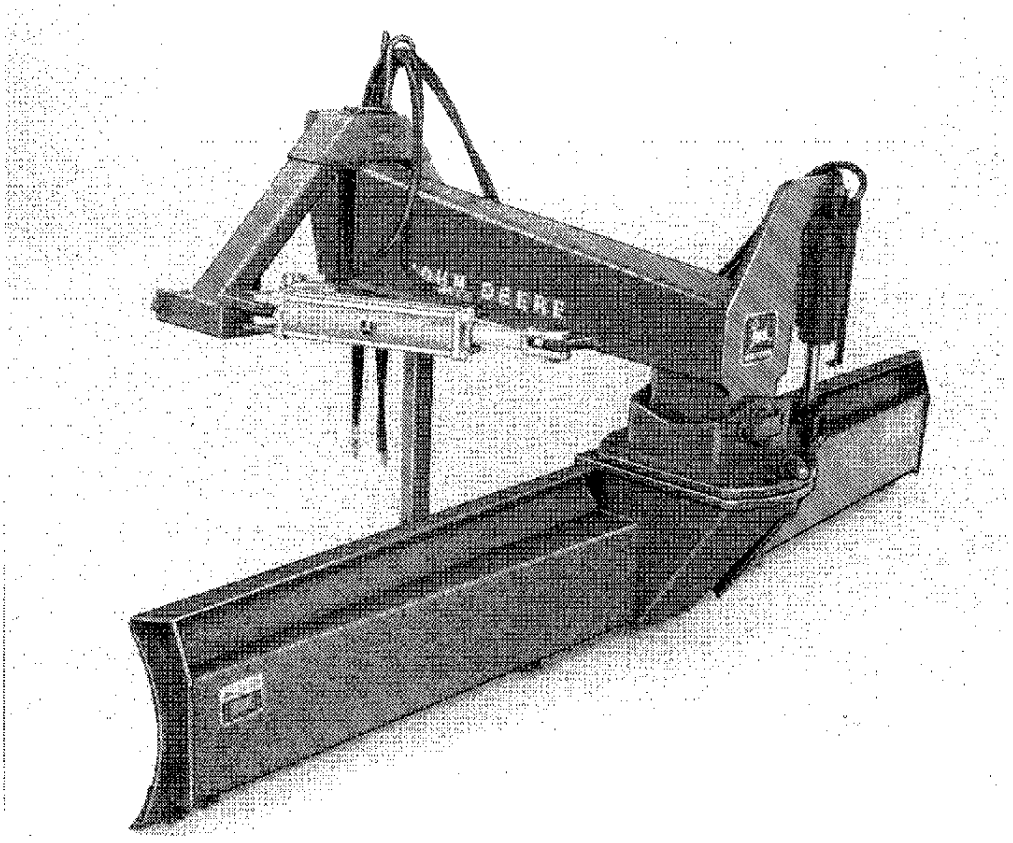

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

Checklists

PREDELIVERY CHECKLIST

Check off each item as it is found satisfactory or after correction is made.

- ☐ Blade has been correctly assembled.
- ☐ Hardware is tightened.
- ☐ Blade has been prepared for the tractor to be used.
- ☐ Scratches are painted.
- ☐ All decals are in place and readable.
- ☐ This blade has been checked and to the best of my knowledge is ready for delivery to the customer.

Date Predelivered: _____

Signature: _____

W02;;3PD -A 181187

DELIVERY CHECKLIST

Review the operator's manual with the customer explaining the following:

- ☐ John Deere warranty.
- ☐ Safe operation and service.
- ☐ Daily and periodic inspections.
- ☐ Correct lubricants, lubrication and maintenance.
- ☐ John Deere parts and service.

Prior to final delivery to the customer do the following:

- ☐ Record serial number in the Specifications section.
- ☐ Sign and remove this page for dealer's record.
- ☐ Give the customer the operator's manual. Encourage the customer to read the manual.

Date Delivered: _____

Signature: _____

W02;;3PD -B 181187

AFTER-SALE CHECKLIST

It is suggested that the following items be checked sometime during the first six months operation of the machine.

- ☐ Check the entire machine for loose or missing hardware.
- ☐ Check for broken or damaged parts. Make necessary repairs.
- ☐ Acquaint the customer with any special attachments that will help do a better job.
- ☐ Check with the customer as to the performance of the machine.
- ☐ If possible, run the machine to see if it is functioning properly.
- ☐ Review the entire operator's manual with the customer and stress the importance of proper and regular lubrication and safety precautions.

Date Visited: _____

Signature: _____

W02;;10PD -C 260387

Contents

	Page
Safety	05-1
Safety Signs	10-1
Preparing The Tractor	
Selecting Tractor Size	15-1
Adding Front Ballast	15-1
Selecting Rear Tread	15-1
Setting Lateral Float	15-1
Positioning Drawbar	15-2
Adjusting Hitch Sway Controls	15-2
Adjusting Rate Of Drop	15-2
Selecting Hydraulic Flow	15-2
Preparing The Blade	
Preparing Category 2	
3-Point Hitch	20-1
Quick-Coupler	20-1
Preparing Category 3 Quick-Coupler Or 3-Point Hitch	20-1
Preparing Category 3N Or 3-Point Hitch	20-1
Preparing Category 3N Quick-Coupler	20-2
Quick-Coupler Conversion	20-2
Using The Hydraulics	20-2
Controls	
Raising And Lowering Blade	25-1
Offsetting And Tilting Blade	25-1
Attaching The Blade	
Attaching Blade Safely	30-1
Attaching Blade, 3-Point Hitch	30-1
Leveling The Blade Side To Side	30-2
Attaching Blade, Quick-Coupler.	30-2
Check Blade Operation	30-3
Detaching The Blade	
Detach Blade Safely	35-1
Detaching Blade	
3-Point Hitch	35-1
Quick-Coupler	35-2
Transporting	40-1
Operating The Blade	
Keep Riders Off	45-1
Adjusting Blade Safely	45-1
Angling The Blade	45-1
Tilting The Blade	45-1
Setting Pitch	45-2
Offsetting The Blade	45-2
Back Blading	45-2
Adjusting Blade For Ditching	45-3
Side Casting	45-4
Levelling	45-4
Service	
Service Blade Safely	50-1
Keep Service Area Safe	50-1
Selecting Grease	50-2
Removing Moldboard From Main Frame	50-2
Removing Moldboard Swivel Plate	50-3
Attaching Moldboard Swivel Plate	50-4
Attaching Moldboard To Main Frame	50-5
Removing Hitch Frame	50-5
Replacing Cutting Edge	50-6
Storage	55-1
Crime Prevention	60-1
Assembly	
Assemble Blade	65-1
Specifications	70-1

W64;I 251187

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

AB6;T81389 053;ALERT 160687

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

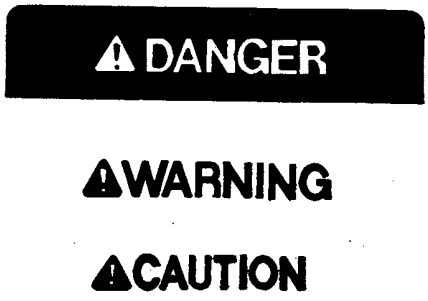

AB6;TS187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

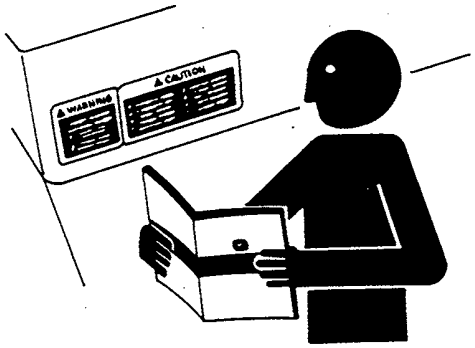

AB6;TS201 053;READ 230487

INSPECT MACHINE REGULARLY

Check for loose hardware.

Check connections at draft links and center link.

Check condition of hydraulic cylinders, fittings and hoses.

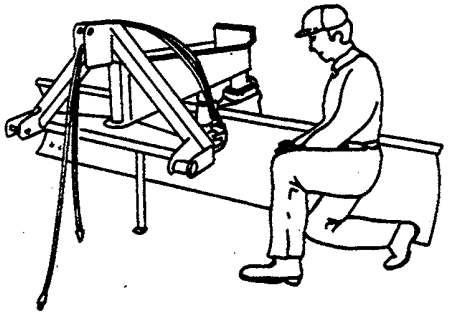

2DA;W14253 W02;;3SY -A 181187

W64;0005 01 151287

PROTECT BYSTANDERS

Never operate the blade near people.

Operate from tractor seat only.

DO NOT allow children to operate tractor or blade.

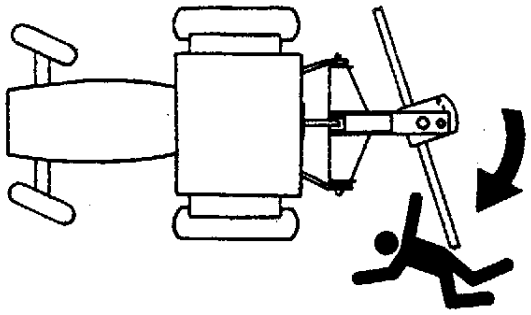

2DA;W14147 W02;;3SY -B 181187

OPERATE BLADE SAFELY

Beware of catching moldboard on obstructions.

DO NOT use blade for towing.

DO NOT use blade as a battering ram.

Operate only from the operator's seat.

Travel slowly over rough ground.

When raising or lowering blade stay at controls until operation is complete.

Be aware that blade makes a large arc when turning.

Avoid the edge of ditches or trenches.

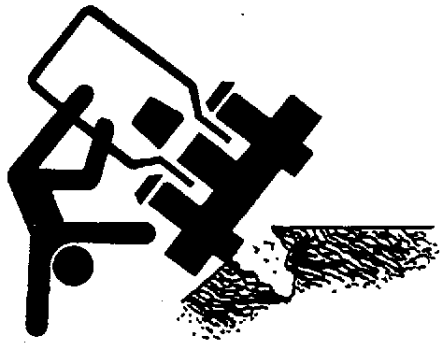

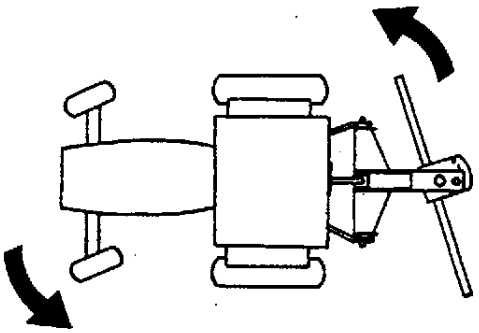

2DA;W14148 W14153 W02;;3SY -C 231187

LEAVING BLADE UNATTENDED

Always lower blade to ground when leaving tractor and blade unattended.

Engage parking brake and/or place transmission in "PARK", shut off tractor engine, and remove key.

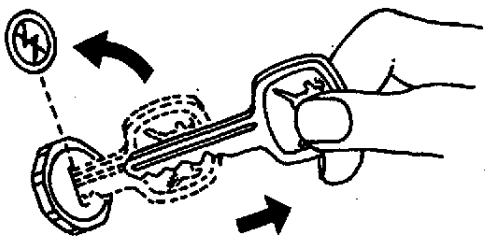

6DA;W9765 W02;;3SY -D 181187

Thank you so much for reading.

Please click the “Buy Now!” button below to download the complete manual.

After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com