


E0108 0102A010A 1

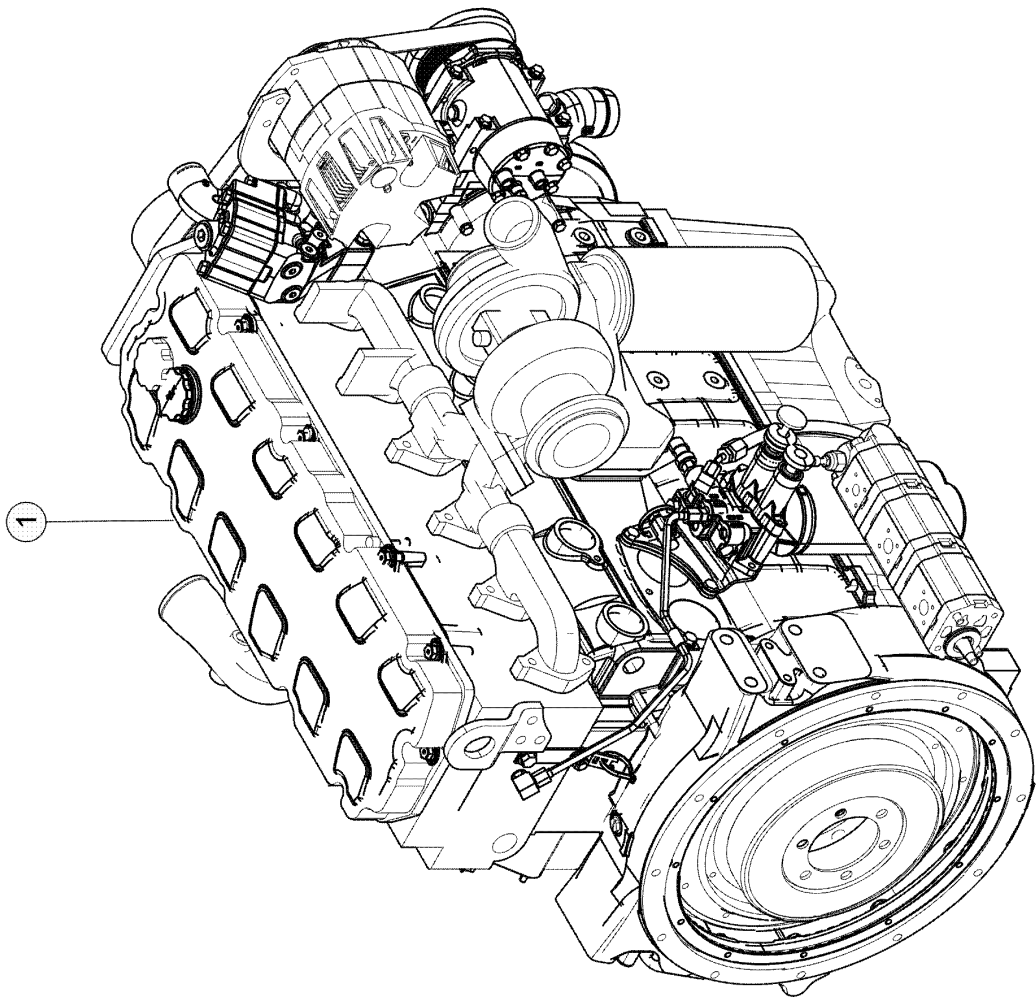


010 COMPLETE ENGINE

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0598 550 2	ENGINE	C9 246KW TIER 3 XERION	1	1)
1	00 0599 127 2	ENGINE	CAT C9 268KW XERION	1	2)
1	00 0799 895 0	ENGINE	C9 246KW TIER 3 XERION E	1	3)
1	00 0799 896 0	ENGINE	C9 268KW TIER 3 XERION E	1	4)
1	00 0780 577 0	ENGINE	C9 246KW EU FLEX	1	5)
1	00 0780 578 0	ENGINE	C9 268KW EU FLEX	1	6)
1	00 0799 891 0	ENGINE	C9 246KW, 2100RPM, LRC	1	7)
1	00 0799 892 0	ENGINE	C9 268KW, 2100RPM, LRC	1	8)
1	00 0799 878 0	ENGINE	C9 246KW SE	1	9)
1	00 0799 879 0	ENGINE	C9 268KW SE	1	10)

1)	Equipment				
	machine no.	XE_P02_0150 XE_P02_1150	Engine CAT C9, SAE246kW/ECE226 with air compressor Engine CAT C9, SAE 246kW/ECE 226k W with air compressor + up to 78101166 with air compressor, without attachment parts		
2)	Equipment				
	machine no.	XE_P02_0160 XE_P02_1160	Engine CAT C9, SAE268kW / ECE253 with air compressor CAT C9, SAE 268 kW/ECE 253 kW with air compressor + up to 78101166 with air compressor, without attachment parts		
3)	Equipment				
	Remarks	XE_P02_2150	CAT C9 engine, SAE246kW/ECE226kW with air compressor with air compressor, without attachment parts		
4)	Equipment				
	Remarks	XE_P02_2160	CAT C9 engine, SAE268kW/ECE253kW with air compressor with air compressor, without attachment parts		
5)	Equipment				
	machine no.	XE_P02_0150	Engine CAT C9, SAE246kW/ECE226 with air compressor + from 78101554 up to 78199999 + from E5209056 up to E5299999 with air compressor, without attachment parts		
6)	Equipment				
	machine no.	XE_P02_0160	Engine CAT C9, SAE268kW / ECE253 with air compressor + from 78101618 up to 78199999 + from E5209056 up to E5299999 with air compressor, without attachment parts		
7)	Equipment				
	Remarks	XE_P02_1150	Engine CAT C9, SAE 246kW/ECE 226k W with air compressor with air compressor, without attachment parts		
8)	Equipment				
	Remarks	XE_P02_1160	CAT C9, SAE 268 kW/ECE 253 kW with air compressor with air compressor, without attachment parts		
9)	Equipment				
	machine no.	XE_P02_0150	Engine CAT C9, SAE246kW/ECE226 with air compressor + from 78101167 up to 78101553 + from E5200011 up to E5209055 with air compressor, without attachment parts		
10)	Equipment				
	machine no.	XE_P02_0160 XE_P02_1160	Engine CAT C9, SAE268kW / ECE253 with air compressor CAT C9, SAE 268 kW/ECE 253 kW with air compressor + from 78101167 up to 78101617 + from E5200011 up to E5209055		


010 COMPLETE ENGINE

10)	with air compressor, without attachment parts
------------	---

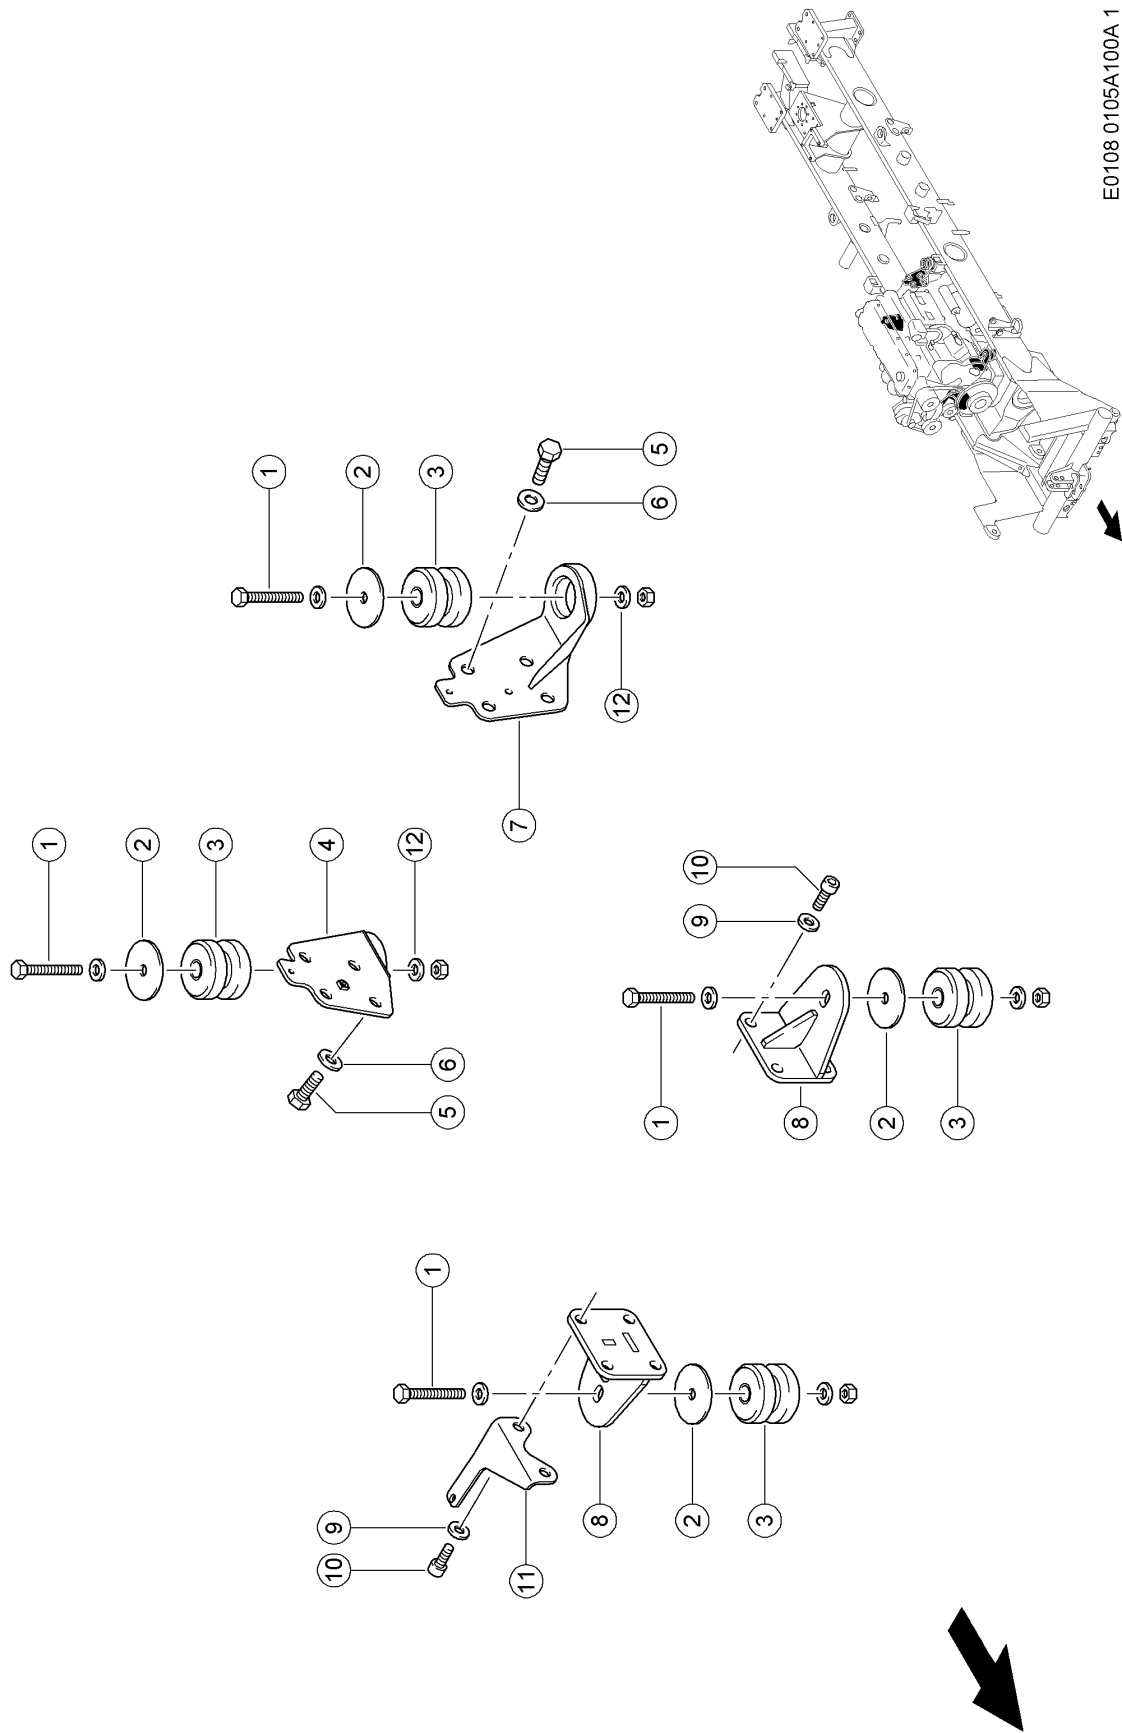


100 ENGINE SUSPENSION

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0237 888 0	HEXAGON HEAD BOLT	M16X130	4	
1	00 0239 391 0	CONTACT WASHER	A16	6	
1	00 0236 173 0	HEXAGONAL NUT	M16	4	
2	00 0734 728 0	WASHER	D90X5	7	
3	00 0598 842 0	RUBBER BEARING	D89 H73	4	
4	00 0596 319 1	BEARING SUPPORT		1	
5	00 0214 077 0	HEXAGON HEAD BOLT	3/4-10X2	8	
6	00 0212 191 0	CONTACT WASHER	A20	4	
7	00 0596 312 0	BEARING SUPPORT		1	
8	00 0596 313 0	BEARING SUPPORT		2	
9	00 0237 044 0	WASHER	16	8	
10	00 0237 693 0	SOCKET HEAD SCREW	M16X35	8	
11	00 0596 396 0	SUPPORT	5X138X106	1	
12	00 0233 671 0	CONICAL SPRING WASHER	16 -17X39X4	2	

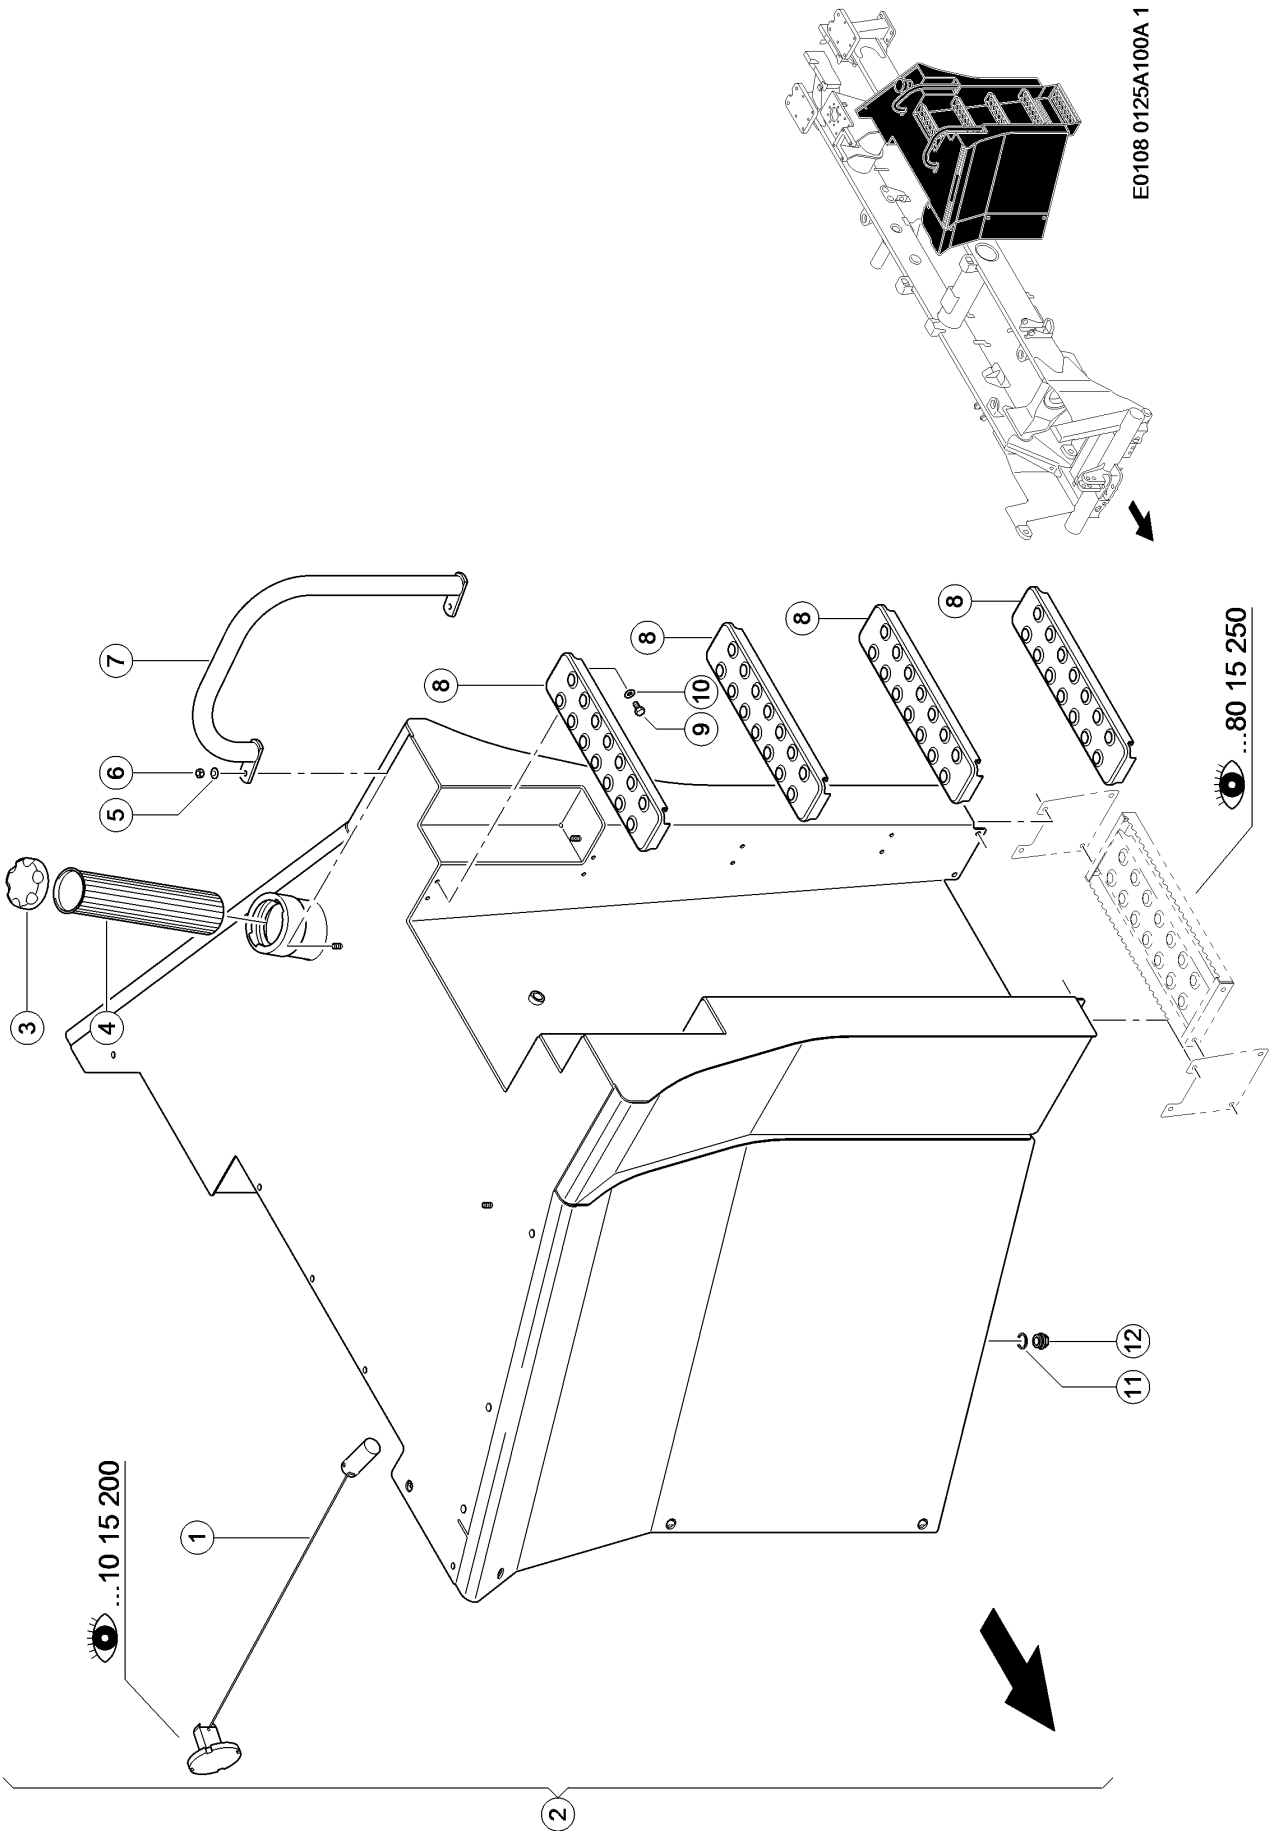

100 FUEL TANK 1)



Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1811 802 0	LEVEL INDICATOR		1	
2	00 0583 714 2	TANK, ASSEMBLED		1	
3	00 0034 018 0	CAP		1	
3	00 0581 279 0	CAP	ABSCHLIESSBAR	1	2)
4	00 0736 238 0	TANK FILTER		1	
5	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	4	
6	00 0236 170 0	HEXAGONAL NUT	M8	4	
7	00 0596 416 1	TUBE		2	
8	00 0601 306 2	STEP	1,5X142,5X455	4	
9	00 0237 439 0	HEXAGON HEAD BOLT	M8X16	16	
10	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	16	
11	00 0633 032 1	SEALING RING	D22X27X1,5	1	
12	00 0766 568 1	SCREW PLUG	A-M22X1,5	1	
1)	Equipment	XE_P03_0030		Fuel tank capacity extended by 190 litres	
2)	Remarks			Lockable	

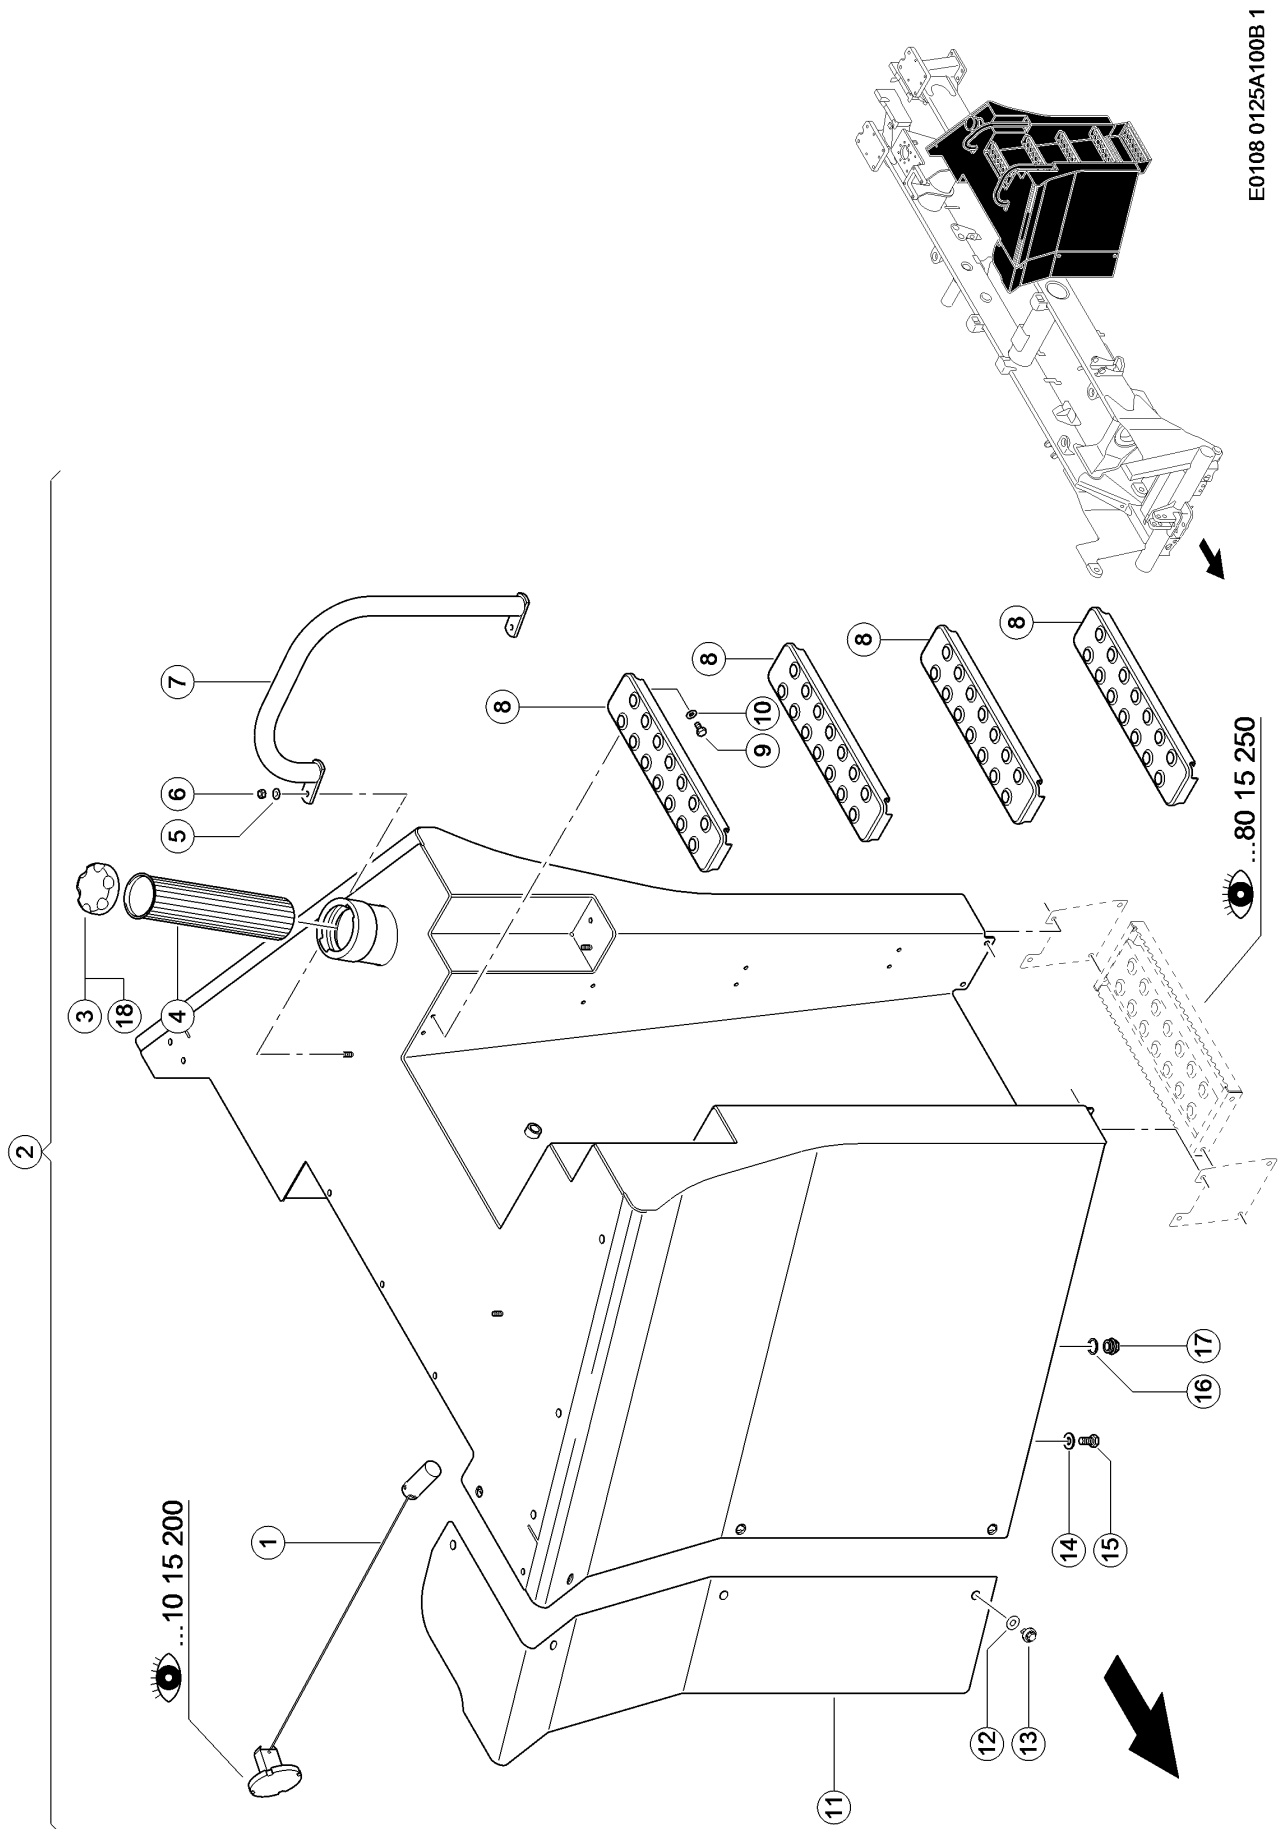

E0108 0125A100B 1

100 FUEL TANK

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1811 802 0	LEVEL INDICATOR		1	
2	00 0581 153 2	TANK, ASSEMBLED		1	
3	00 0582 733 0	CAP	345 L/STD	1	
4	00 0736 238 0	TANK FILTER		1	
5	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	4	
6	00 0236 170 0	HEXAGONAL NUT	M8	4	
7	00 0596 416 1	TUBE		2	
8	00 0601 306 2	STEP	1,5X142,5X455	4	
9	00 0237 438 0	HEXAGON HEAD BOLT	M8X12	16	
10	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	16	
11	00 0598 263 1	GUARD PLATE		1	
12	00 0601 243 0	SUPPORTING WASHER	10,8X25X0,6	4	
13	00 0601 608 0	LOCK TRUNNION	4,69-5,45 KL-L	4	
14	00 0239 389 0	CONTACT WASHER	A12	4	
15	00 0236 056 0	HEXAGON HEAD BOLT	M12X25	6	
16	00 0633 032 1	SEALING RING	D22X27X1,5	1	
17	00 0766 568 1	SCREW PLUG	A-M22X1,5	1	
18	00 0582 734 0	CAP	345 L/STD ABSCHLIESSBAR	1	1)
1)	Equipment				
		XE_S03_0060	Lockable fuel cap		

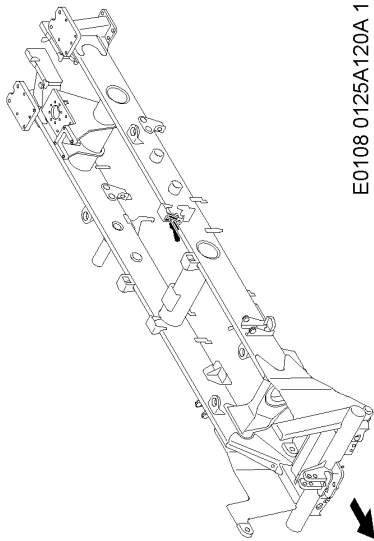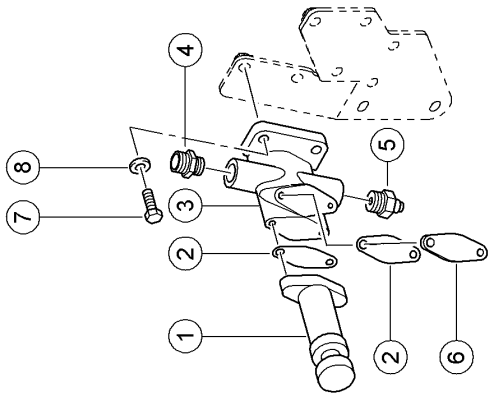

E0108 0125A120A 1



120 FUEL DELIVERY PUMP 1)


Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0360 431 1	FUEL PUMP		1	
2	00 0597 730 0	GASKET		2	
3	00 0597 729 0	PLATE		1	
4	00 0239 037 0	TIE-IN UNION	SDS-L15X3/4-16UNF-2A-TYP	1	
4	00 0310 190 0	O-RING	16,36 X 2,21 NBR 90	1	
5	00 0597 736 0	SCREW-IN FITTING		1	
6	00 0597 732 0	COVER		1	
7	00 0237 453 0	HEXAGON HEAD BOLT	M10X30	2	
8	00 0239 388 0	CONTACT WASHER	A10-10,2X22,25X1,6	2	

1) Equipment

machine no.

XE_P06_0030

Fuel filter with small water separator
+ from 78100011 up to 78100321

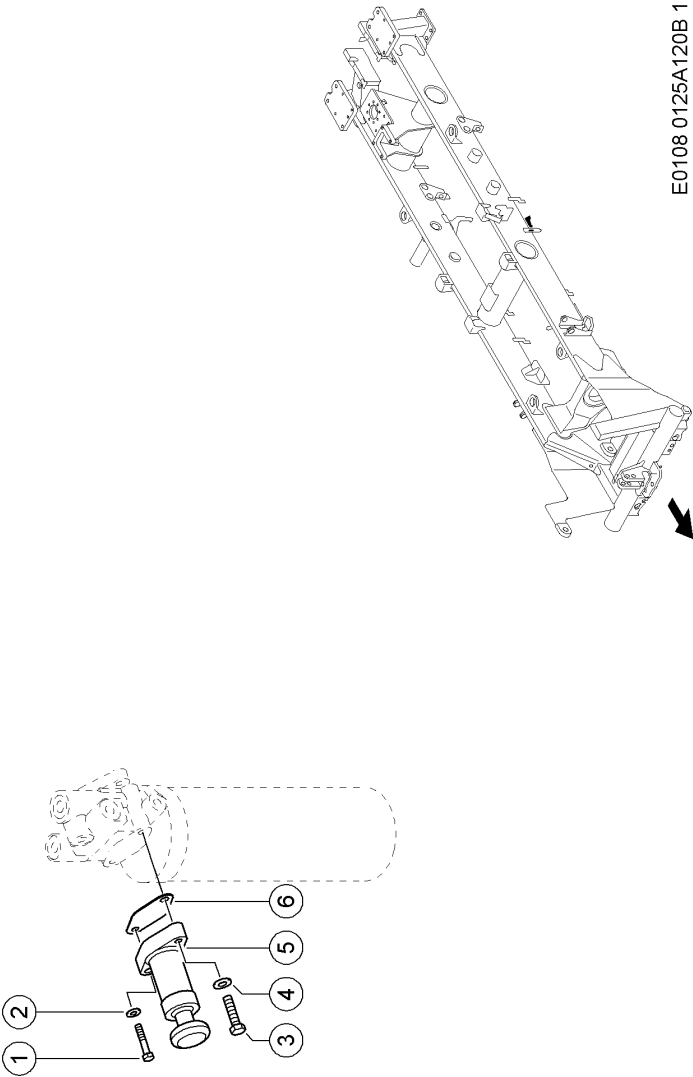

120 FUEL DELIVERY PUMP 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0237 333 0	HEX.HEAD BOLT	M06X35	1	
2	00 0239 386 0	CONTACT WASHER	A 6	1	
3	00 0237 339 0	HEXAGON HEAD BOLT	M08X35	1	
4	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	1	
5	00 0360 431 1	FUEL PUMP		1	
6	00 0360 342 0	GASKET	MOTORTEIL	1	

1) Equipment

machine no.

XE_P06_0030


XE_P06_0040

Fuel filter with small water separator

Fuel filter with large water separator

+ from 78100322 up to 78199999

+ from E5209011 up to E5209999

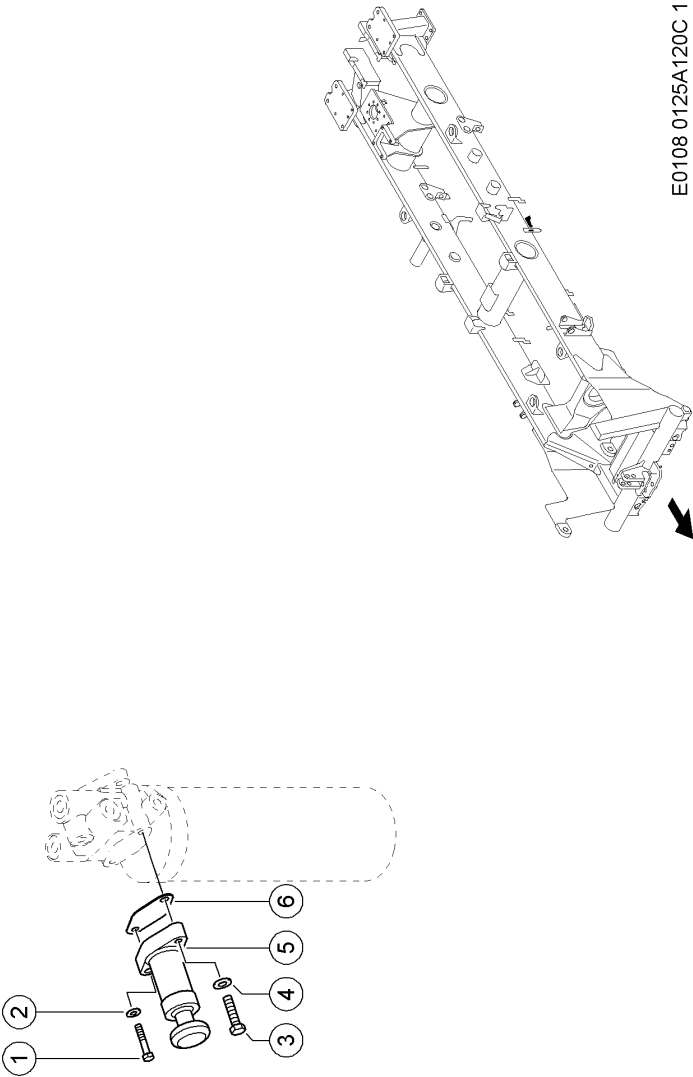

E0108 0125A120C 1

120 FUEL DELIVERY PUMP 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0237 333 0	HEX.HEAD BOLT	M06X35	1	
2	00 0239 386 0	CONTACT WASHER	A 6	1	
3	00 0237 339 0	HEXAGON HEAD BOLT	M08X35	1	
4	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	1	
5	00 0360 431 1	FUEL PUMP		1	
6	00 0360 342 0	GASKET	MOTORTEIL	1	


1) Equipment

machine no.

XE_P06_0040


Fuel filter with large water separator
+ from 78100011 up to 78100321

E0108 0125A140A 1

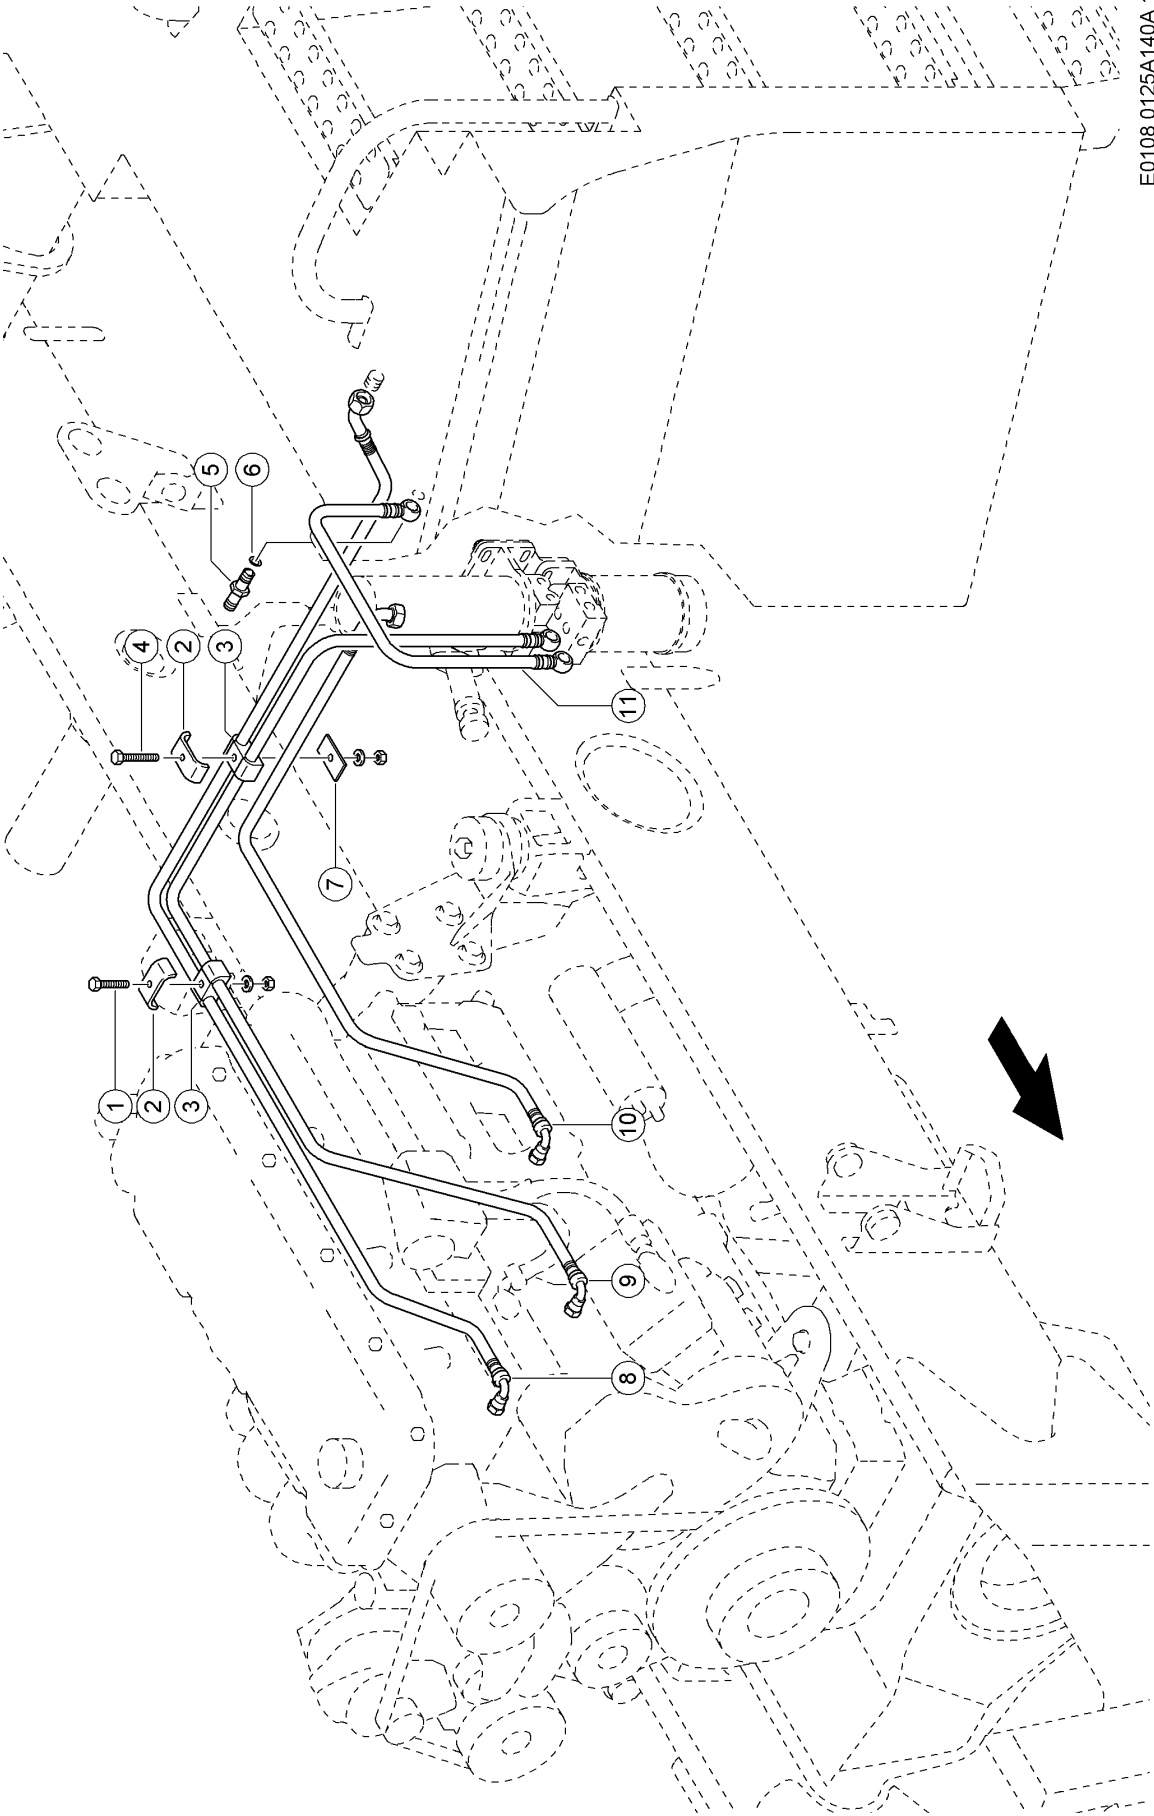

140 FUEL PIPES 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0235 519 0	HEXAGON HEAD BOLT	M 8X50	1	
1	00 0239 393 1	CONTACT WASHER	B 8 -8.2X22X1,9	1	
1	00 0238 132 0	LOCK NUT	M8	1	
2	00 0672 209 0	ATTACHING CLAMP	BSS 2X22X25X3	2	
3	00 0683 659 0	RUBBER BEARING	15/15	2	
4	00 0235 525 0	HEXAGON HEAD BOLT	M8X80	1	
4	00 0239 393 1	CONTACT WASHER	B 8 -8.2X22X1,9	1	
4	00 0238 132 0	LOCK NUT	M8	1	
5	00 0761 583 1	LIMITATION VALVE	M16X1,5	1	
6	00 0235 786 0	SEALING RING	A16 X22	1	
7	00 0813 888 0	PLATE	70X25X3	1	
8	00 0598 468 1	FUEL PIPE	15X1,5X1945	1	
9	00 0598 466 0	FUEL PIPE	VORFILTER-FOERDER PUMPE M	1	
10	00 0598 467 0	FUEL PIPE	ELEKTRONIKBOX-HA NDPUMPE	1	
11	00 0598 465 0	FUEL PIPE	TANK-VORFILTER	1	
1)	Equipment				
	machine no.	XE_P06_0030	Fuel filter with small water separator + from 78100110 up to 78100321		

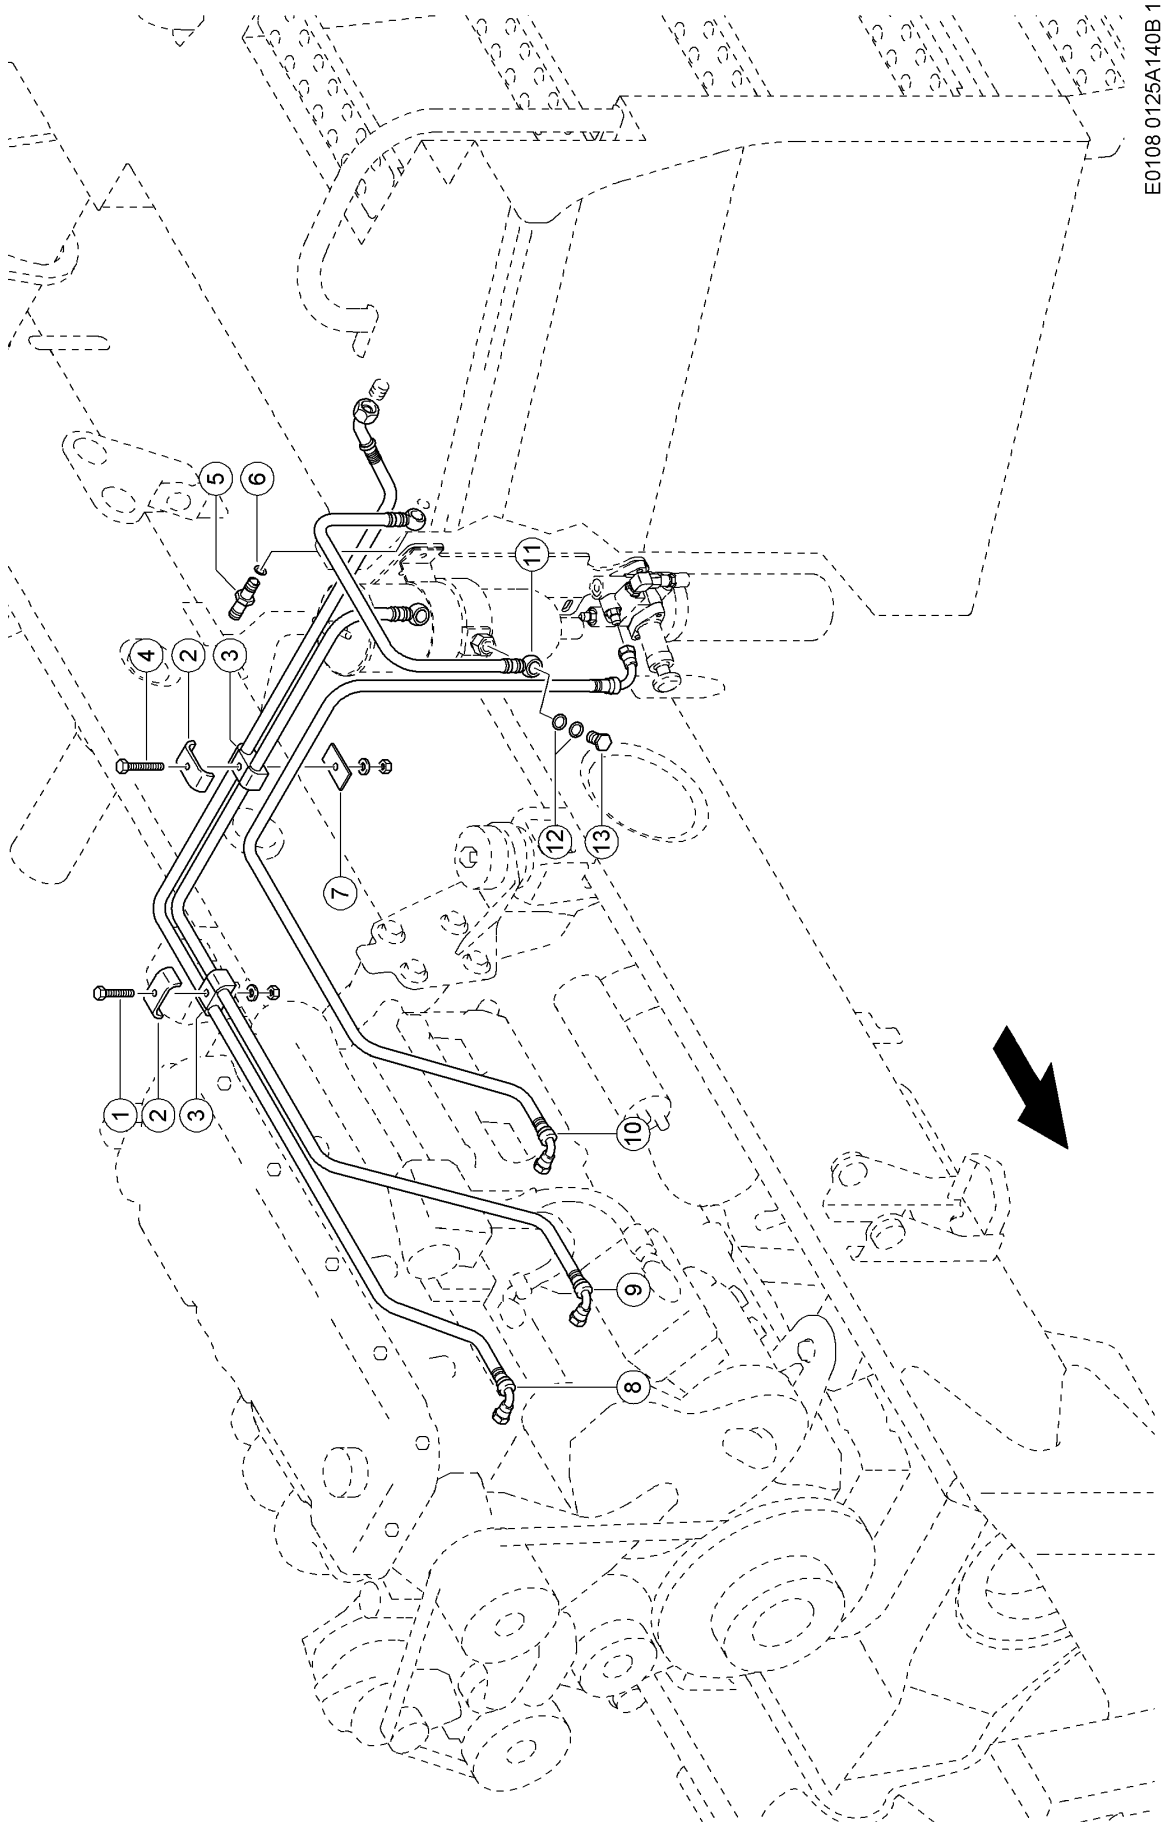

140 FUEL PIPES 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0235 519 0	HEXAGON HEAD BOLT	M 8X50	1	
1	00 0239 393 1	CONTACT WASHER	B 8 -8.2X22X1,9	1	
1	00 0238 132 0	LOCK NUT	M8	1	
2	00 0672 209 0	ATTACHING CLAMP	BSS 2X22X25X3	2	
3	00 0683 659 0	RUBBER BEARING	15/15	2	
4	00 0235 525 0	HEXAGON HEAD BOLT	M8X80	1	
4	00 0239 393 1	CONTACT WASHER	B 8 -8.2X22X1,9	1	
4	00 0238 132 0	LOCK NUT	M8	1	
5	00 0761 583 1	LIMITATION VALVE	M16X1,5	1	
6	00 0235 786 0	SEALING RING	A16 X22	1	
7	00 0813 888 0	PLATE	70X25X3	1	
8	00 0598 468 1	FUEL PIPE	15X1,5X1945	1	
9	00 0598 466 0	FUEL PIPE	VORFILTER-FOERDER PUMPE M	1	
10	00 0581 205 0	LINE		1	
11	00 0581 203 0	LINE	DN12 TANK - VORFILTER	1	
12	00 0235 786 0	SEALING RING	A16 X22	4	
13	00 0096 030 0	HOLLOW SCREW	12 - M16X1,5 (12-3 ZULÄS	2	
1)	Equipment				
	machine no.	XE_P06_0040	Fuel filter with large water separator + from 78100110 up to 78100321		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com