

Fig. 1100 MAIN FRAME

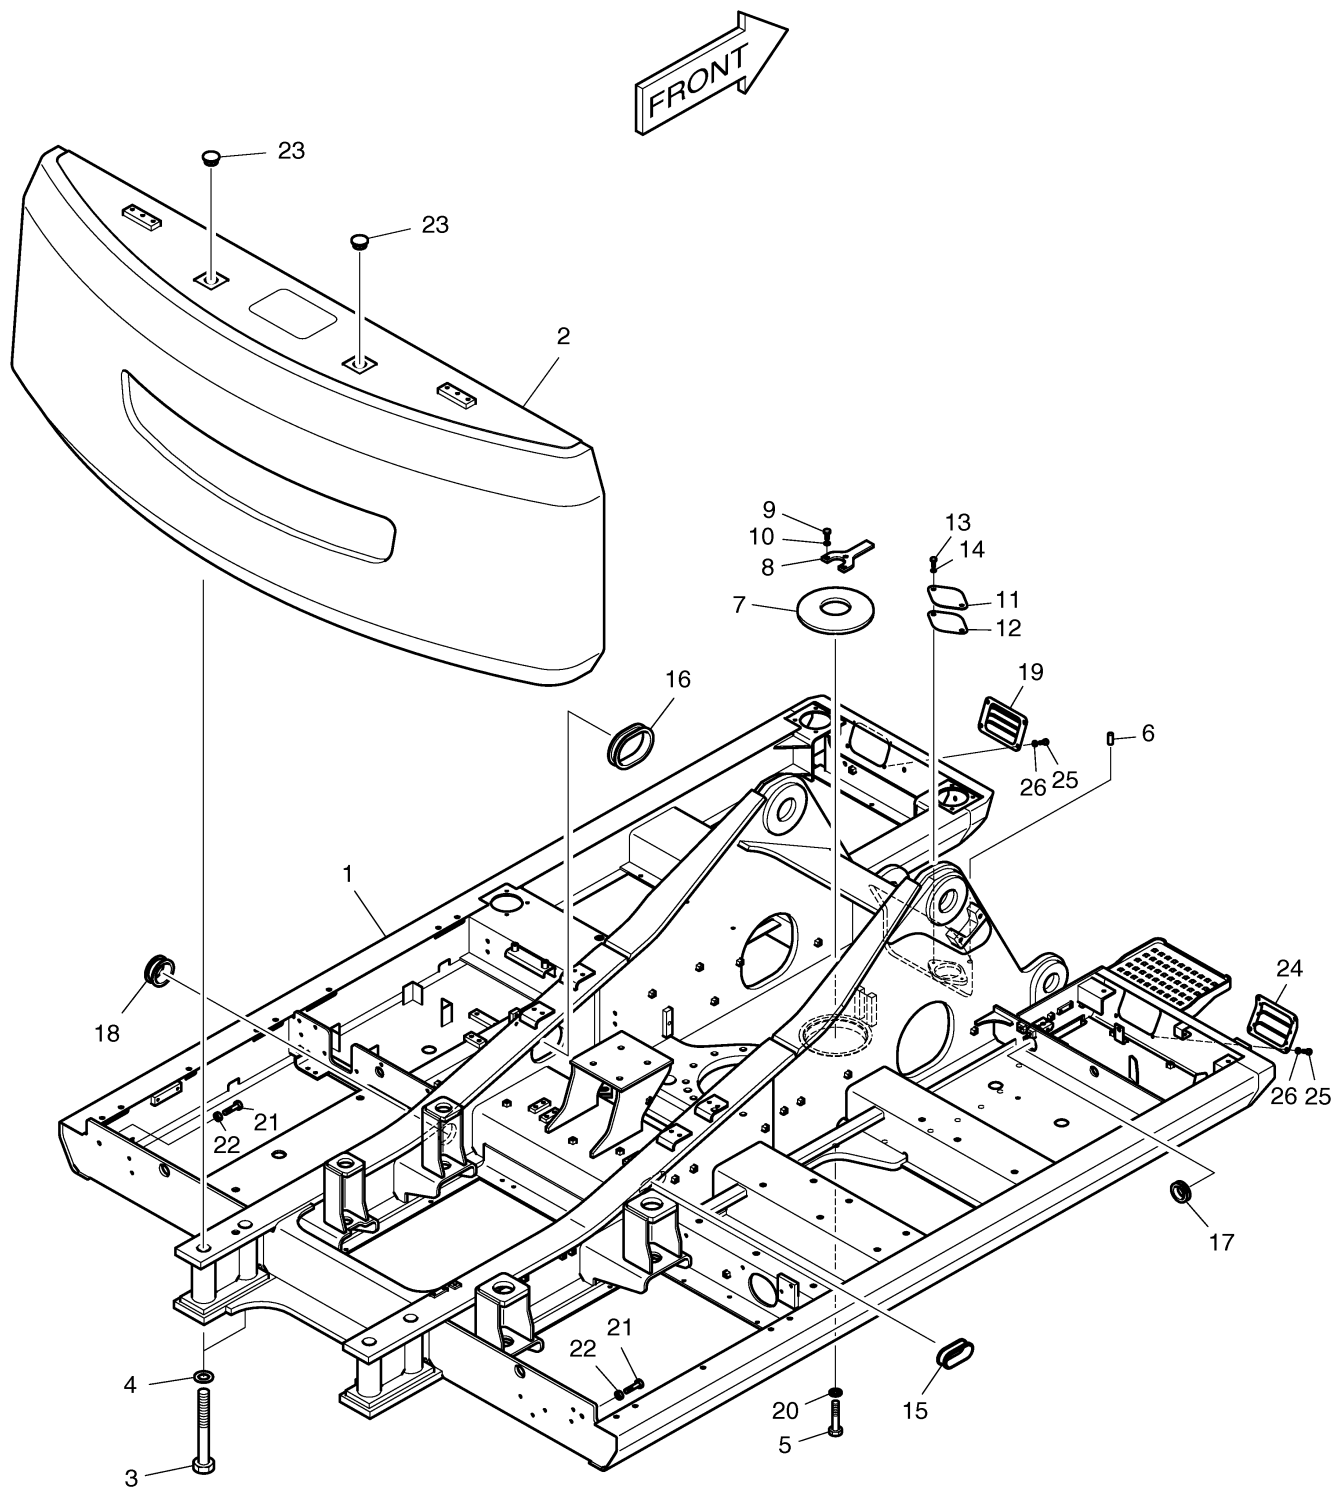


Fig. 1100 MAIN FRAME

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
-	600-00068E	MAIN FRAME ASS'Y	-	D	1001~4940			
-	160609-00017	FRAME ASSY;MAIN	-	D	4941~			
1	603-00121A	FRAME:MAIN	1		1001~3784	I	603-00121B	1
1	603-00121B	FRAME:MAIN	1		3785~4076	I	603-00121C	1
1	603-00121C	FRAME:MAIN	1		4077~4166	I	603-00121E	1
1	603-00121E	FRAME:MAIN	1		4167~4529	I	603-00121G	1
1	603-00121G	FRAME:MAIN	1		4530~			
2	624-00032H	WEIGHT:COUNTER	1		1001~4940	Y	160702-00041	1
2	160702-00041	WEIGHT,COUNTER;4.9TON	1		4941~			
3	2120-4010	BOLT	4		1001~2309	I	2120-4010A	4
3	2120-4010A	BOLT	4		2310~			
4	114-00055	WASHER:HARDEN	4					
5	S0775861	BOLT M24X2.0X125	35		1001~2309	I	S0775866	35
5	S0775866	BOLT	35		2310~			
6	2123-1107D4	PIN;KNOCK	2					
7	2160-9010	COVER:RUBBER	1					
8	2195-2786A	BRACKET	1					
9	S0515253	BOLT M12X1.75X30	3					
10	S5102703	WASHER;SPRING M12	3					
11	2403-1002	PLATE	1					
12	2180-1017A	PACKING	1					
13	S0511853	BOLT	2					
14	S5102603	WASHER,SPRING:M10	2					
15	2160-1201D24	BUSHING;RUBBER	1					
16	2160-1201D7	BUSHING;RUBBER	1					
17	2160-1004D34	BUSHING;RUBBER	1					
18	2160-1004D42	BUSHING;RUBBER	1					
19	621-01579A	COVER:LAMP	1					
20	2114-1831A	WASHER:HARDEN	35					
21	S0521961	BOLT M16X2.0X65	2					
22	S4012933	NUT	2					
23	2160-9034	CAP	2					
24	621-01527A	COVER:LAMP	1					
25	S0508853	BOLT	8					
26	S5010513	WASHER,PLAIN:M8	8					

Fig. 1110 ENGINE MOUNTING

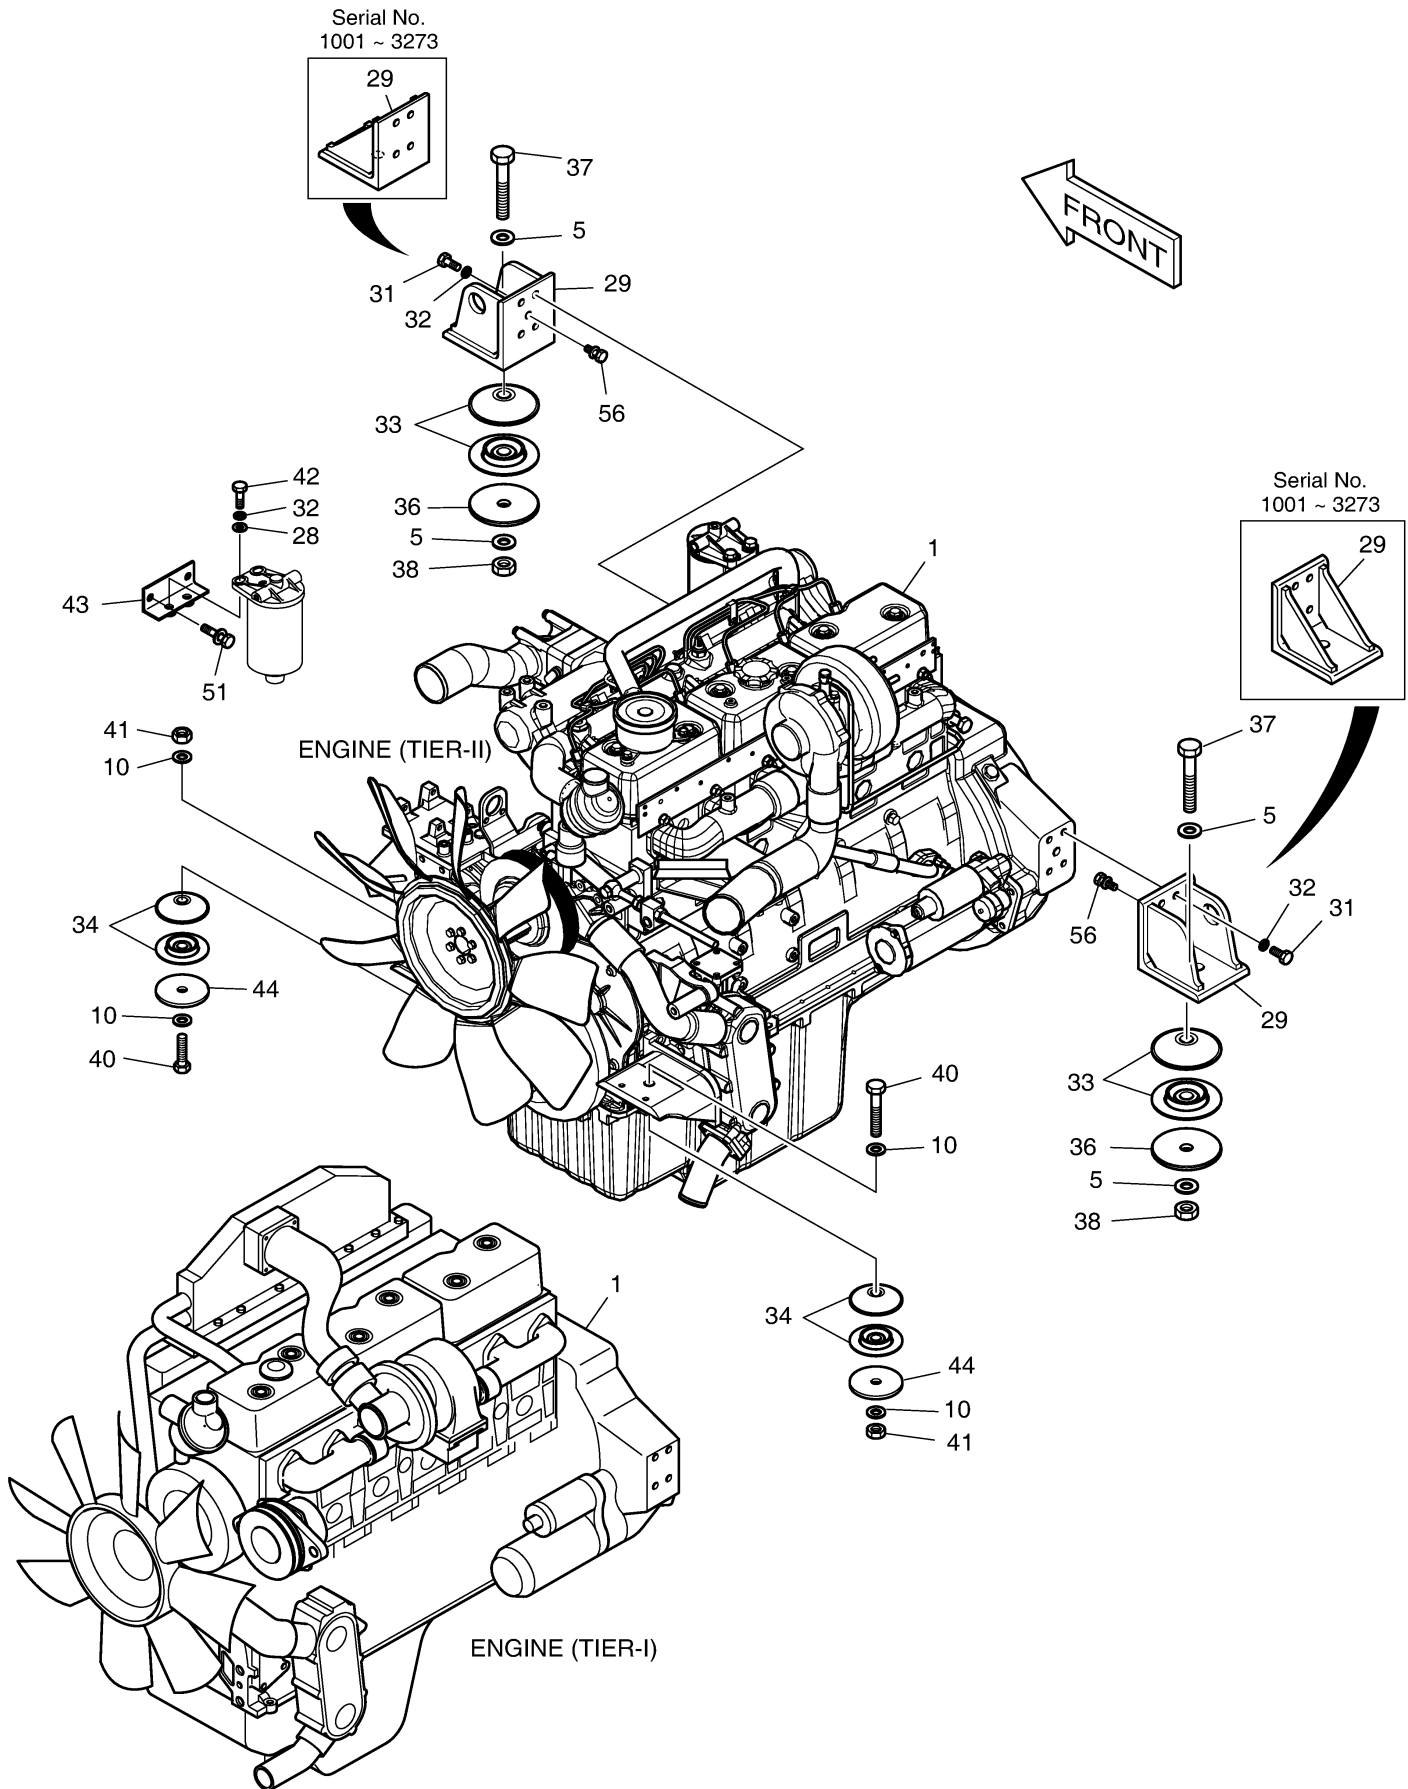


Fig. 1110 ENGINE MOUNTING

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	201-00080B	ENGINE ASS'Y	–	D				
1	201-00079	ENGINE ASS'Y(TIER-II)	1					
1	201-00149	ENGINE ASS'Y(TIER-I)	1					
5	2114-9012A	WASHER	4					
10	2114-1816A	WASHER	4					
28	S5010713	WASHER;PLAIN M12	2					
29	195-01415A	BRACKET	2		1001~3273	I	K1008719	2
29	K1008719	BRACKET	2		3274~3877	I	K1008719A	2
29	K1008719A	BRACKET	2		3878~			
31	S0515253	BOLT M12X1.75X30	8					
32	S5102703	WASHER;SPRING M12	10					
33	161-00299	MOUNT;E/G	4		1001~3768	I	161-00553	4
33	161-00553	RUBBER;E/G MOUNTING	4		3769~			
34	161-00298	RUBBER;E/G MOUNTING	4					
36	2114-1929	WASHER	2					
37	S0771461	BOLT M20X1.5X130	2		1001~1091			
37	S0771466	BOLT	2		1092~			
38	121-00066	NUT;LOCK	2					
40	S0766261	BOLT M16X1.5X100	2		1001~1091			
40	S0766266	BOLT M16X1.5X100	2		1092~			
41	121-00035	NUT;LOCK M16X1.5	2					
42	S0560553	BOLT M12X1.75X40	2					
43	195-01494	BRACKET;FUEL FILTER	1					
44	114-00417	WASHER;BUMP	2					
51	2120-2196D10	BOLT;SET M12X1.75X25	2					
56	2123-1066A	PIN	2		3878~			

Fig. 1120 RADIATOR

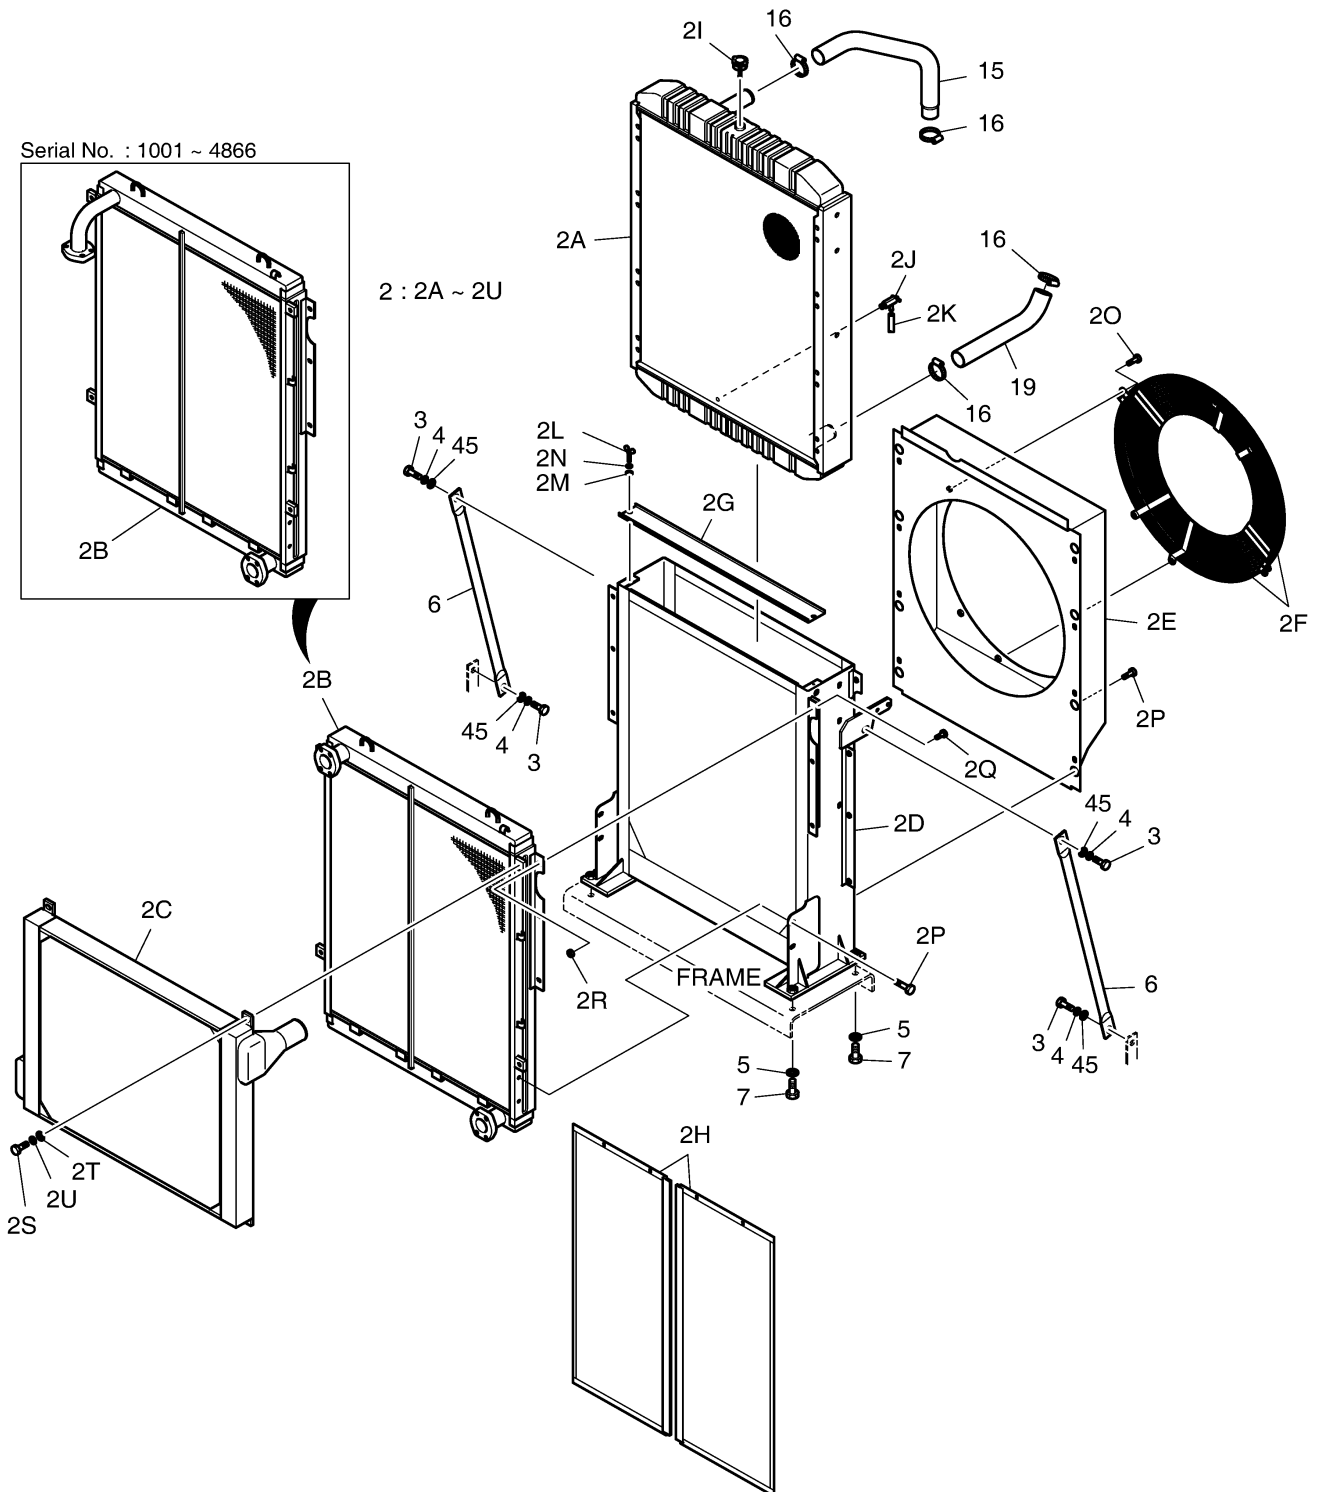


Fig. 1120 RADIATOR

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
-	201-00080	ENGINE ASS'Y	-	D	1001~4838			
-	150109-00073	ENGINE ASSY	-	D	4839~			
2	202-00071B	RADIATOR	1		1001~1009	I	202-00071C	1
2	202-00071C	RADIATOR	1		1010~3143	I	202-00071E	1
2	202-00071E	RADIATOR	1		3144~4866			
2	440211-00012	RADIATOR ASS'Y	1		4867~			
2A	13F11000	RADIATOR ASS'Y	1					
2B	13F12000	OIL COOLER ASS'Y	1		1001~3143	I	13F12000A	1
2B	13F12000A	OIL COOLER ASS'Y	1		3144~4866			
2B	400206-00097	COOLER,OIL	1		4867~			
2C	13F13000	C/H AIR COOLER ASS'Y	1					
2D	13F14000	FRAME ASS'Y	1					
2E	13F15000	SHROUD ASS'Y	1					
2F	13F16000	FAN GUARD ASS'Y	2					
2G	13F17000	PLATE	1					
2H	13F18000	WIRE NET ASS'Y	2					
2I	P06A	CAP ASS'Y	1					
2J	P04	DRAIN COCK ASS'Y	1					
2K	P03	HOSE;DRAIN	1					
2L	P1106	BOLT;WING M6X1.0X15	6					
2M	P1306	WASHER;PLAIN	6					
2N	P1406	WASHER;SPRING	6					
2O	P1108	BOLT M8X1.25X20	8					
2P	P1110A	BOLT M10X1.25X20	26					
2Q	P1110B	BOLT M10X1.25X25	6					
2R	P1112	NUT;FLANGE	6					
2S	P1110	BOLT M10X1.25X25	4					
2T	P1210	WASHER;SPRING	4					
2U	P1210	WASHER;SPRING	4					
3	S0521461	BOLT M16X2.0X40	4		1001~1091			
3	S0521466	BOLT M16X2.0X40	4		1092~			
4	S5102903	WASHER,SPRING	4					
5	2114-9012A	WASHER	4					
6	145-00056A	STAY	2					
7	S0569861	BOLT M20X2.5X50	4		1001~1091			
7	S0569866	BOLT M20X2.5X50	4		1092~			

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
15	185-00244	HOSE;WATER	1					
16	S8470065	CLAMP;HOSE	4					
19	185-00243	HOSE;WATER	1					
45	S5010913	WASHER,PLAIN;M16	4					

Fig. 1130 RESERVE TANK

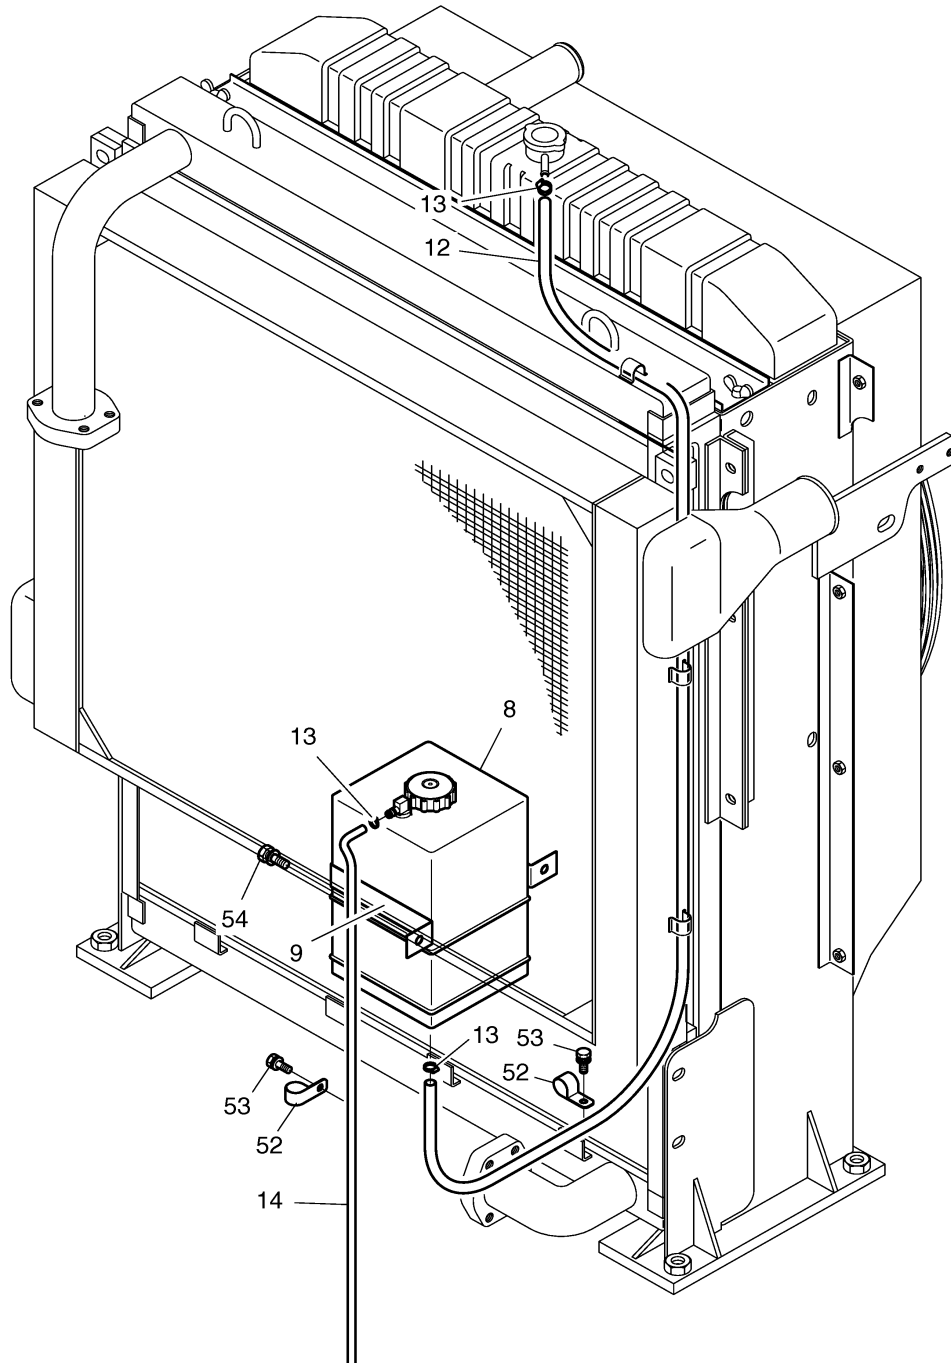


Fig. 1130 RESERVE TANK

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	201–00080	ENGINE ASS'Y	–	D				
8	2470–9017	TANK;RESERVE	1		1001~3407	I	K1003354	1
8	K1003354	TANK;RESERVE	1		3408~3544	I	K1003354A	1
8	K1003354A	TANK;RESERVE	1		3545~			
9	2124–1690	CLAMP	1					
12	185–00298	HOSE	1					
13	S8450006	CLAMP;HOSE	3					
14	185–00320	HOSE	1					
52	124–00208D2	CLIP	2					
53	120–00276	BOLT M8X1.25X12	2					
54	2120–2196D1	BOLT;SET M10X1.5X20	2					

Fig. 1140 MUFFLER

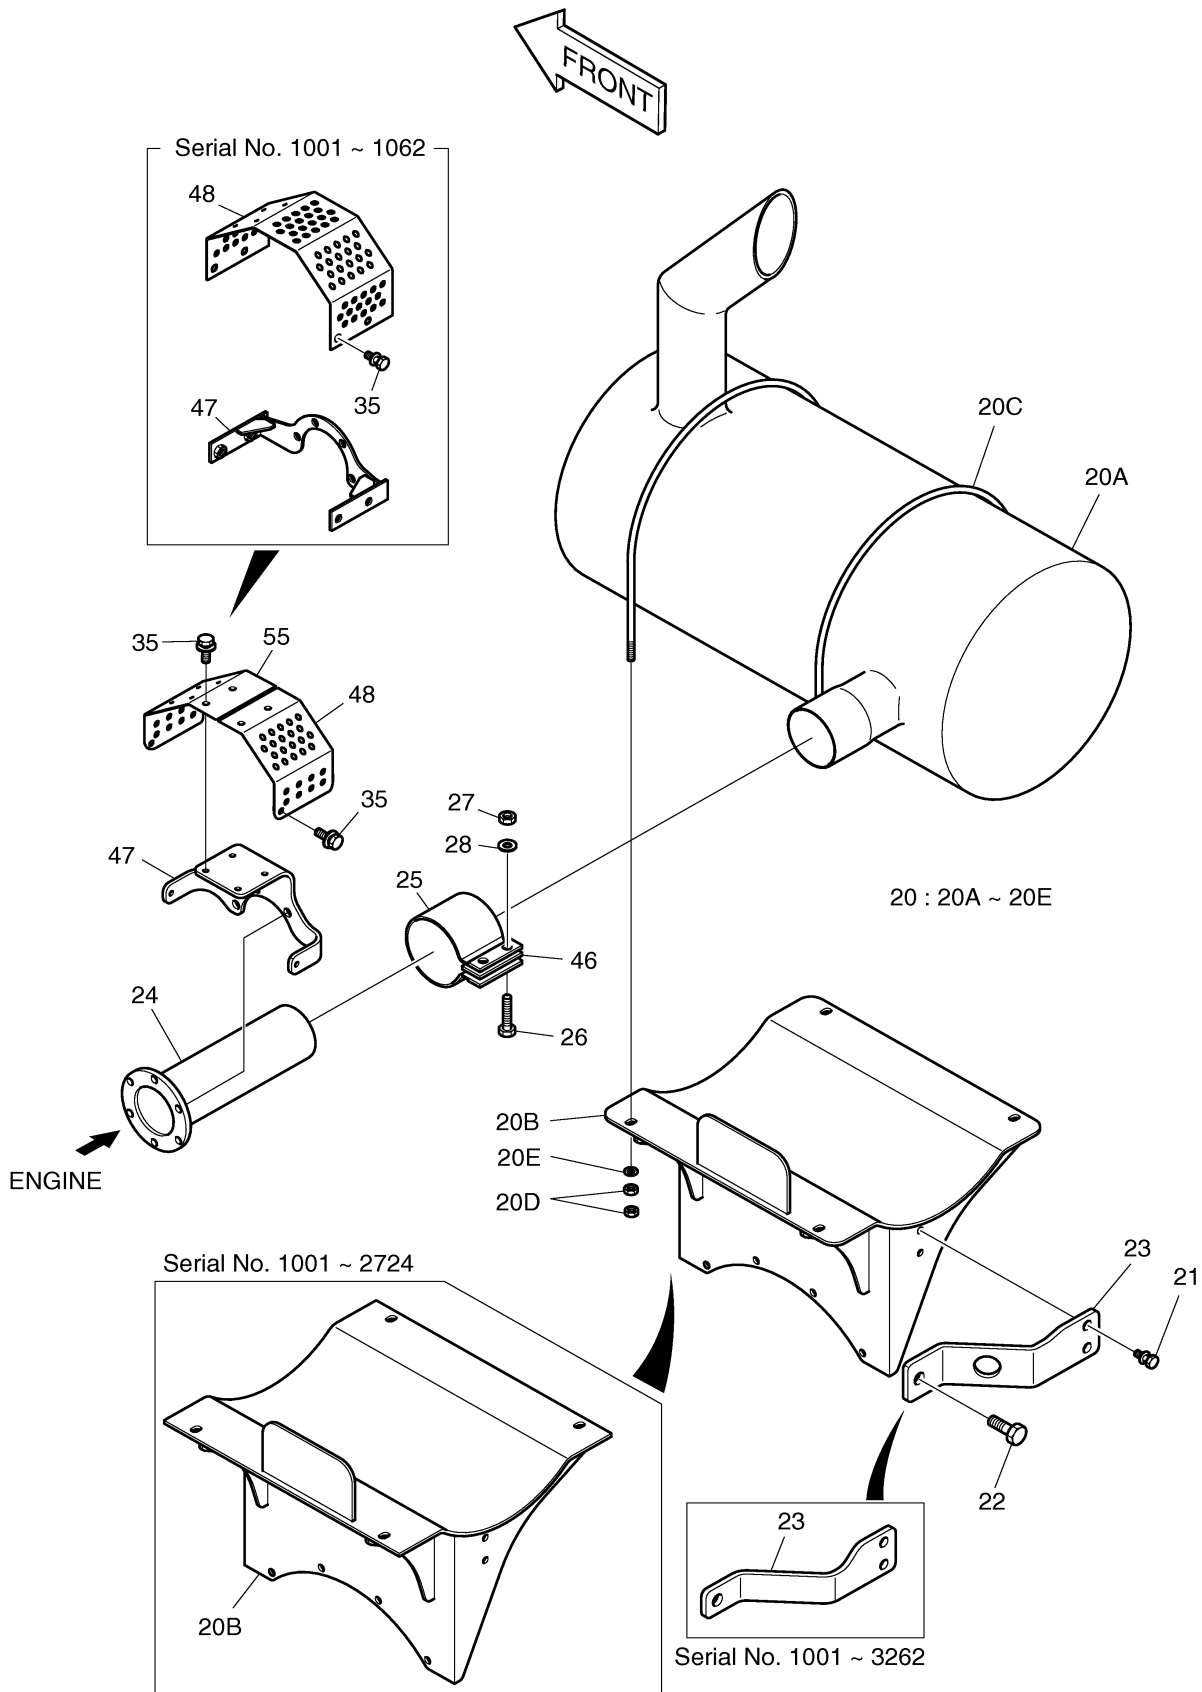


Fig. 1140 MUFFLER

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	201-00080	ENGINE ASS'Y	–	D				
20	203-00049C	MUFFLER;SUB ASS'Y	1		1001~1818	I	203-00049E	1
20	203-00049E	MUFFLER;SUB ASS'Y	1		1819~2724	I	203-00049G	1
20	203-00049G	MUFFLER;SUB ASS'Y	1		2725~			
20A	203-00048A	MUFFLER	1					
20B	195-01339C	BRACKET;MUFFLER	1		1001~2724	I	195-01339E	1
20B	195-01339E	BRACKET;MUFFLER	1		2725~			
20C	120-00251	BOLT;U	2		1001~1818	I	120-00251A	2
20C	120-00251A	BOLT;U	2		1819~			
20D	S4012633	NUT	8					
20E	S5010613	WASHER,PLAIN;M10	4					
21	2120-2196D11	BOLT;SET M12X1.75X35	2					
22	S0565661	BOLT M16X2.0X70	1		1001~1091			
22	S0565666	BOLT M16X2.0X70	1		1092~			
23	195-01744	BRACKET	1		1001~3262	I	K1008720	1
23	K1008720	BRACKET	1		3263~			
24	2182-1576A	PIPE;EXHAUST	1		1001~3544	I	2182-1576B	1
24	2182-1576B	PIPE;EXHAUST	1		3545~			
25	2124-1591A	CLAMP	1					
26	S0515553	BOLT M12X1.75X45	2					
27	S4012733	NUT	2					
28	S5010713	WASHER;PLAIN M12	2					
35	2120-2196D2	BOLT;SET M10X1.5X25	4		1001~1062			
35	120-00276	BOLT M8X1.25X12	6		1063~			
46	2114-1925	SPACER	1		1001~1818			
47	195-01431A	BRACKET	1		1001~1062			
47	195-02183A	BRACKET	1		1063~			
48	627-00046	COVER	1		1001~1062			
48	621-02363	COVER	1		1063~			
55	621-02364	COVER	1		1063~			

Fig. 1150 CAC PIPING


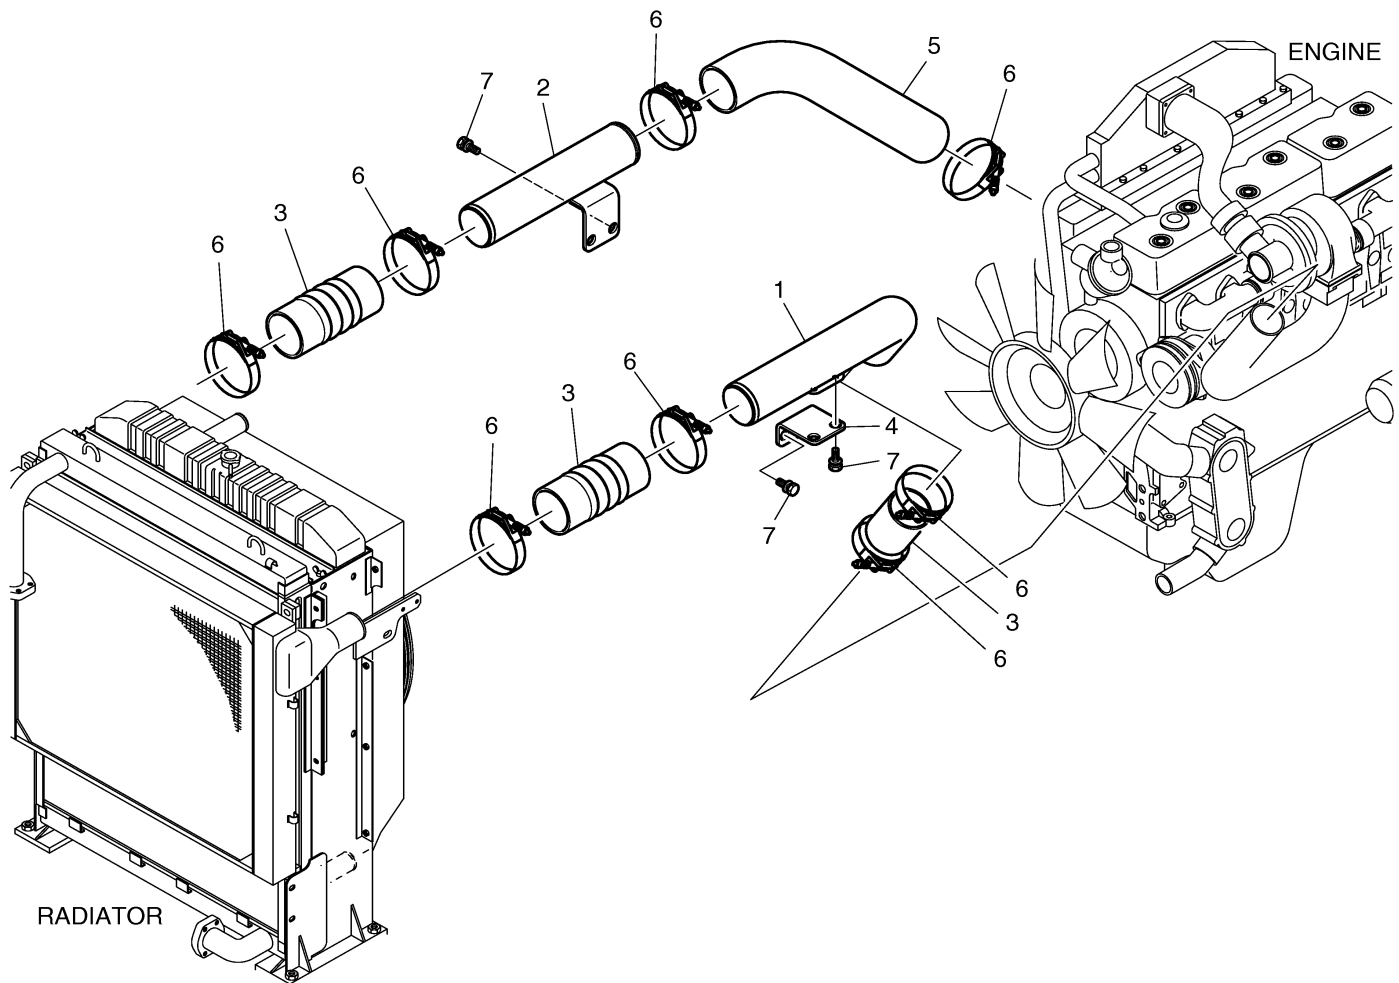


Fig. 1150 CAC PIPING

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	400–00672A	CAC PIPING ASSY	–	D				
1	193–00673A	PIPE;AIR	1					
2	140–00808E	PIPE;CAC	1					
3	185–00245A	HOSE;CAC	3					
4	195–01760	BRACKET	1					
5	185–00248A	HOSE;CAC	1					
6	124–00194	CLAMP	8					
7	2120–2196D2	BOLT;SET M10X1.5X25	6					

Fig. 1160 AIR CLEANER ASS'Y

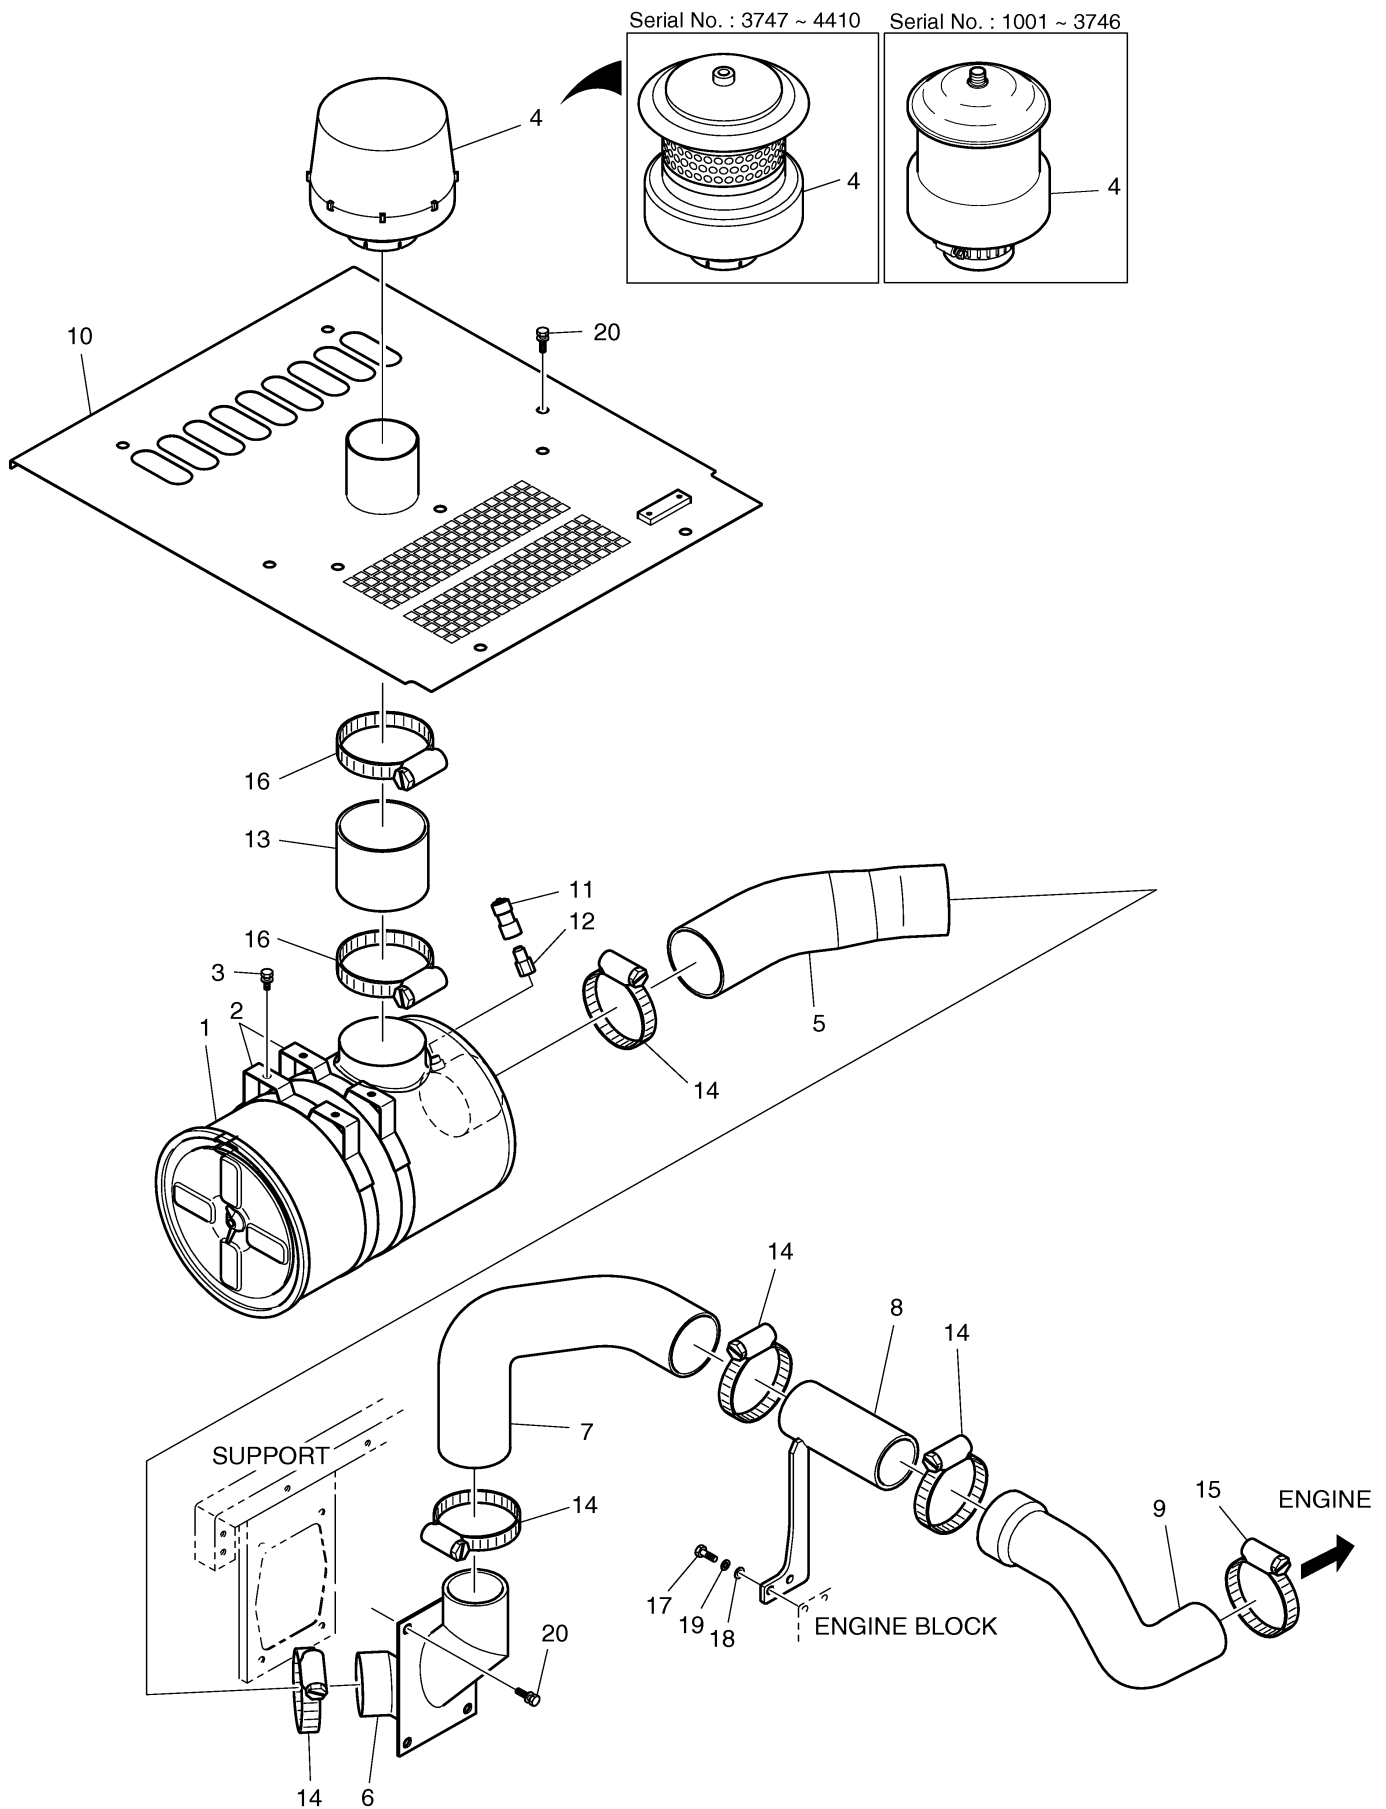

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com