



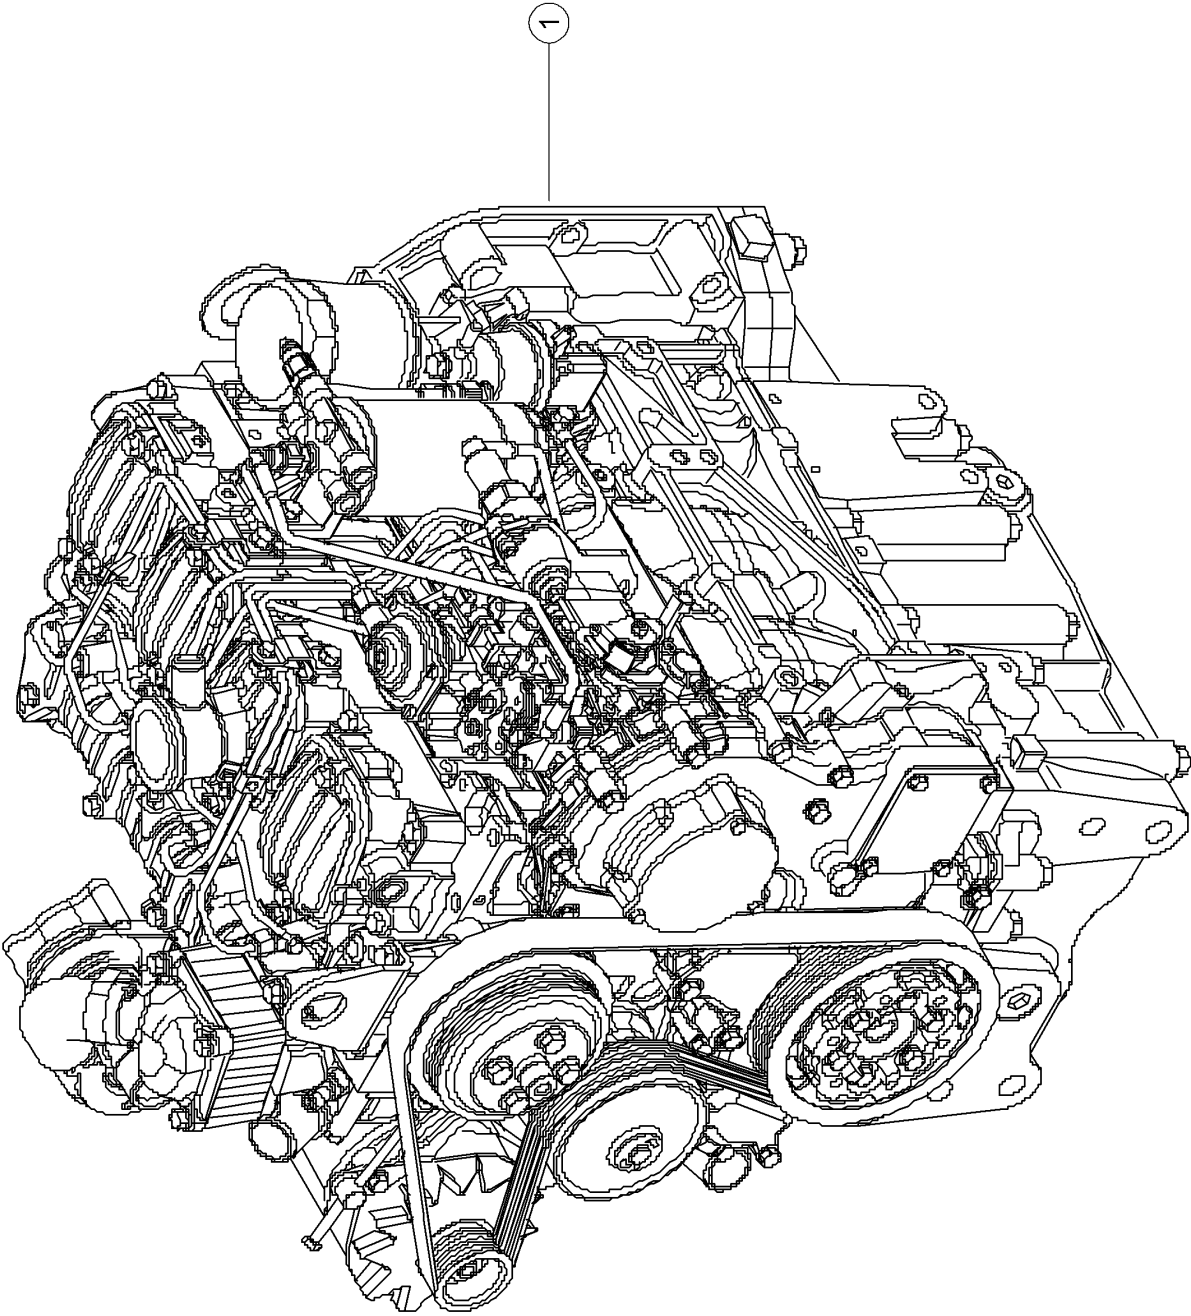

010 COMPLETE ENGINE


Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1144 976 0	ENGINE		1	1)
1	00 1144 977 0	ENGINE		1	2)
1)	Type/Subtype	A29/210	+ NEXOS 220 FB 4WD F5C 80 Ch		
2)	Type/Subtype	A29/310	+ NEXOS 230 FB 4WD F5C 90 Ch		

1

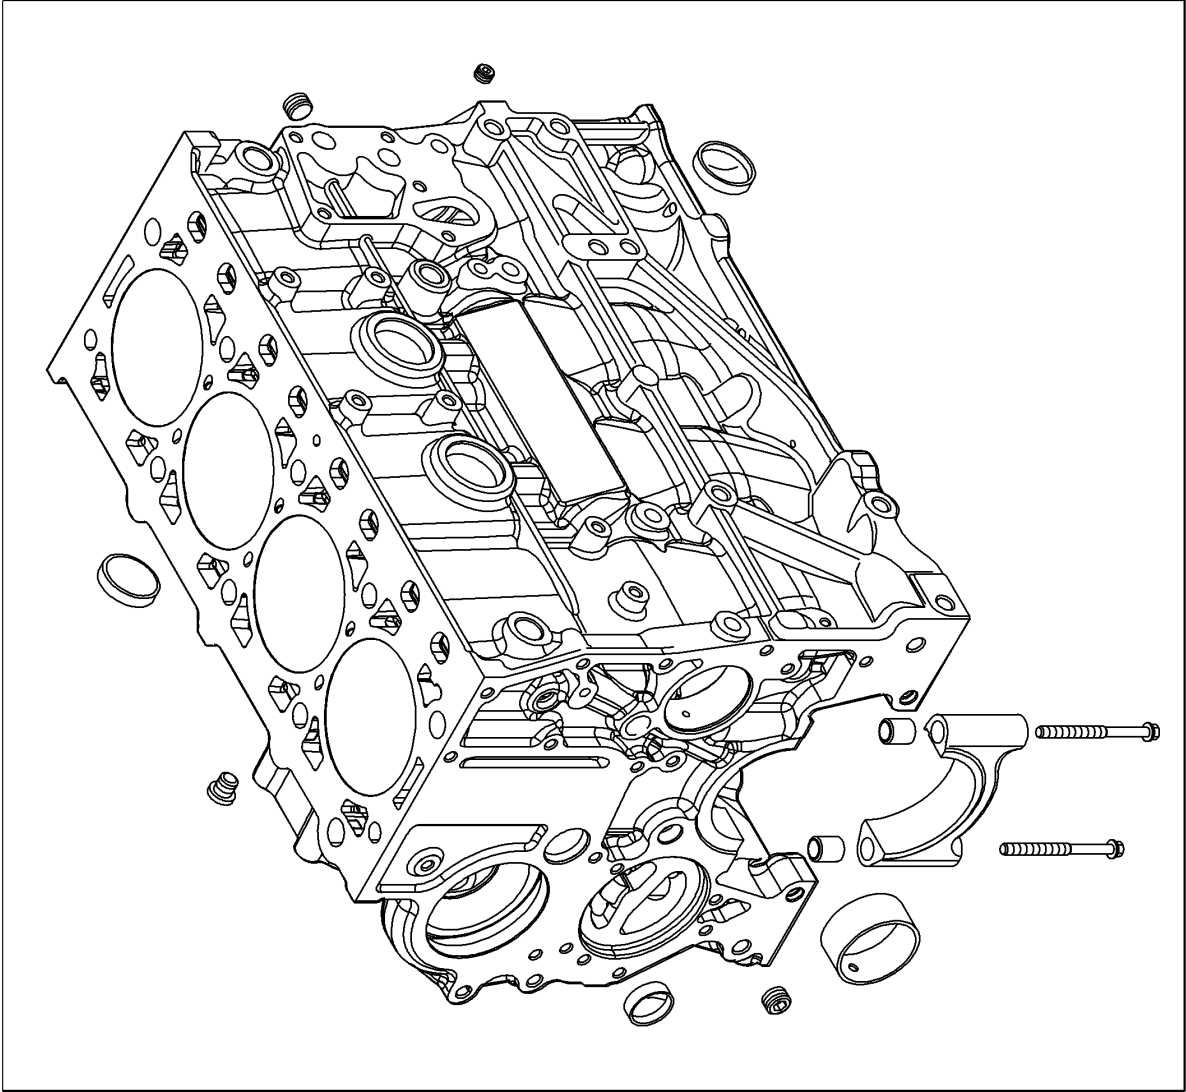


100 CRANKCASE

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 388 0	HOUSING		1	

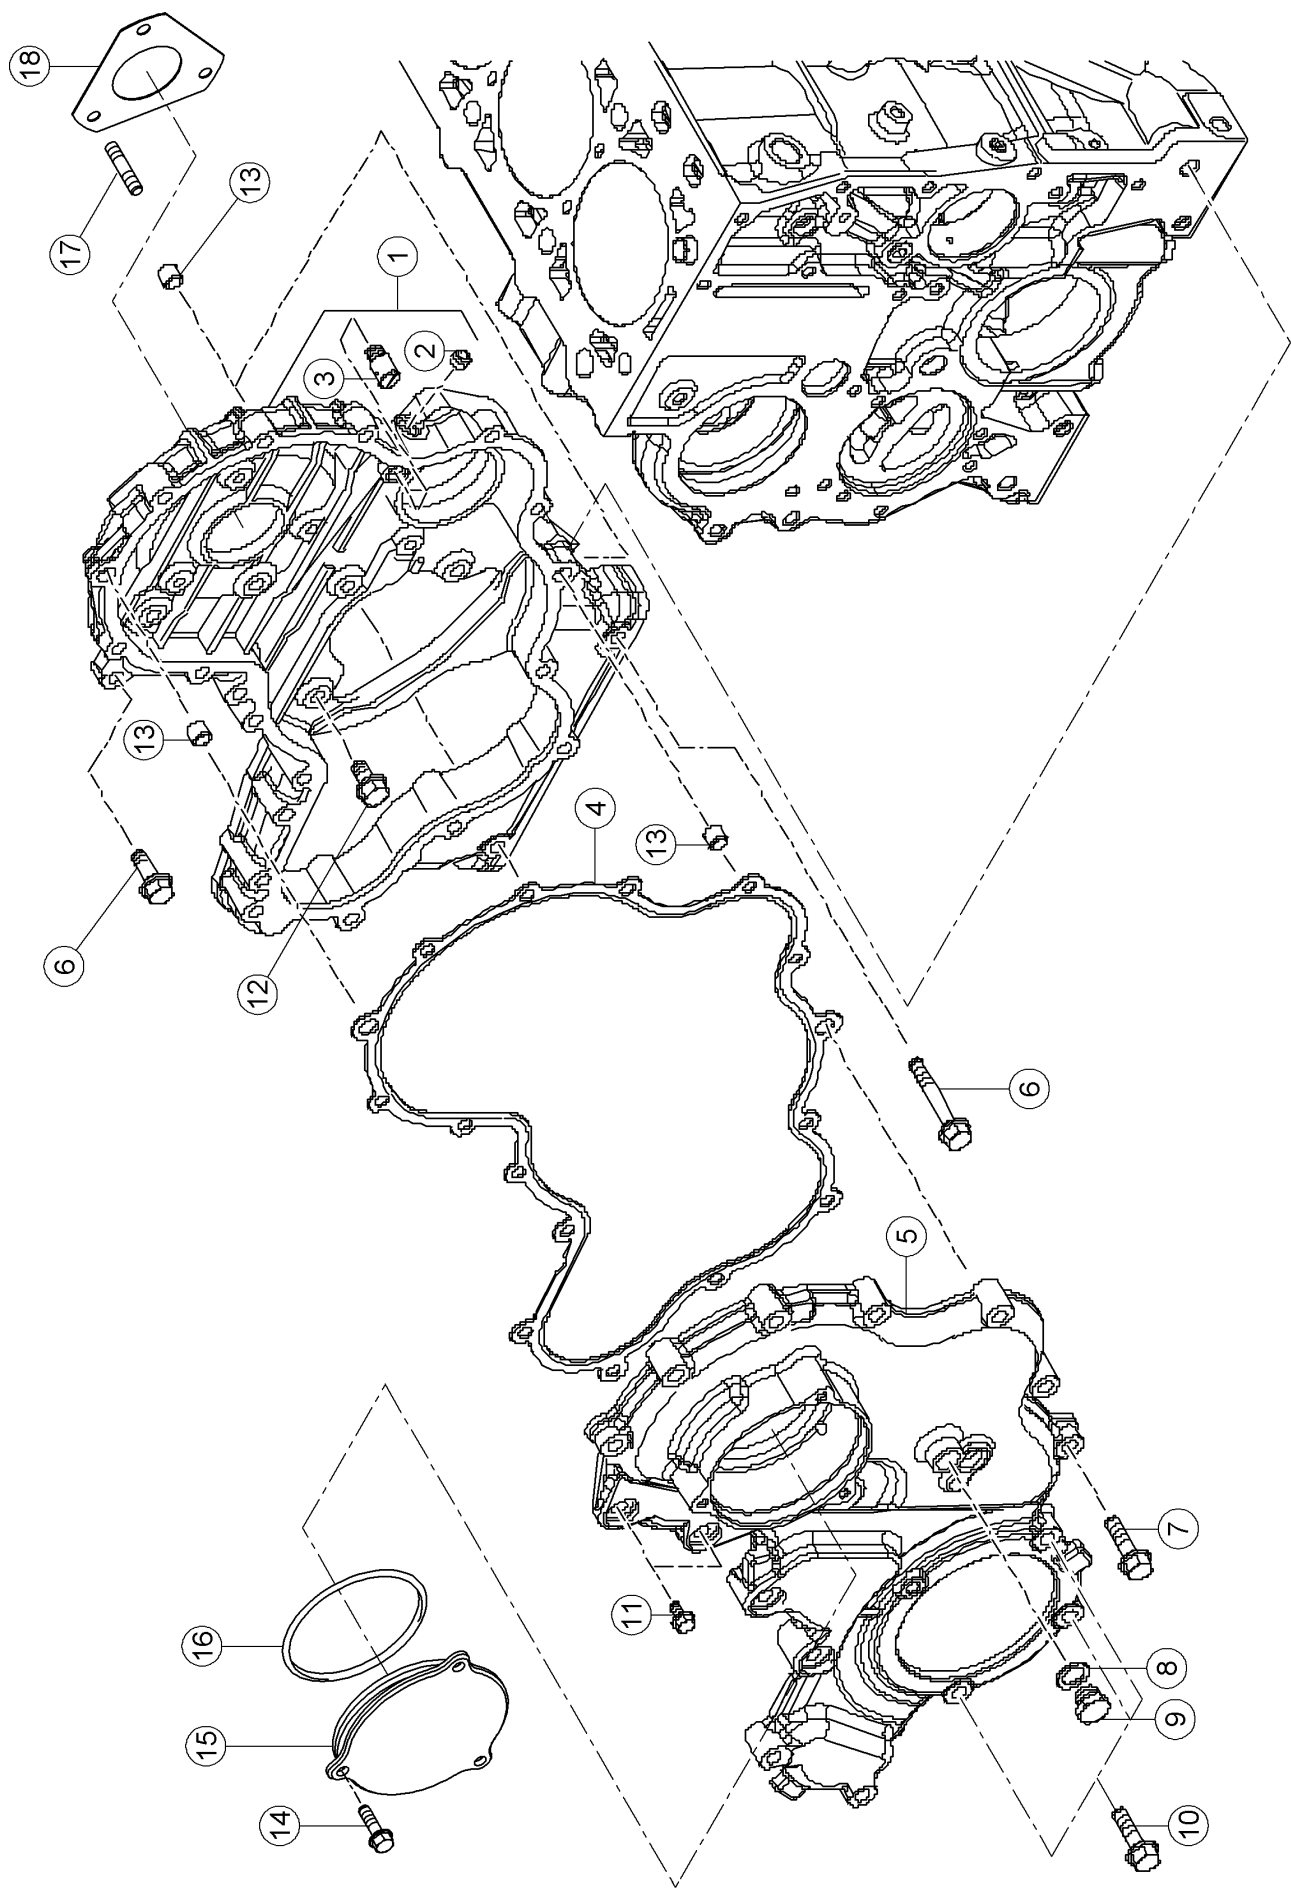


120 TIMING CASE

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 395 0	HOUSING		1	
2	00 1139 396 0	PLUG		1	
3	00 1139 397 0	NOZZLE		1	
4	00 1139 398 0	FLAT SEAL		1	
5	00 1139 399 0	COVER		1	1)
5	00 1161 197 0	COVER		1	2)
6	00 1139 400 0	SCREW	HM08X50	6	
7	00 1139 401 0	SCREW	M08X35	13	
8	00 1139 407 0	SEALING RING		1	
9	00 1139 408 0	SCREW PLUG		1	
10	00 1139 409 0	SCREW		4	
11	60 0503 298 1	SCREW		2	
12	00 1139 410 0	SCREW	M8X23	5	
13	00 1139 413 0	BUSHING		4	
14	00 1141 740 0	SCREW		3	
15	00 1141 376 0	COVER		1	
16	00 1141 742 0	O-RING		1	
17	00 1141 380 0	STUD BOLT		3	
18	60 0503 124 2	FLAT SEAL		1	
1)	Remarks	up to 183234			
2)	Remarks	from 183235			

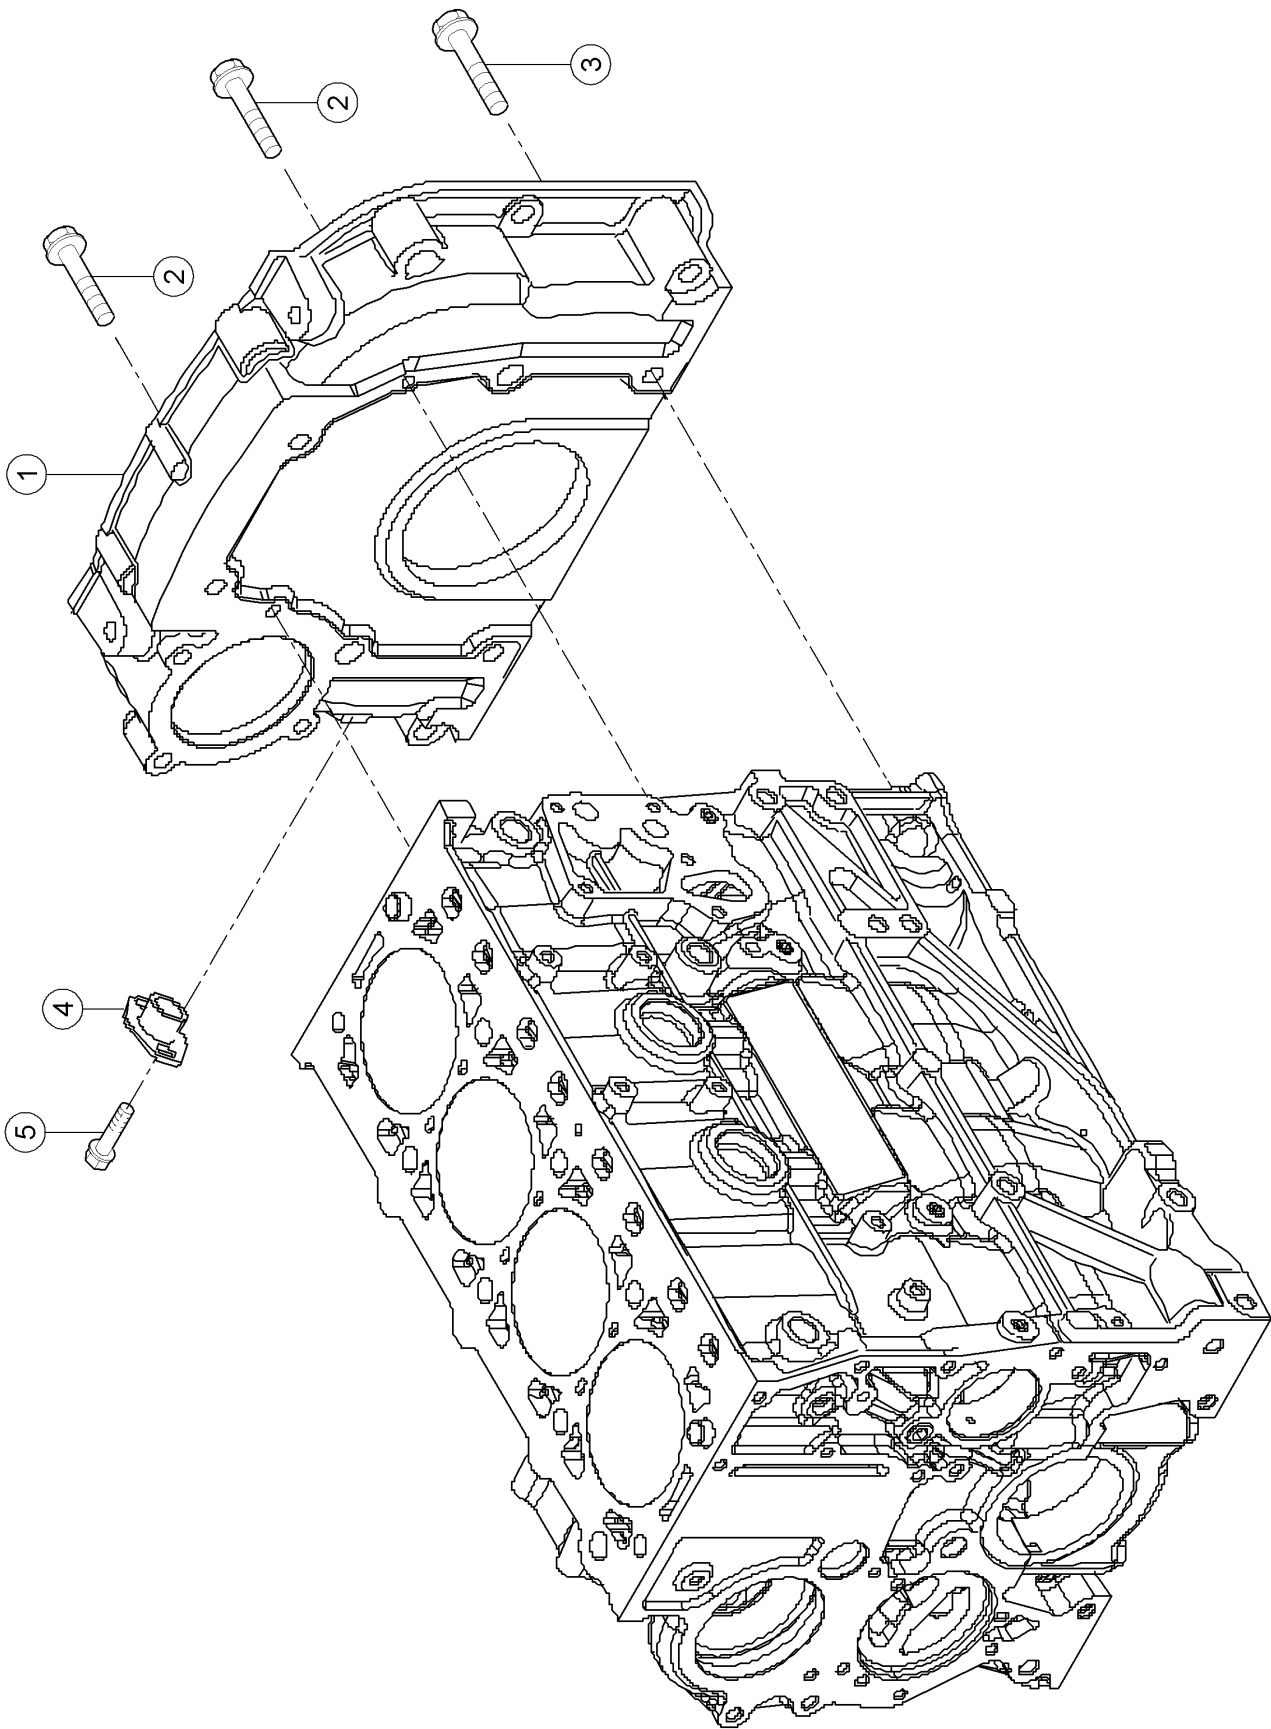


140 FLYWHEEL HOUSING

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 505 0	HOUSING		1	
2	00 1139 409 0	SCREW		6	
3	00 1139 526 0	SCREW		6	
4	00 1139 511 0	PLUG		1	
5	60 0503 298 1	SCREW		2	

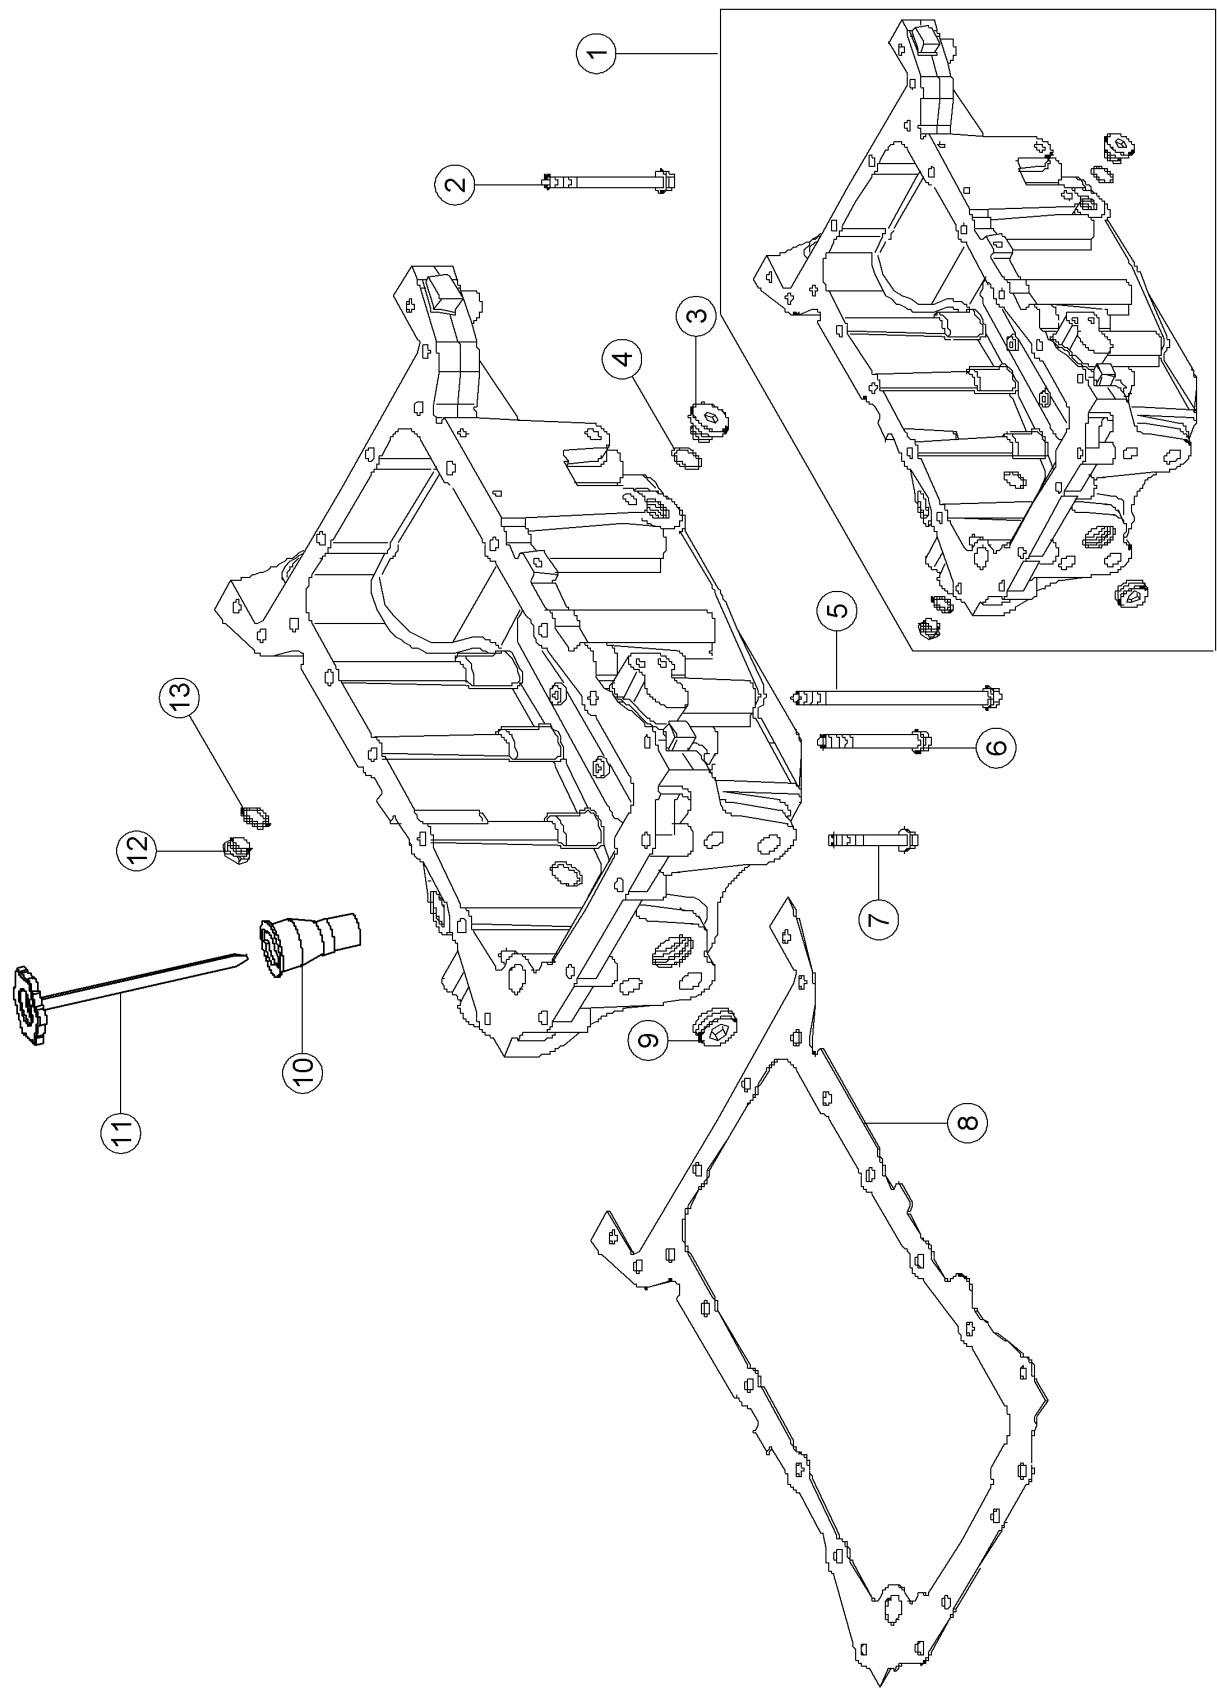


160 OIL PAN

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 524 0	HOUSING		1	
2	00 1139 550 0	SCREW		2	
3	60 0503 101 0	SCREW PLUG		2	
4	60 0503 101 1	O-RING		2	
5	00 1139 527 0	SCREW		8	
6	00 1139 551 0	SCREW		4	
7	00 1139 562 0	SCREW		8	
8	00 1139 564 0	FLAT GASKET		1	
9	00 1139 566 0	SCREW PLUG		1	
10	00 1139 567 0	TUBE		1	
11	00 1139 305 0	LEVEL TRANSMITTER		1	
12	00 1138 789 0	SCREW PLUG		1	
13	60 0503 101 3	SEALING RING		1	

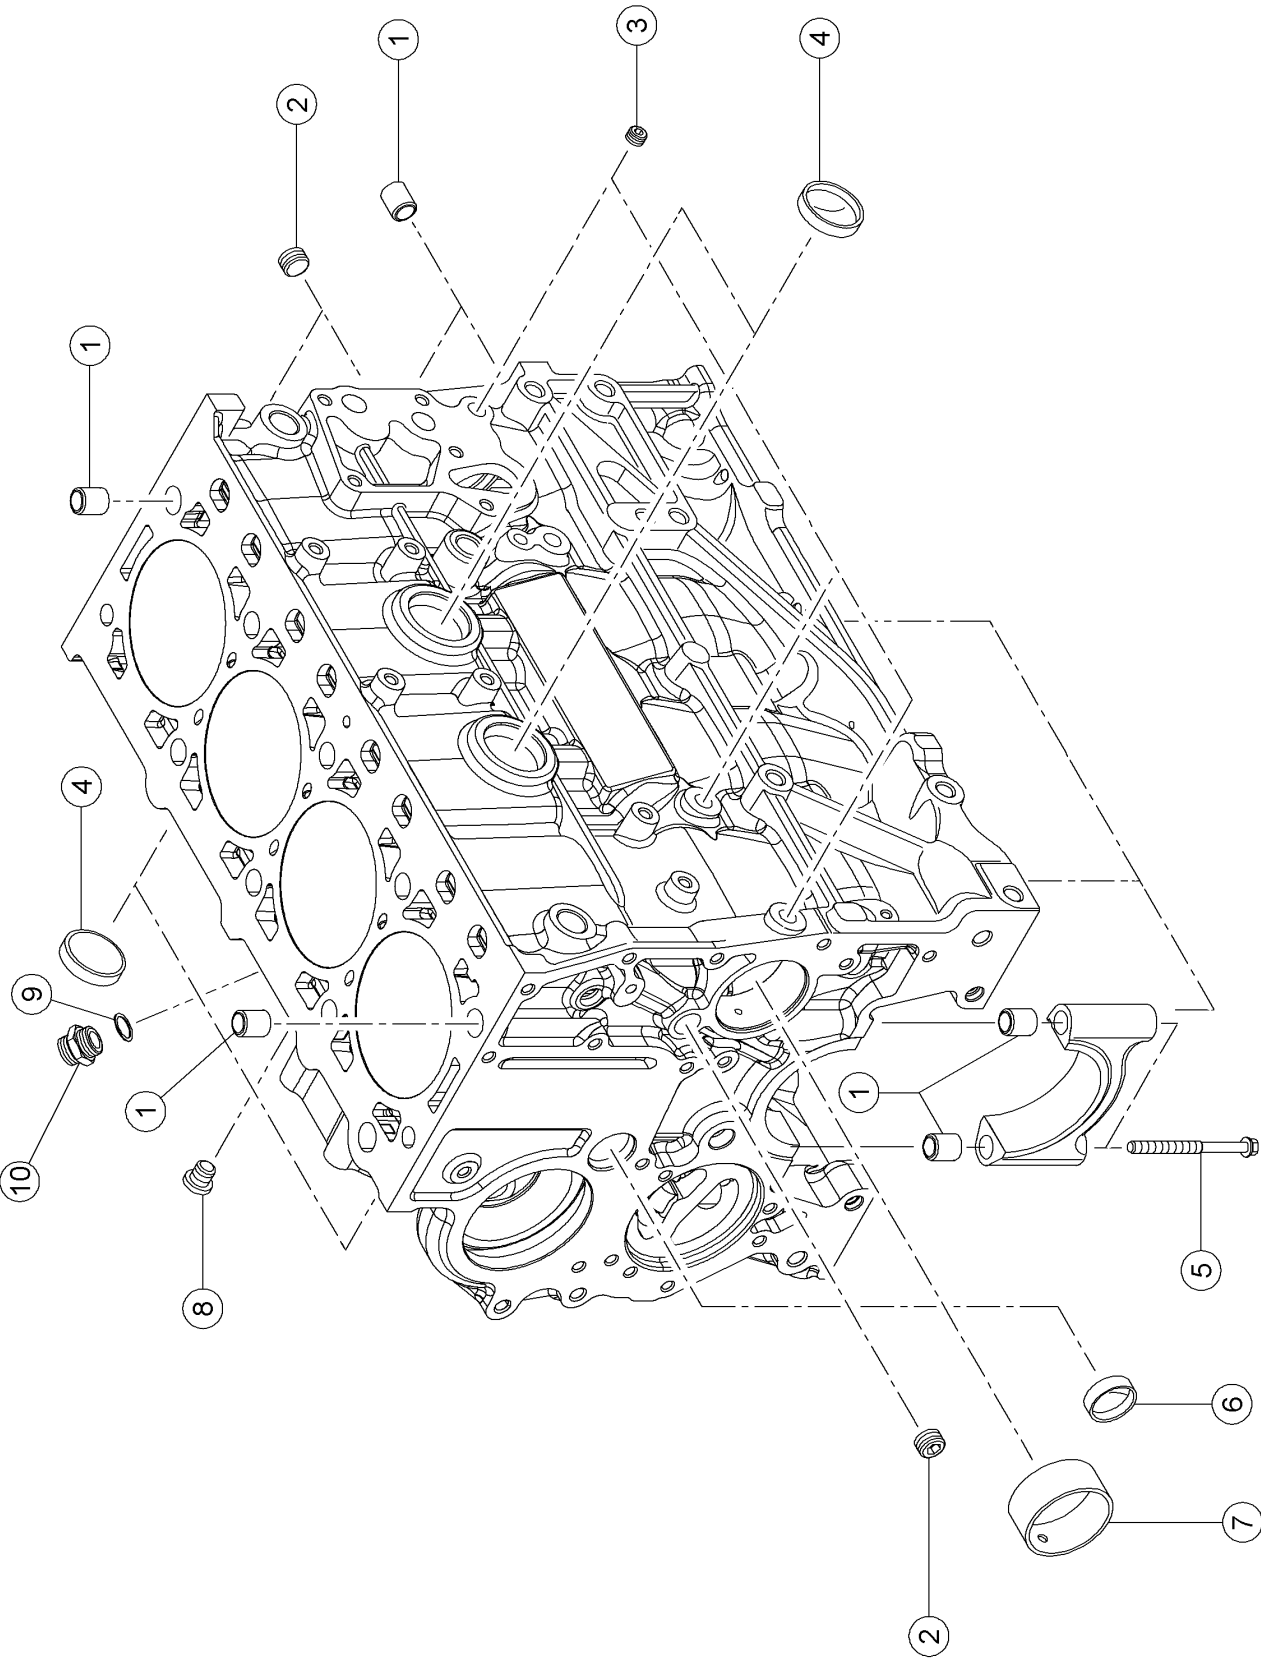


180 PLUGS

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 576 0	BUSHING		14	
2	00 1139 577 0	PLUG		3	
3	00 1139 396 0	PLUG		4	
4	60 0502 536 5	PLUG		6	
5	60 0503 098 5	SCREW		10	
6	00 1139 579 0	PLUG		1	
7	60 0503 098 1	BUSHING		1	
8	00 1139 580 0	PLUG		1	
9	00 1139 581 0	SEALING RING		1	
10	00 1139 582 0	UNION CONNECTOR		1	

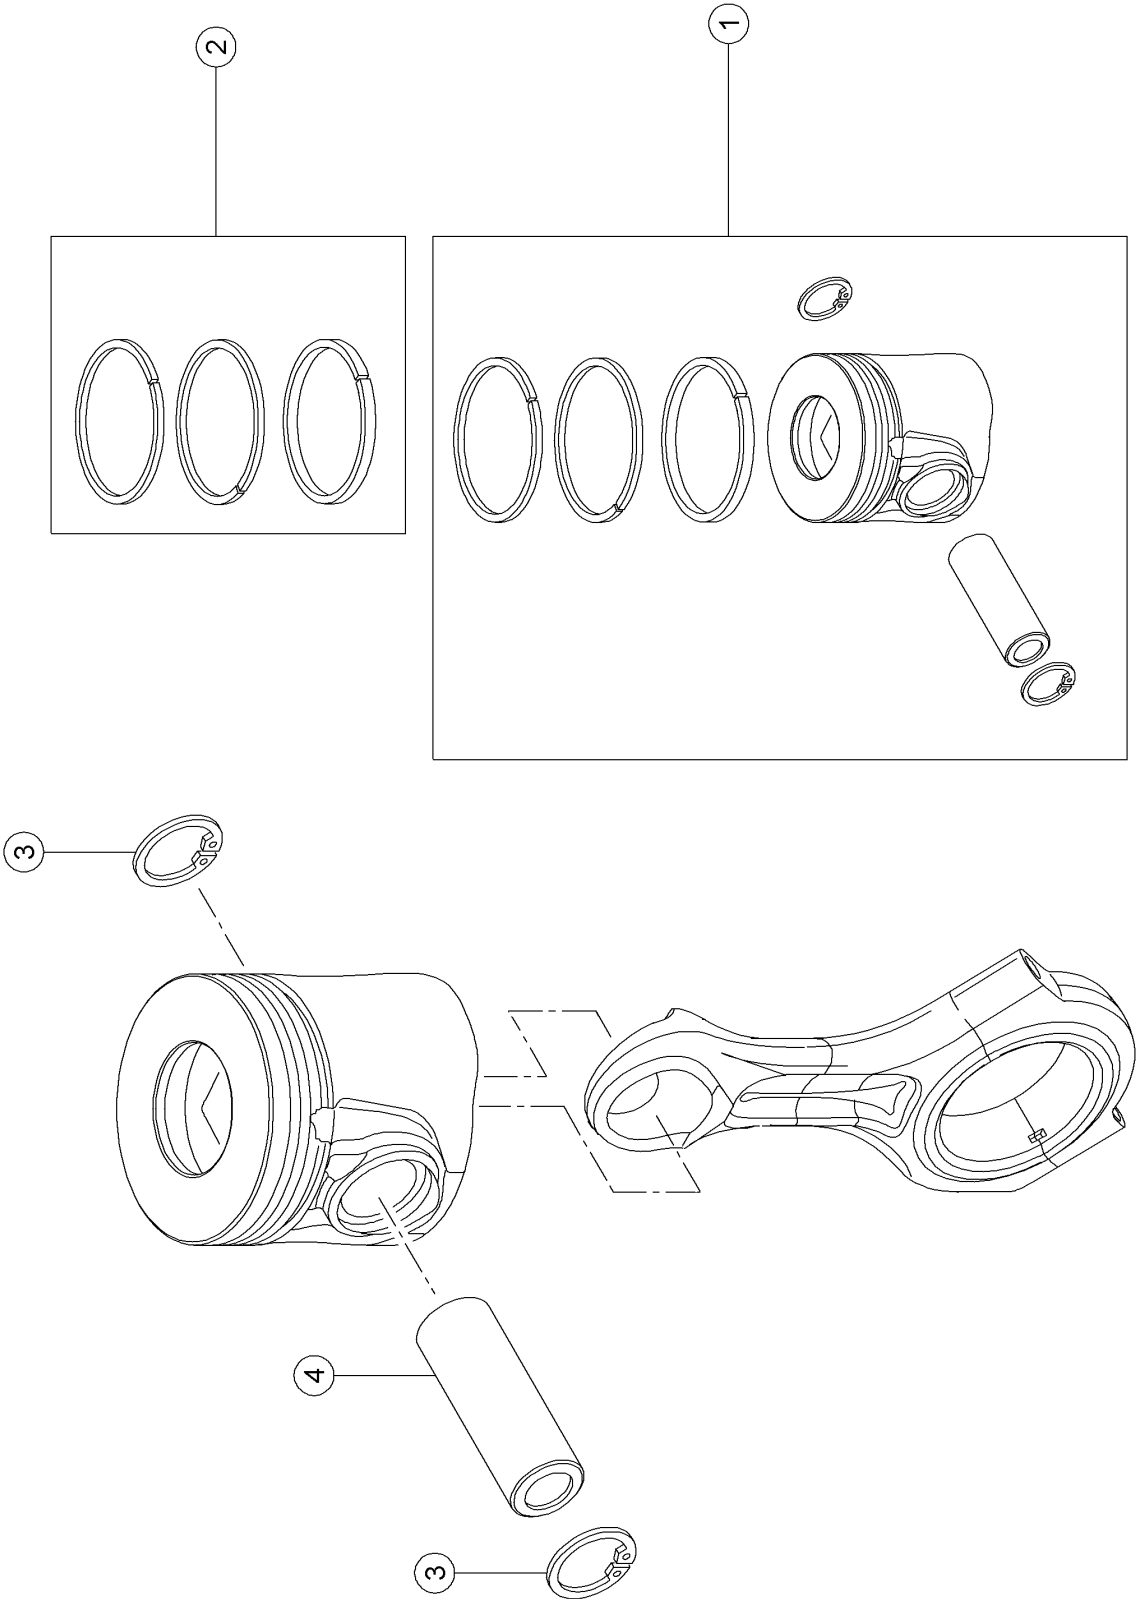


100 CYLINDER LINER, PISTON

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1150 579 0	PLUNGER	90X110X7	4	
1	00 1150 580 0	PLUNGER		4	1)
2	00 1139 306 0	SEALING RING		4	
2	00 1139 604 0	SET OF PISTON RINGS		4	1)
3	00 1139 605 0	INT RETAINING RING		8	
4	00 1139 606 0	AXLE		4	
1)	Remarks	+0,4			

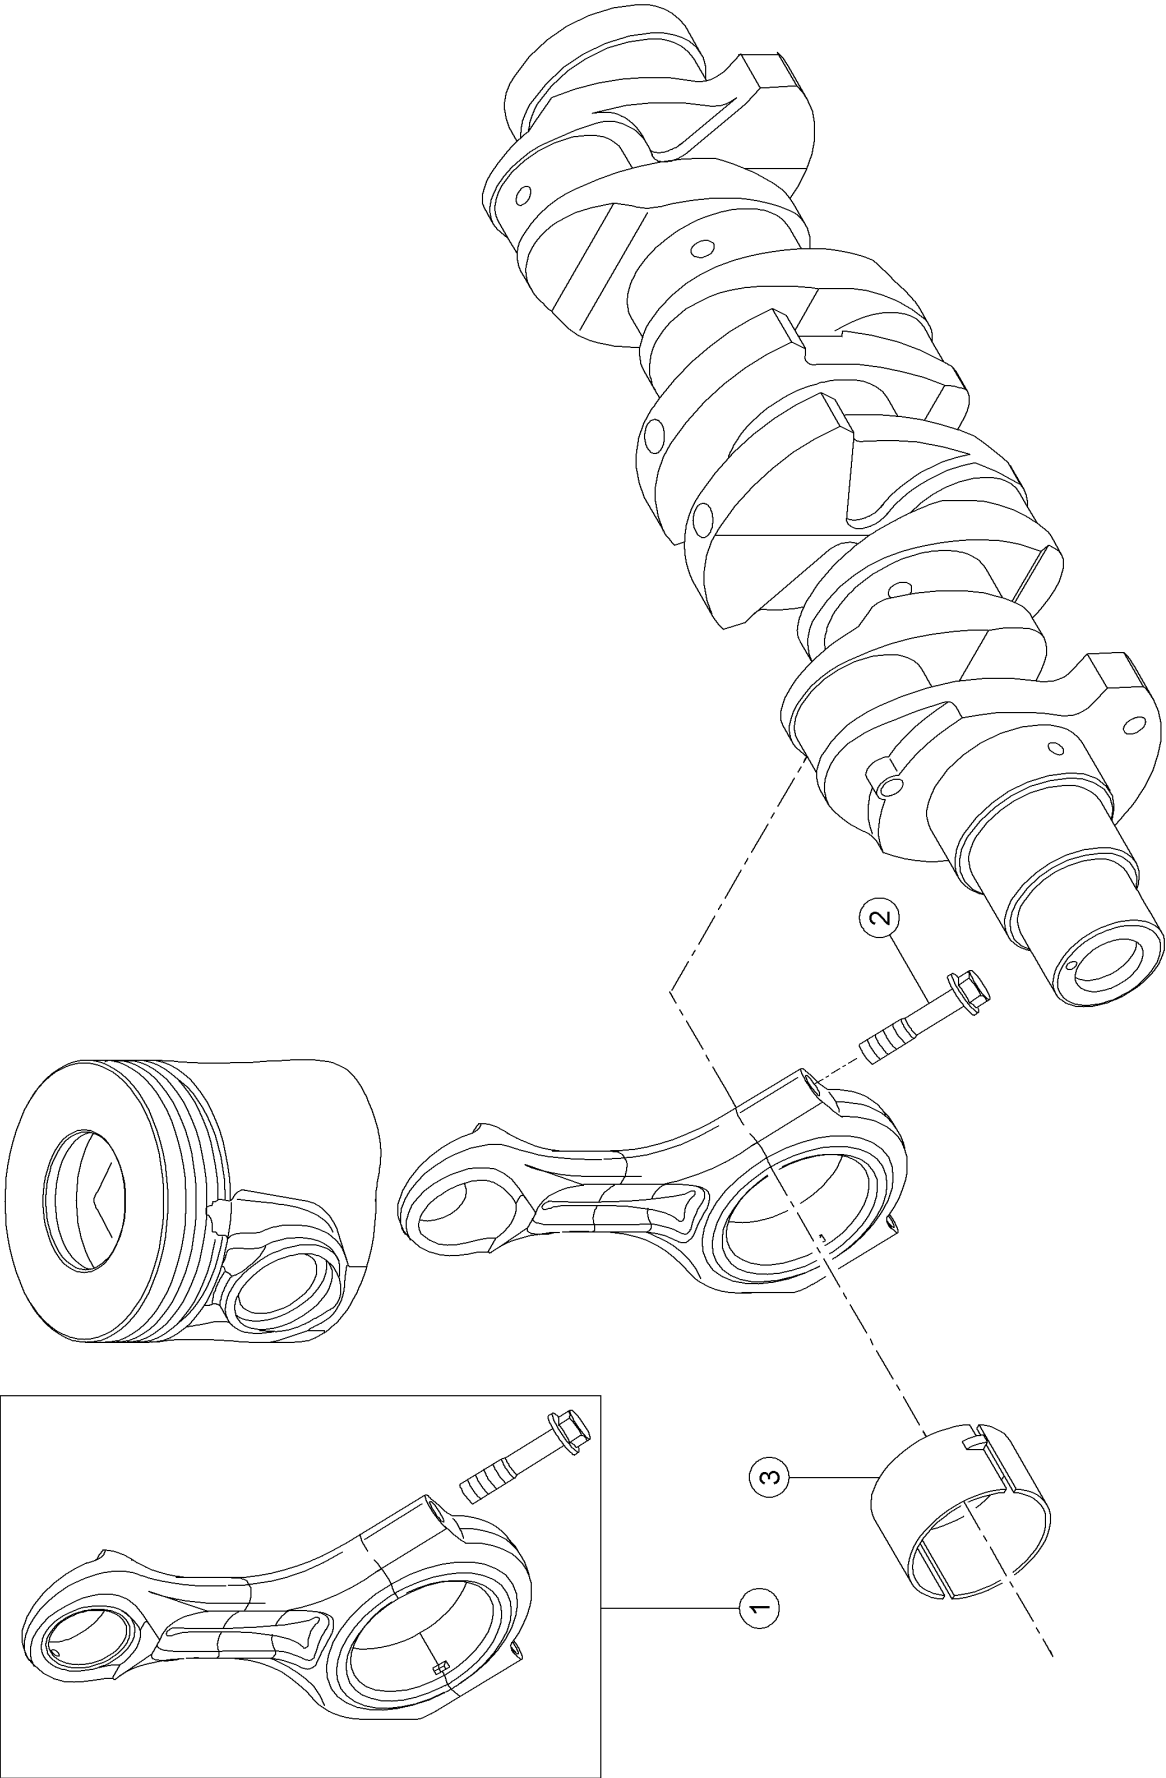


120 CONNECTING ROD, CONNECTING ROD BEARINGS

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1148 025 0	ROD (ENGINE)		4	
2	00 1139 609 0	SCREW		8	
3	00 1145 113 0	BEARING BUSH		4	1)
3	00 1152 926 0	BEARING BUSH		4	2)
1)	Remarks	STANDARD			
2)	Remarks	-0,254			

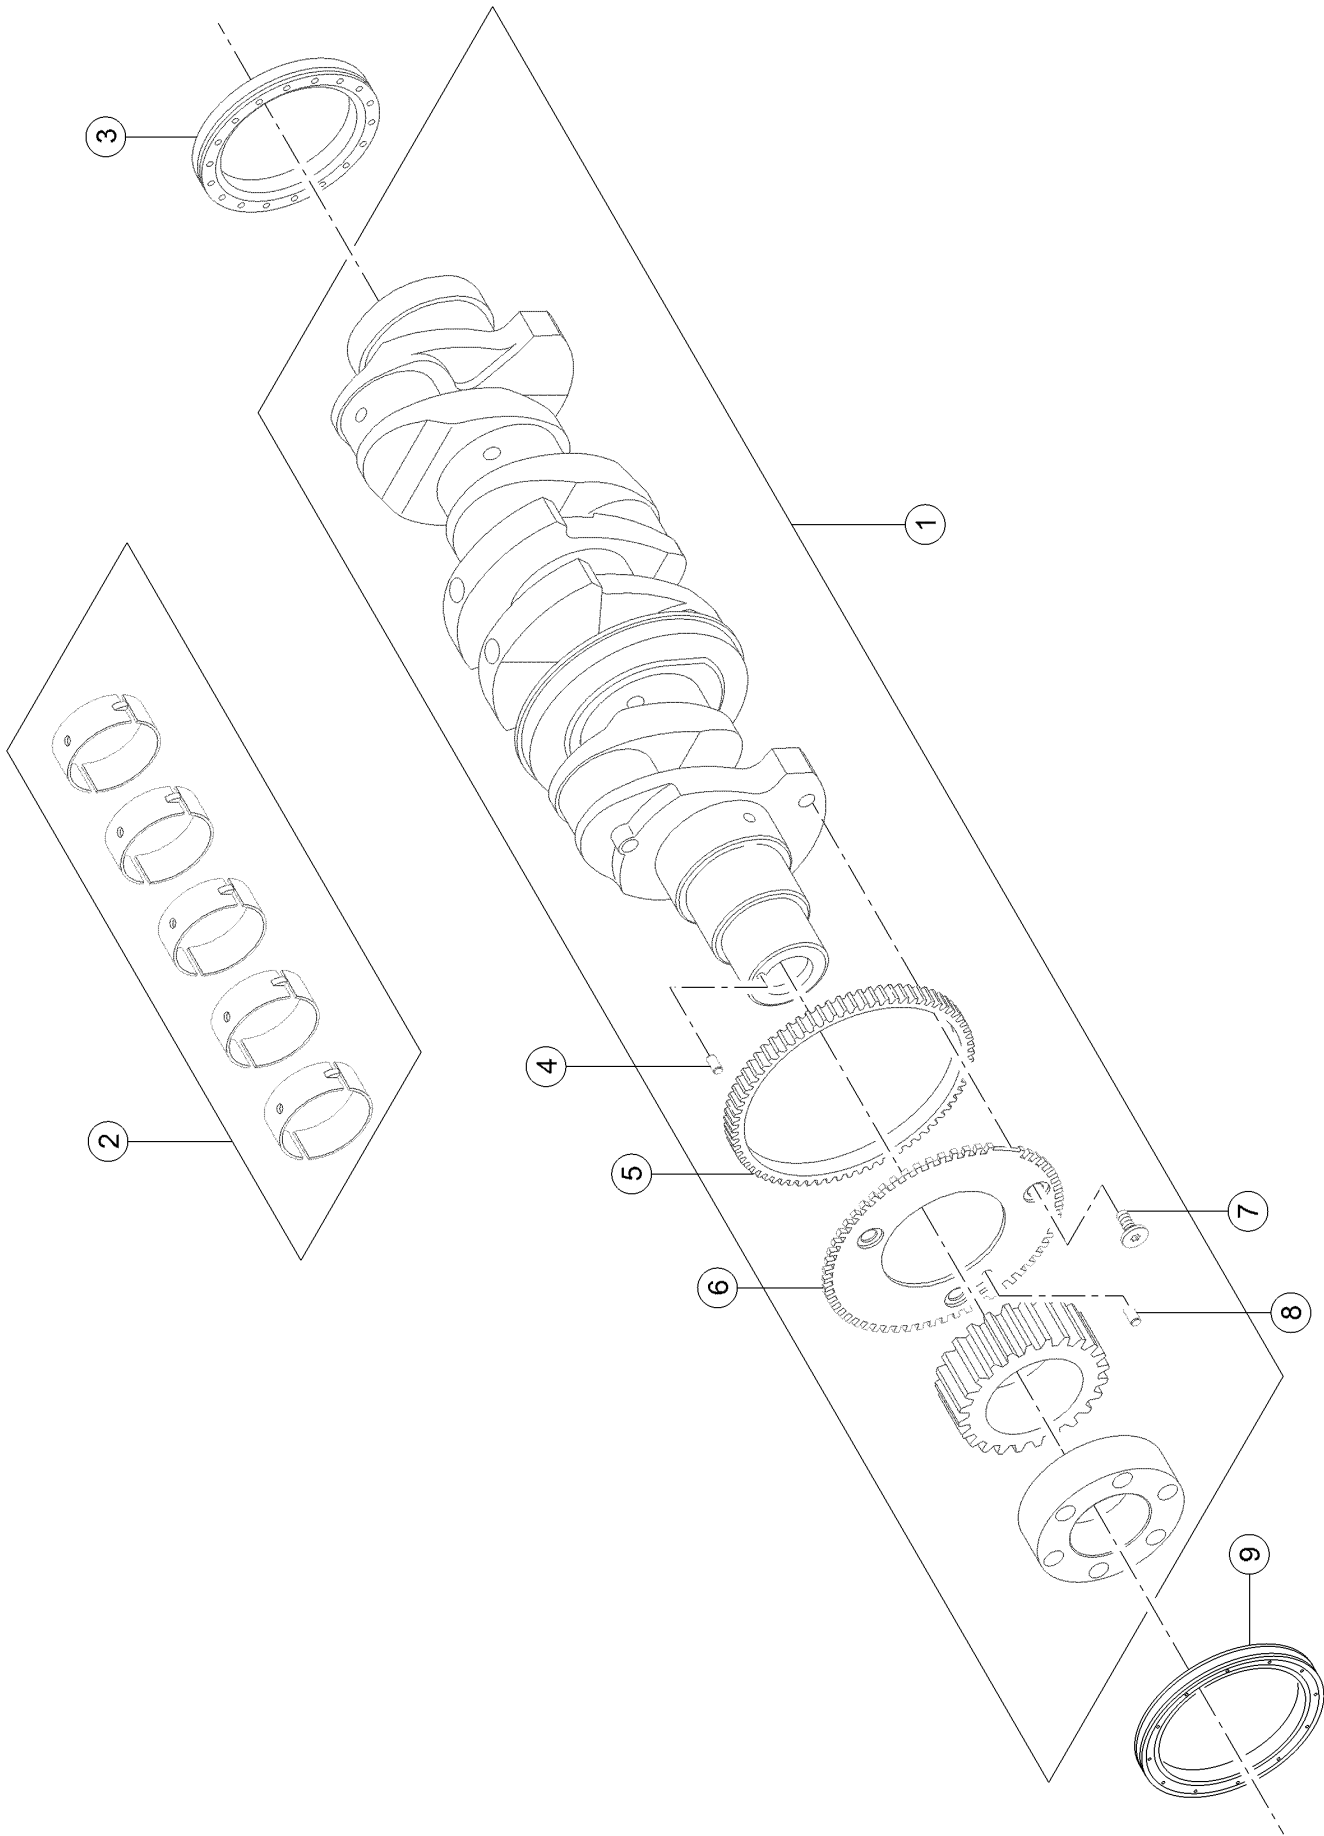


140 CRANKSHAFT

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 658 0	CRANKSHAFT		1	
2	00 1145 110 0	BEARING BUSH		1	1)
2	00 1145 111 0	BEARING BUSH		1	2)
2	00 1145 112 0	BEARING BUSH		1	3)
3	00 1139 308 0	BEARING		1	
4	00 1139 663 0	CENTRING PIN		1	
5	00 1139 664 0	TOOTHED RIM		1	
6	00 1139 665 0	GEAR		1	
7	00 1139 668 0	SCREW		3	
8	00 1139 669 0	CENTRING PIN		1	
9	00 1139 306 0	SEALING RING	90X110X7	1	4)
9	00 1151 535 0	SEALING RING	90X112X10.60	1	5)
1)	Remarks	STANDARD			
2)	Remarks	-0,2			
3)	Remarks	-0,5			
4)	Remarks	up to 183234			
5)	Remarks	from 183235			

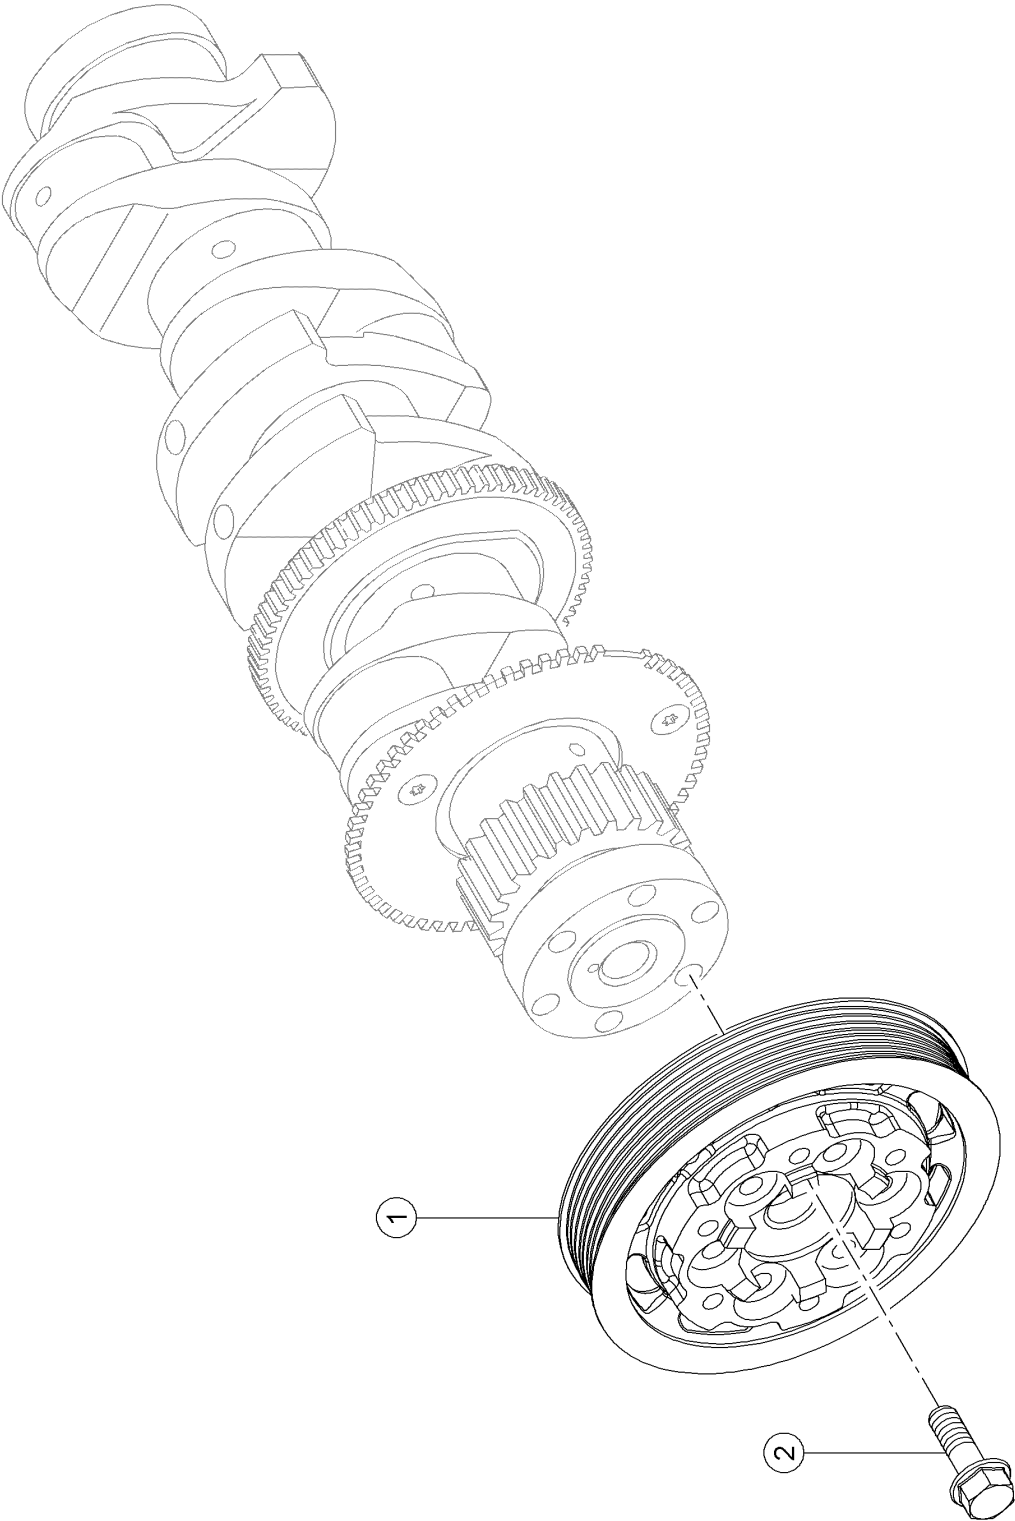

160 CRANKSHAFT PULLEY WHEEL

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1139 677 0	PULLEY		1	
2	00 1139 678 0	SCREW	M10X30	6	

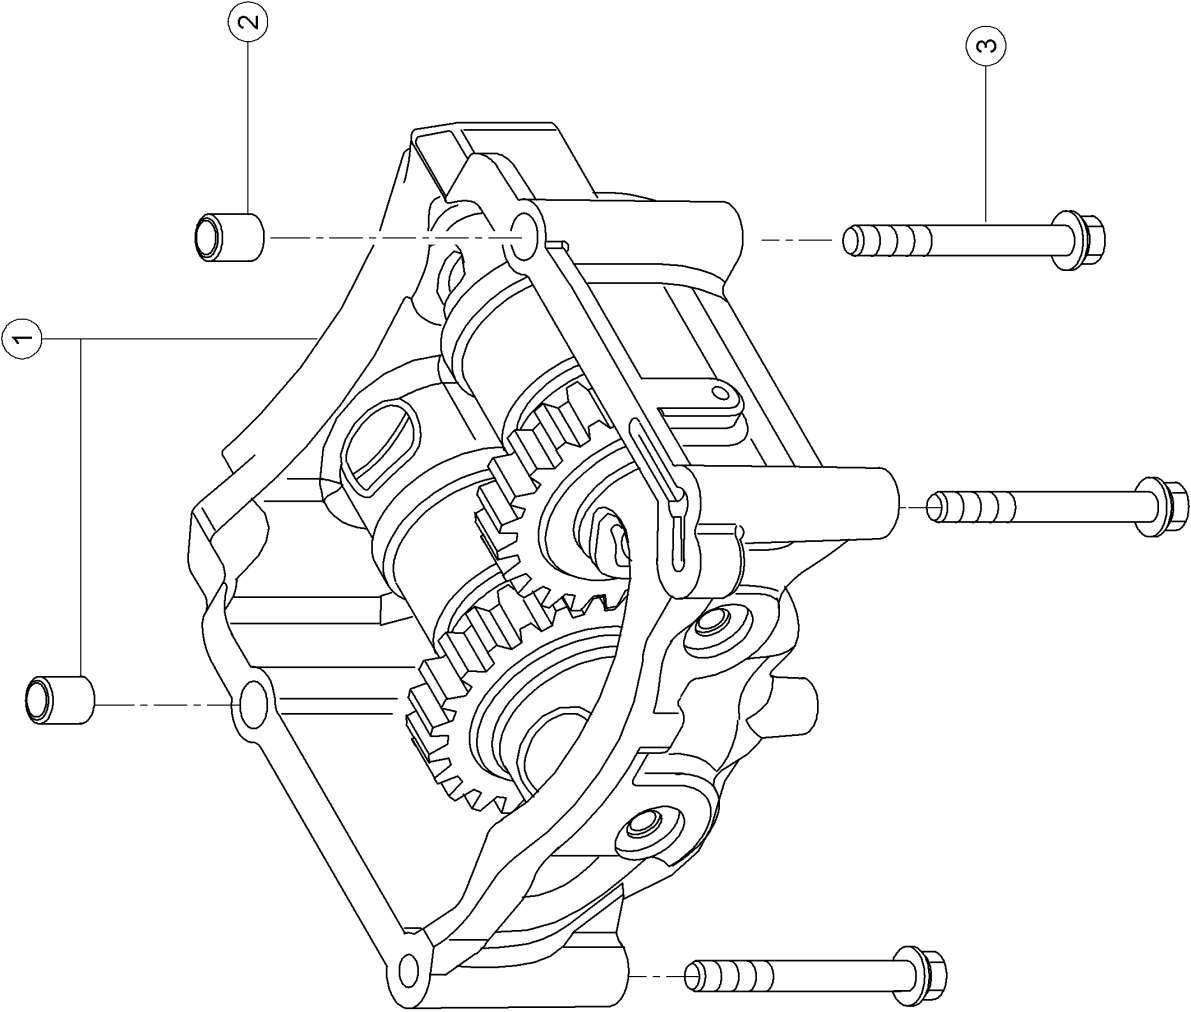

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com