

Fig. 1100 FRAME

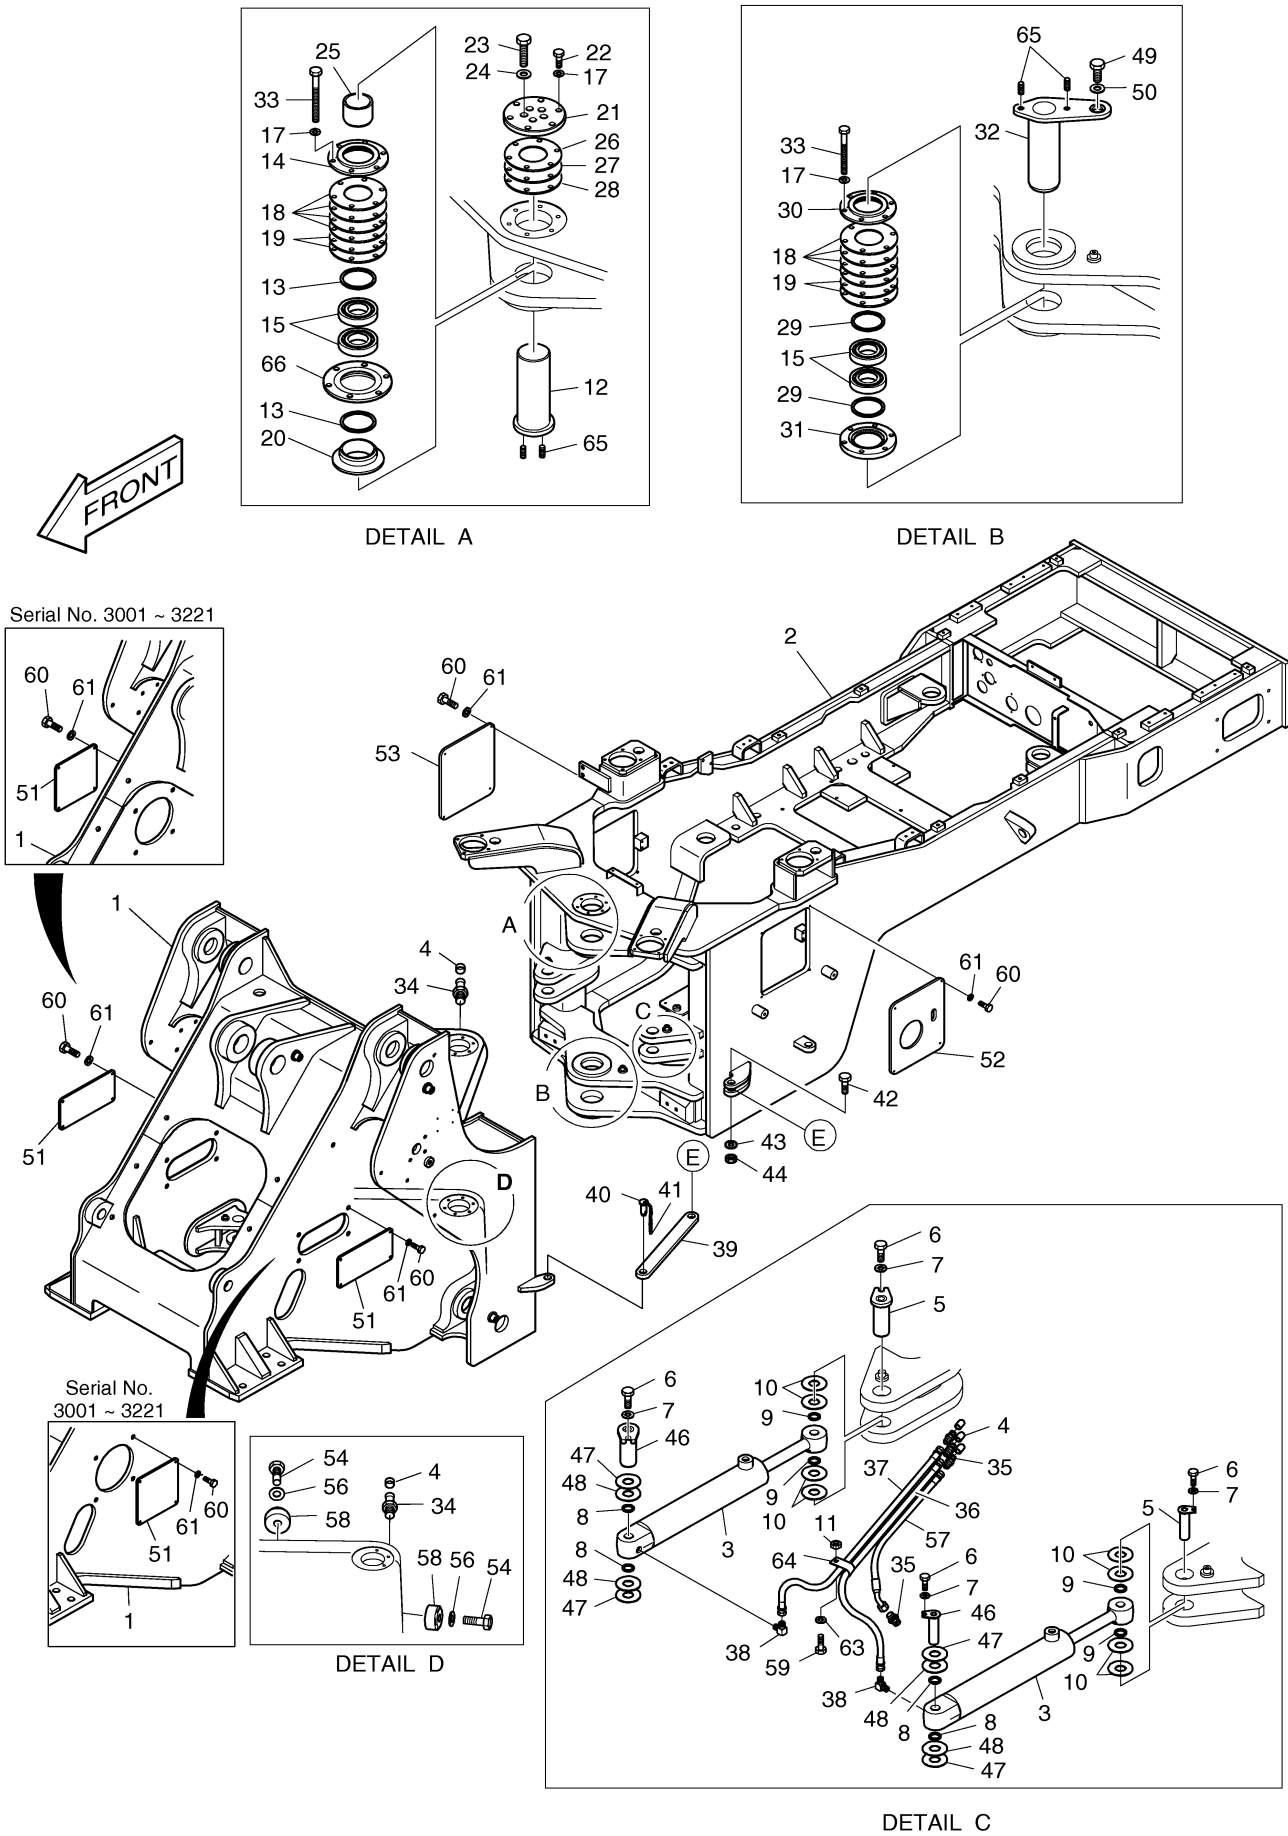


Fig. 1100 FRAME

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
-	600-00181E	FRAME ASS`Y	-	D	3001~10108			
-	160620-00296	FRAME ASSY,MAIN	-	D	10109~			
1	606-00071A	FRAME:FRONT	1		3001~3221	I	606-00071B	1
1	606-00071B	FRAME:FRONT	1		3222~3845	I	606-00071C	1
1	606-00071C	FRAME:FRONT	1		3846~			
2	606-00106B	FRAME:REAR	1					
3	440-00139	CYLINDER:STEER	2					
4	160-00020	CAP:GREASE NIPPLE	5					
5	123-00132A	PIN	2		3001~10108	I	120501-01226	2
5	120501-01226	PIN,STEER	2		10109~			
6	S0511853	BOLT	4		3001~3341	I	S0511866	4
6	S0511866	BOLT	4		3342~			
7	2114-1058D10	WASHER	4					
8	2180-1106D3	SEAL:DUST	4					
9	2180-1106D9	SEAL:DUST	4					
10	2114-1059D150	SHIM	8					
11	S4012533	NUT:M8	1					
12	123-00108B	PIN	1		3001~10108	I	120501-01227	1
12	120501-01227	PIN	1		10109~			
13	4180-9412	SEAL:DUST	2		3001~3562	I	K1008014	2
13	K1008014	SEAL:DUST	2		3563~			
14	111-00014A	CAP:NIPPLE	1					
15	4109-9062	BEARING:TAPER ROLLER	4					
17	4114-1792A	WASHER	18					
18	4114-4134B	SHIM 0.1T	8					
19	4114-4135	SHIM 0.5T	4					
20	114-00198B	SPACER	1					
21	4403-1076	COVER	1					
22	S0515766	BOLT M12X1.75X55	6					
23	S0522266	BOLT	5					
24	4114-1791A	WASHER:HARD	5					
25	114-00199B	SPACER	1					
26	4114-4136	SHIM 0.2T	2					
27	4114-4137	SHIM 0.5T	2					
28	4114-4138	SHIM 1.0T	2					
29	4180-9413	SEAL:DUST	2		3001~3596	I	K1008016	2

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
29	K1008016	SEAL:DUST	2		3597~			
30	111-00015A	CAP	1					
31	111-00012A	CAP	1					
32	123-00110B	PIN	1		3001~10108	I	120501-01228	1
32	120501-01228	PIN	1		10109~			
33	S0561866	BOLT	12					
34	S6710041	NIPPLE:GREASE	2					
35	2181-1110D30	ADAPTER	4					
36	2184-1045D190	HOSE PF1/4-1200L	1					
37	2184-1045D55	HOSE PF1/4-990L	1					
38	2181-1111D11	ELBOW	2					
39	4191-4261A	PLATE	1					
40	4123-4096B	PIN ASS'Y	1					
41	2123-1441D4	PIN	1					
42	S0177563	BOLT M27X3.0X105	1		3001~3341	I	S0177566	1
42	S0177566	BOLT	1		3342~			
43	S5011413	WASHER:PLAIN	1					
44	S4013433	NUT M27X3.0	1					
46	123-00140A	PIN	2		3001~10108	I	120501-01229	2
46	120501-01229	PIN,STEER	2		10109~			
47	2114-1059D246	SHIM	2					
48	2114-1059D247	SHIM	2					
49	S0521053	BOLT M16X2.0X25	1		3001~3341	I	S0521056	1
49	S0521056	BOLT	1		3342~			
50	2114-1058D2	WAHSER	1					
51	621-00541A	COVER	2		3001~3221			
51	621-00541B	COVER	2		3222~			
52	621-00542C	COVER:L.H	1		3001~3432			
52	621-00542E	COVER:L.H	1		3433~3509	I	621-00542G	1
52	621-00542G	COVER:L.H	1		3510~			
53	621-00656B	COVER:R.H	1					
54	S0521556	BOLT M16X2.0X45	2					
56	S5010913	WASHER,PLAIN:M16	2					
57	2184-1060D201	HOSE PF1/4-900L	1					
58	161-00285	RUBBER	2		3001~3380	I	K1004127	2
58	K1004127	STOPPER	2		3381~			
59	S0509053	BOLT:M8X25	1		3001~3341	I	S0509066	1
59	S0509066	BOLT	1		3342~			

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
60	S0508653	BOLT	16		3001~3341	I	S0508666	16
60	S0508666	BOLT	16		3342~			
61	S5102503	WASHER,SPRING;M8	16					
63	S5010513	WASHER,PLAIN;M8	1					
64	124-00208D3	CLIP	1					
65	S3524303	SCREW;SET M10X1.5X10	4					
66	111-00034	CAP	1					

Fig. 1110 ENGINE MOUNTING

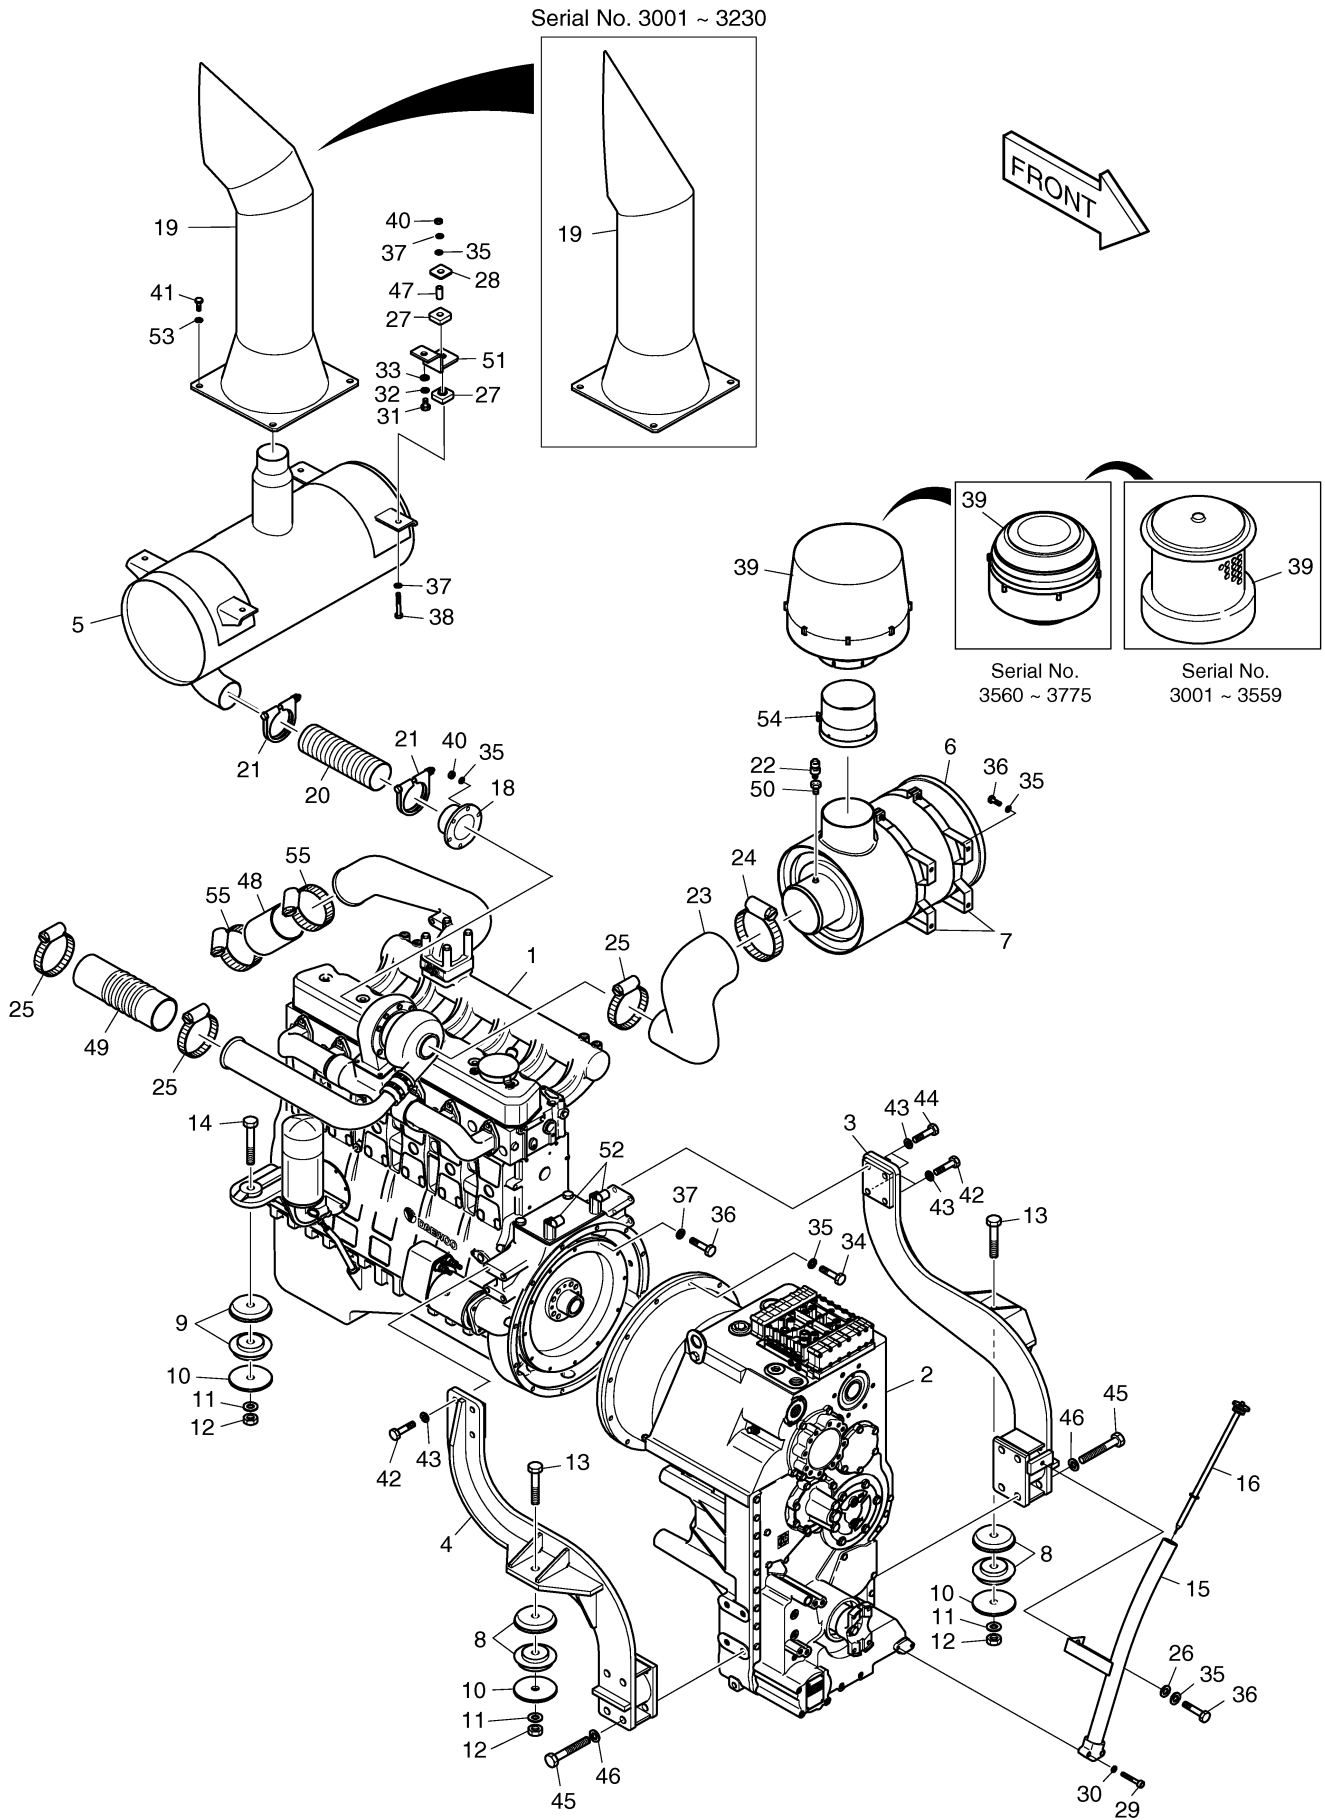


Fig. 1110 ENGINE MOUNTING

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
-	201-00192	ENGINE MOUNTING	-	D	3001~3421			
-	201-00192C	ENGINE MOUNTING	-	D	3422~			
1	201-00032B	ENGINE:DE12TIA	1					
1	201-00231	ENGINE(DE12TIS)	1					
2	210-00038	TRANSMISSION ASS'Y	1					
3	195-00394B	BRACKET	1					
4	195-00393A	BRACKET	1					
5	203-00053C	MUFFLER	1		3001~3230	I	203-00053E	1
5	203-00053E	MUFFLER	1		3231~			
6	204-00007	AIR CLEANER	1					
7	124-00024	BAND:AIR CLEANER	2					
8	161-00056	RUBBER:MOUNT	4		3001~3421	I	161-00549	4
8	161-00549	RUBBER:MOUNTING	4		3422~			
9	2161-9066	RUBBER:FRONT	4		3001~3421	I	161-00548	4
9	161-00548	RUBBER	4		3422~			
10	2114-1929	WASHER	4					
11	4114-4116	WASHER:HARD M20	4					
12	S4033133	NUT	4					
13	S0771266	BOLT M20X1.5X120	2					
14	S0771566	BOLT M20X1.5X140	2					
15	4182-1679C	PIPE	1		3001~3432	I	4182-1679E	1
15	4182-1679E	PIPE	1		3433~			
16	187-00008	DIPSTICK	1					
18	4182-1672	PIPE:EXHAUST	1					
19	203-00027C	PIPE:TAIL	1		3001~3230	I	K1004147A	1
19	K1004147A	MUFFLER:PIPE TAIL	1		3231~			
20	193-00630A	PIPE:FLEXIBLE	1		3001~3230			
20	K1003564	TUBE	1		3231~			
21	4182-1671B	CLAMP:PIPE	2					
22	2170-9005	INDICATOR	1					
23	184-00025A	HOSE:AIR CLEANER	1					
24	2124-1024D20	CLAMP:HOSE	1					
25	124-00137	CLAMP:HOSE	3					
26	2114-1058D10	WASHER	1					
27	198-00026	RUBBER	8					
28	114-00403	WASHER	4					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
29	S2209661	BOLT;SOCKET	2					
30	S5110503	WASHER;SPRING	2					
31	S0514953	BOLT M12X1.75X22	4		3001~3421	I	S0514966	4
31	S0514966	BOLT	4		3422~			
32	2114-1058D30	WASHER;PLAIN	4					
33	S5102703	WASHER;SPRING M12	4					
34	S0512353	BOLT M10X1.5X35	12		3001~3421	I	S0512356	12
34	S0512356	BOLT M10X1.5X35	12		3422~			
35	S5102603	WASHER,SPRING;M10	27					
36	S0511953	BOLT	17		3001~3421	I	S0511966	17
36	S0511966	BOLT M10X1.5X22	17		3422~			
37	4114-4085	WASHER	20					
38	S0558853	BOLT M10X1.5X65	4		3001~3421	I	S0559066	4
38	S0559066	BOLT M10X1.5X75	4		3422~			
39	204-00026	PRE CLEANER	1		3001~3559	I	K1002329	1
39	K1002329	PRE CLEANER	1		3560~3775	I	K1043471	1
39	K1043471	PRE CLEANER	1		3776~			
40	S4012633	NUT	10					
41	2120-2166D32	BOLT	4					
42	S0765451	BOLT M16X1.5X60	6		3001~3421	I	S0765466	6
42	S0765466	BOLT M16X1.5X60	6		3422~			
43	S5102903	WASHER,SPRING	8					
44	S0765551	BOLT M16X1.5X65	2		3001~3421	I	S0765566	2
44	S0765566	BOLT M16X1.5X65	2		3422~			
45	S0571561	BOLT M20X2.5X140	8		3001~3421	I	S0571566	8
45	S0571566	BOLT	8		3422~			
46	S5103101	WASHER;SPRING M20	8		3001~3421	I	S5103103	8
46	S5103103	WASHER;SPRING	8		3422~			
47	114-00404	SPACER	4					
48	185-00100	HOSE 170L	1					
49	184-00031A	HOSE 332L	1					
50	2181-2690	ADAPTER;FILTER	1					
51	195-01414	BRACKET	4					
52	2124-1509D3	CLIP D24/M8	2					
53	2114-2031D6	WASHER;SPRING	4					
54	4204-2009E	EXTENSION	1					
55	S8450140	CLAMP;HOSE	2					

Fig. 1115 AIR CLEANER


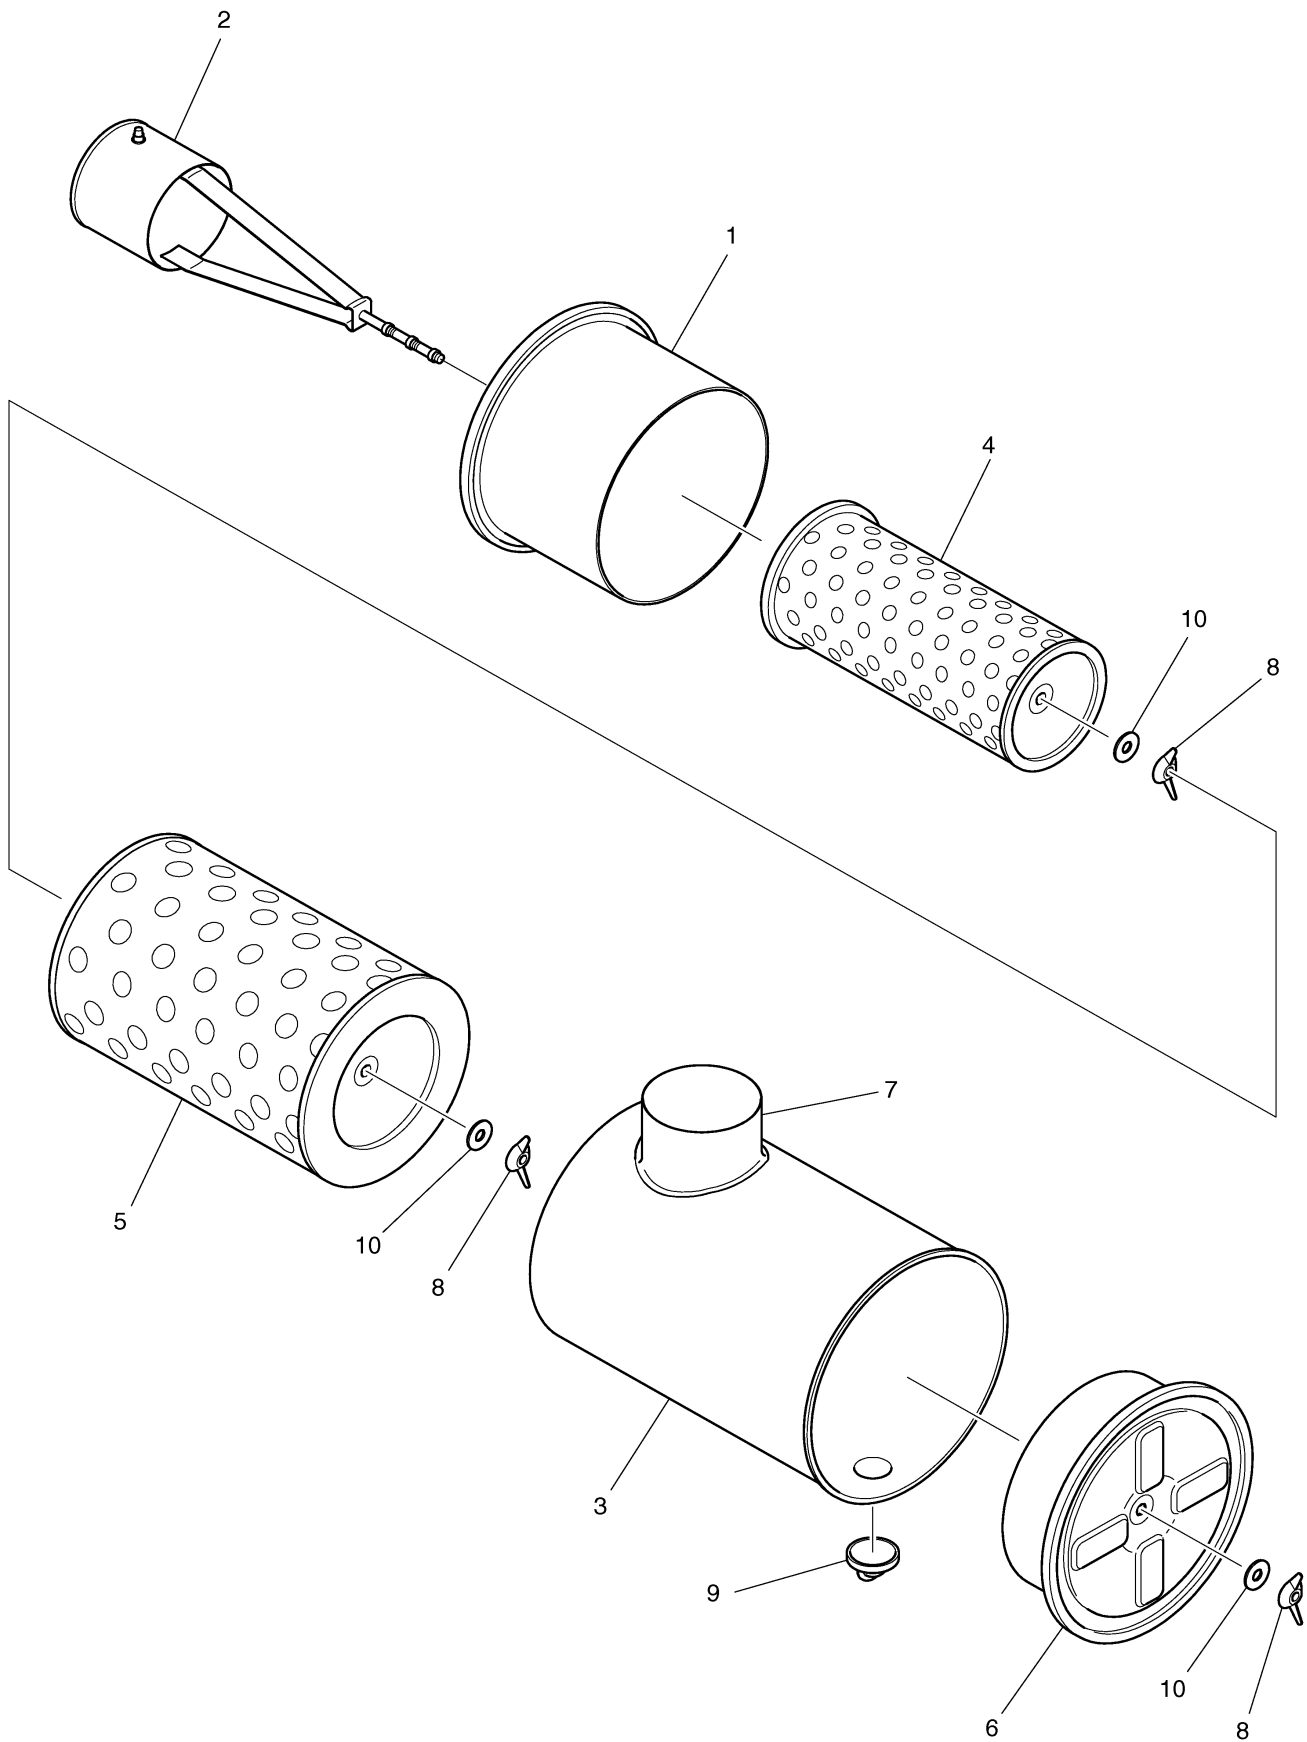


Fig. 1115 AIR CLEANER

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	204-00007	AIR CLEANER	1					
1	–	COVER:REAR	1	D				
2	–	OULET PIPE	1	D				
3	–	BODY	1	D				
4	474-00007	ELEMENT:INNER	1					
5	474-00006	ELEMENT:OUTER	1					
6	621-00676	COVER	1					
7	–	INLET PIPE	1	D				
8	121-00041	NUT:WING(OUTER)	3					
9	198-00007	VALVE:VACUATOR	1					
10	114-00243	WASHER	3					

Fig. 1120 OIL TANK

Serial No. : 3001 ~ 3619

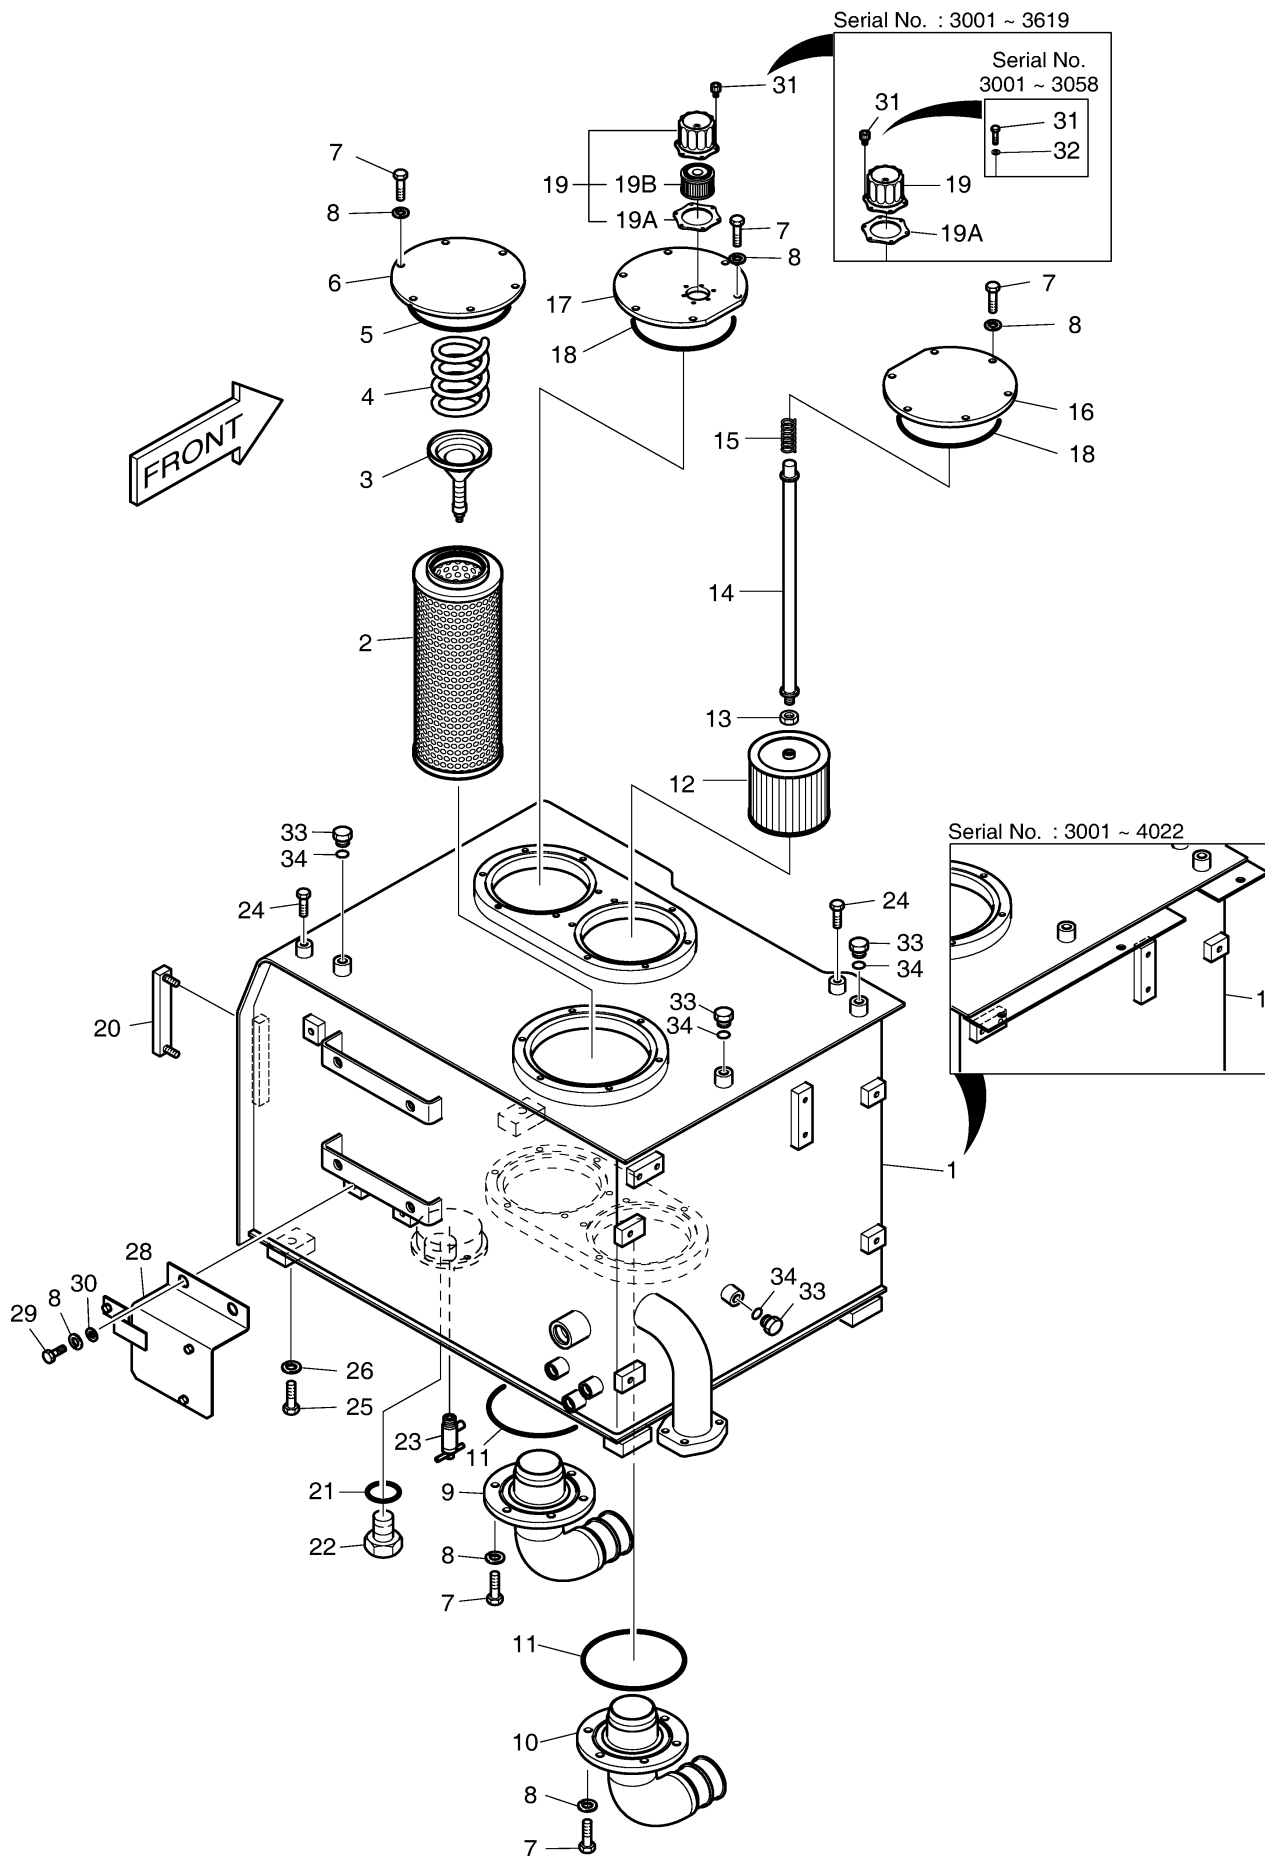


MEGA 400-V (S/N 3001~)

Fig. 1120 OIL TANK

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
-	470-00188	OIL TANK ASS`Y	-	D	3001~4022			
-	450105-00101	TANK ASSY,OIL	-	D	4023~			
1	470-00036G	TANK:OIL	1		3001~4022			
1	450105-00099	TANK,OIL	1		4023~			
2	2471-9051B	ELEMENT:FILTER	1					
3	2426-1175	VALVE:BY-PASS	1					
4	2129-1393	SPRING	1					
5	S8012000	O-RING	1					
6	2473-1080A	COVER	1					
7	S0512053	BOLT	30					
8	S5102603	WASHER,SPRING:M10	32					
9	140-00215A	PIPE:SUCTION	1					
10	140-00217A	PIPE:SUCTION	1					
11	S8011200	O-RING	2					
12	2474-9016A	FILTER:SUCTION	2					
13	S4012733	NUT	2					
14	136-00017	ROD	2					
15	2129-1008	SPRING:COMPRESS	2					
16	473-00017	COVER	1					
17	473-00016	COVER	1					
18	S8011650	O-RING	2					
19	422-00028A	BREATHER:AIR	1		3001~3619	I	K1012685A	1
19A	180-00200	PACKING	1		3001~3619			
19	K1012685A	BREATHER:AIR	1		3620~			
19A	K9005662	GASKET	1		3620~			
19B	K1029257	ELEMENT:AIR BREATHER	1		3620~			
20	2119-1007	GAUGE:LEVEL	1					
21	S8000291	O-RING	1					
22	2181-1950D9	PLUG	1					
23	2186-9005	COCK	1					
24	S0514653	BOLT M12X1.75X16	2					
25	S0521251	BOLT M16X2.0X30	4					
26	2114-1816A	WASHER	4					
28	195-01023B	BRACKET:COVER	1					
29	S0511853	BOLT	2					
30	S5010613	WASHER,PLAIN:M10	2					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
31	2120-2166D41	BOLT;SOCKET M5X0.8X8	6		3001~3058			
31	S2202766	BOLT	6		3059~			
32	S5000213	WASHER;PLAIN M5	6		3001~3058			
33	2181-1890D2	PLUG	4					
34	S8000111	O-RING	4					

Fig. 1130 FUEL TANK

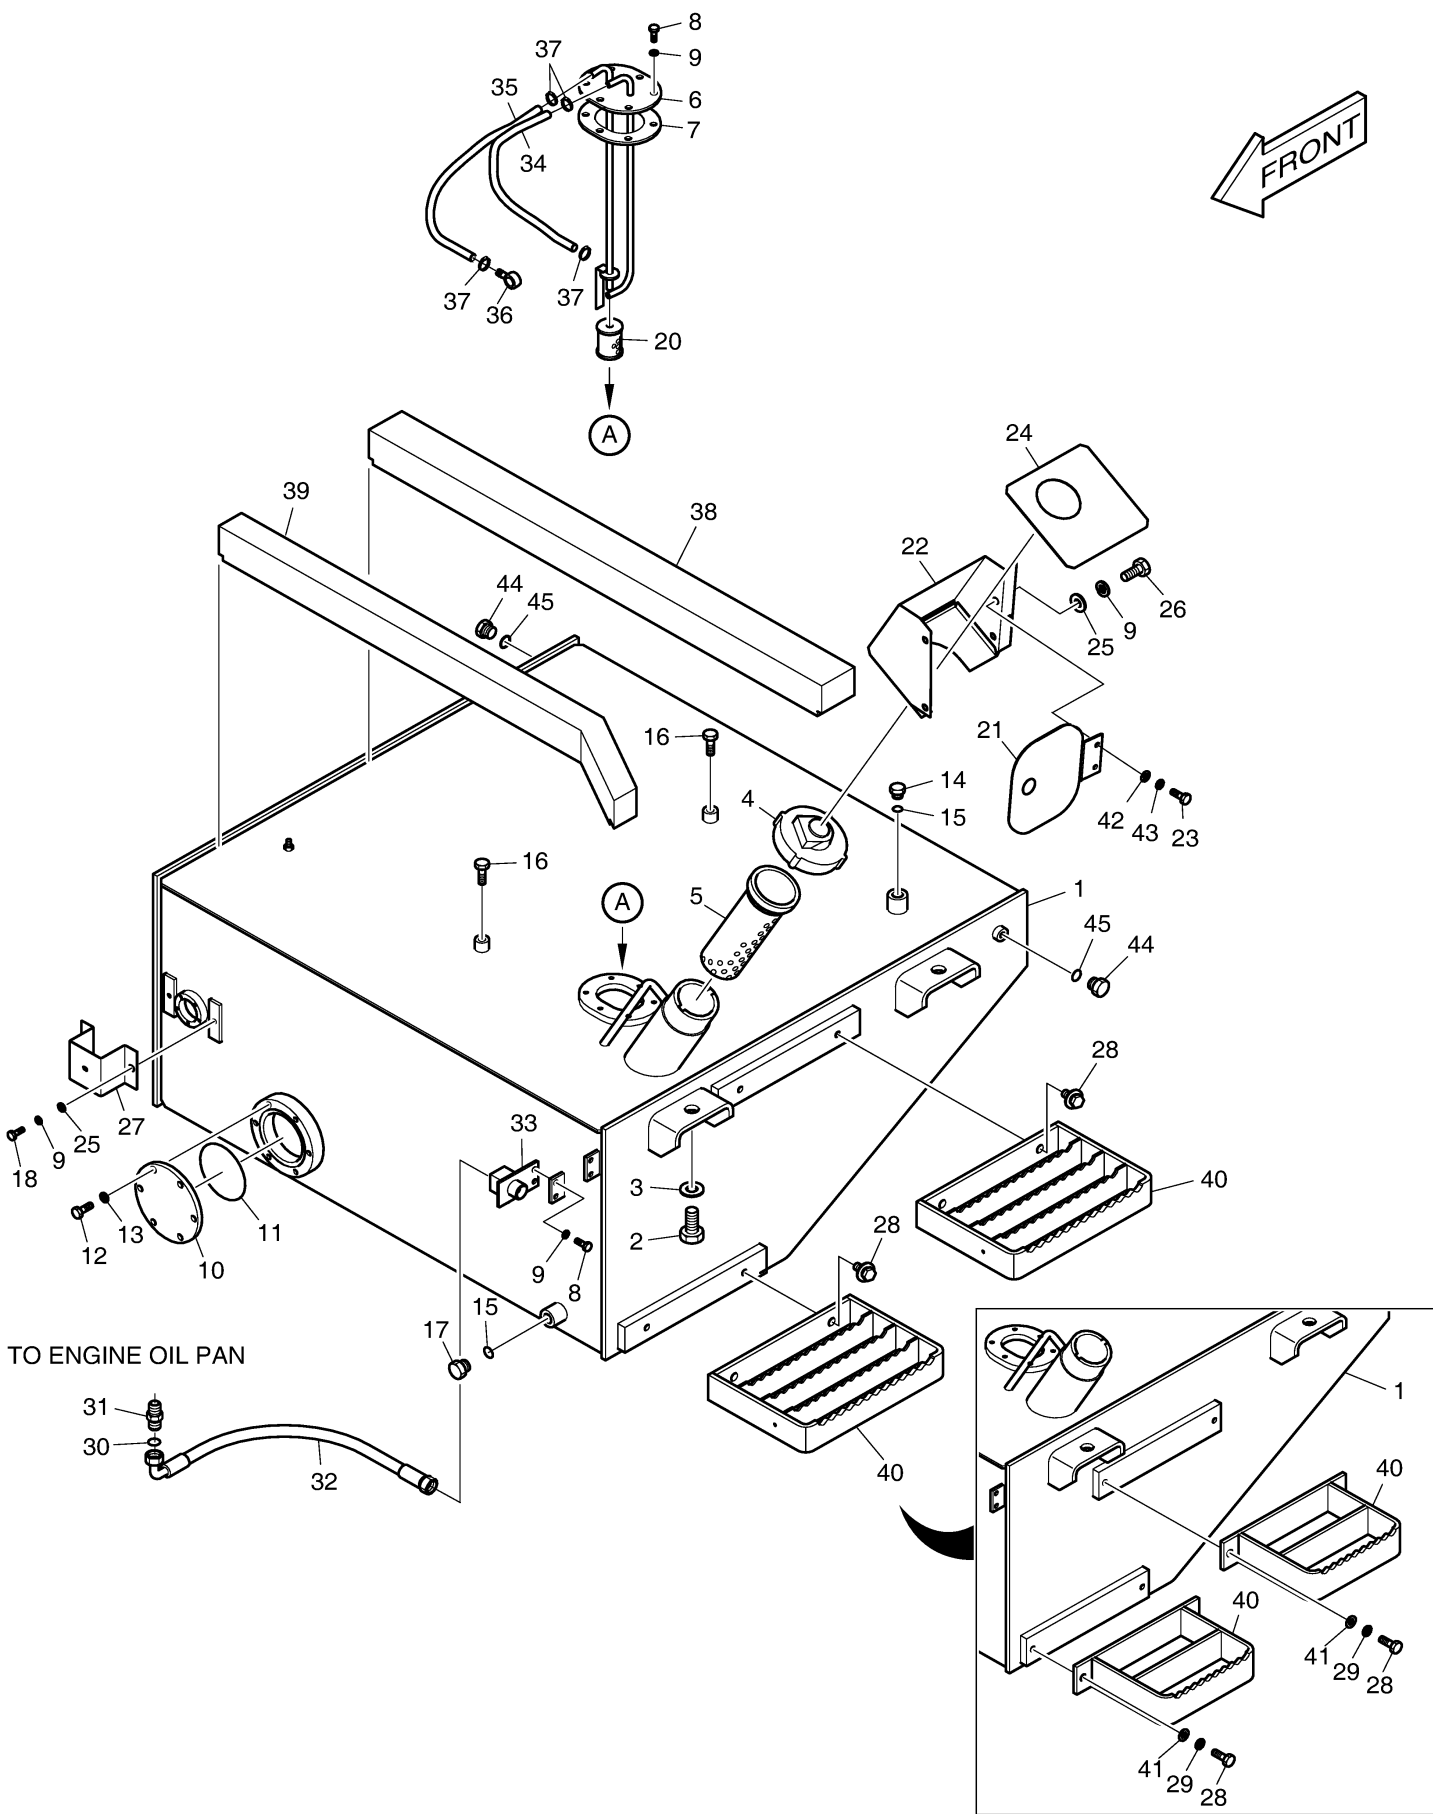

Serial No. : 3001 ~ 10318


MEGA 400-V (S/N 3001~)

Fig. 1130 FUEL TANK

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
–	470-00039B	FUEL TANK ASS`Y	–	D	3001~10318			
–	450103-00281	TANK ASSY,FUEL	–	D	10319~			
1	470-00038G	TANK:FUEL	1		3001~3545			
1	470-00038H	TANK:FUEL	1		3546~3629	I	470-00038J	1
1	470-00038J	TANK:FUEL	1		3630~10318			
1	450103-00282A	TANK,FUEL	1		10319~			
2	S0527566	BOLT M20X2.5X45	4					
3	2114-9012A	WASHER	4					
4	2188-9006A	CAP:FUEL	1					
5	2471-9010A	FILTER	1					
6	193-00150A	PIPE:FUEL	1		3001~3545			
6	193-00150B	PIPE:FUEL	1		3546~			
7	4180-4012	PACKING	1					
8	S0508653	BOLT	8					
9	S5102503	WASHER,SPRING:M8	14					
10	4473-1059A	COVER	1					
11	S8011050	O-RING	1					
12	S0512053	BOLT	6					
13	S5102603	WASHER,SPRING:M10	6					
14	2181-1950D3	PLUG	1					
15	S8000181	O-RING	2					
16	S0514653	BOLT M12X1.75X16	2					
17	181-00343A	PLUG:DRAIN	1					
18	S0508353	BOLT M8X1.25X10	2					
20	2471-1004B	FILTER	1					
21	621-02291	COVER	1					
22	125-00013C	CASE	1					
23	S0504653	BOLT M6X1.0X16	2					
24	198-00017B	RUBBER	1					
25	S5010513	WASHER,PLAIN:M8	6					
26	S0508853	BOLT	4					
27	621-00610A	COVER:FUEL SENSOR	1					
28	S0515253	BOLT M12X1.75X30	4		3001~10318			
28	DS0025018	BOLT:SET	4		10319~			
29	S5102703	WASHER:SPRING M12	4		3001~10318			
30	S8180481	RING:SEAL	1					

Key No	Part No	Description	Qty	S.C	Serial No	ICA	Replacable	Qty
31	2181-1917D35	ADAPTER	1					
32	2184-1036D418	HOSE	1					
33	4181-2692	COCK;DRAIN	1					
34	2185-1247D63	HOSE 1230L	1					
35	2185-1247D104	HOSE 1300L	1					
36	2181-9015	PIPE;FUEL	1					
37	2124-1024D1	CLAMP;HOSE	4					
38	161-00187	FOAM	1					
39	161-00188	FOAM	1					
40	195-01226	BRACKET	2		3001~10318			
40	110406-01643	BRACKET	2		10319~10367	Y	110406-02068	2
40	110406-02068	BRACKET	2		10368~			
41	S5010713	WASHER;PLAIN M12	4		3001~10318			
42	S5010303	WASHER	2					
43	S5102303	WASHER;SPRING	2					
44	2181-1890D2	PLUG	2					
45	S8000111	O-RING	2					

Fig. 1140 AXLE & DRIVE SHAFT

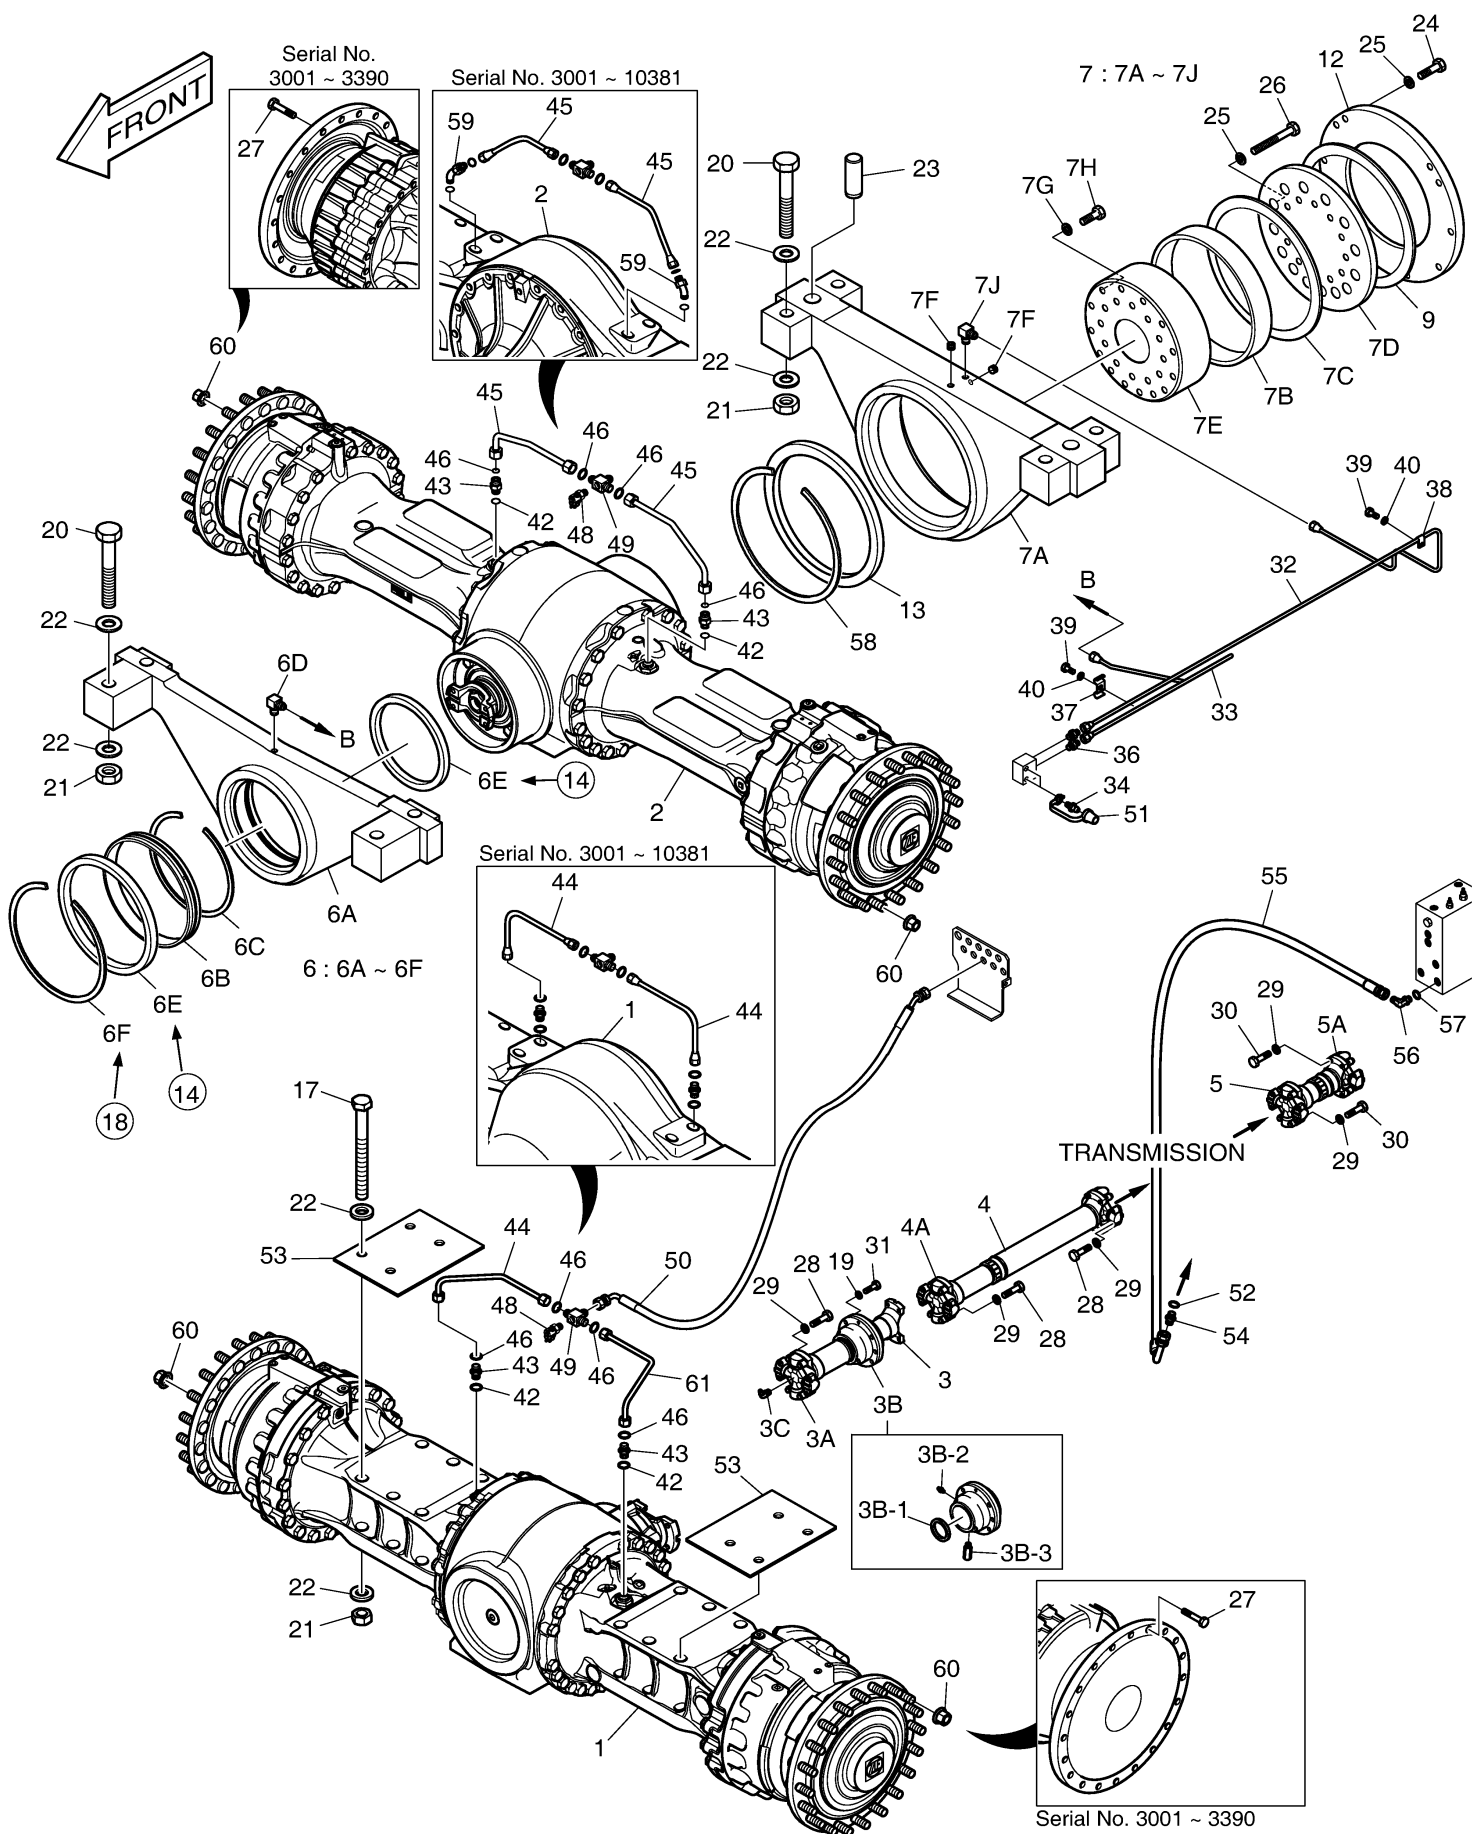

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com