



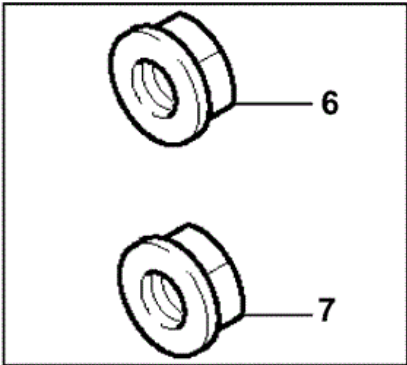

9822/0360 L100-1-1 ENGINE INSTALLATION ASSEMBLIES

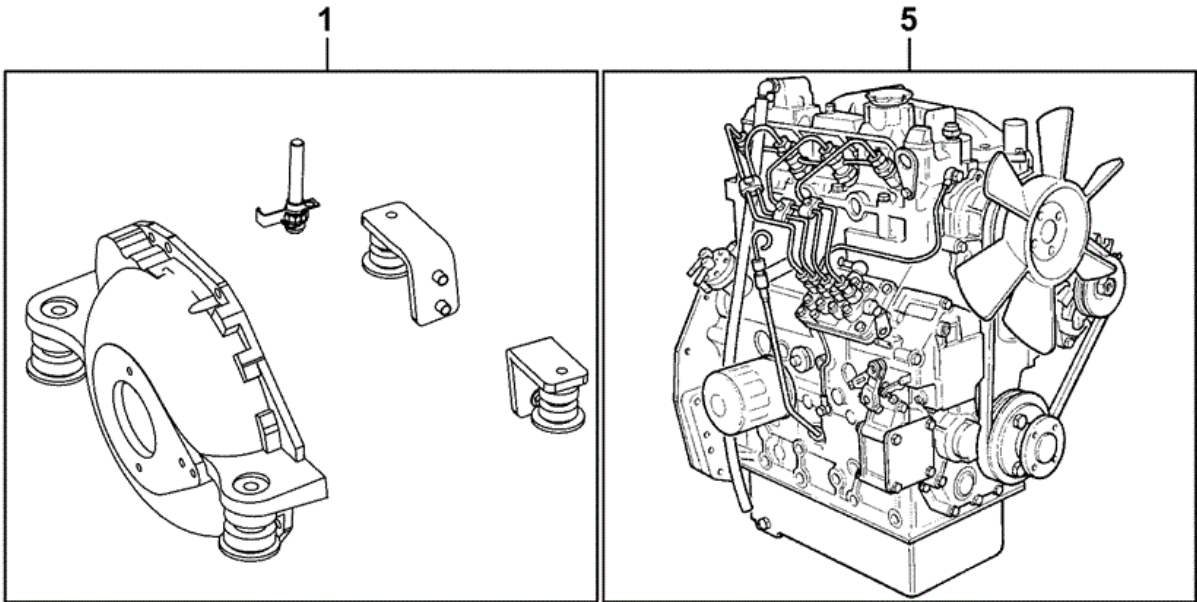


290-04700-10

Item	Part #	Change No	Description	Usage Code	QTY
1	****		'See Remark' 290/57000		1
5	332/R7146		Engine assembly, 404D-22 37.3kw nat asp		1

6	1370/0008D		Nut M5 Standard Flanged		1
7	1370/0108D		Nut Flanged, Standard M6		1



9822/0360 L100-1-5 ENGINE INSTALLATION ASSEMBLIES

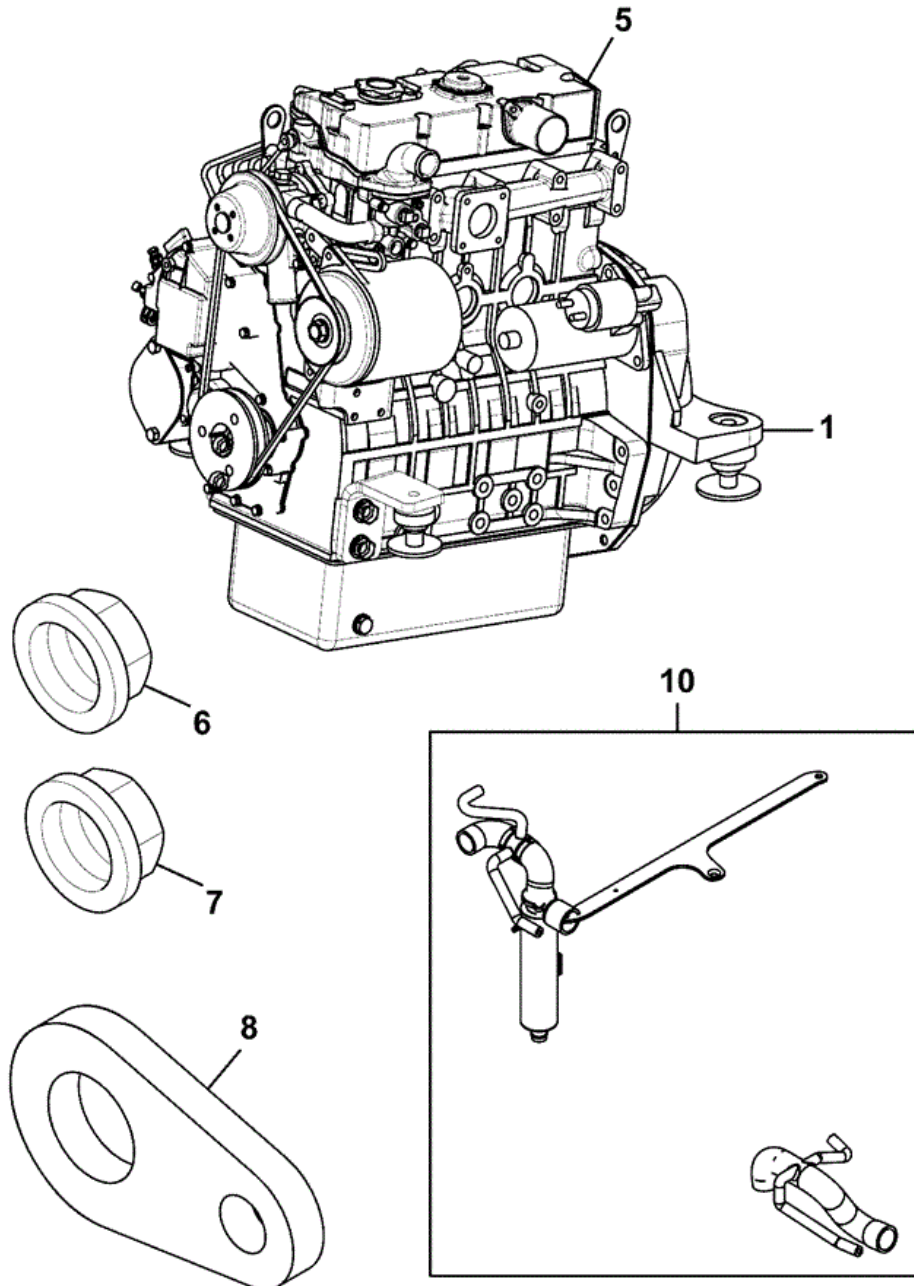


290-04700-12

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Kit Engine Fittings		1
5	333/V7564		Engine Assembly 404D-22 36.3kw EU/ROW		1
6	1370/0008D		Nut M5 Standard Flanged		1

7	1370/0108D		Nut Flanged, Standard M6		1
8	331/65152		Plate throttle extension		1
10	334/R0619		ENGINE PARTS - ROW B		1



9822/0360 L100-3-1 ENGINE INSTALLATION ASSEMBLIES

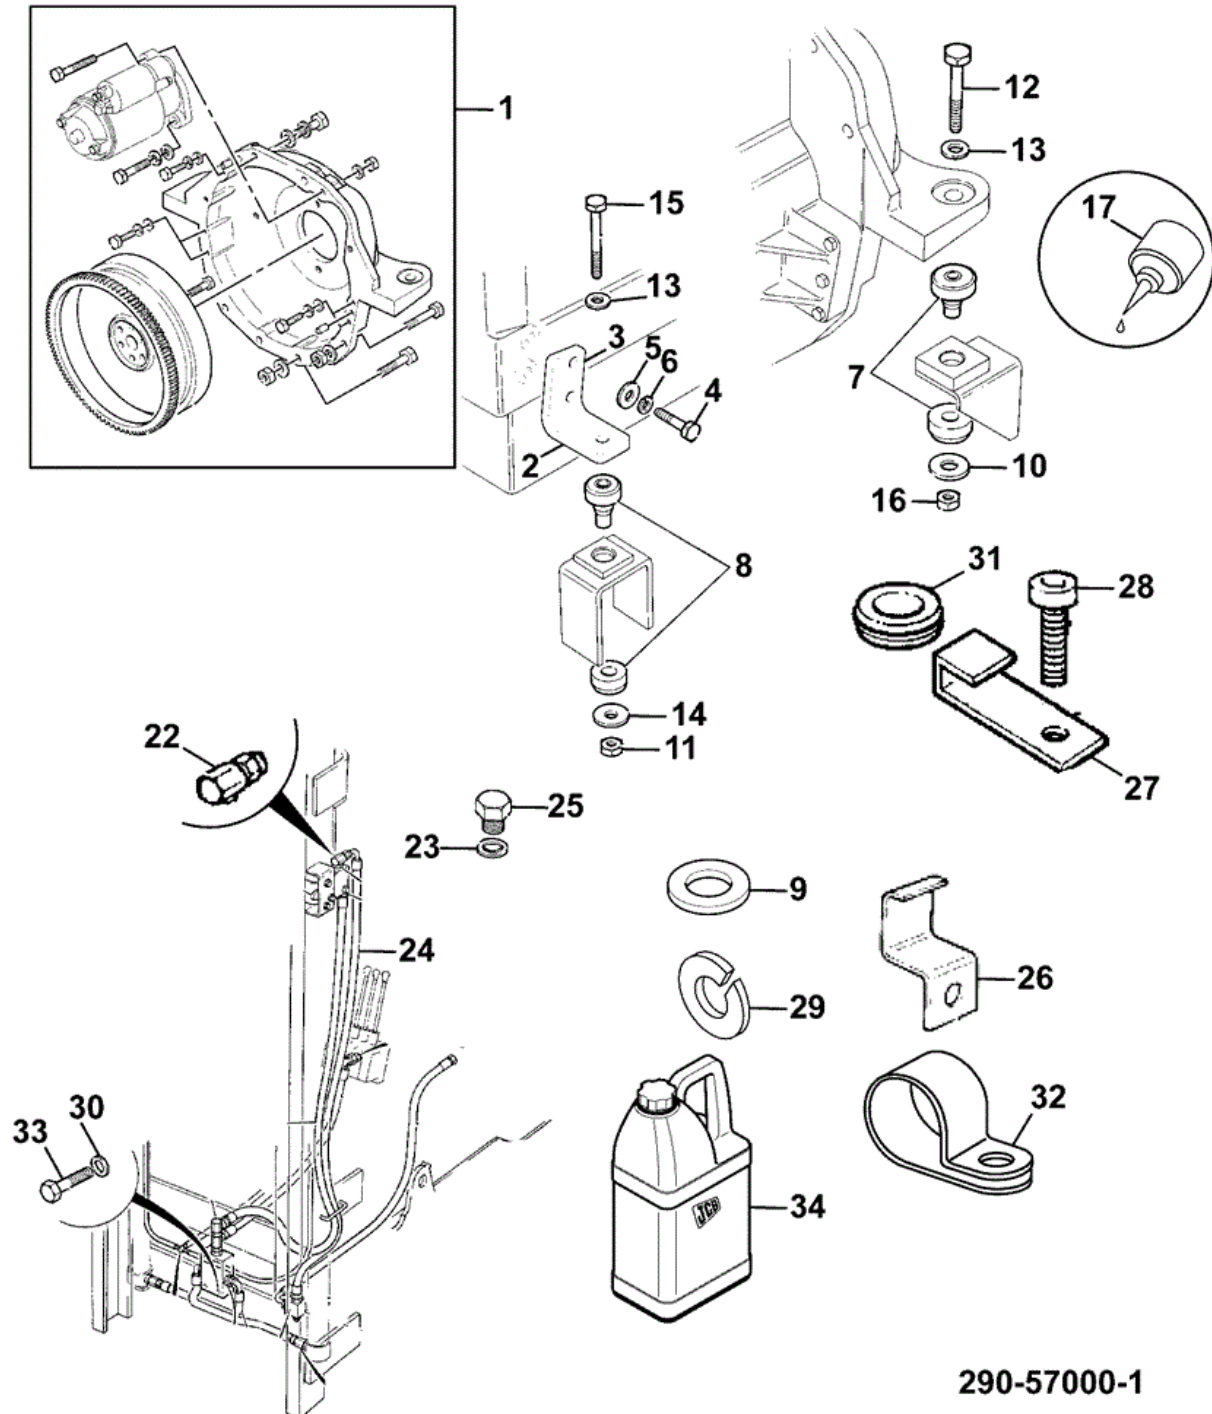




290-57000-1

Item	Part #	Change No	Description	Usage Code	QTY
1	246/77700		Installation Assembly, Engine		1
2	332/S0923		Bracket engine mounting left hand <i>USE 4, 5, 6.</i>		1

3	332/S0706		Bracket engine mounting right hand <i>USE 4, 5, 6.</i>		1
4	826/01288		Bolt M14 x 30 <i>130 Nm</i>		4
5	1420/0010D		Washer M14		4
6	1425/0010D		Washer spring M14		4
7	331/20297		Mounting engine <i>PUMP END.</i>		2
8	246/01107		Mounting metalastik <i>FAN END.</i>		2
9	1420/0011D		Washer (M16)		2
10	120/16902		Plate Rebound <i>FOR ITEM 7.</i>		2
11	1370/0603D		Nut -Lock Nut, M16		2
12	1315/3721D		Bolt M16 x 110		2
13	1420/0009D		Washer (M12)		2
14	123/02453		Washer Rebound (13.5mm x 65mm x 5mm)		2
15	1315/3519D		Bolt M12 x 90 mm		2
16	1370/0403D		Nut Lock M12		2
17	4101/0200		Fluid Locking <i>FOR ITEM 4.</i>		0
22	816/90089		Adapter M16 X 1/2 BSP		1
23	1406/0016		Seal bonded		1
24	613/33100		Hose 1/2in, 600 long		1
25	G8/0		Plug 1/2"BSP		1
26	123/02569		Clip 'S'		6
27	123/00195		Clip Harness Support		1
28	1315/0303D		Setscrew M8 x 16mm		4
29	1425/0007D		Washer Spring M8		5
30	1420/0007D		Washer (M8)		5
31	2410/0205		Grommet Hole Diameter 12.7mm		8
32	821/00478		Clip Retaining		1
33	1315/0307D		Setscrew M8 x 25 mm		1
34	4001/2000		Oil Engine SAE 10W-40 <i>AS REQUIRED.</i>		0



9822/0360 L100-5-1 ENGINE INSTALLATION ASSEMBLIES

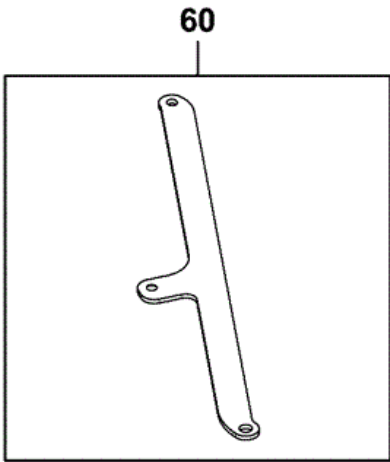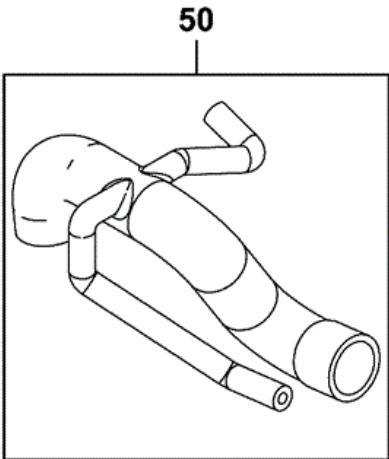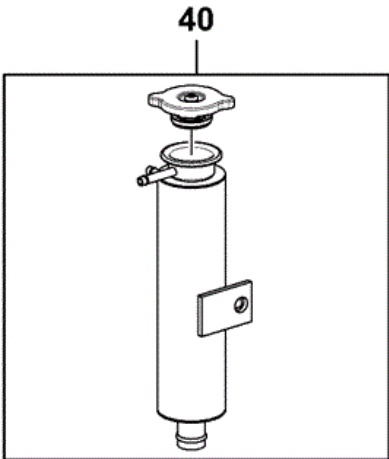


334-R0619-1

Item	Part #	Change No	Description	Usage Code	QTY
40	****		Filler coolant assembly		1
50	834/11170		Hose top radiator		1
60	333/V0008		Strut engine bay left hand		1



9822/0360 L100-10-1 ENGINE INSTALLATION ASSEMBLIES 404D-22 (EU)

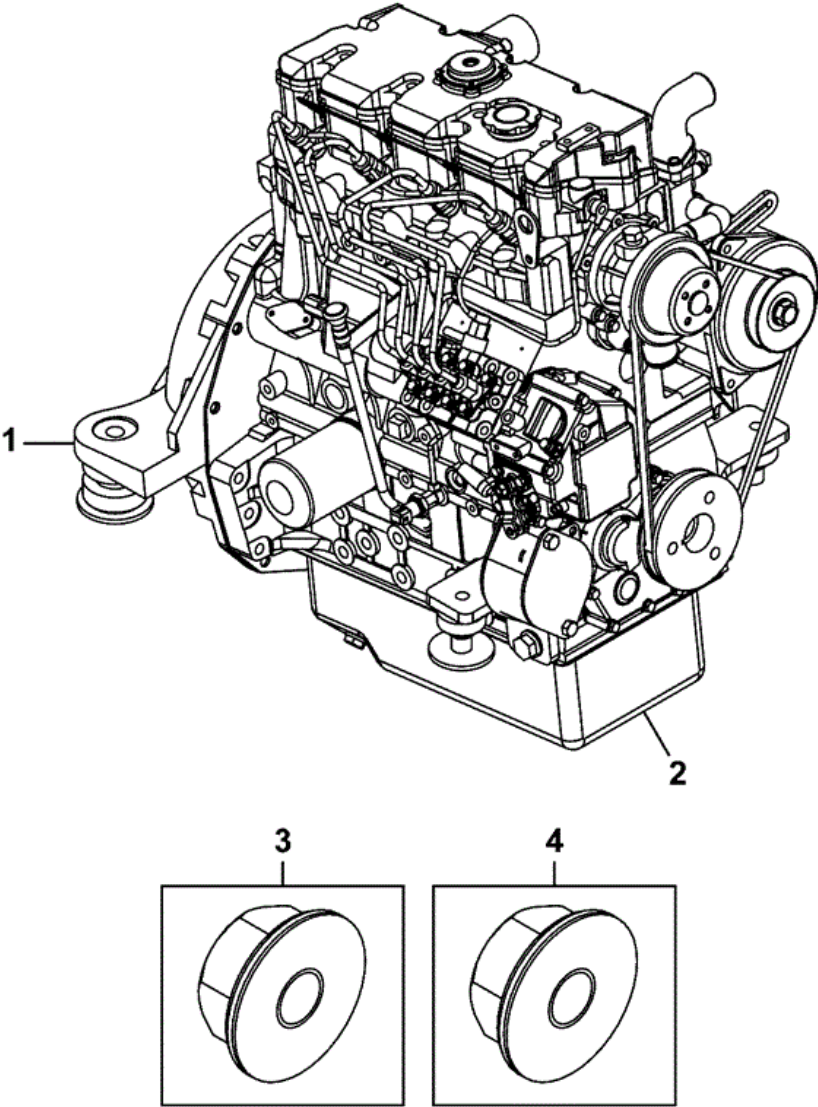


334-R2004-1

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Kit Engine Fittings		1

2	333/V7564		Engine Assembly 404D-22 36.3kw EU/ROW		1
3	1370/0008D		Nut M5 Standard Flanged		1
4	1370/0108D		Nut Flanged, Standard M6		1



9822/0360 L100-15-1 ENGINE INSTALLATION ASSEMBLIES 404D-22 (EU)

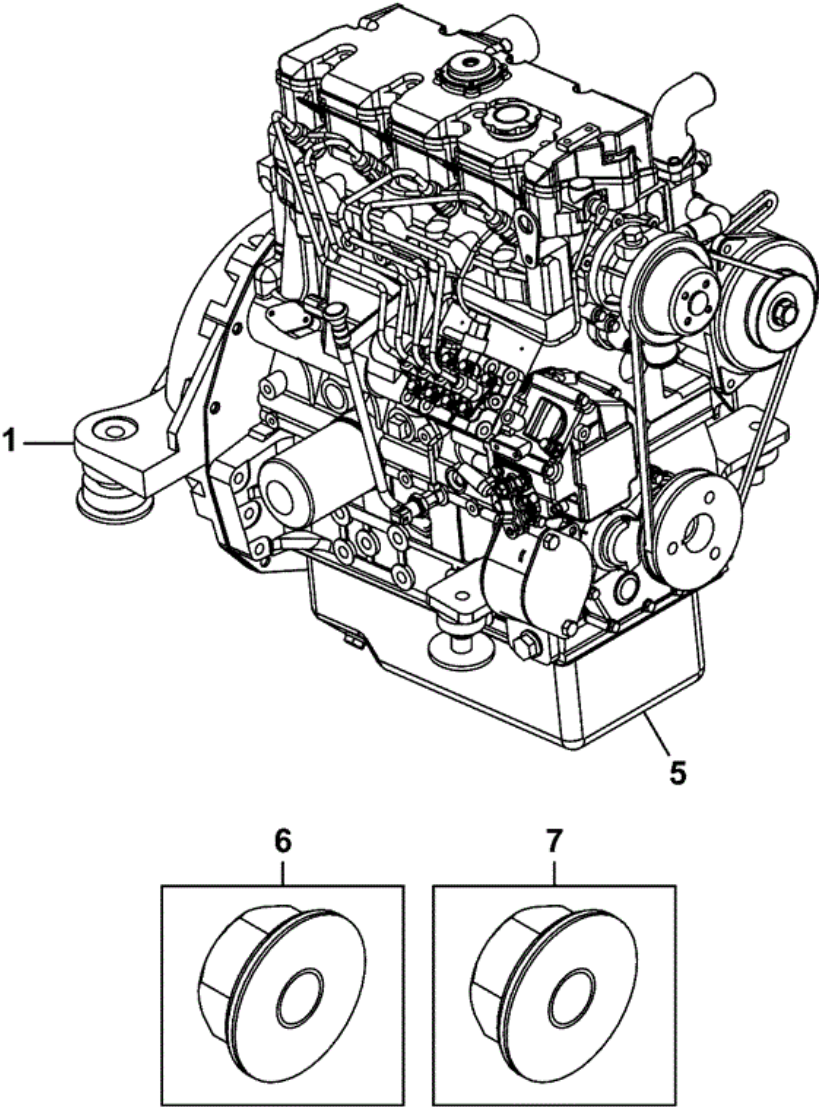

333-W3288-1



Item	Part #	Change No	Description	Usage Code	QTY
1	****		Kit Engine Fittings		1

5	333/V7564		Engine Assembly 404D-22 36.3kw EU/ROW		1
6	1370/0008D		Nut M5 Standard Flanged		1
7	1370/0108D		Nut Flanged, Standard M6		1



9822/0360 L100-20-1 ENGINE INSTALLATION ASSEMBLIES

404D-22 EPA

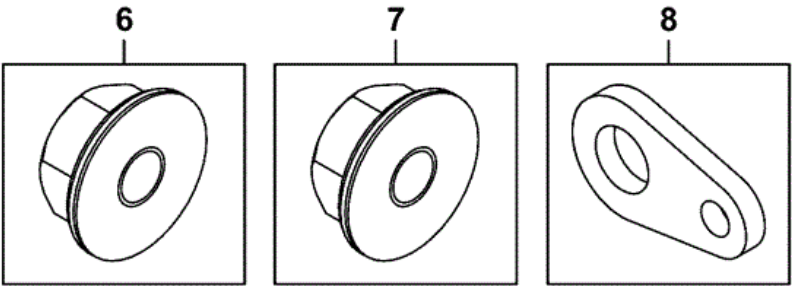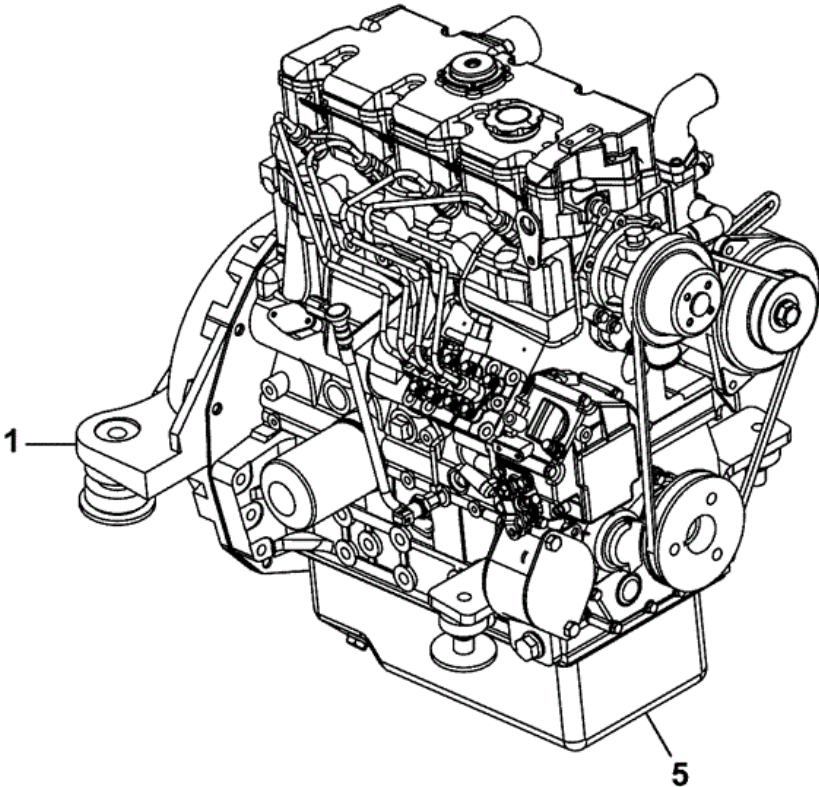


333-U5662-1

Item	Part #	Change No	Description	Usage Code	QTY
1	****		Kit Engine Fittings		1

5	333/W7805		Engine 404D-22 36.3k		1
6	1370/0008D		Nut M5 Standard Flanged		1
7	1370/0108D		Nut Flanged, Standard M6		1
8	331/65152		Plate throttle extension		1
10	****		Dataplate flex engine (2013)		1



9822/0360 L110-1-1 ENGINE ASSEMBLIES

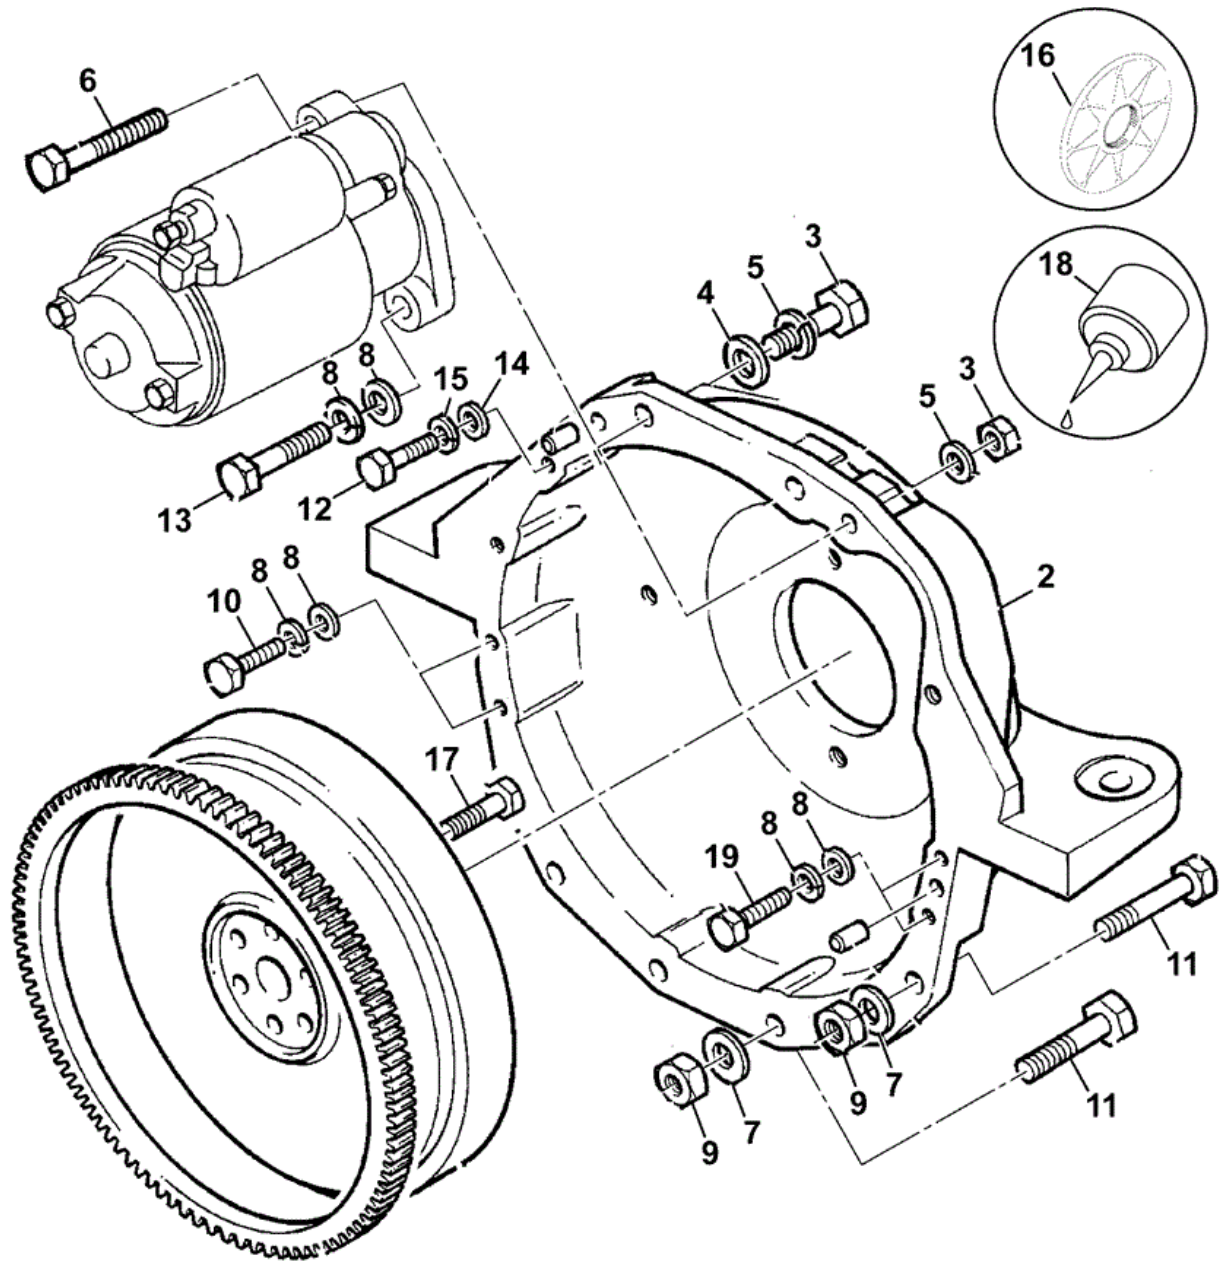


246-77700-4

Item	Part #	Change No	Description	Usage Code	QTY
2	246/01075		Housing flywheel		1
3	1315/0509Z		Setscrew M12 x 35mm		2
4	1420/0009Z		Washer (M12)		2

5	1425/0009Z		Washer Spring M12		2
6	1315/3411Z		Bolt M10 x 45mm		1
7	1420/0008Z		Washer (M10)		12
8	1425/0008Z		Spring Washer		7
9	1370/0303Z		Nut lock M10		8
10	1315/3412Z		Bolt M10x50		4
11	1315/3415Z		Bolt (M10 x 65)		2
12	1315/0407Z		Setscrew M10 x 25 mm		2
13	1305/1608Z		Setscrew (5/16 UNC x 1-1/4")		8
14	1420/0007Z		Washer (M8)		8
15	1425/0007Z		Washer Washer		8
16	45/913700		Coupling outer		1
17	1315/0408Z		Setscrew M10 x 30		4
18	4101/0200		Fluid Locking		0
19	1315/0409Z		Setscrew M10 x 35		1



9822/0360 L220-1-1 EXHAUST EXTENSION

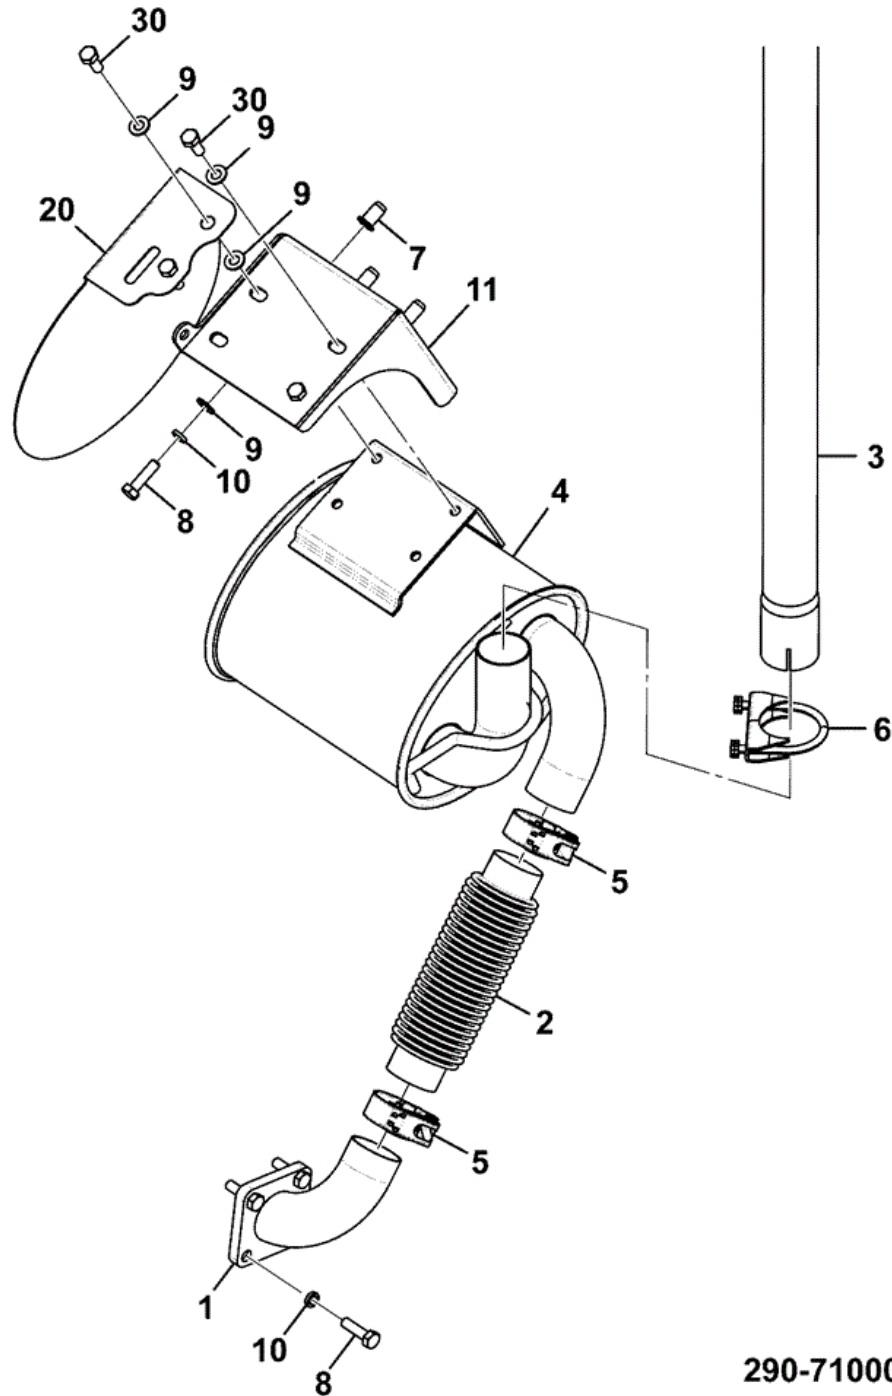


290-71000-7

Item	Part #	Change No	Description	Usage Code	QTY
1	290/01303		Pipe exhaust		1
2	332/T4480		Bellows flexible exhaust		1
3	331/43399		Pipe exhaust extension STANDARD		1

4	331/61325		Silencer exhaust		1
5	821/00522		Clamp band 44 to 47mm <i>FOR ITEM 2</i>		2
6	261/00202		Clamp 'U' <i>FOR ITEM 3</i>		1
7	826/01102		Nut M8 <i>BULKHEAD</i>		4
8	1315/0308D		Setscrew M8 x 30 mm <i>FOR ITEM 1 & 11</i>		8
9	1420/0007D		Washer (M8) <i>FOR ITEM 1 & 11</i>		10
10	1425/0007D		Washer Spring M8 <i>FOR ITEM 1 & 11</i>		8
11	331/14917		Bracket exhaust mounting		1
20	333/U7990		Shield /heatshield		1
30	1315/0305D		Setscrew M8 x 20mm		4




9822/0360 L310-1-1 INDUCTION FILTER PRE-CLEANER

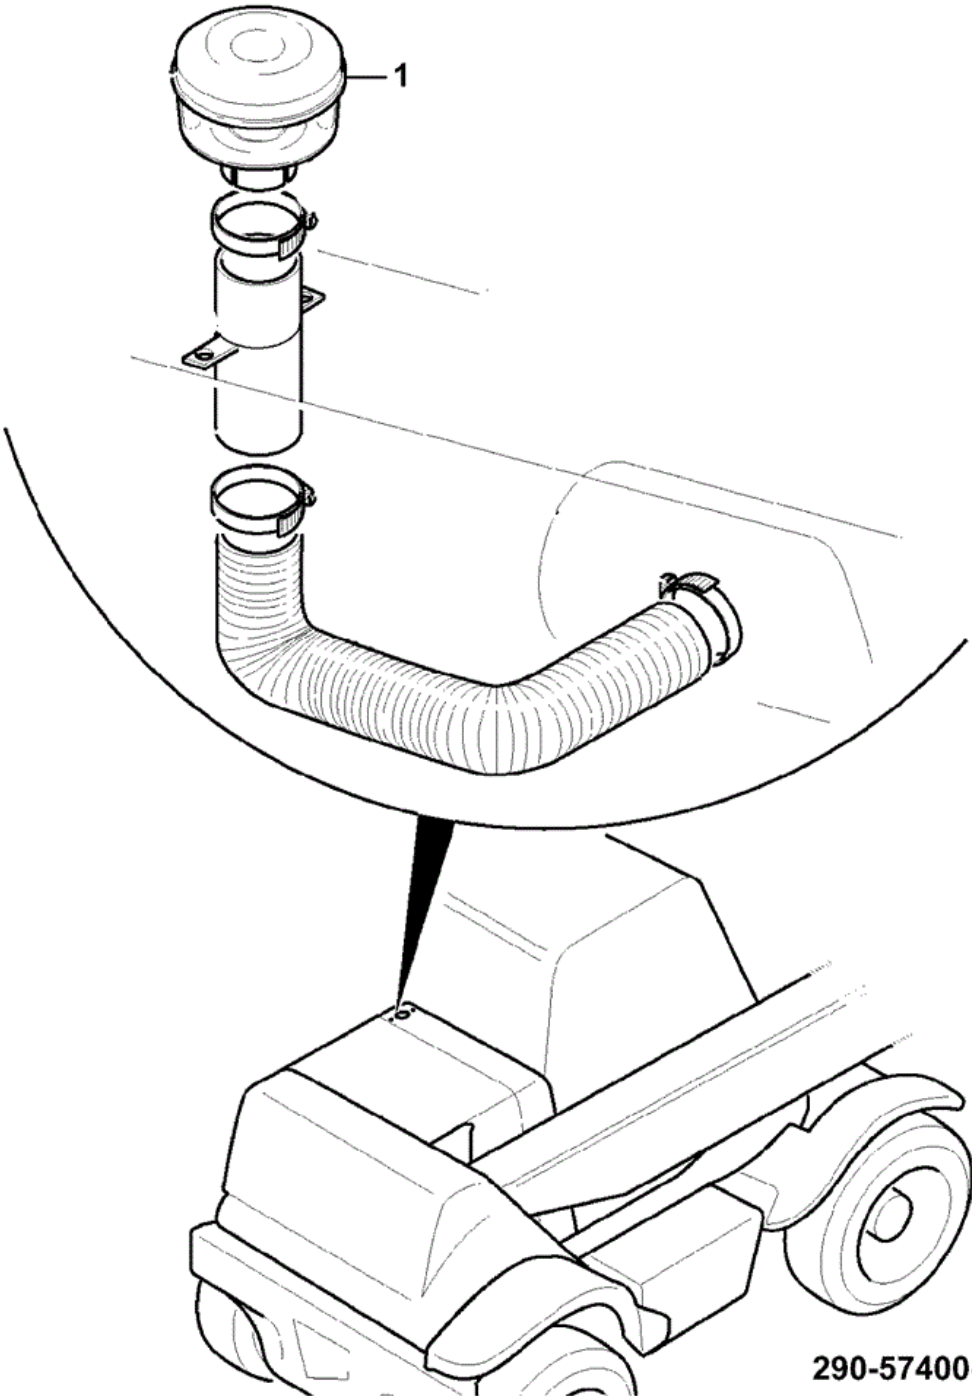

Item	Part #	Change No	Description	Usage Code	QTY
1	32/910300		Filter pre-cleaner		1



9822/0360 L310-2-0 INDUCTION FILTER ASSEMBLY

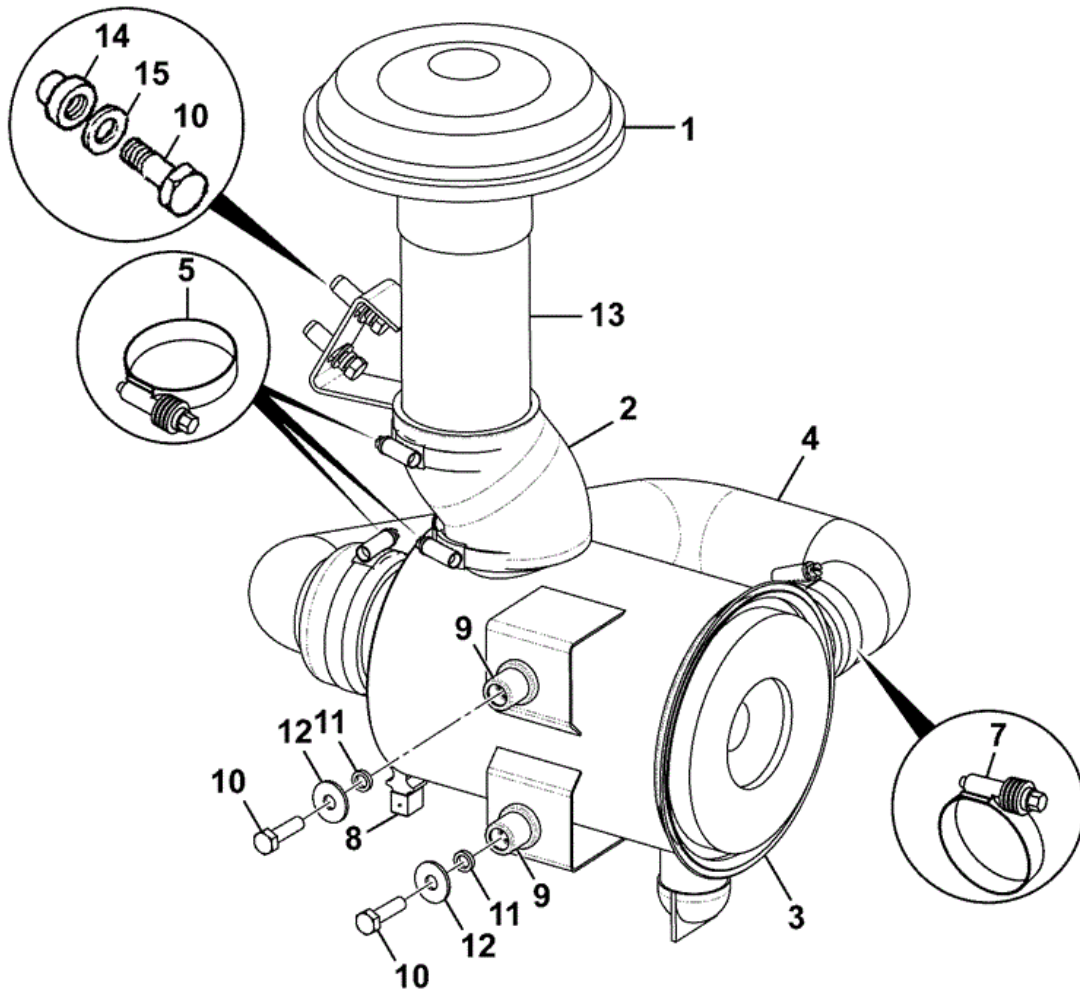

290-57300-4

Item	Part #	Change No	Description	Usage Code	QTY
1	32/916300		Cap rain		1
2	290/01304		Hose air induction		1
3	32/916400		Filter air		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com