





Item	Part #	Change No	Description	Usage Code	QTY
1	445/41100		Lever turret,assembly		1

2	:445/03022		Lever gear shift		1
3	:445/10803		Washer Ball		1
4	:445/03203		Shaft input		1
5	:814/00347		Spring		1
6	:445/40902		Retainer spring		1
7	:821/10294		Circlip Internal D2000-0750		1
8	:445/03021		Gaiter gear change		1
9	:445/05301		Clip		1
10	:445/05302		Clip		1
11	:835/10036		Plug		1
19	445/03031		Roller Baulk		1
20	814/00354		Spring		2
21	916/00006		Ball 11mm dia		2
22	816/80057		Plug detent		2
34	1321/0407Z		Bolt Coated M10 x 25		4
48	816/80051		Plug 1/8" Tapered		1
55	445/40107		Fork selector		1
56	445/26110		Screw		4
57	445/40109		Shaft selector		2
58	445/26104		Block selector		2
59	:445/40108		Fork selector		1
91	813/50044		Gasket		1

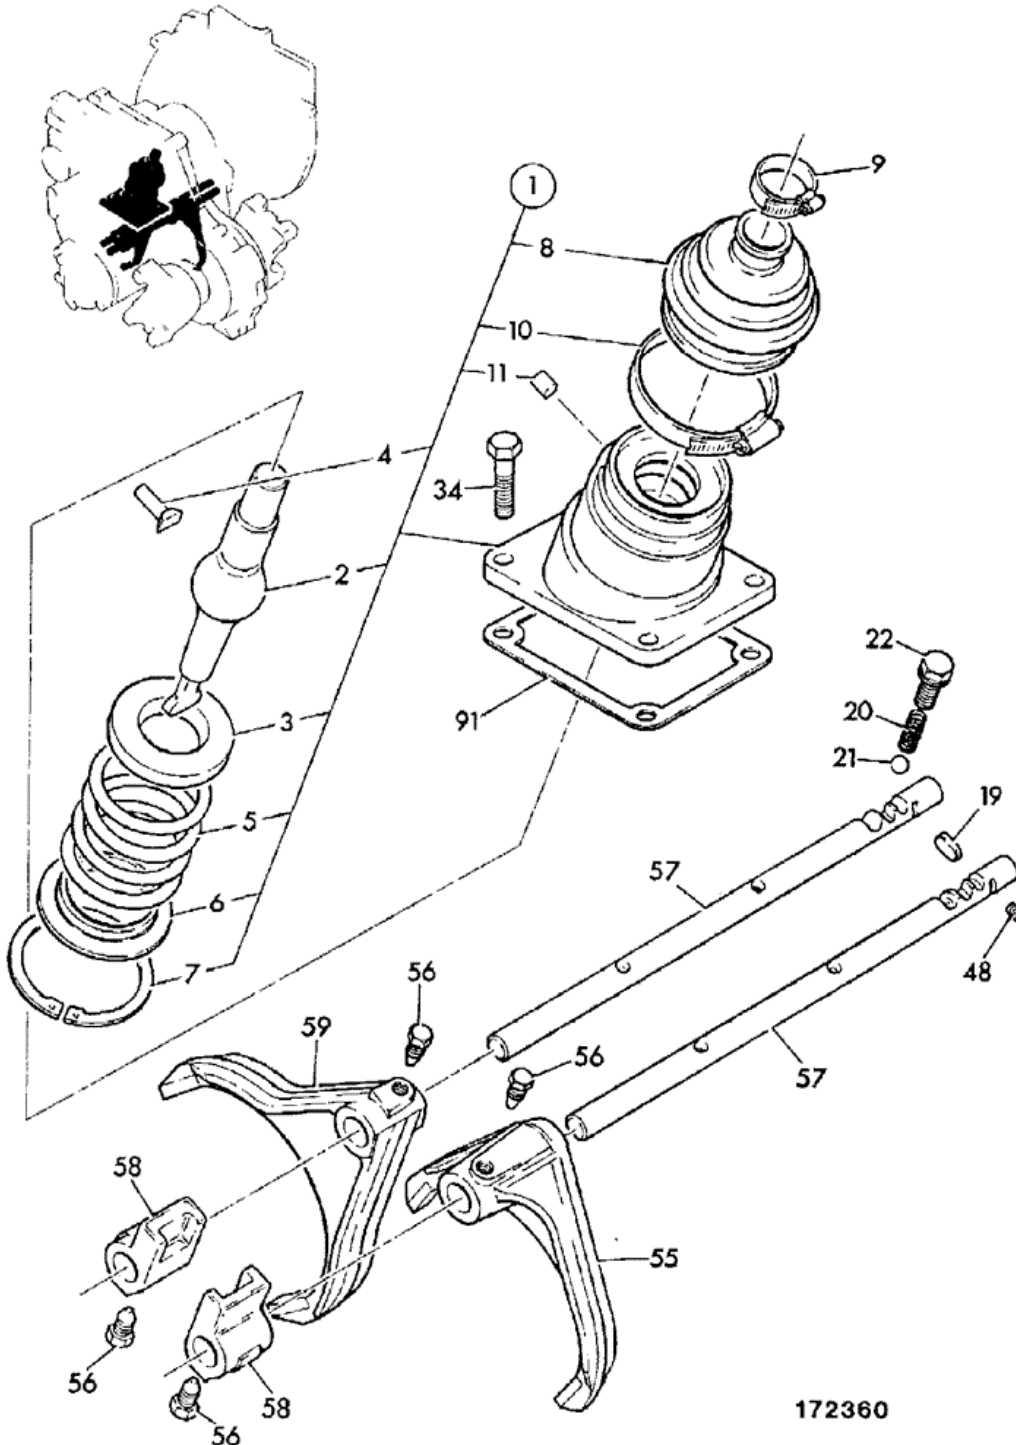


9802/8840 F5-6-2 TRANSMISSION MOUNTING PTO

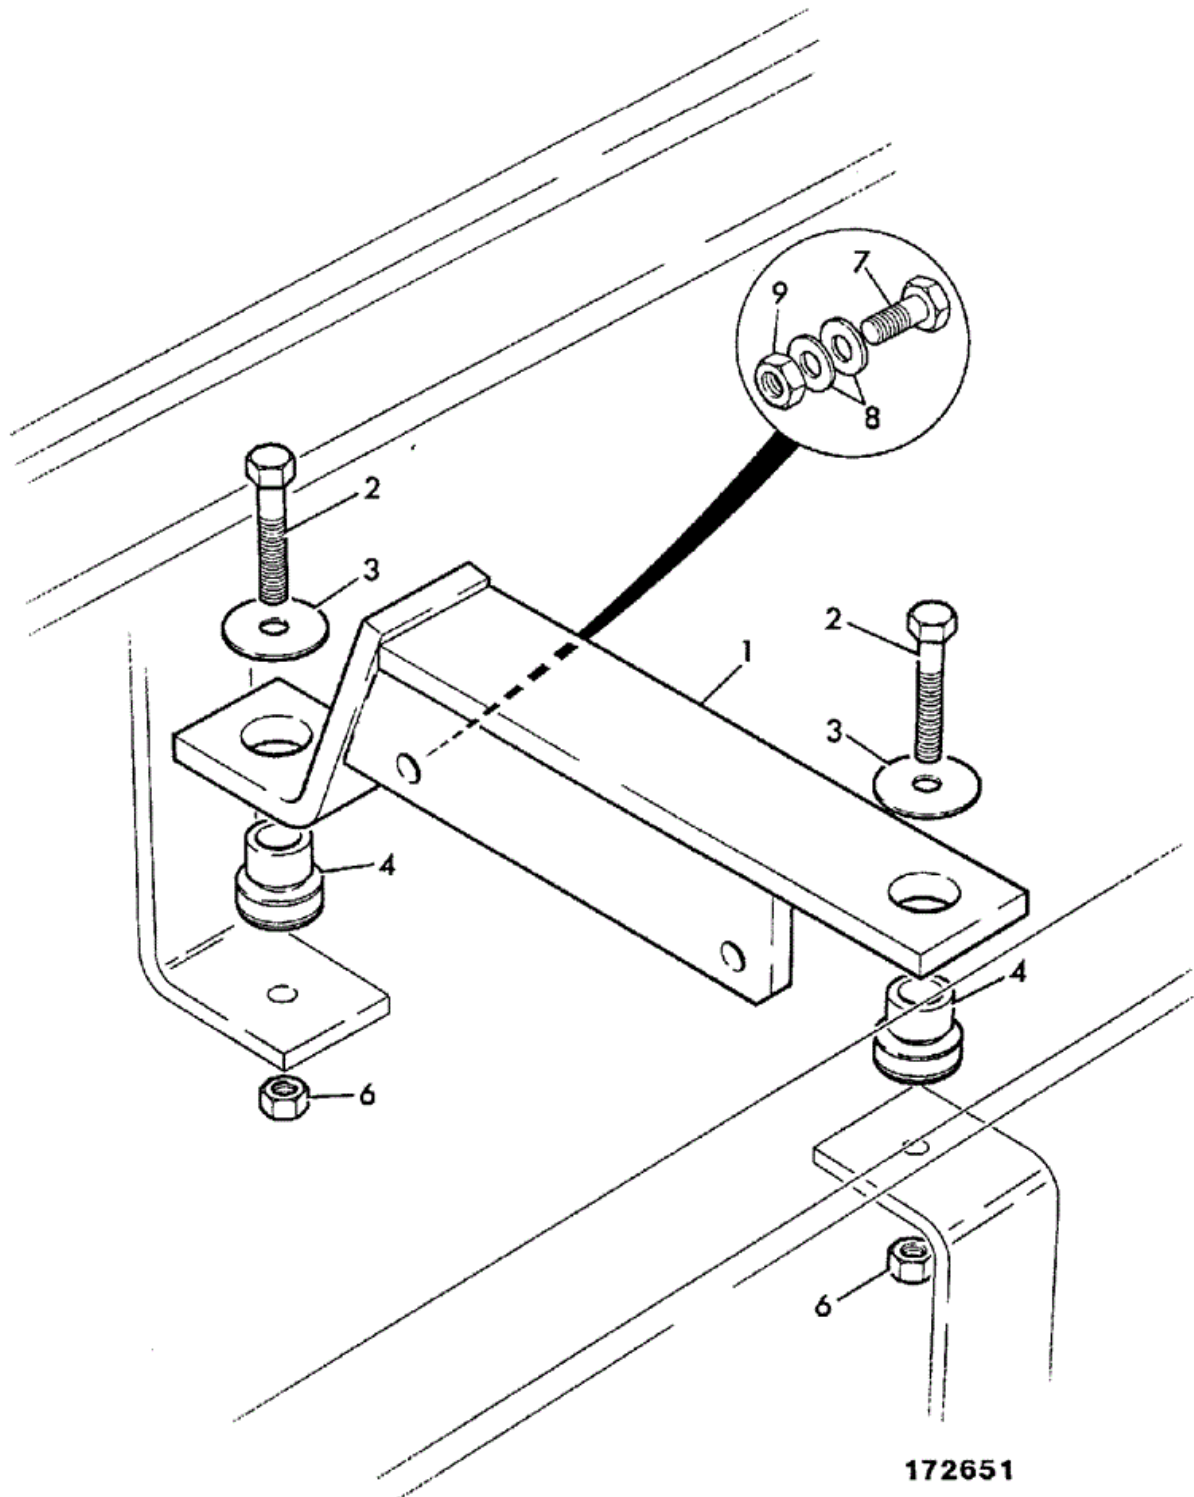

Item	Part #	Change No	Description	Usage Code	QTY
1	141/64900		Bracket transmission		1
2	1315/3717Z		Bolt M16 x 75mm		2
3	1420/0011Z		Washer (M16)		4
4	111/30101		Mounting metalastik		2
5	1420/0011Z		Washer (M16)		2
6	1370/0603Z		Nut lock M16		2
7	1315/3518Z		Bolt M12 x 80mm		2
8	123/02453		Washer Rebound (13.5mm x 65mm x 5mm)		2
9	1370/0403Z		Nut Lock, M12		2



9802/8840 F5-7-2 TORQUE CONVERTER AND DIPSTICK

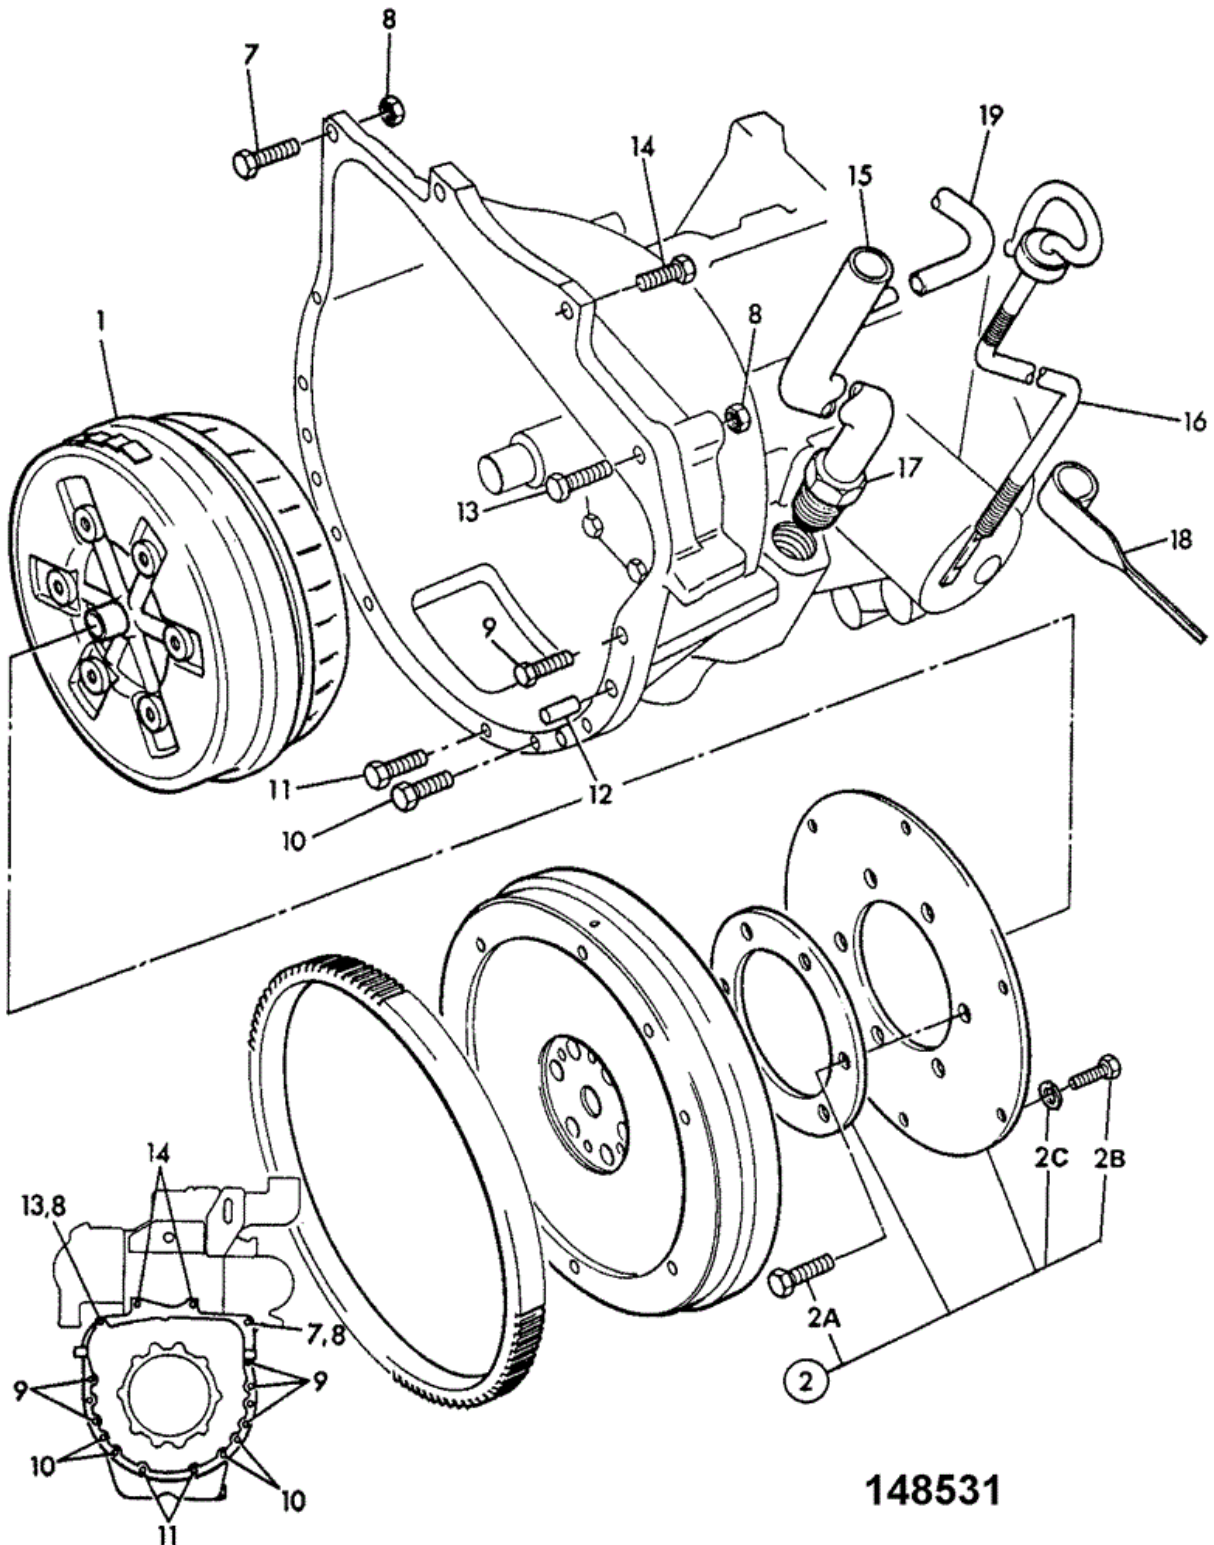


148531

Item	Part #	Change No	Description	Usage Code	QTY
------	--------	-----------	-------------	------------	-----

1	04/501100		Converter 2.67:1 ratio 2 yellow spots and 1 orange spot	P/Ex	1
2	04/500300		Kit-drive plate		1
2A	:04/500303		Bolt		6
2B	:04/500304		Bolt		6
2C	:04/500305		Washer plain		6
3	****		'See Remark' <i>Flywheel assembly.</i>		1
4	****		'See Remark' <i>Starter ring gear.</i>		1
5	****		'See Remark' <i>Bolt (Not illustrated)</i>		6
6	****		'See Remark' <i>Washer. (Not illustrated)</i>		3
7	1315/3512Z		Bolt M12 x 50mm		1
8	1370/0403Z		Nut Lock, M12		2
9	1315/3514Z		Bolt M12 x 60mm		5
10	1315/3516Z		Bolt M12 x 70mm		4
11	1315/0511Z		Bolt M12 x 45mm		2
12	02/101370		Dowel		2
13	1391/3520		Capscrew M12 x 100mm long		1
14	1315/0508Z		Setscrew M12 X 30		2
15	141/68300		Tube filler		1
16	141/47900		Dipstick gearbox		1
17	155/10600		Nut Male 1"		1
17A	:904/20334		Kit-seal & ferrule		1
18	141/01233		Clamp		1
19	647/02117		Tube <i>Cut to length, 1300mm approx. required.</i>		1
20	1391/3530		Capscrew		1

JCB 9802/8840 F5-8-1 TRANSMISSION JCB SYNCRO SHUTTLE
BRAKE PIPES, PTO

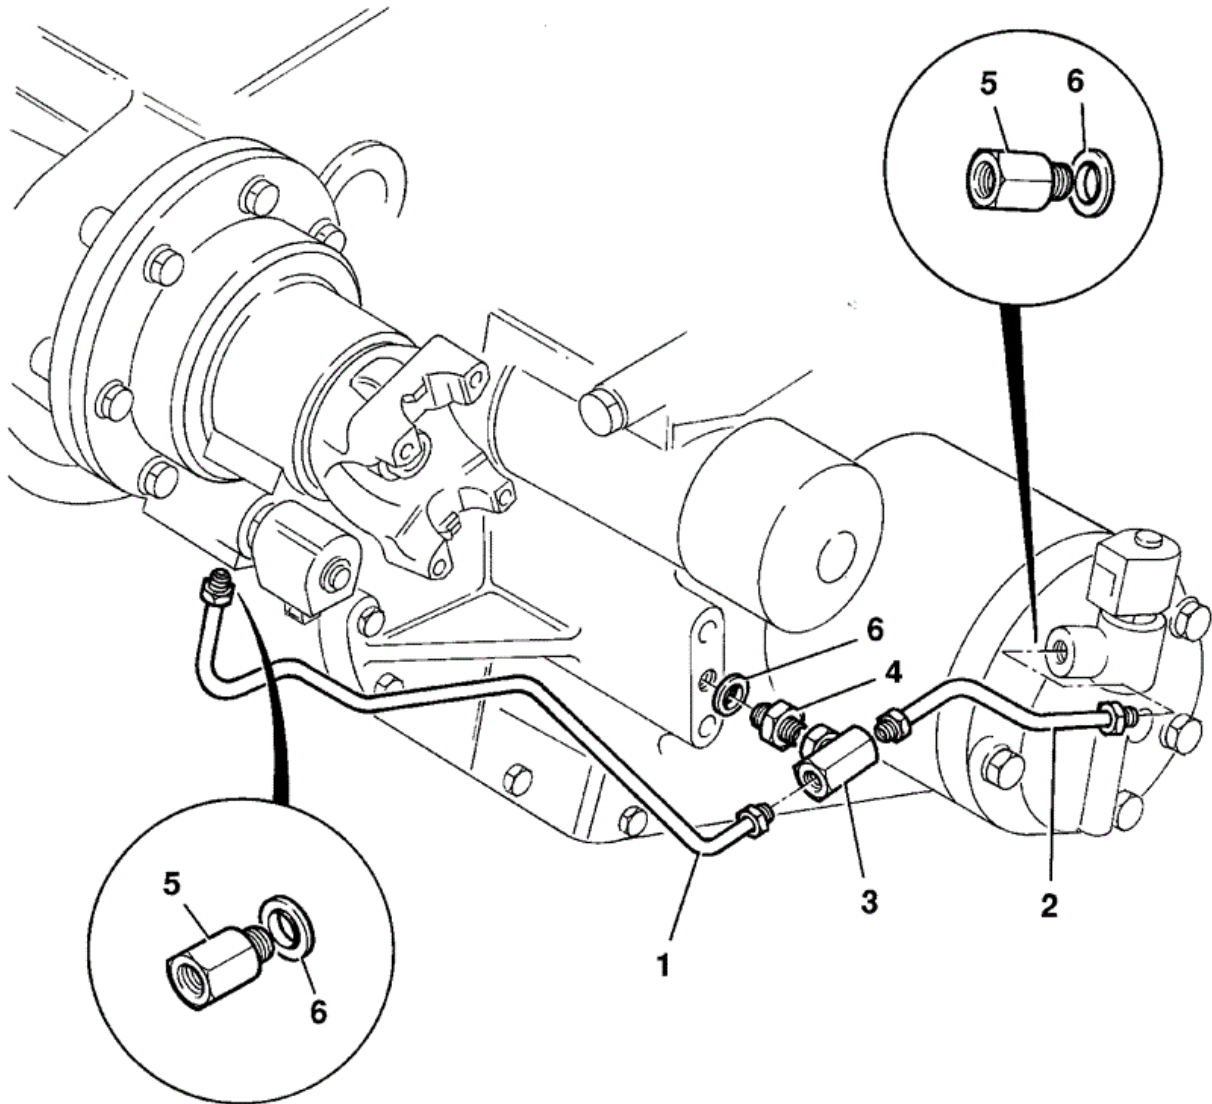


209990

Item	Part #	Change No	Description	Usage Code	QTY
1	445/43600		Pipe feed		1
2	445/43700		Pipe brake		1
3	445/42604		Adapter tee		1
3	445/45603		Adapter tee <i>Fitted to 20KPH PTO G/boxes</i>		1
4	445/42605		Adapter		1
5	445/66100		Valve non-return male/female		2
6	1406/0011		Washer Bonded (1/4")		2



9802/8840 G1-2-6 BRAKE, AXLE SD55

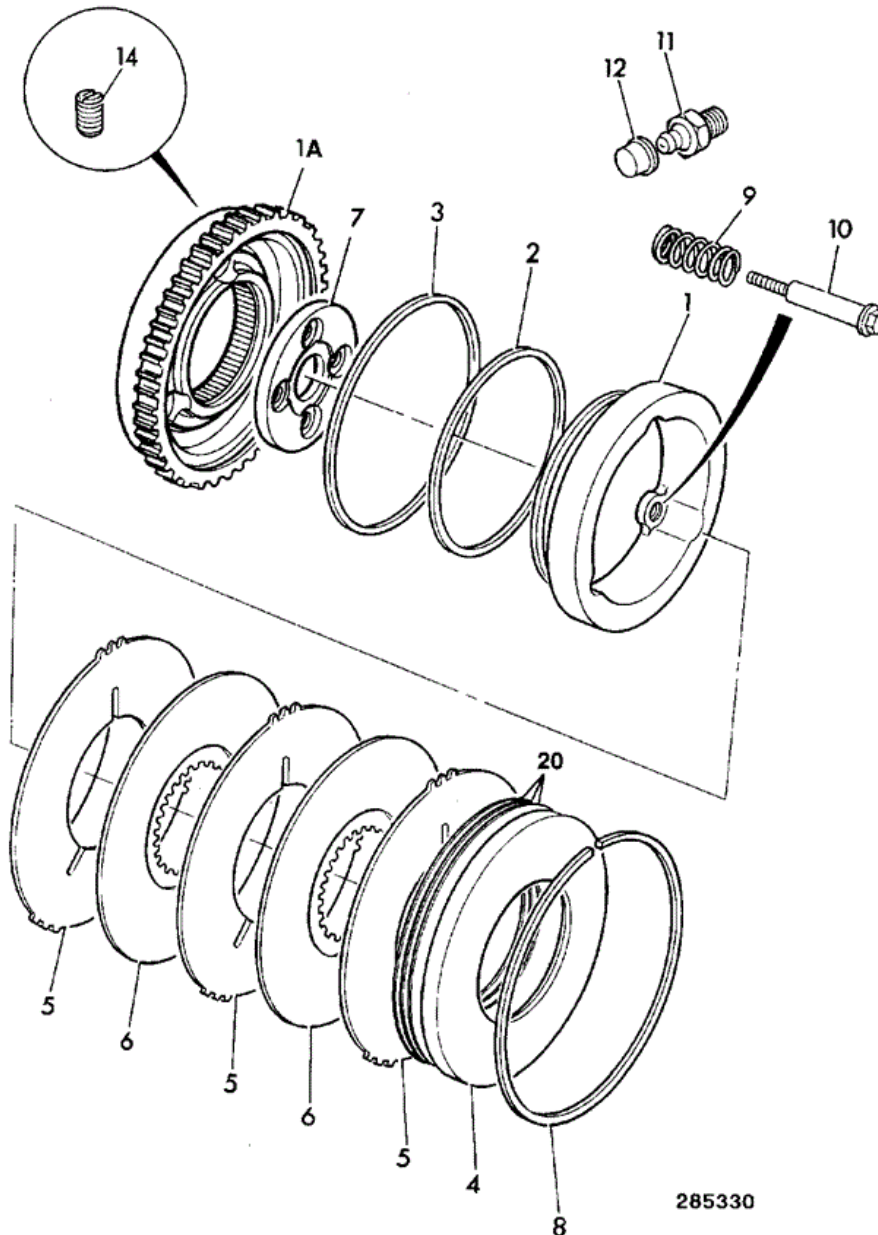

Item	Part #	Change No	Description	Usage Code	QTY
1	448/54603		Piston brake	Per M/c	4
1A	448/54602		Carrier annulus internal spline <i>Per M/c</i>		4


2	813/50015		Seal	Per M/c	4
3	813/50014		Seal	Per M/c	4
4	453/01807	Superseded	Plate pressure	Per M/c	4
4	458/20289		Plate brake counter <i>See Note 1</i>	Per M/c	12
5	453/15301	Superseded	Plate brake counter	Per M/c	12
5	458/20353		Plate brake friction <i>See Note 2</i>	Per M/c	8
6	450/10224		Plate brake friction	Per M/c	8
7	453/30305		Plate retaining	Per M/c	4
8	2203/1145		Circlip	Per M/c	4
9	814/00367		Spring compression <i>Per M/c</i>		12
10	440/08902		Pin hexagon head <i>Per M/c</i>		12
11	816/60040		Nipple Screw	Per M/c	4
12	835/00017		Cap Grease Nipple	Per M/c	4
14	826/01343		Screw Grub, Nylon Coated	Per M/c	4
20	921/52300		Kit-shim		0

Note 1: Supply with 458/20353 when replacing 453/15301

Note 2: Supply with 458/20289 when replacing 450/10224



9802/8840 G1-3-1 BRAKE SYSTEM CHARGE CIRCUIT

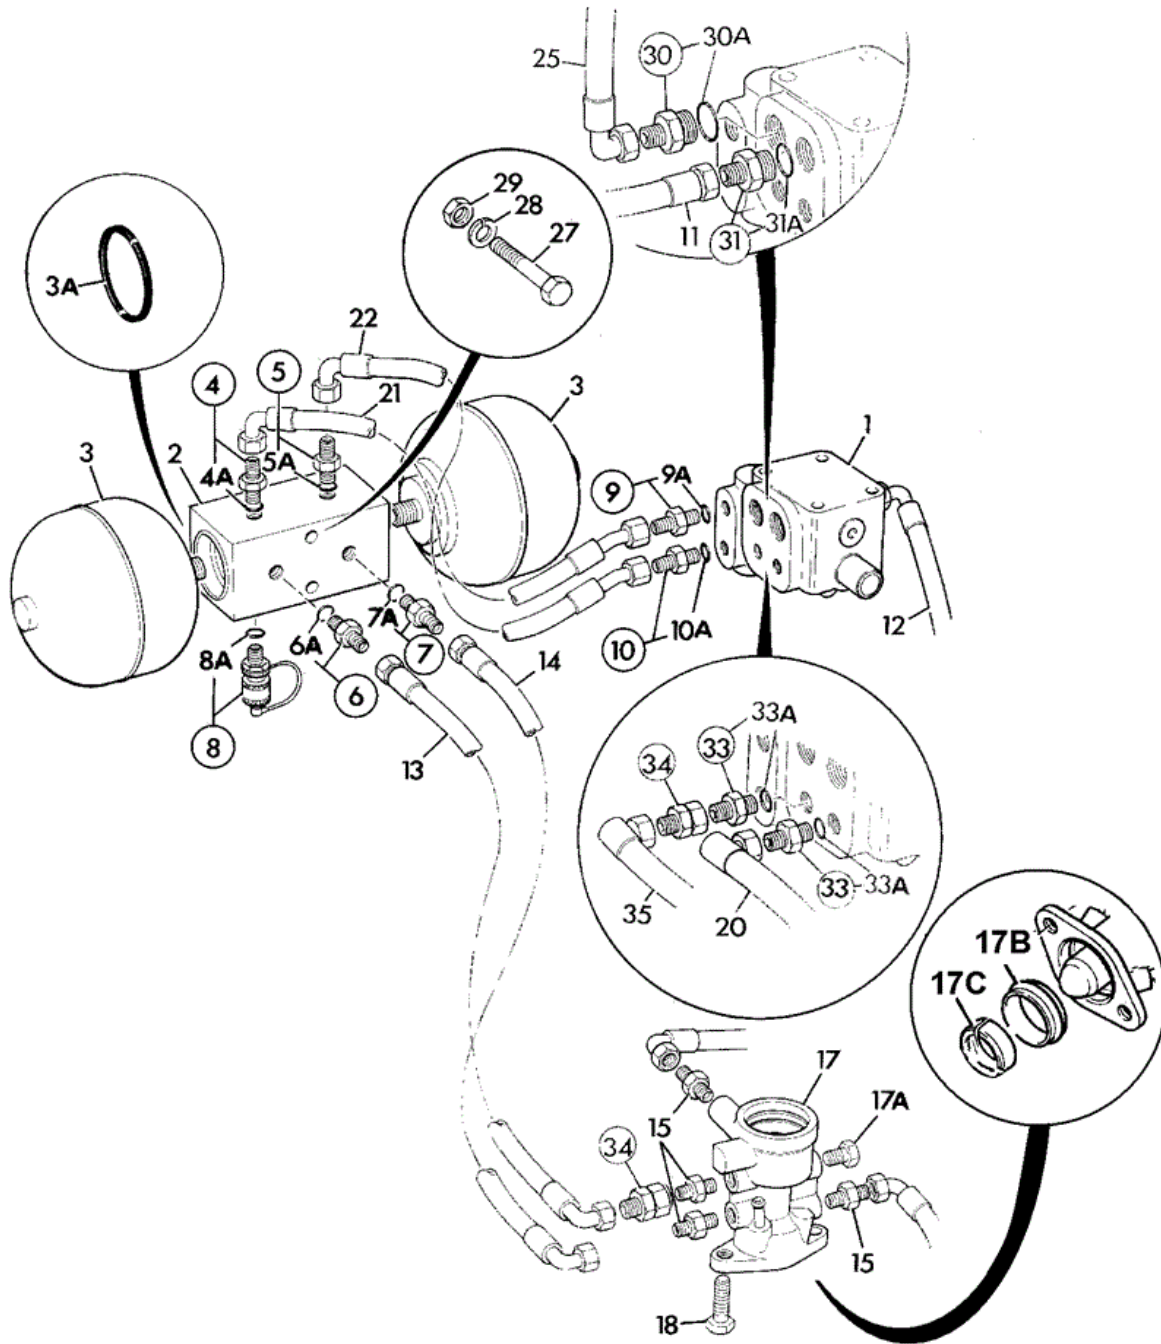


230883

Item	Part #	Change No	Description	Usage Code	QTY
1	****		'See Remark' <i>Brake charge valve, see Index E3</i>		1
2	141/00686		Block adapter		1

3	15/910700	Accumulator	2
3A	:15/910701	Seal	1
4	816/60051	Adapter	1
4A	:2401/0505	O Ring	1
5	816/60051	Adapter	1
5A	:2401/0505	O Ring	1
6	816/60051	Adapter	1
6A	:2401/0505	O Ring	1
7	816/60051	Adapter	1
7A	:2401/0505	O Ring	1
8	816/60230	Plug test point	2
8A	:2401/0505	O Ring	1
9	816/60051	Adapter	1
9A	:2401/0505	O Ring	1
10	816/60051	Adapter	1
10A	:2401/0505	O Ring	1
11	614/25700	Hose 5/8 BSP 400 mm <i>Hose to loader valve</i>	1
12	614/44600	Hose <i>Hose to pump</i>	1
13	611/47300	Hose	1
14	611/47300	Hose	1
15	816/15155	Adapter	4
17	15/910500	No longer available See TI 2/548 for 2CX or 5/400 for 520-50	1
17A	****	'See Remark' <i>Plug</i>	1
17B	:25/986301	Seal	1
17C	:25/986302	Ring retaining	1
18	826/01362	Screw special	2
19	1370/0103Z	Nut Self Lock M6	2
20	****	'See Remark' <i>Hose to tank</i>	1
21	611/27300	Hose 1/4"BSP x 375mm	1
22	611/27300	Hose 1/4"BSP x 375mm	1
23	817/03210	Decal Accumulator pressure	1
24	701/58600	Switch Brake Pressure	1
24A	:2401/0505	O Ring	1
25	****	'See Remark' <i>Hose to steering valve</i>	1
27	1315/3317Z	Bolt M8 x75 mm	2
28	1425/0007Z	Washer Washer	2
29	1370/0203Z	Nut Nut M8	2
30	816/15096	Adapter 3/8 BSP to 7/8 UNF	1
30A	:2401/0506	O Ring	1
31	1620/0008	Adapter	1
31A	2401/0508	O Ring	1
33	816/60051	Adapter	2
33A	2401/0505	O Ring	2
34	1612/0002	Adapter	2
34A	828/00237	O Ring 1/4"BSP	1
35	****	'See Remark' <i>Hose to steering valve (load sensing)</i>	1



9802/8840 G1-4-2 BRAKE PEDAL

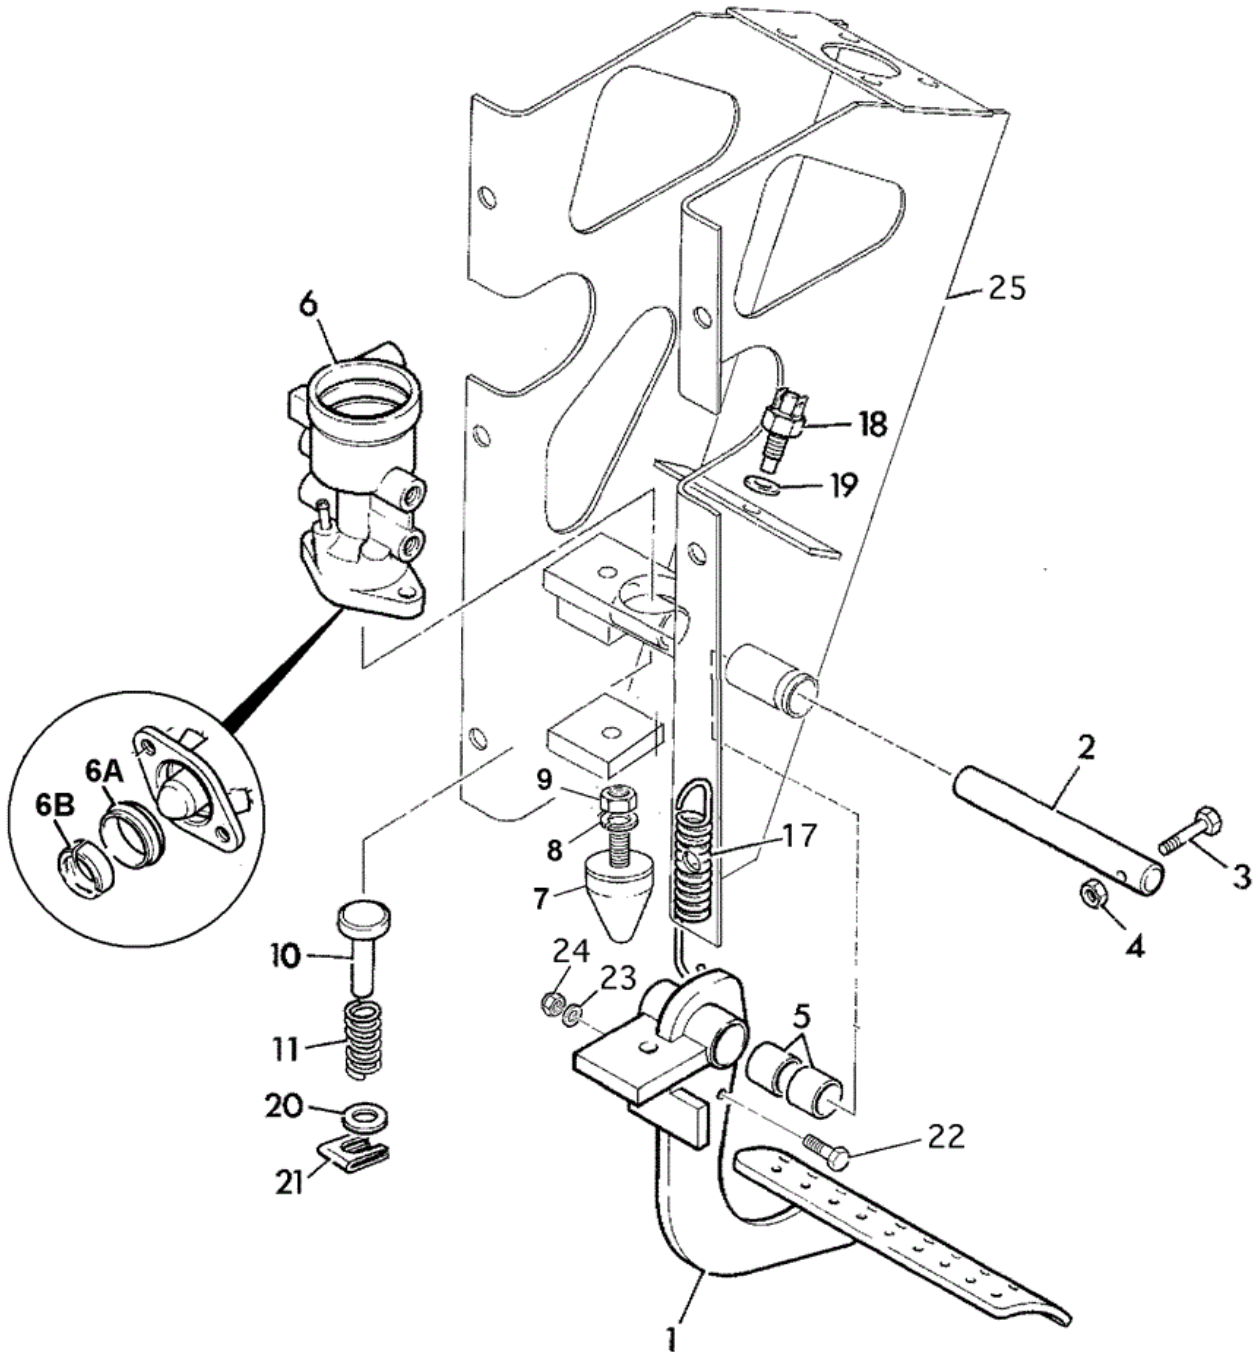


313401

Item	Part #	Change No	Description	Usage Code	QTY
1	142/63500	<M762865	Pedal brake		1
1	142/70300		Pedal brake		1
2	811/50237		Pivot pin		1

3	1315/3310Z		Bolt (M8 x 40)		2
4	1370/0203Z		Nut Nut M8		1
5	831/00065		Bearing		2
6	15/910500		No longer available See TI 2/548 for 2CX or 5/400 for 520-50		1
6A	:25/986301		Seal		1
6B	:25/986302		Ring retaining		1
7	141/00703		Buffer rubber		1
8	1425/0007Z		Washer Washer		1
9	1370/0102Z		Nut		1
10	141/00772		Plunger		1
11	814/00360		Spring		1
17	814/00408	<M762865	Spring		1
18	701/44800	Superseded	Switch brake light/Dump black top <i>Changes mid March 99</i>		1
18	701/72600	Superseded	Switch brake light <i>Cut in mid March 99</i>		1
18	701/80191		Switch brake light 12 volt green top		1
19	****		'See Remark' <i>Washer</i>		1
20	1420/0006Z		Washer (M6)		1
21	913/00703		Fastener safety		1
22	1315/0308Z		Setscrew M8 x 30 <i>To secure item 17</i>		1
23	1420/0006Z		Washer (M6)		1
24	1370/0201Z		Nut Standard M8		1
25	142/63400	<M762865	Console steering/brake		1
25	142/70400		Console steering/brake		1



9802/8840 P1-1-4 ENGINE, COMPLETE AJ BUILD 65 BHP

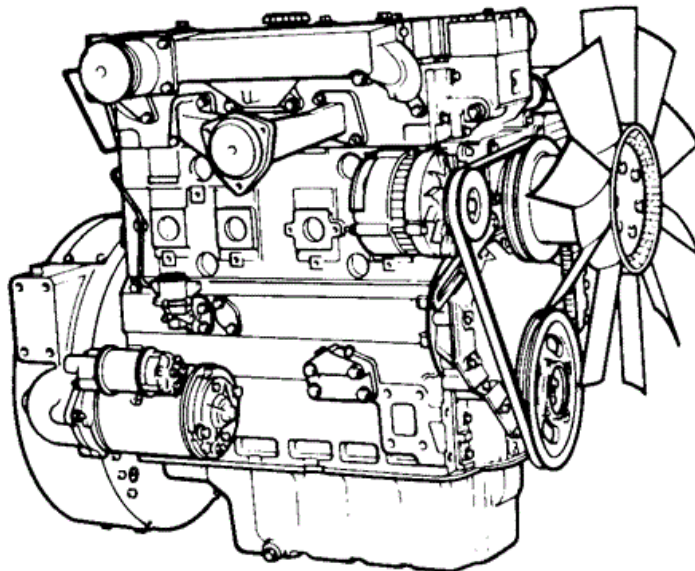


098010

Item	Part #	Change No	Description	Usage Code	QTY
1	01/140900		Engine complete 1004-4 nat/aspirated, 65bhp		1



9802/8840 P1-2-4 ENGINE, LONG AJ BUILD 66 BHP

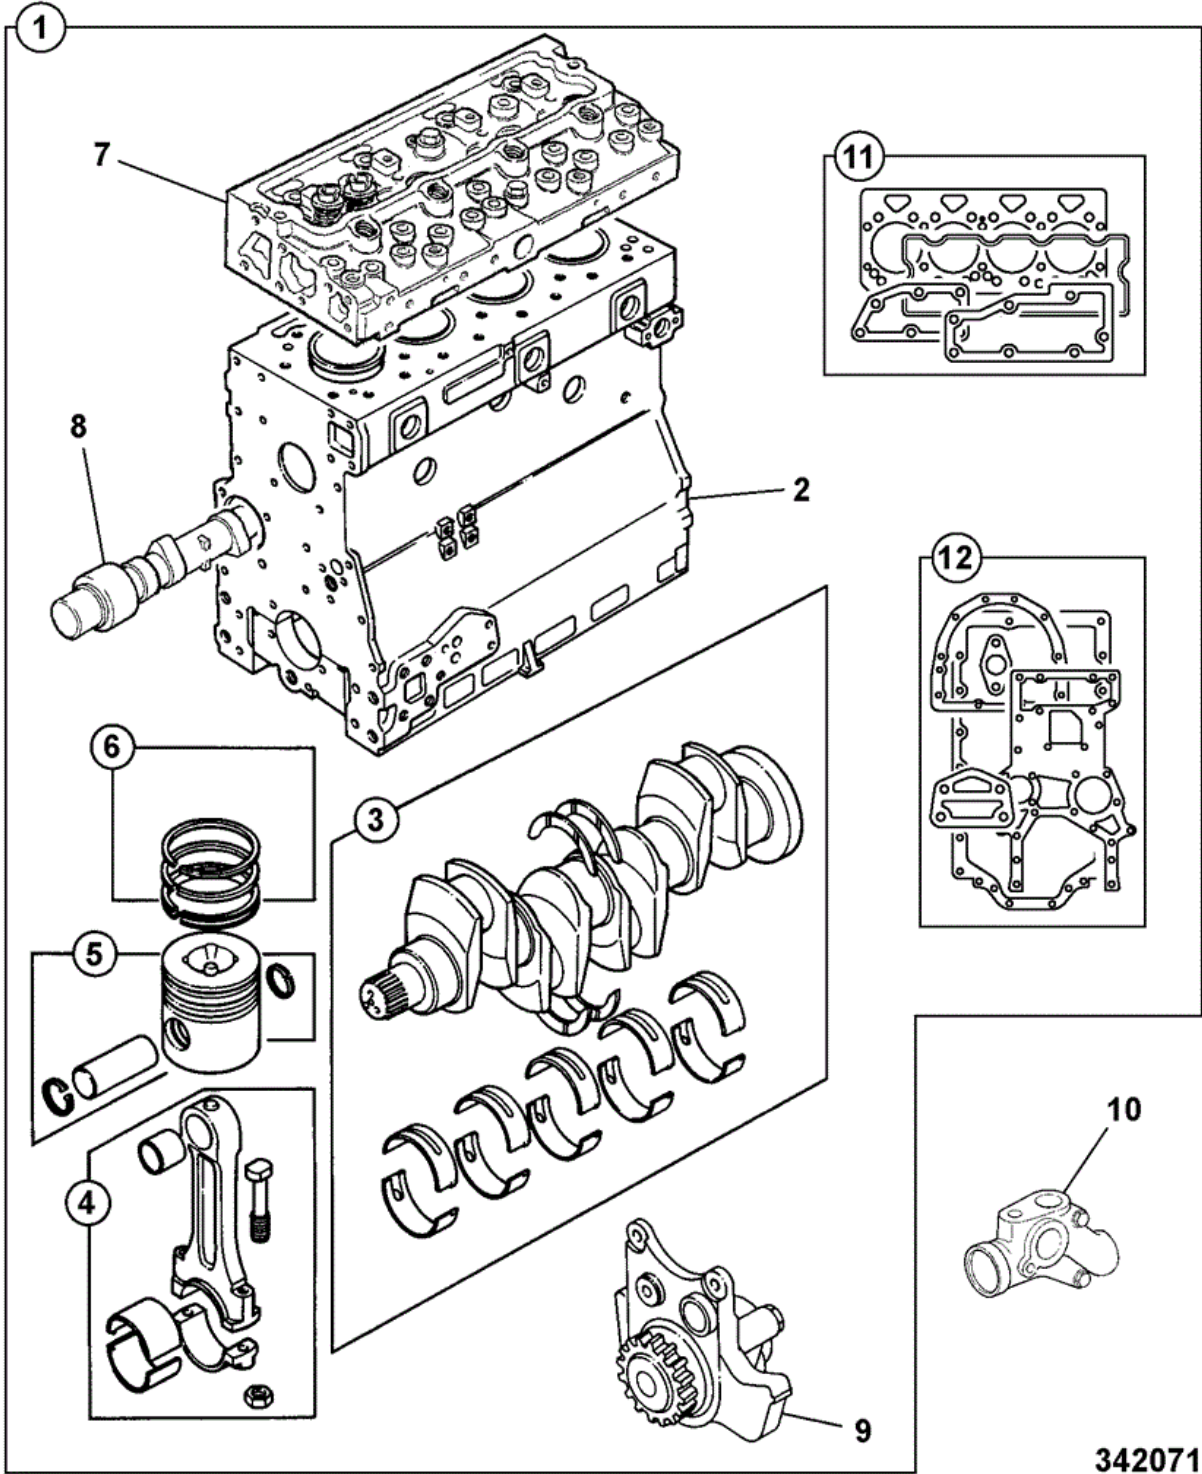


342071

Item	Part #	Change No	Description	Usage Code	QTY
1	02/202539		Engine short		1
2	****		'See Remark'		1

			<i>See frame P1-3-2, Block Assembly</i>		
3	****		'See Remark' <i>See frame P1-4-2, Crankshaft assembly</i>		1
4	****		'See Remark' <i>See frame P1-4-2, Con-rod assembly</i>		4
5	****		'See Remark' <i>See frame P1-4-2, Piston assembly</i>		4
6	****		'See Remark' <i>See frame P1-4-2, Piston ring kit</i>		4
7	****		'See Remark' <i>See frame P2-1-2, Cylinder head</i>		1
8	****		'See Remark' <i>See frame P1-6-2, Timing case</i>		1
9	****		'See Remark' <i>See frame P5-2-2, Oil pump</i>		1
10	****		'See Remark' <i>See frame P5-2-2 Oil relief valve</i>		1
11	****		'See Remark' <i>See frame P8-1-2, Gasket set top</i>		1
12	****		'See Remark' <i>See frame P8-2-2, Gasket set bottom</i>		1



9802/8840 P1-3-2 BLOCK ASSEMBLY AJ BUILD

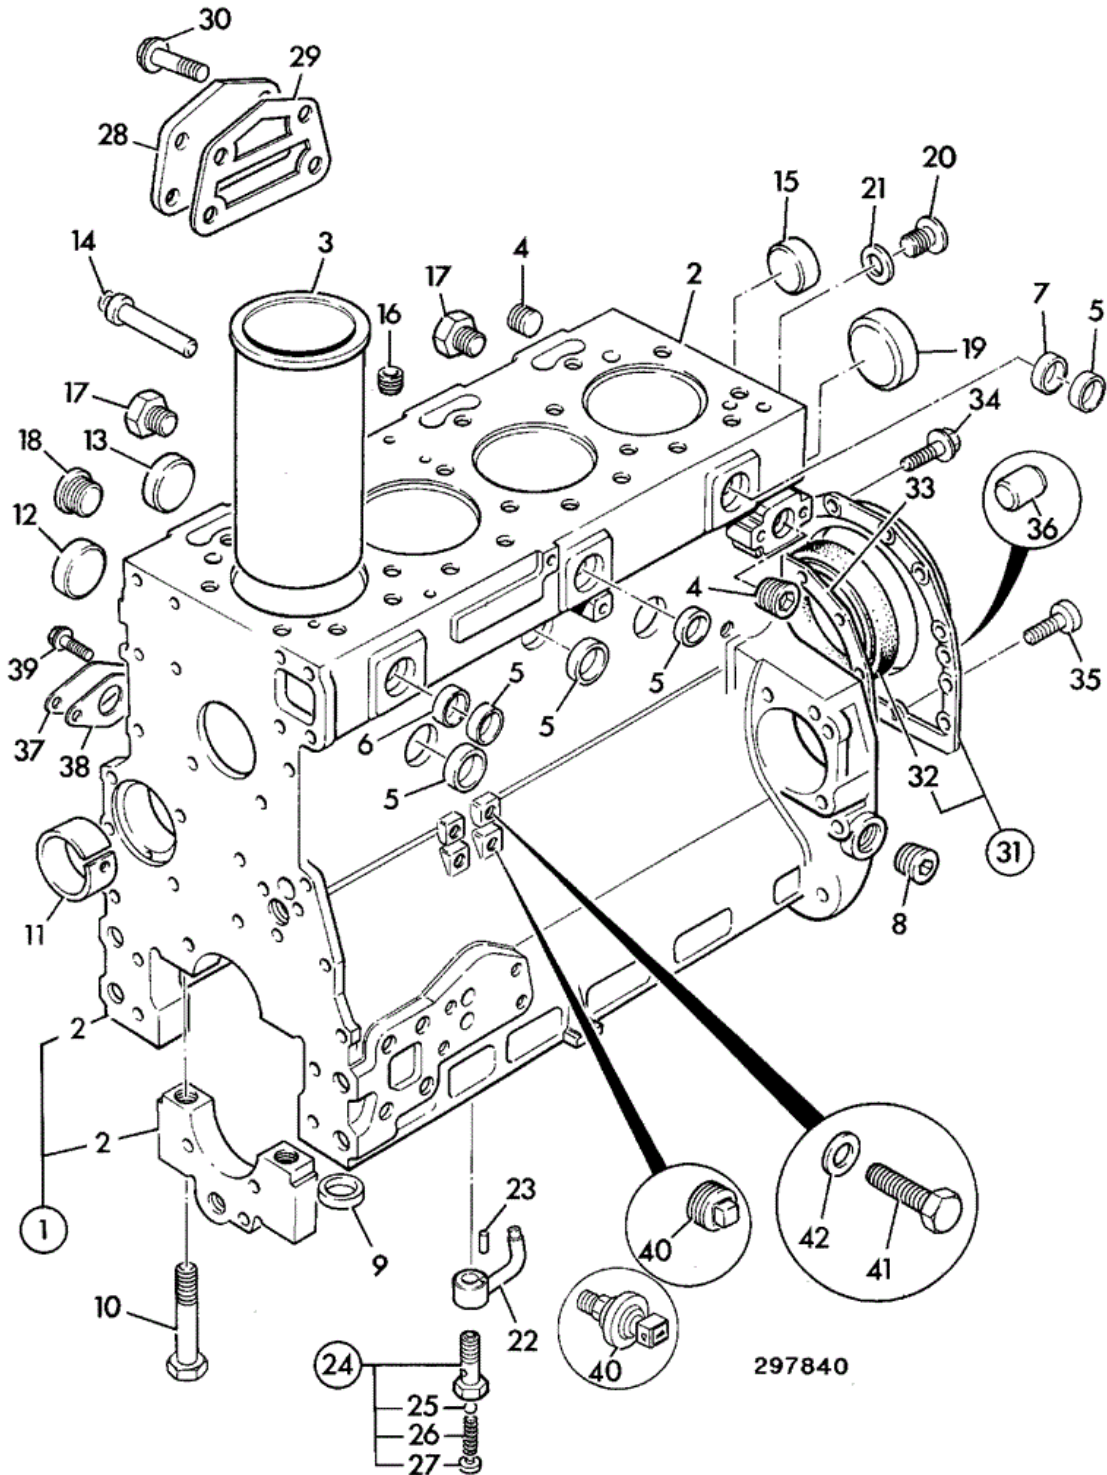

Item	Part #	Change No	Description	Usage Code	QTY
1	02/201660		Block cylinder assembly		1
2	****		None serviced part		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com