





9802/2270 L1-2-2 ENGINE, SHORT CM BUILD



Item	Part #	Change No	Description	Usage Code	QTY
1	02/130290		Engine short		1
2	****		'See Remark' <i>See L1-3-2 Block assembly</i>		1
3	****		'See Remark' <i>See L1-4-2 Crankshaft assembly</i>		1
4	****		'See Remark' <i>See L1-4-2 Con-rod assembly</i>		4
5	****		'See Remark' <i>See L1-4-2 Piston assembly</i>		4
6	****		'See Remark' <i>See L1-4-2 Piston ring kit</i>		4
7	****		'See Remark' <i>See L5-2-1 Oil pump</i>		1
8	02/101810		Plug <i>See Note 2</i>		1
9	02/130169		Plug <i>See Note 2</i>		2
10	816/00357		Adapter <i>See Note 1, For engine oil pressure switch</i>		1

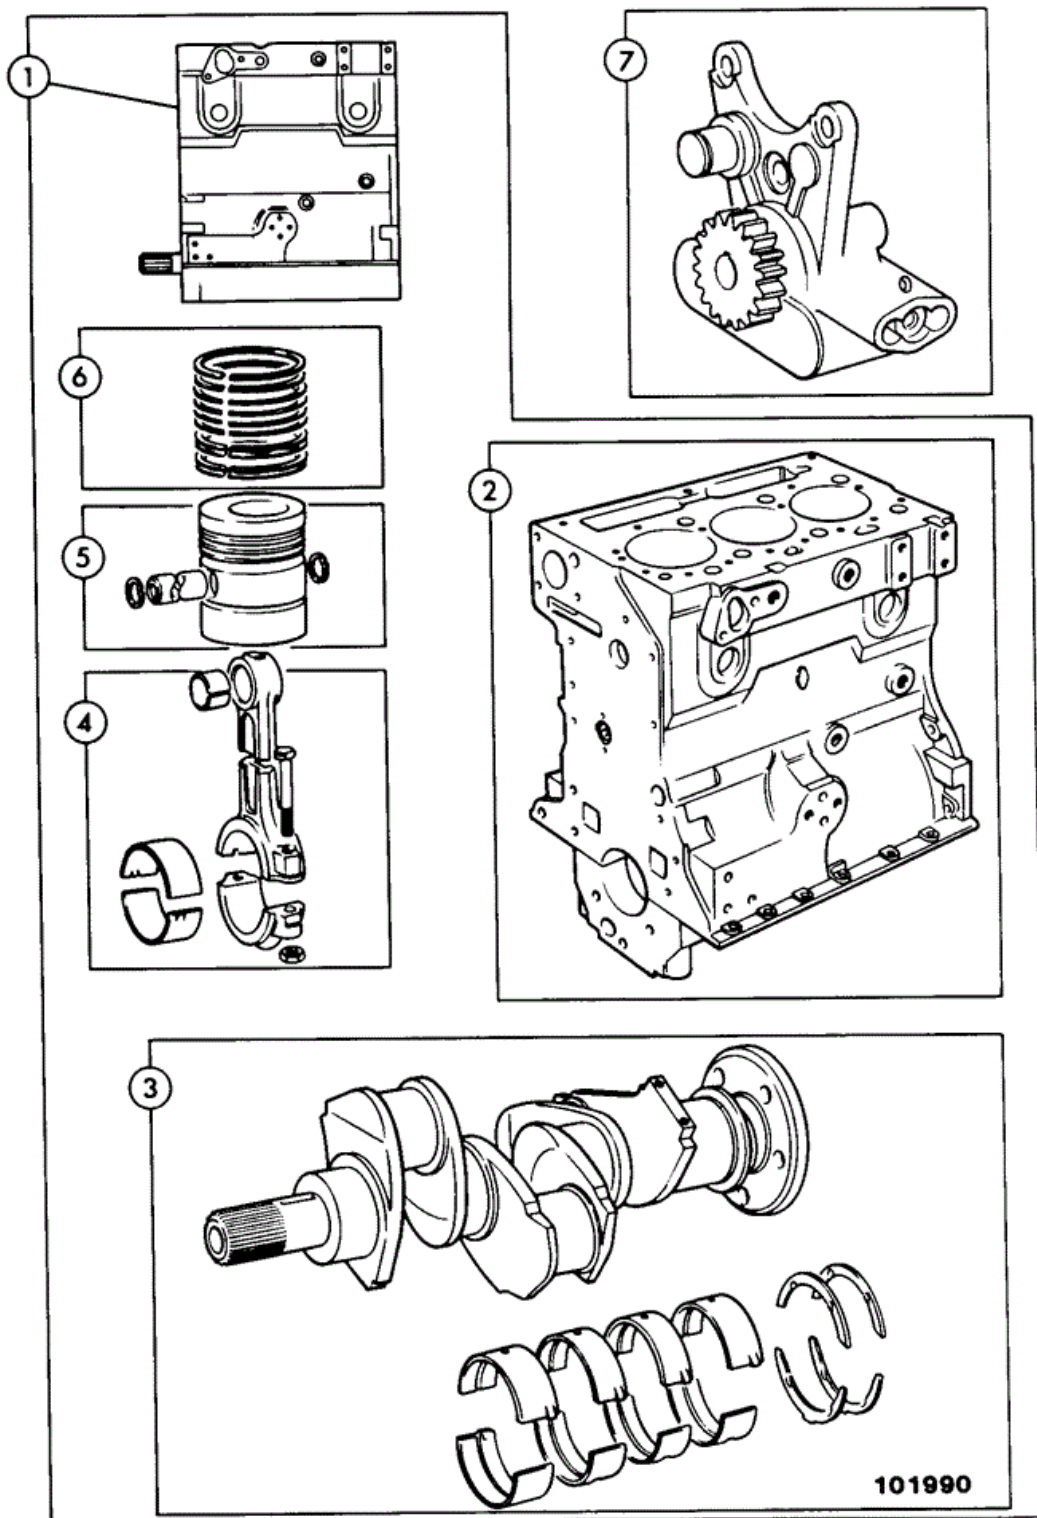

9802/2270 L1-3-1 BLOCK ASSEMBLY CE BUILD

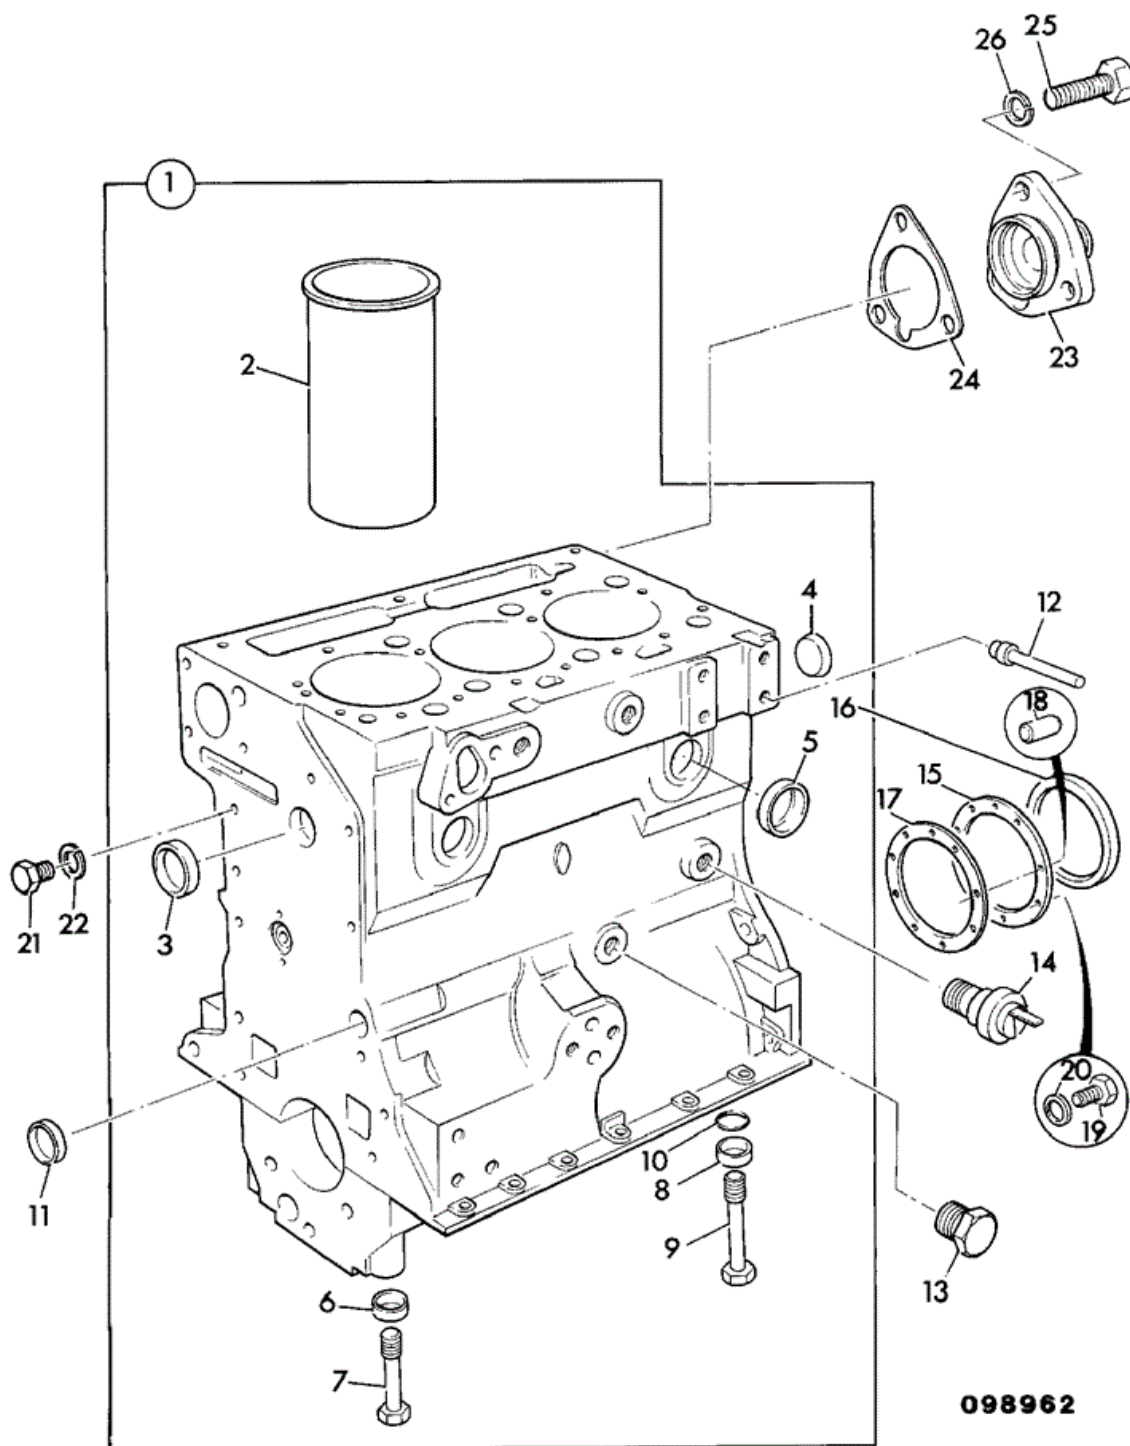

098962


Item	Part #	Change No	Description	Usage Code	QTY
1	02/130000	<EU926067Y	Block cylinder assembly <i>See Note 1</i>		1
1	02/130240	Superseded	Block cylinder, assembly <i>See Note 1</i>		1
1	02/130261		Block cylinder assembly <i>See Note 2</i>		1
1A	:02/192089		Bush camshaft		1
2	:02/130001		Liner cylinder Press-fit		3
2	02/130002		Liner cylinder slip-fit		0
2	02/130171		Liner oversize - 0.25mm		0
2	02/130194		Liner cylinder oversize - 0.76mm		0
3	:02/100396		Plug core D=32mm		1
4	:02/100395	<89/06	Plug core D=22mm		1
4	02/130198		Plug core D=22mm		1
5	:02/100105	Superseded	Plug core D=32mm		4
5	02/100396		Plug core D=32mm		4
6	:02/101893		Thimble		6
7	:02/130003		Bolt		6
8	:02/101893		Thimble		2
9	:02/130004		Bolt		2
10	:02/130005		O Ring		2
11	02/101193		Plug core D=17mm		2
12	02/101827		Plug		1
13	02/100132		Plug drain		1
13	02/100335		Tap drain <i>Alternative</i>		1
14	02/100123		Switch oil pressure		1
15	02/130007		Housing Rear assembly		1
16	:02/101436		Seal rear oil		1
17	02/130008		Gasket		1
18	02/130009		Dowel		2
19	1305/0105Z		Bolt		9
20	1410/0002Z		Washer (5/16" Small)		9
21	1305/0102Z		Bolt		2
22	823/00263		Washer		2
23	02/130010	Superseded	Plate		1
23	M.S.S		Multi Supersession <i>Part N/A use 23A with item 25A</i>		1
23A	02/130191		Plate cover		1
24	02/130011		Gasket		1
25	1305/0105Z		Bolt		3
25A	02/102007		Screw		3
26	1416/0005Z		Washer spring - 5/16" Zinc plated		3

Note 1: For Crankshaft,Bearings,Pistons and Con-rods, refer to frame L1-4-1.


Note 2: For Crankshaft,Bearings,Pistons, and Con-rods, refer to frame L1-4-3.



9802/2270 L1-3-2 BLOCK ASSEMBLY CM BUILD

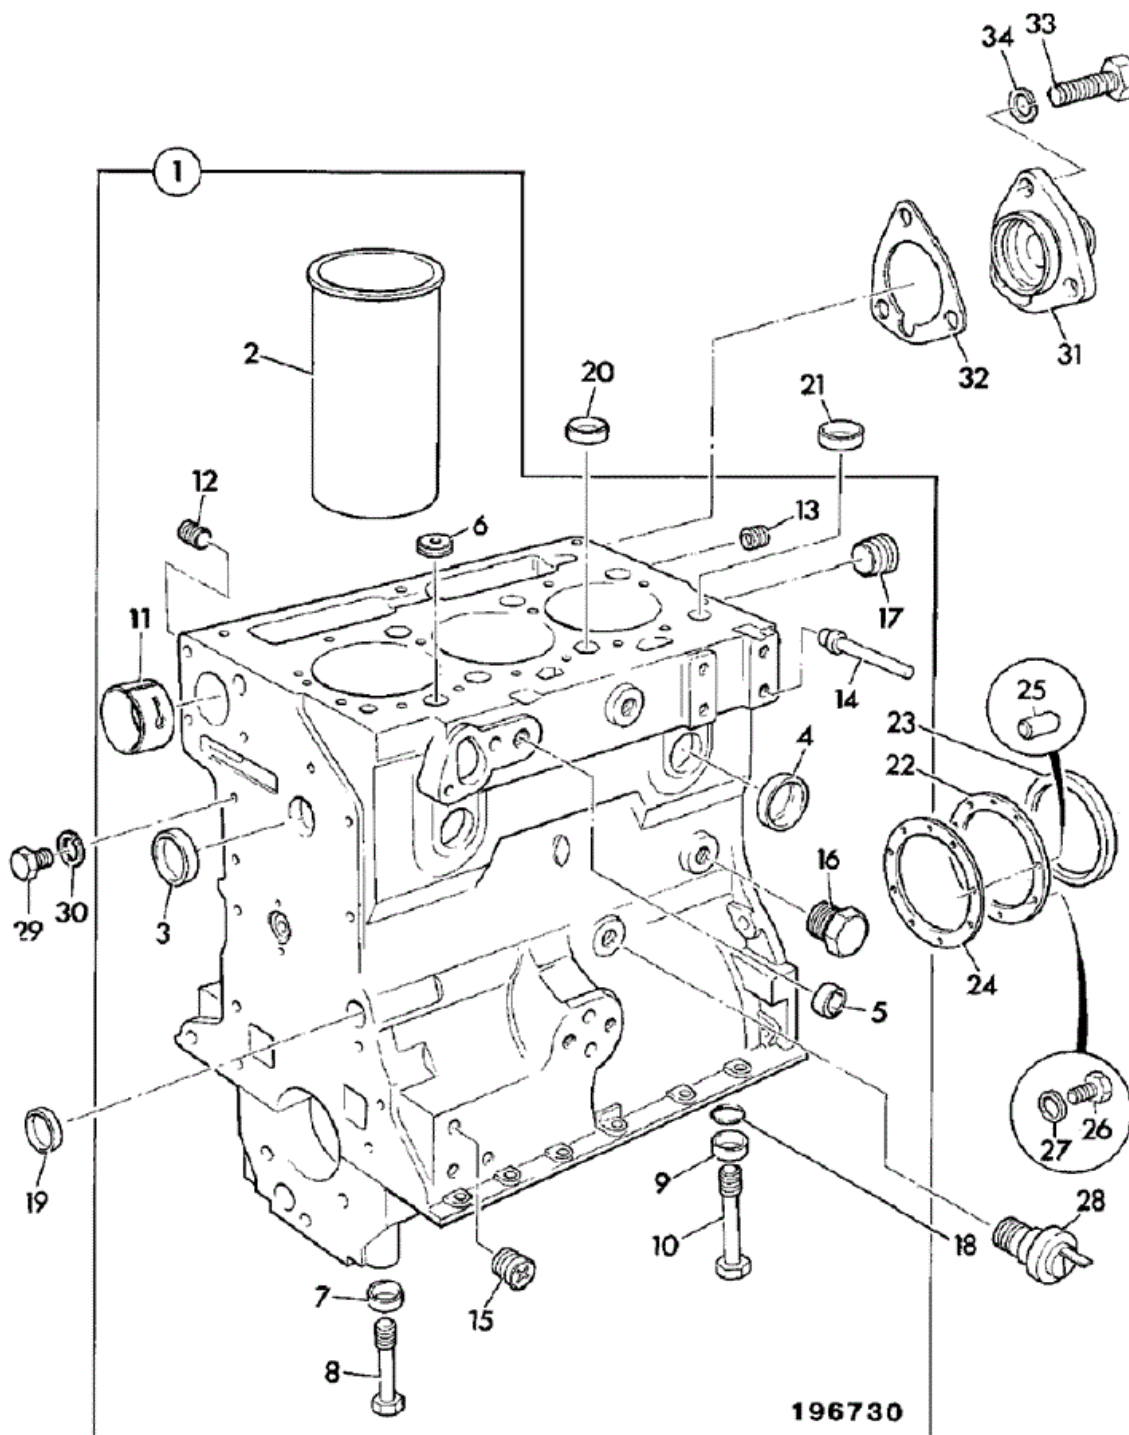


Item	Part #	Change No	Description	Usage Code	QTY
1	02/130202		Block cylinder assembly		1
2	:02/130001		Liner cylinder Press-fit		3
2	02/130002		Liner cylinder slip-fit		0
2	02/130171		Liner oversize - 0.25mm		0
2	02/130194		Liner cylinder oversize - 0.76mm		0
3	:02/100396		Plug core D=32mm		1
4	:02/100396		Plug core D=32mm		4
5	:02/100581		Plug core D=11mm		2
6	:02/130209		Plug		1
7	:02/101893		Thimble		6
8	:02/130003		Bolt		6
9	:02/101893		Thimble		2
10	:02/130004		Bolt		2
11	:02/192089		Bush camshaft		1
12	:02/101810		Plug		1
13	:02/130229		Plug core D=10mm		2
14	:02/101827		Plug		1
15	:02/130169		Plug		10
16	:02/100132		Plug drain		1
17	:02/100410		Plug		1
18	02/130005		O Ring		2
19	02/101193		Plug core D=17mm		2
20	02/130227		Plug		2
21	02/130228		Plug		2
22	02/130007		Housing Rear assembly		1
23	:02/101436		Seal rear oil		1
24	02/130008		Gasket		1
25	02/130009		Dowel		2
26	1305/0105Z		Bolt		9
27	1410/0002Z		Washer (5/16" Small)		9
28	02/100123		Switch oil pressure		1
29	1305/0102Z		Bolt		1
30	823/00263		Washer		1
31	02/130191		Plate cover		1
32	02/130011		Gasket		1
33	02/102007		Screw		3
34	1416/0005Z		Washer spring - 5/16" Zinc plated		3

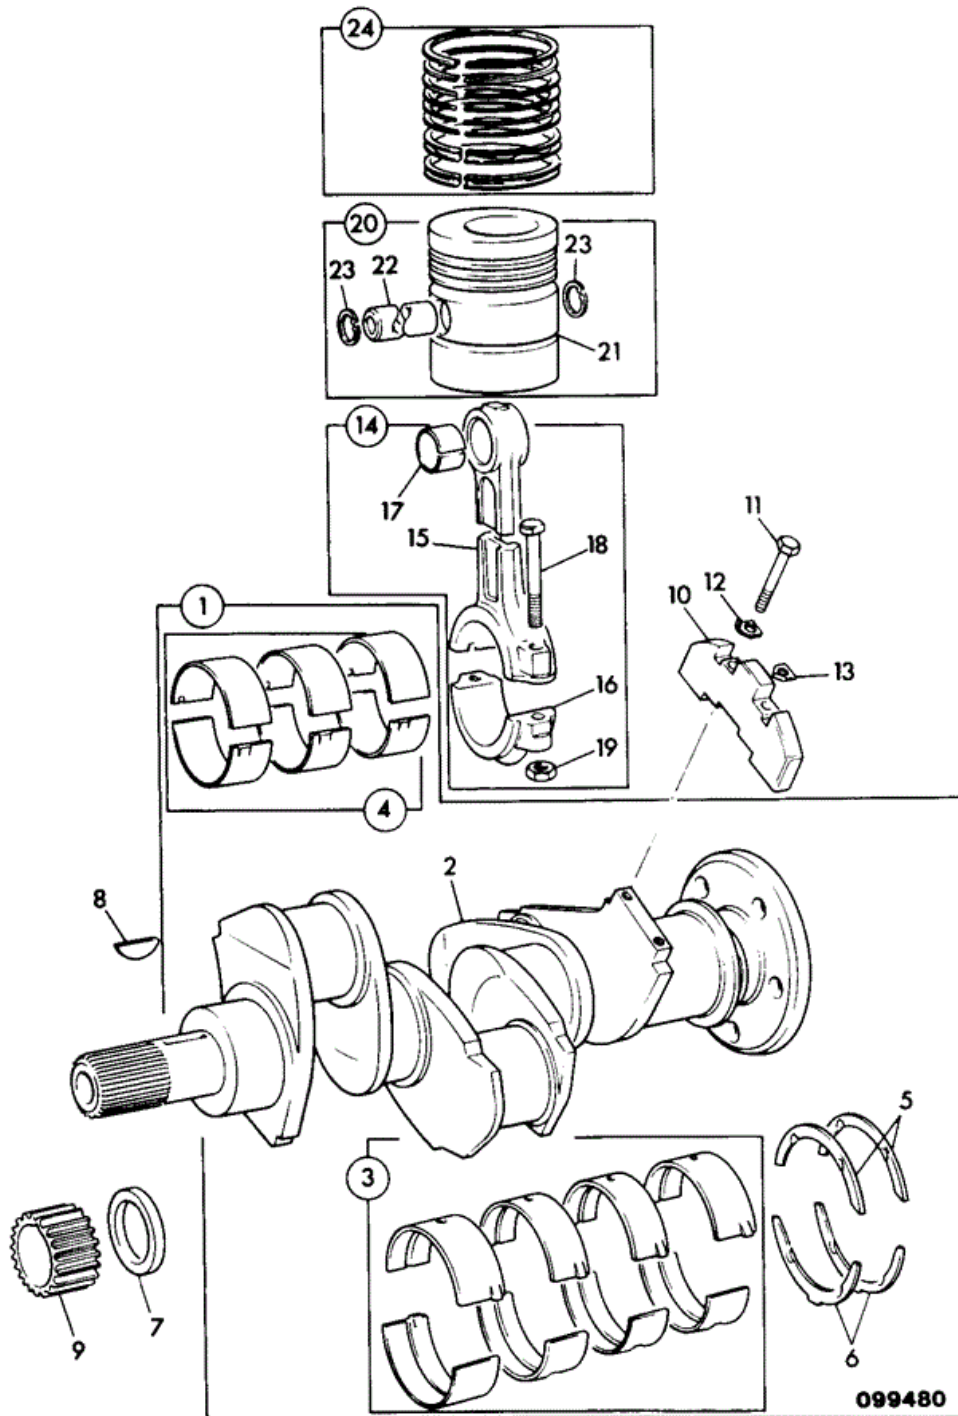

Item	Part #	Change No	Description	Usage Code	QTY
1	02/130012	Superseded	Crankshaft Assembly		1
1	02/130200	Superseded	Crankshaft assembly		1
1	M.S.S		Multi Supersession <i>Part N.L.A use 1A with item 9A</i>		1
1A	02/130260		Crankshaft assembly		1
			None serviced part		

2	****		<i>Crankshaft</i>		1
3	:02/139001		Kit-bearing main standard		1
3	02/139002		Kit-bearing main undersize - 0.010"		1
3	02/139003		Kit-bearing main undersize - 0.020"		1
3	02/139004		Kit-bearing main undersize - 0.030"		1
4	:02/139009		Kit-bearing big-end standard		1
4	02/139010		Kit-bearing big-end undersize - 0.010"		1
4	02/139011		Kit-bearing big-end undersize - 0.020"		1
4	02/139012		Kit-bearing big-end undersize - 0.030"		1
5	:02/139005		Washer thrust standard		2
6	:02/139007		Washer thrust - bottom standard		2
6	02/139008		Washer thrust - bottom oversize - 0.007"		2
7	02/130020		Spacer <i>Not Fitted or required with item 1A & 9A</i>		1
8	02/130021		Key		1
9	02/139014		Gear crankshaft <i>Used only with item 1</i>		1
9A	02/139020		Gear crankshaft <i>Used only with item 1A</i>		1
10	02/130022		Counterweight <i>See Note 1</i>		2
11	02/130023		Screw		4
12	02/130024		Washer tab		2
13	02/130025		Washer tab		2
14	02/130013		Rod connecting		3
15	****		None serviced part <i>Con-rod</i>		1
16	****		None serviced part <i>Cap</i>		1
17	:02/139013		Bush small-end		1
18	:02/130015		Bolt		2
19	:02/130016		Nut		2
20	02/130017	<EU926067Y	Piston assembly 5 ring		3
20	02/130248		Piston assembly 4 ring		3
21	****		None serviced part <i>Piston</i>		1
22	****		None serviced part <i>Gudgeon pin</i>		1
23	:02/130018		Circlip		2
24	02/130019	<EU926067Y	Kit-piston ring 5 ring		3
24	02/130204		Kit-piston ring 4 ring		3

Note 1: Must be fitted in matched pairs as supplied.

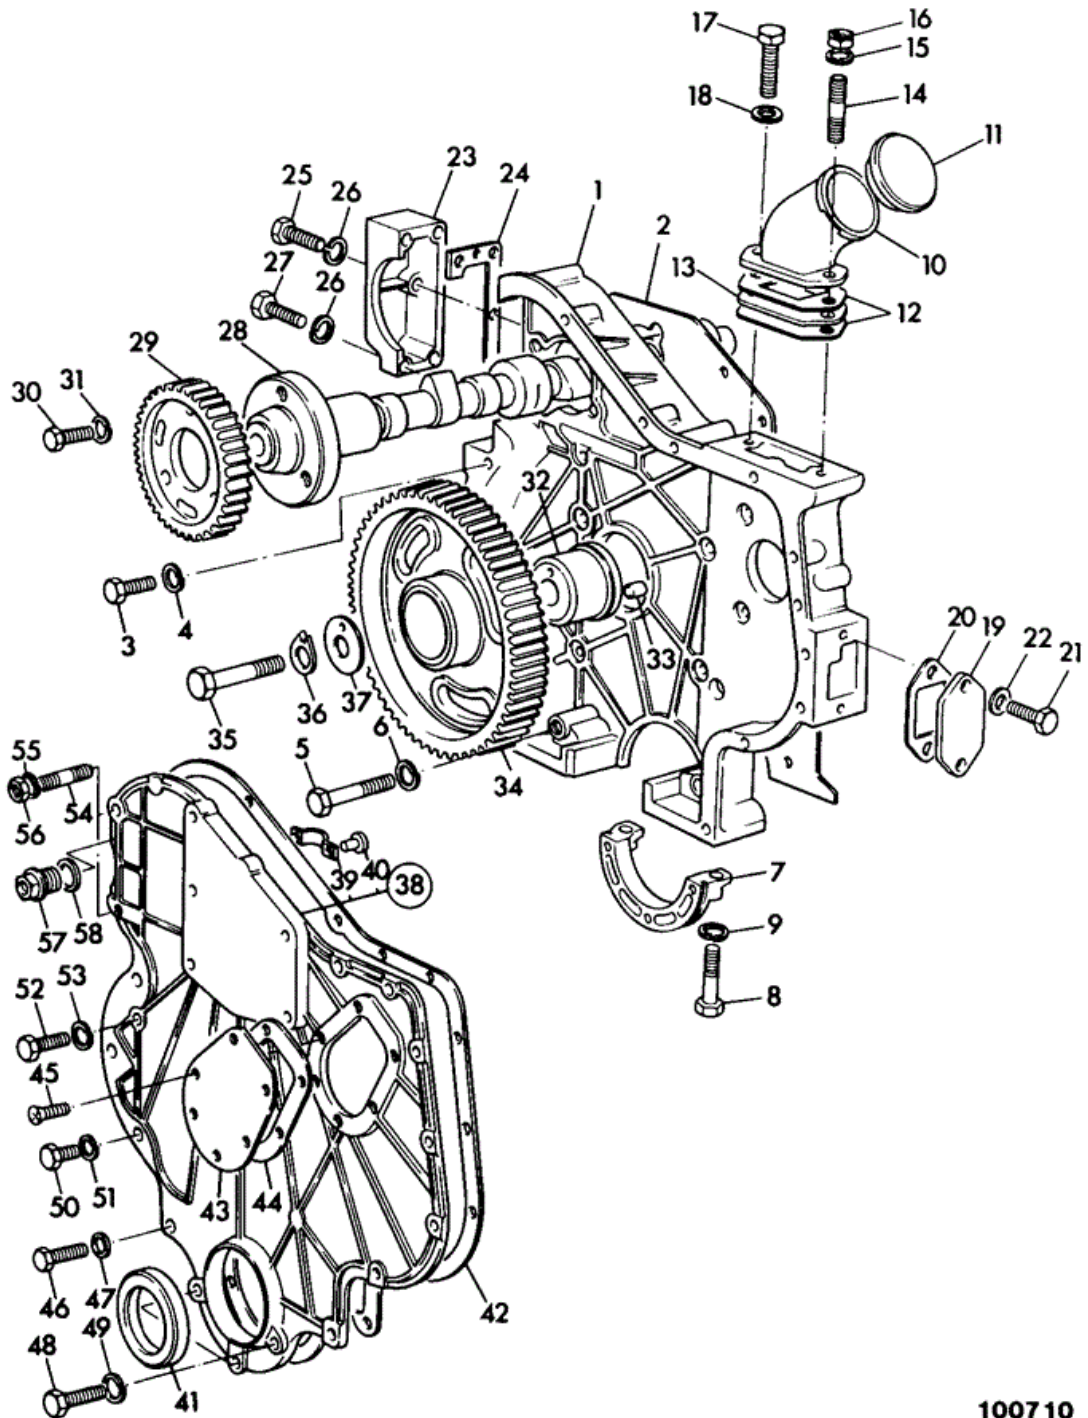

100710

Item	Part #	Change No	Description	Usage Code	QTY
1	02/130034		Casing timing		1
2	02/130035		Gasket timing case to block		1
3	02/130036		Screw		12
4	1416/0005Z		Washer spring - 5/16" Zinc plated		12
5	1305/3112Z		Bolt		2

6	1416/0005Z		Washer spring - 5/16" Zinc plated		2
7	02/130037		Cover		1
8	1305/3109Z		Bolt		2
9	1416/0005Z		Washer spring - 5/16" Zinc plated		2
10	02/130038	Superseded	Tube oil filler		1
10	M.S.S		Multi Supersession <i>Part N.L.A use 10A with items 11A, 17A & 18A</i>		1
10A	02/130192		Tube oil filler		1
11	02/100037	<EU894544W	Cap oil filler		1
11A	02/130193	>EU894545W	Cap oil filler		1
12	02/130040		Gasket		2
13	02/130039		Strainer		1
14	02/130041	<EU894544W	Stud		1
15	1416/0004Z	<EU894544W	Washer spring		1
16	1340/0002Z	<EU894544W	Nut		2
16	1340/0002Z	>EU894545W	Nut		1
17	1305/1505Z		Bolt		1
17A	1305/1504Z		Screw 1/4-20X3/4"unc		1
18	1416/0004Z		Washer spring		1
18A	1416/0004Z		Washer spring		1
19	02/130042		Plate Cover		1
20	02/130040		Gasket		1
21	1305/1503Z		Bolt		2
22	1416/0004Z		Washer spring		2
23	02/130043		Cover		1
24	02/130044		Gasket		1
25	1305/1614Z		Bolt		1
26	1416/0006Z		Washer spring		4
27	1305/1608Z		Setscrew (5/16 UNC x 1-1/4")		3
28	02/100207		Camshaft		1
29	02/190007		Gear camshaft		1
30	02/130014		Screw		3
31	1416/0005Z		Washer spring - 5/16" Zinc plated		3
32	02/130045		Hub		1
33	02/130046		Dowel		1
34	02/139015		Gear Idler		1
35	02/130047		Screw		1
36	02/130048		Washer		1
37	02/130049		Plate		1
38	02/130050		Cover Timing		1
39	:02/130053		Clip Spring		1
40	:02/130054		Rivet		1
41	:02/130051		Seal Front oil		1
42	02/130052		Gasket timing cover		1
43	02/130055		Cover Inspection		1
44	02/130056		Gasket		1
45	02/130057		Screw		6
46	1305/1505Z		Bolt		8
47	1416/0004Z		Washer spring		8
48	02/130168		Bolt		3
49	1416/0005Z		Washer spring - 5/16" Zinc plated		3

50	1305/1616Z		Bolt		1
51	1416/0005Z		Washer spring - 5/16" Zinc plated		1
52	1305/1605Z		Bolt		2
53	1416/0005Z		Washer spring - 5/16" Zinc plated		2
54	02/130059		Stud		2
55	1416/0004Z		Washer spring		2
56	1340/0001Z		Nut		2
57	02/101691	Superseded	Plug oil drain		1
57	02/101782		Plug oil drain <i>Used with item 58A</i>		1
58	823/00265		Washer <i>Used only with 02/101691</i>		1
58A	02/200198		O Ring		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com