




9822/0095 F0-6-1 TRANSMISSION INSTALLATION ASSEMBLIES FRONT & REAR

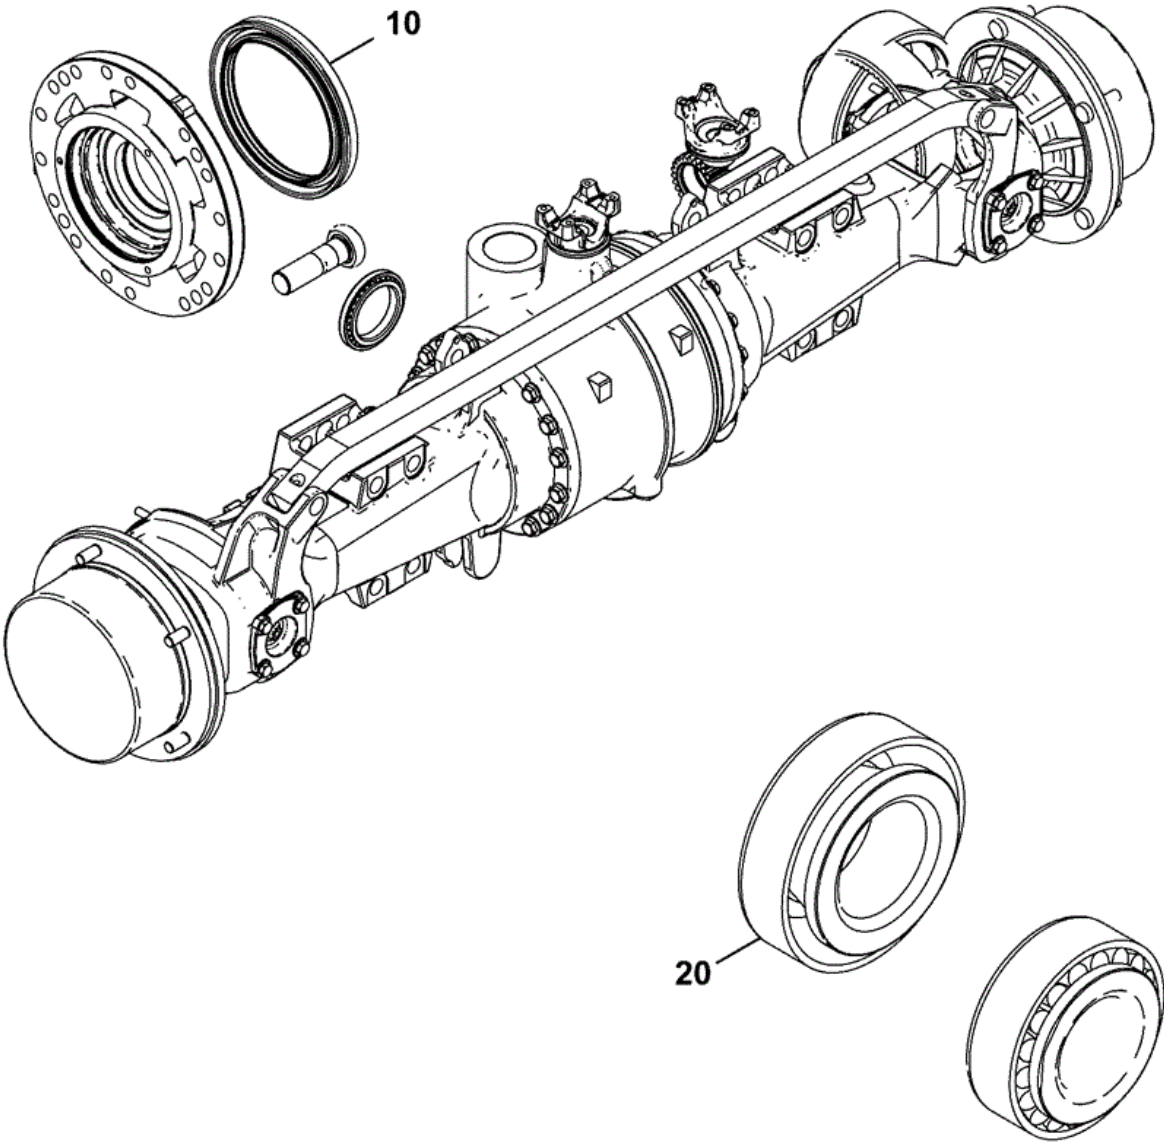


160-M0559

Item	Part #	Change No	Description	Usage Code	QTY
10	453/34820		Axle SD80,pin mounted FRONT		1

20	453/34830	Axle SD80, pin mounted <i>REAR</i>	1
----	-----------	---------------------------------------	---



9822/0095 F0-17-1 TRANSMISSION INSTALLATION ASSEMBLIES BRACKET MOUNTING,AXLE

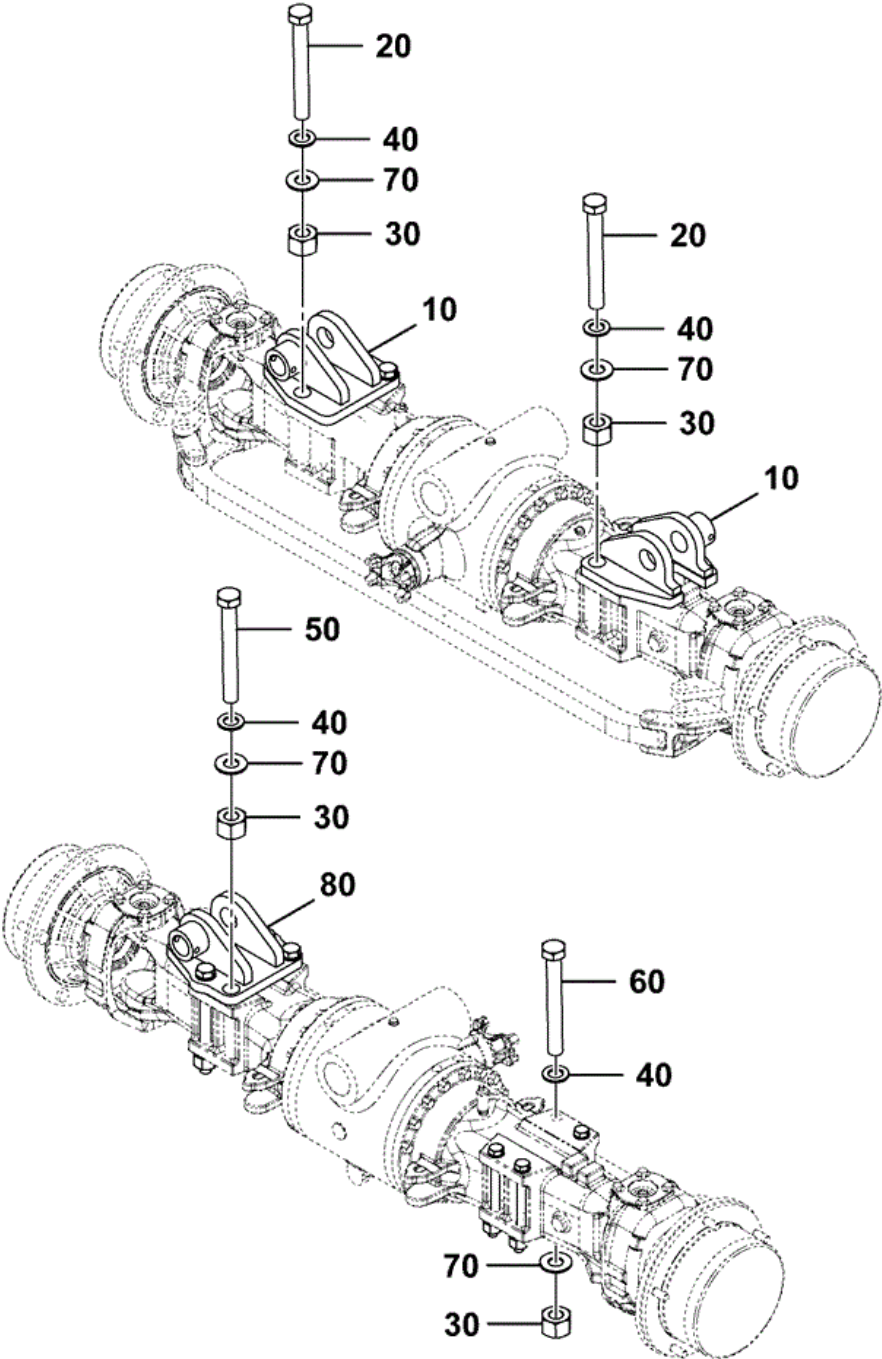

332-C4707-6


Item	Part #	Change No	Description	Usage Code	QTY
10	332/E9043		Bracket Axle		2

20	826/01665		Bolt 1"unf X 10 1/2"long		4
30	826/01714		Nut (1" UNF)		12
40	823/10631		Washer Hardened 1" Lubricity Coating		12
50	1305/3958Z		Bolt 1"UNF x 12"long		4
60	1305/3956Z		Bolt 11" long		4
70	823/00578		Washer (ID=1")		12
80	332/E8468		Bracket Sway		1



9822/0095 F0-20-1 TRANSMISSION INSTALLATION

ASSEMBLIES BEVEL

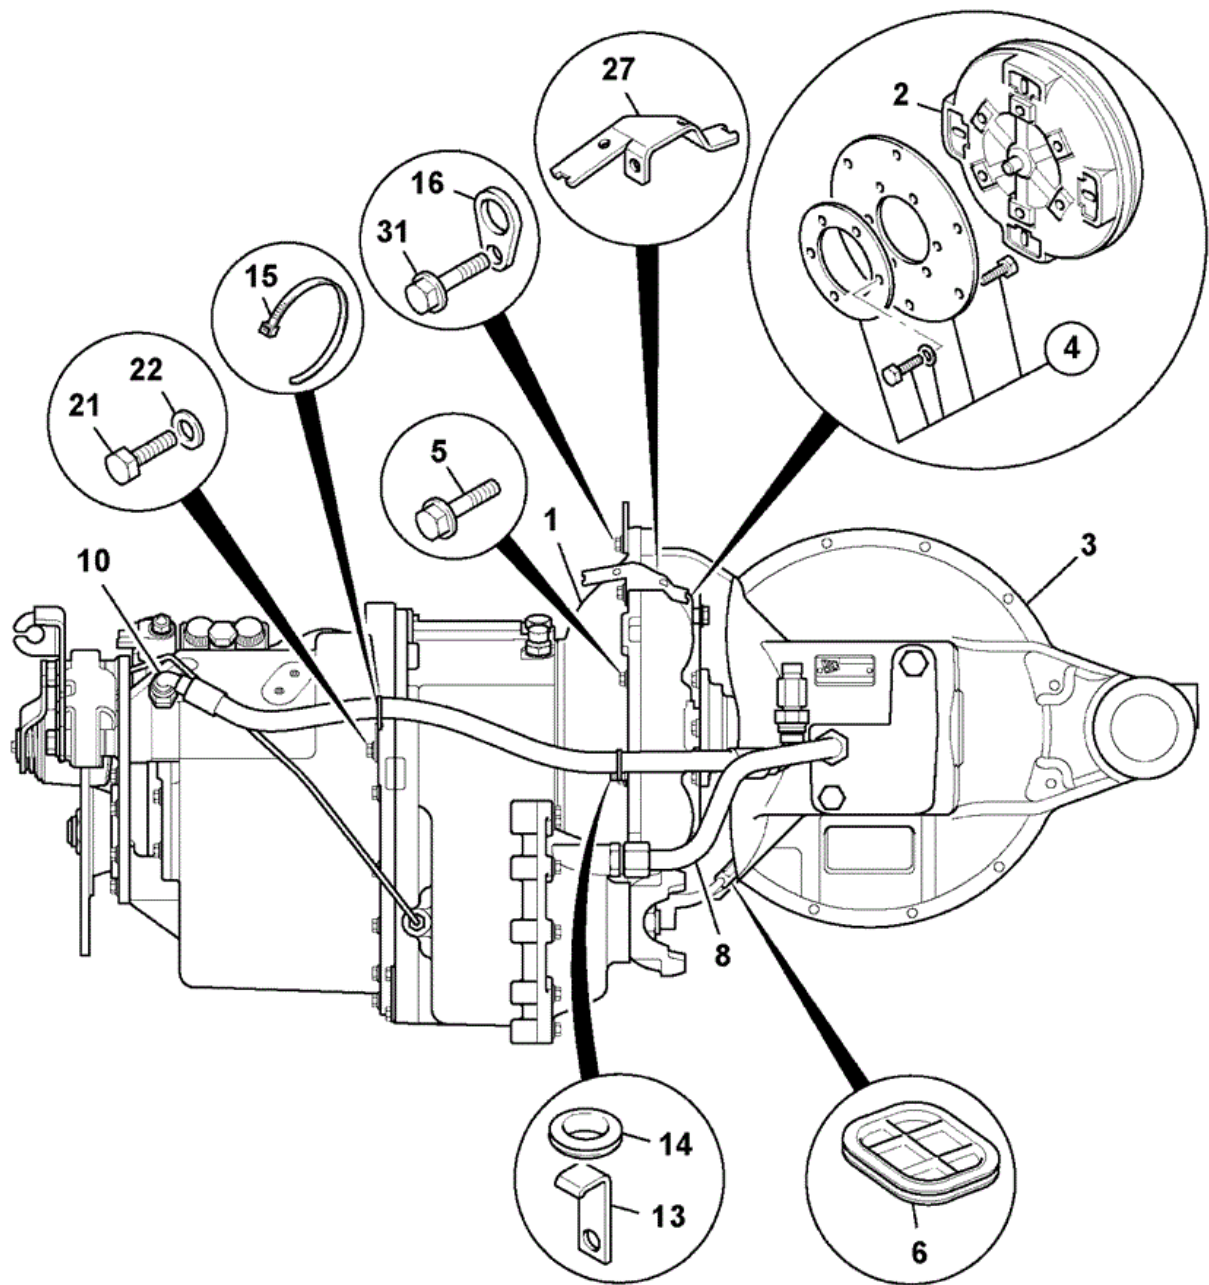

455-M2914-2


Item	Part #	Change No	Description	Usage Code	QTY
1	449/M3319		Gearbox		1

2	04/501800		Converter Torque ...		1
3	455/10660		Gearbox GA Bevel,PS750 4 Speed,11" T/c		1
4	04/600768		Kit Drive Plate		1
5	826/01417		Setscrew flanged M10 x 30		10
6	445/13703		Cover flywheel housing 110mm x 79mm x 17mm		1
8	455/01201		Pipe Oil Return Assy		1
10	634/80032		Hose 5/8"BSP LP		1
13	162/00511		Clip harness support		2
14	2410/0207		Grommet		2
15	826/01144		Tie Cable 200mm		2
16	911/15101		Plate Keep		1
21	1420/0008Z		Washer (M10)		2
22	1315/0409Z		Setscrew M10 x 35		1
27	331/55786		Bracket Hose		1
31	826/01580		Setscrew Flanged		1



9822/0095 F0-26-1 TRANSMISSION INSTALLATION

ASSEMBLIES DRIVESHAFT ASSEMBLY

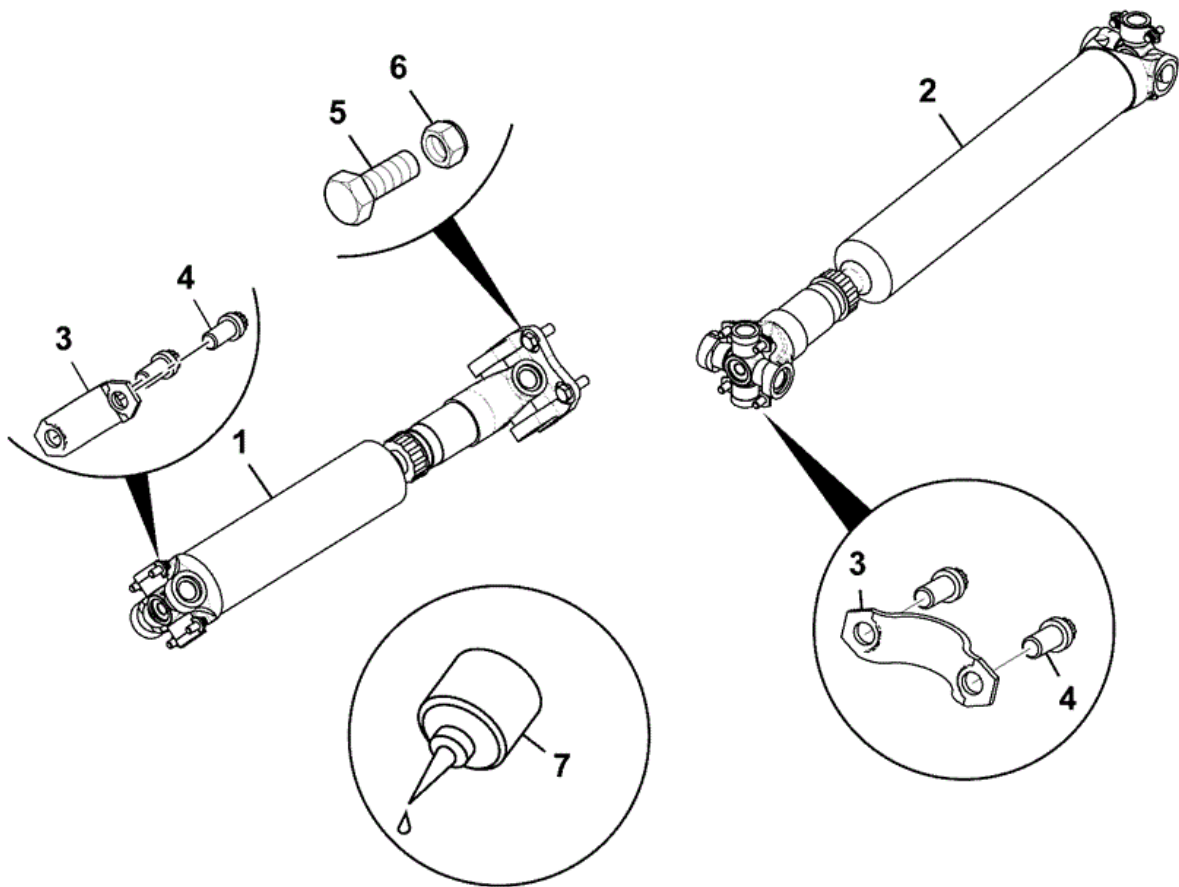


332-C7924-3

Item	Part #	Change No	Description	Usage Code	QTY
1	332/C2278		Propshaft 570mm closed crs.		1

2	332/C2279		Propshaft 1130mm closed crs.		1
3	116/00525		Strap		6
4	826/00892		Screw Special 3/8UNF X 3/4 <i>TORQUE TO 70 +/-5 Nm</i>		12
5	333/D7864		Setscrew 1/2 -20 UNF 1 1/2 LO <i>TORQUE TO 137Nm</i>		4
6	333/D7887		Nut lock 1/2 -20 UNF		4
7	4101/0200		Fluid Locking <i>A/R</i>		0



9822/0095 F100-25-1 FRONT AXLE INSTALLATION ASSEMBLIES

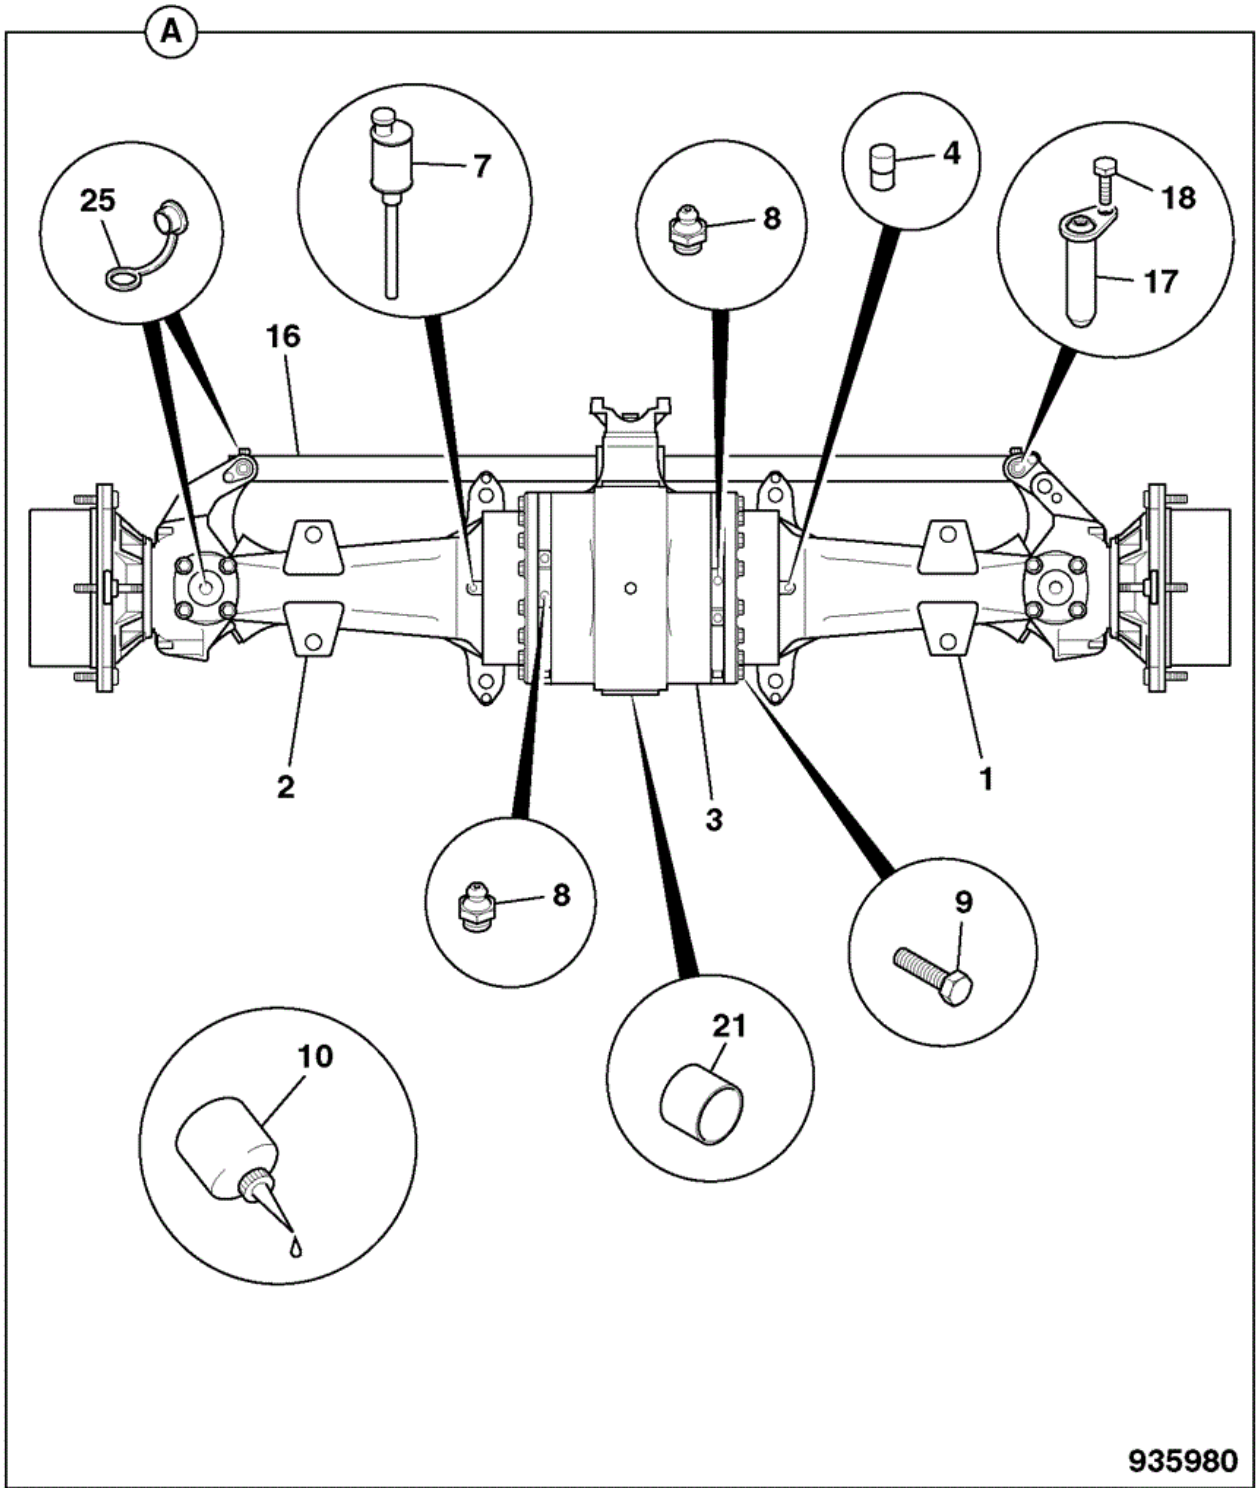


Item	Part #	Change No	Description	Usage Code	QTY
1	458/M0549		Arm axle arm & wheel hub assembly		1

2	458/M0550		Arm axle arm & wheel hub assembly		1
3	458/11248		Drivehead GA.NORM,RH 3.364:1, PIN MT, MXT		1
4	****		'See Remark' <i>Not used in this assembly</i>		0
7	453/00303		Breather Nylon Black		1
8	816/60040		Nipple Screw		2
9	826/01083		Bolt flanged		28
10	4102/1200		Sealant		1
16	453/21300		Rod Track Assy (Cranked)		1
17	911/22800		Pin pivot 105mm x 25mm dia.		2
18	1321/0405Z		Bolt		2
21	808/00251		Bush liner		2
25	835/00017		Cap Grease Nipple		2



9822/0095 F110-5-1 AXLES FRONT MOUNTING FASTENERS

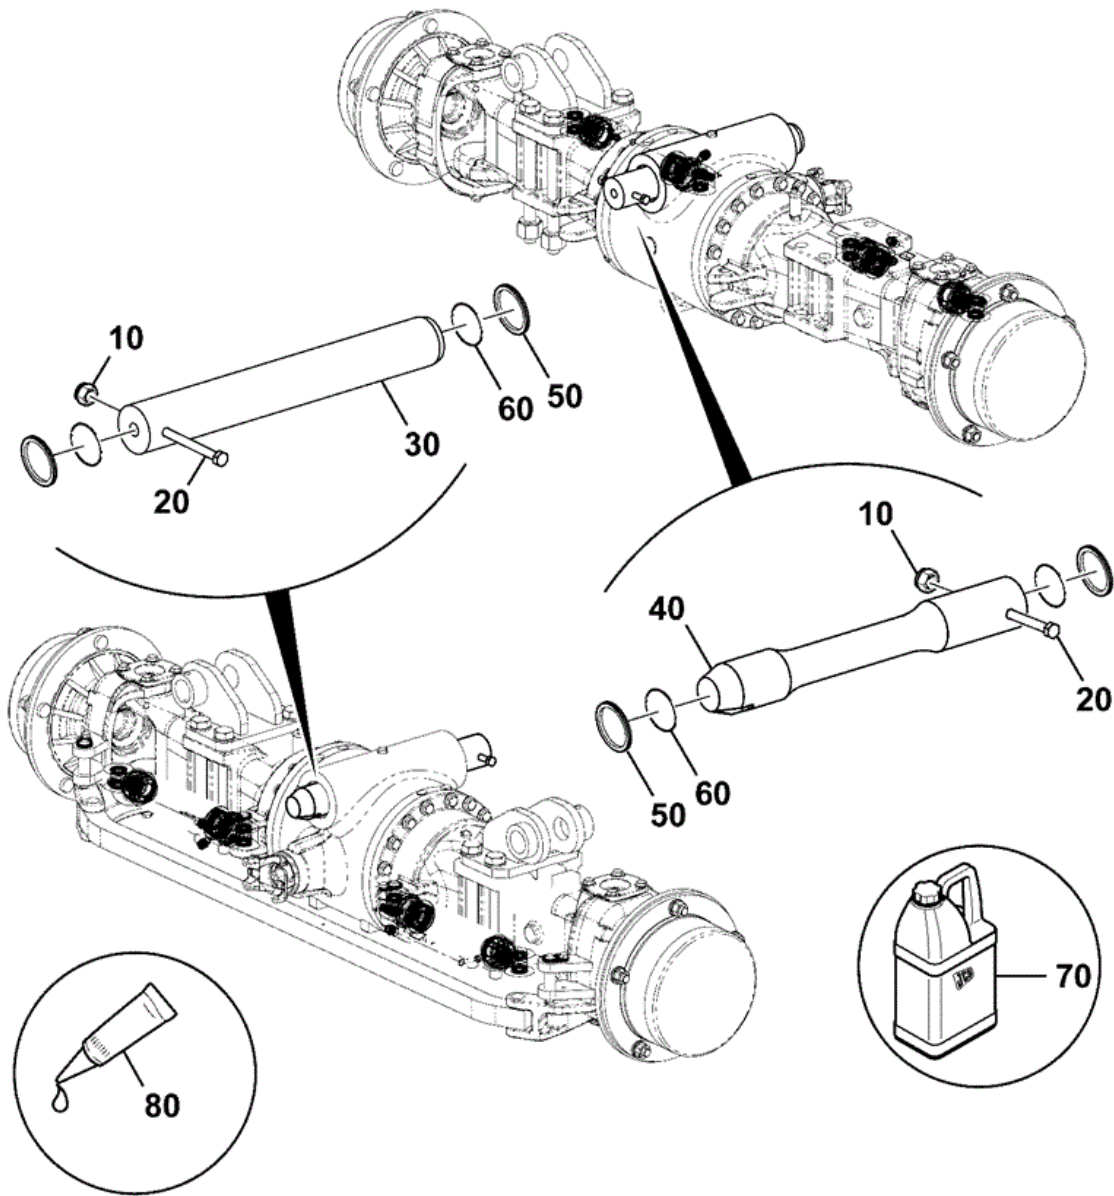


332-C4698-2

Item	Part #	Change No	Description	Usage Code	QTY
10	1370/0403Z		Nut Lock, M12		2
20	1315/3525Z		Bolt		2
30	811/50161		Pin pivot		1

40	811/10112		Pin Pivot		1
50	813/00356		Seal <i>BUSH SEAL</i>		4
60	2400/0223		O Ring <i>PIN SEAL</i>		4
70	4001/0500		Oil Mineral <i>A/R</i>		0
80	4101/0200		Fluid Locking <i>A/R</i>		0



9822/0095 F120-1-1 AXLE ARM AND HUB ASSEMBLY

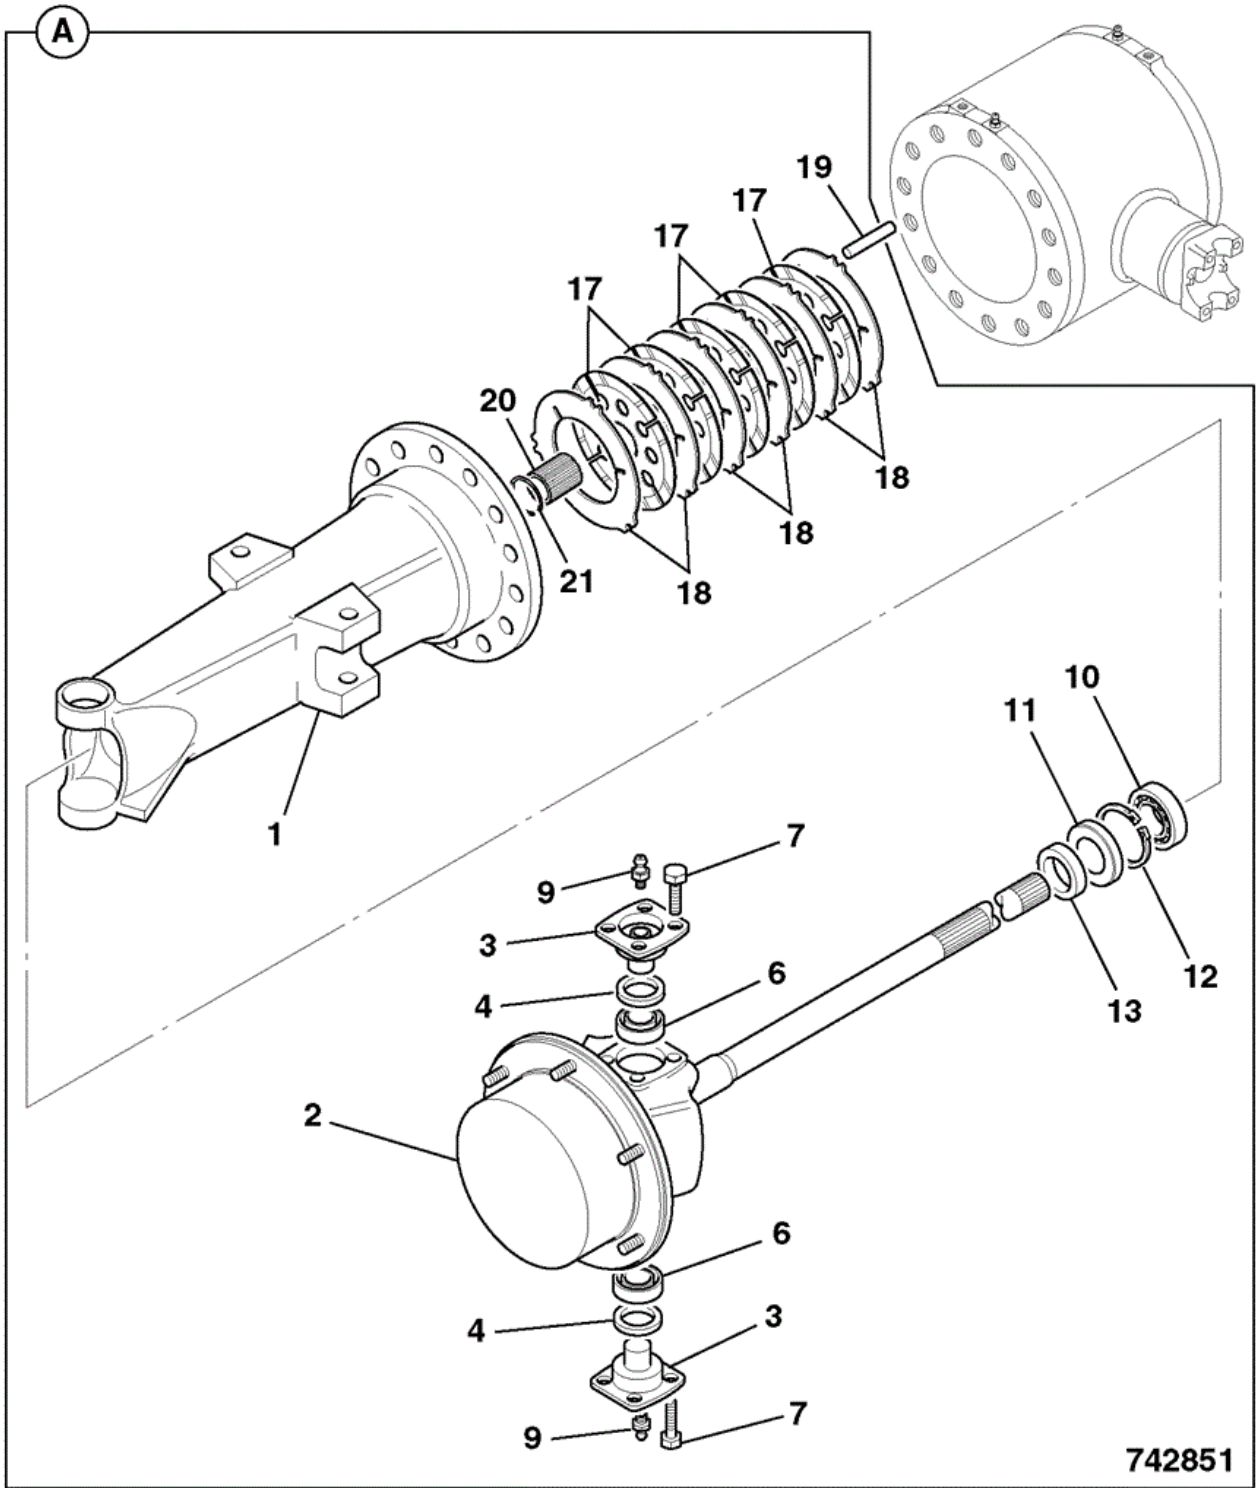


Item	Part #	Change No	Description	Usage Code	QTY
A	458/M0551	rev3	Arm axle arm & wheel hub assembly		1
1	458/M1501		Arm Axle Machining (08) <i>CSTG 589/10593</i>		1

2	453/30700		Hub wheel,assembly		1
3	458/20061		Trunnion <i>FORGING 458/20061P</i>		2
4	904/06700		Seal <i>180 X 155 X 15</i>		2
6	907/08300		Bearing Taper Roller <i>TRUNNION</i>		2
7	1321/0509		Screw <i>BOTTOM TRUNNION</i>		4
9	816/60056		Nipple Grease <i>BOTTOM TRUNNION</i>		1
10	907/08400		Bearing		1
11	904/50040		Seal		1
12	2203/1082		Circlip <i>DRIVESHAFT</i>		1
13	448/04802		Ring Masking <i>DRIVESHAFT</i>		1
17	458/20353		Plate brake friction		3
18	458/20285		Plate brake counter		4
19	450/10213		Pin reaction		3
20	331/11963		Carrier Brake Plate		1
21	2203/0071		Circlip External		2
25	826/01363		Stud double ended M12 X 78 X 35 X 35 <i>TOP TRUNNION</i>		4
26	454/17401		Nipple Grease Long 32mm <i>TOP TRUNNION</i>		1



9822/0095 F120-5-1 AXLE ARM AND HUB ASSEMBLY

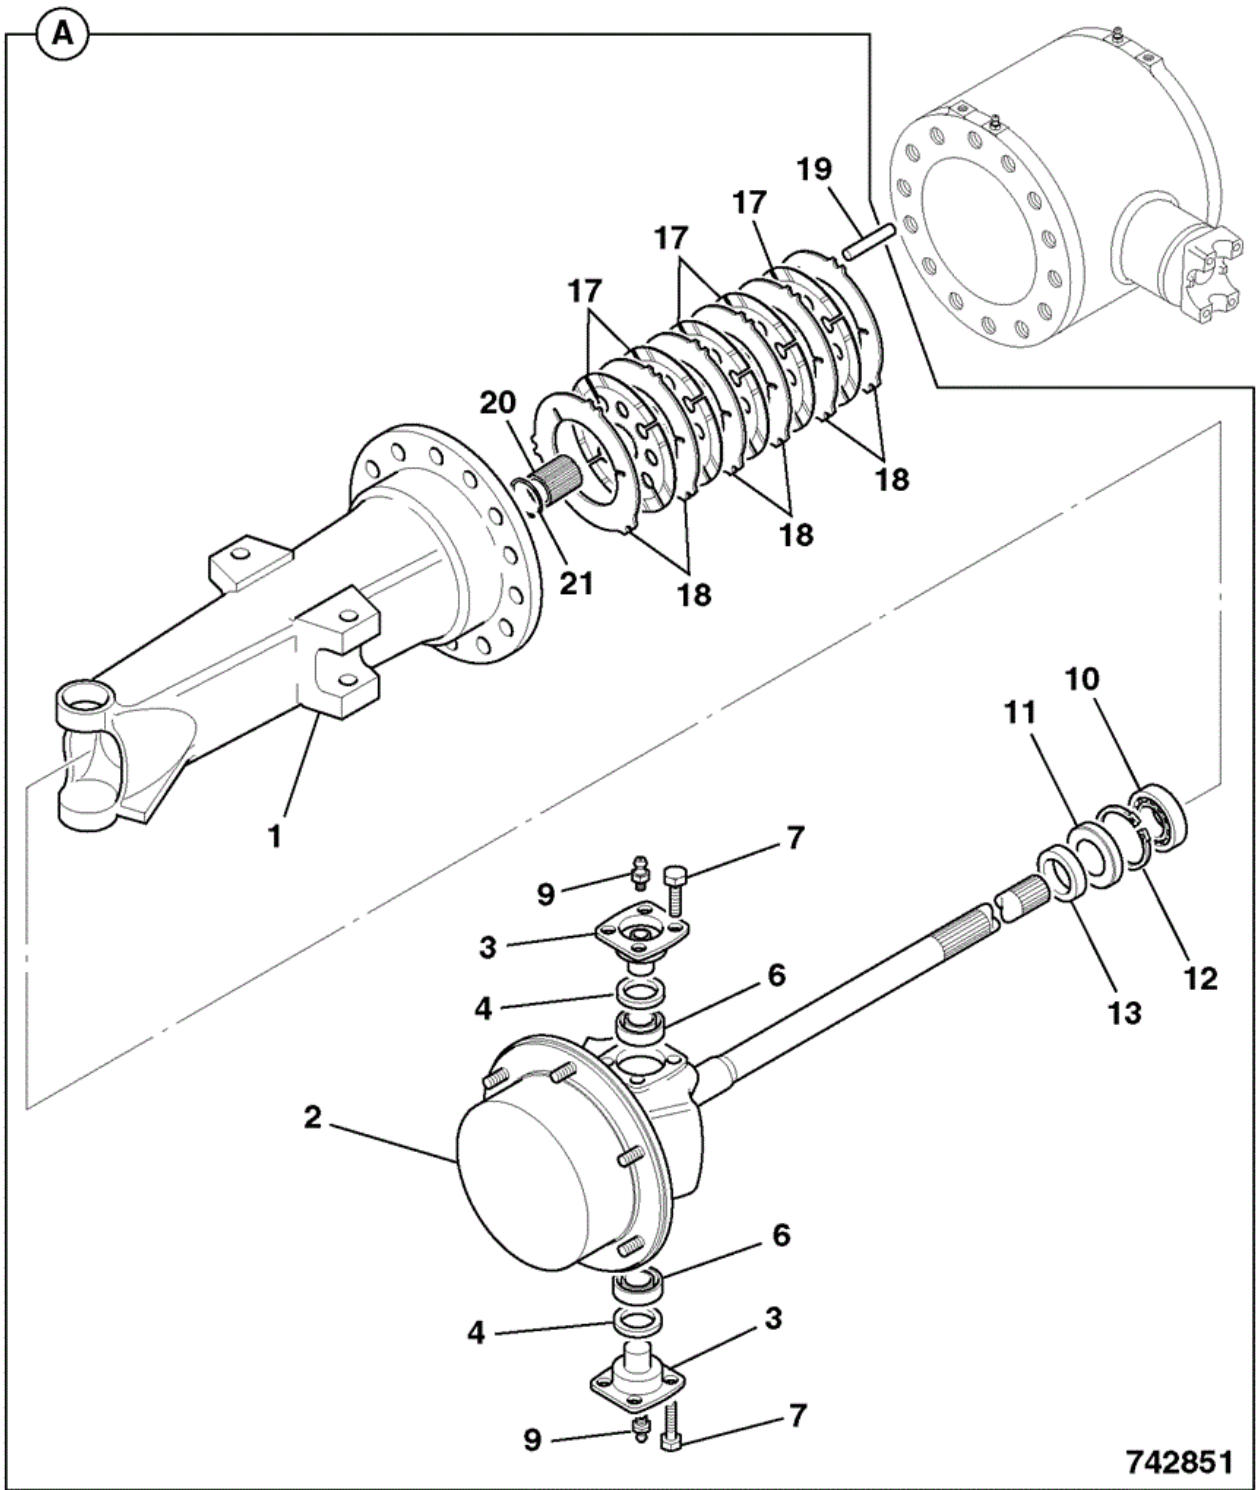

Item	Part #	Change No	Description	Usage Code	QTY
A	458/M0549	rev2	Arm axle arm & wheel hub assembly		1
1	458/M1258		Housing axle arm <i>CASTING 589/10593</i>		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com