




9802/4745 B1-1-1 ROLLER FRAME

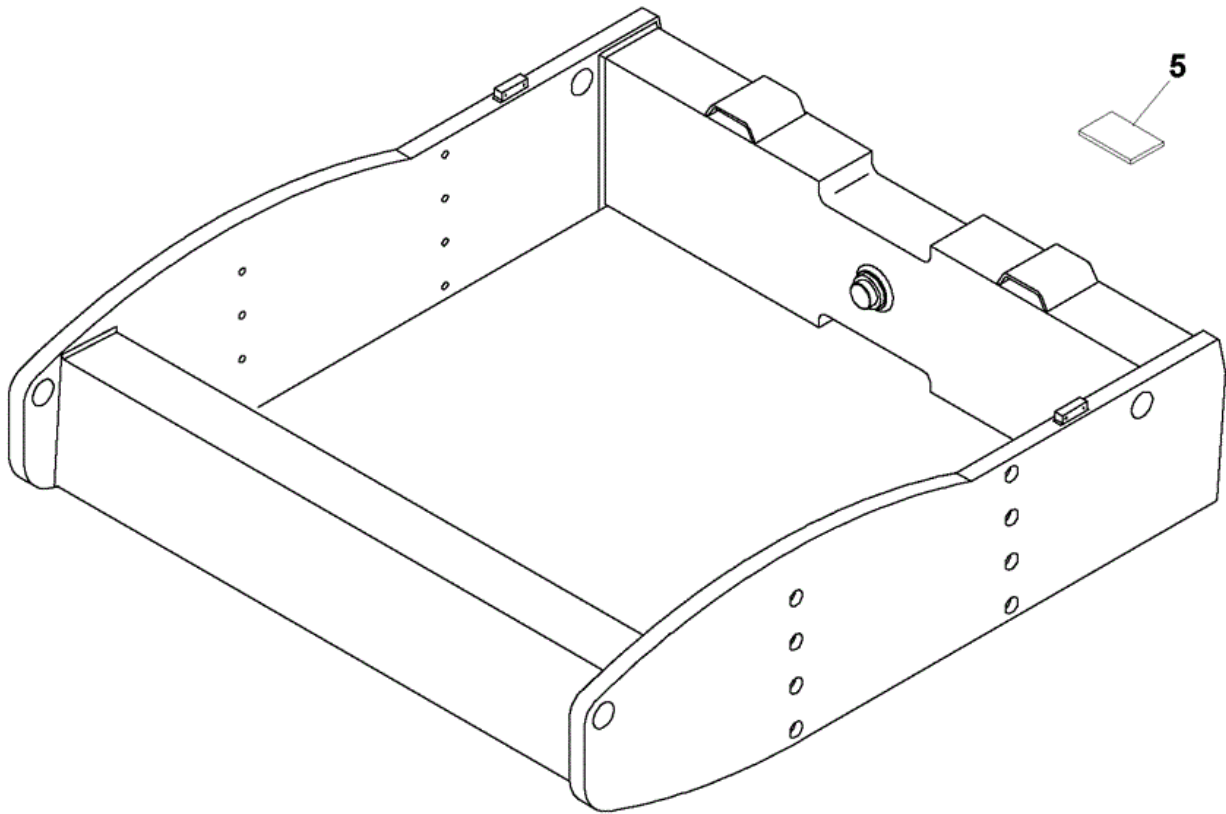


947750

Item	Part #	Change No	Description	Usage Code	QTY
0	7262/25235		Frame Roller		1
5	4004/20032		Decal Walk Behind		1



9802/4745 B1-2-1 CHASSIS FRAME REAR INC HYDRAULIC TANK

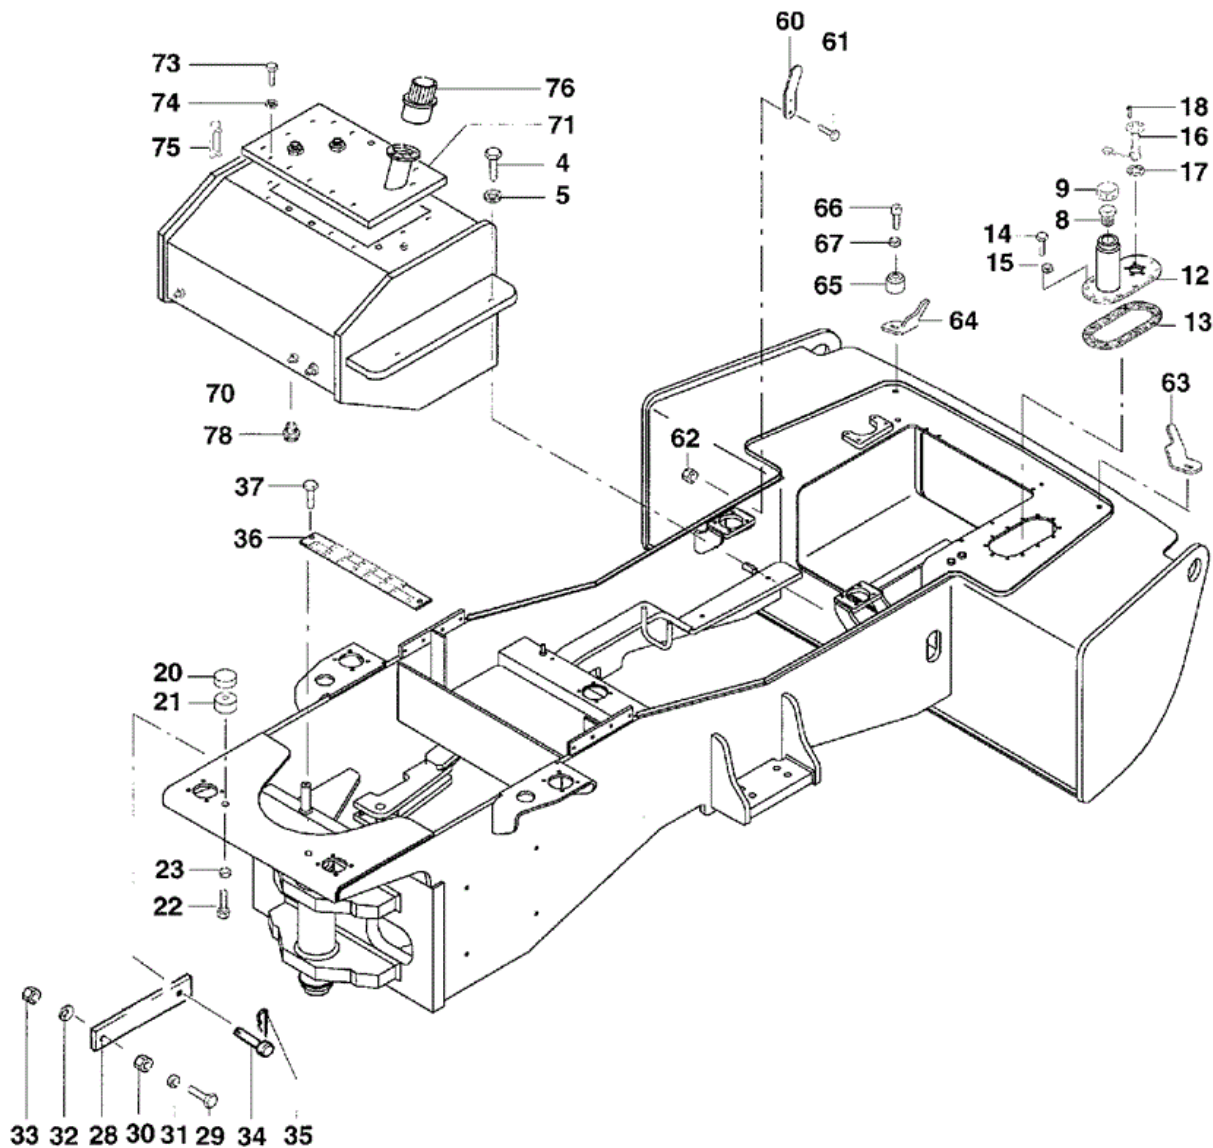


847160

Item	Part #	Change No	Description	Usage Code	QTY
1	7262/12101		Chassis rear frame assembly		1

1A	2782/01025	Strip chassis seal	1
4	2021/12035	Screw Hex M12x35	4
5	2201/00012	Washer M12	4
8	4029/15040	Strainer 120mm	1
9	6730/08351	Cap fuel filler	1
12	7222/11181	Cover & filler neck	1
13	4033/21255	Gasket	1
14	2021/08025	Screw Hexagon M8x25	12
15	2113/00708	Washer Spring - M8	12
16	8427/00010	Sender fuel level	1
17	8427/00011	Gasket	1
18	2025/05016	Capscrew M5x16	5
20	2622/07525	Buffer	2
21	7242/41204	Spacer	2
22	2021/12055	Screw	2
23	2200/00013	Washer M12	2
28	4029/15061	Lever	1
29	2021/24100	Screw Hexagon M24x100	1
30	2110/00024	Nut	1
31	2201/00024	Washer	1
32	2806/00550	Washer	1
33	2118/32400	Nut lock M24	1
34	2445/24720	Pin	1
35	6426/00018	Wire	1
36	4029/15370	Bracket	1
37	2021/12035	Screw Hex M12x35	2
60	7222/53235	Guide	2
61	2021/10025	Screw Hexagon M10x25	4
62	2118/30600	Nut M6	6
63	7242/53521	Guide left hand side	1
64	7242/53522	Guide right hand side	1
65	7242/53516	Buffer	2
66	2027/10050	Capscrew M10x50	2
67	2201/00010	Washer M10	8
70	7221/10310	Tank Hydraulic Oil	1
71	7221/10320	Cover	1
73	2021/08025	Screw Hexagon M8x25	16
74	2113/00708	Washer Spring - M8	16
75	2612/00032	Glass Sight Oil Indicator	1
76	2611/00160	Filter Including Cap (Cap & Filter)	1
76	2611/00170	Cap Filter	1
78	2506/20112	Plug	1
79	1391/3105	Screw	6
80	1420/0005	Washer 'P'	6



9802/4745 B1-3-1 DOOR

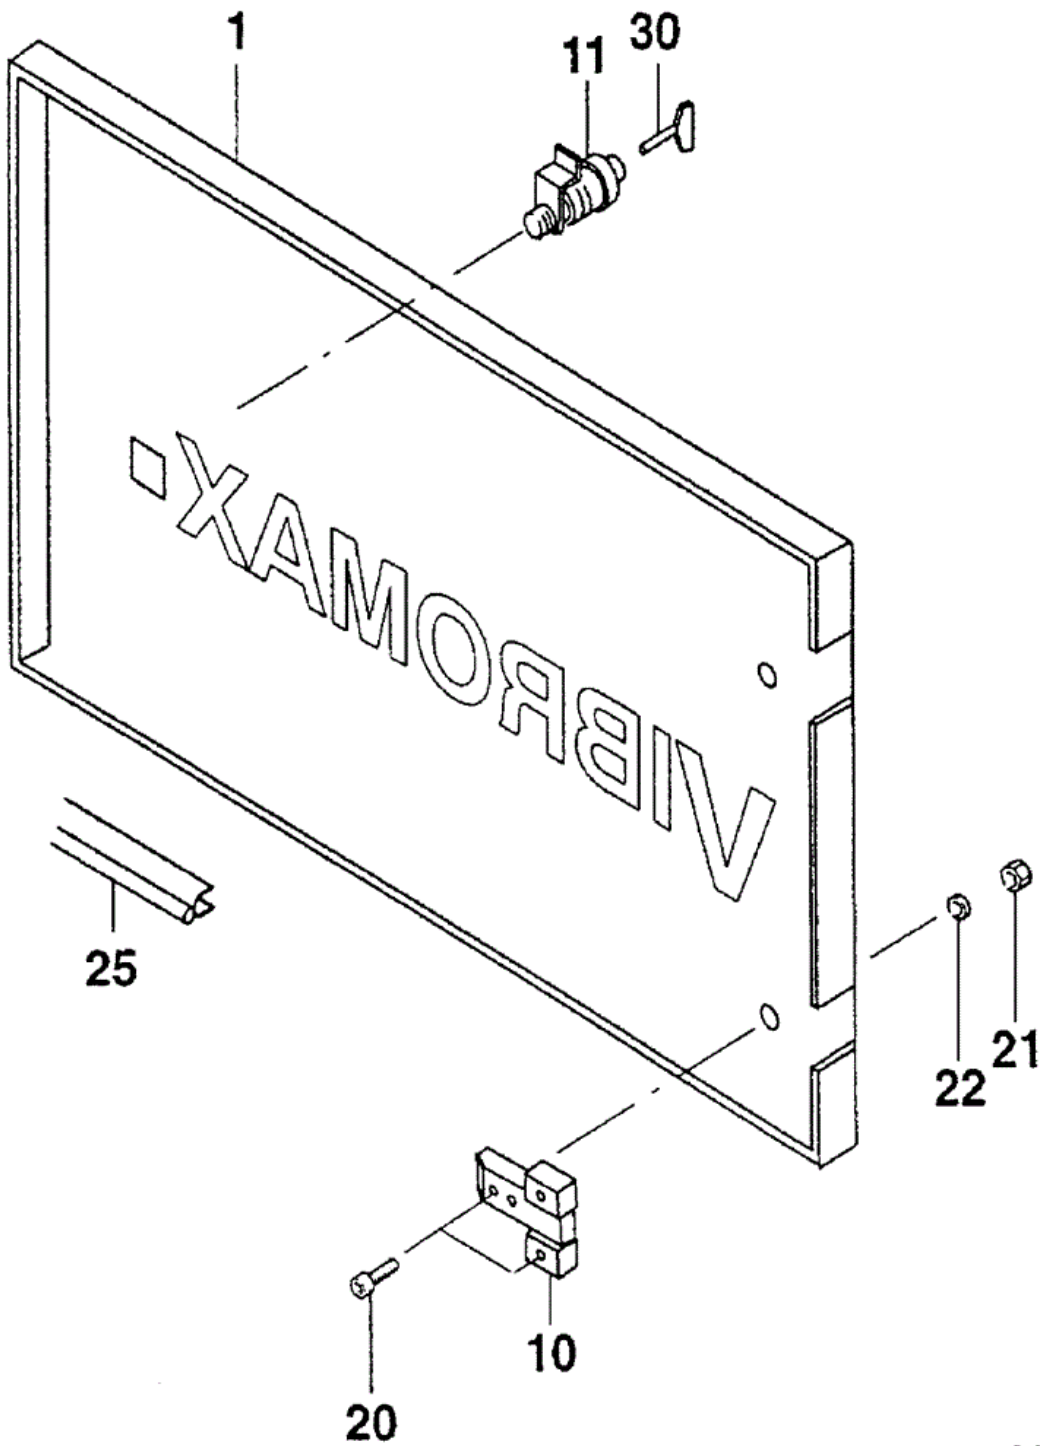


844680

Item	Part #	Change No	Description	Usage Code	QTY
1	7232/11181		Door Flap		1
10	7225/59003		Hinge		2
11	2748/00014	Superseded	Lock mechanism		1

11	2748/00017	from 1801720	Lock Mechanism		1
20	2027/08020		Capscrew M8x20		8
21	2114/00508		Nut HUTMUTTER (M8-6)		4
22	2201/00008		Washer M8		4
25	2782/01026		Strip		0
30	3789/81163		Key Ignition & Side Flap & Door		1



9802/4745 B1-4-1 STEPS

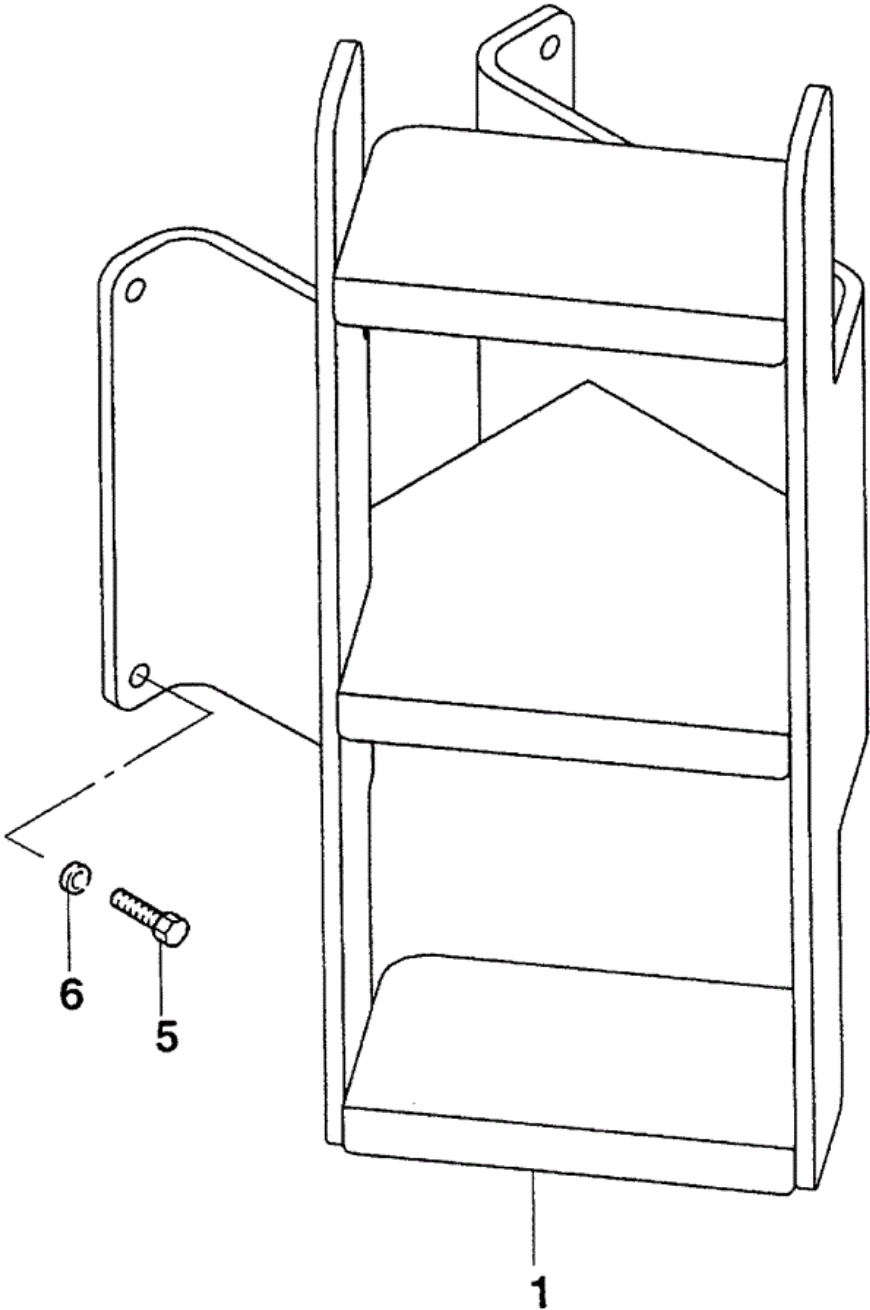


844690

Item	Part #	Change No	Description	Usage Code	QTY
1	7232/12210		Step		1
5	2021/12035		Screw Hex M12x35		4
6	2201/00012		Washer M12		4



9802/4745 B1-4-2 STEPS >1802240

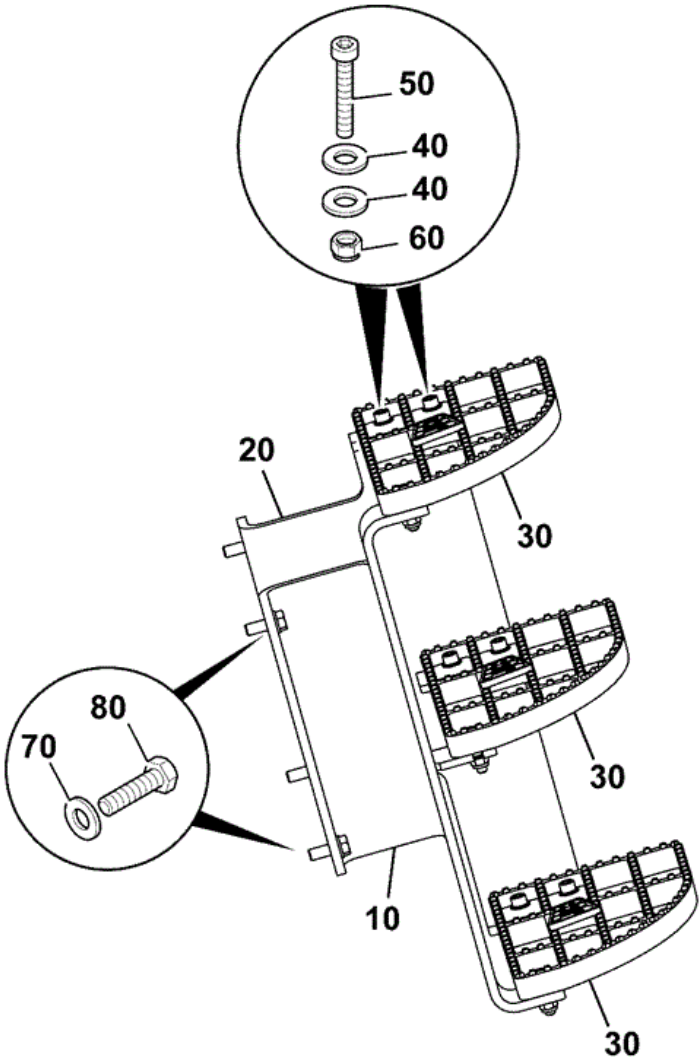


332-N0152-1

Item	Part #	Change No	Description	Usage Code	QTY
10	332/N0147		Bracket left hand step mounting		1
20	332/N0150		Bracket right hand step mounting		1
30	331/41063		Step Cast		3

40	1420/0008Z		Washer (M10)		18
50	1391/3410D		Capscrew M10 x 40		9
60	1370/0303Z		Nut lock M10		9
70	1420/0009Z		Washer (M12)		4
80	1315/0509Z		Setscrew M12 x 35mm		4



9802/4745 B1-5-1 ENGINE COVER

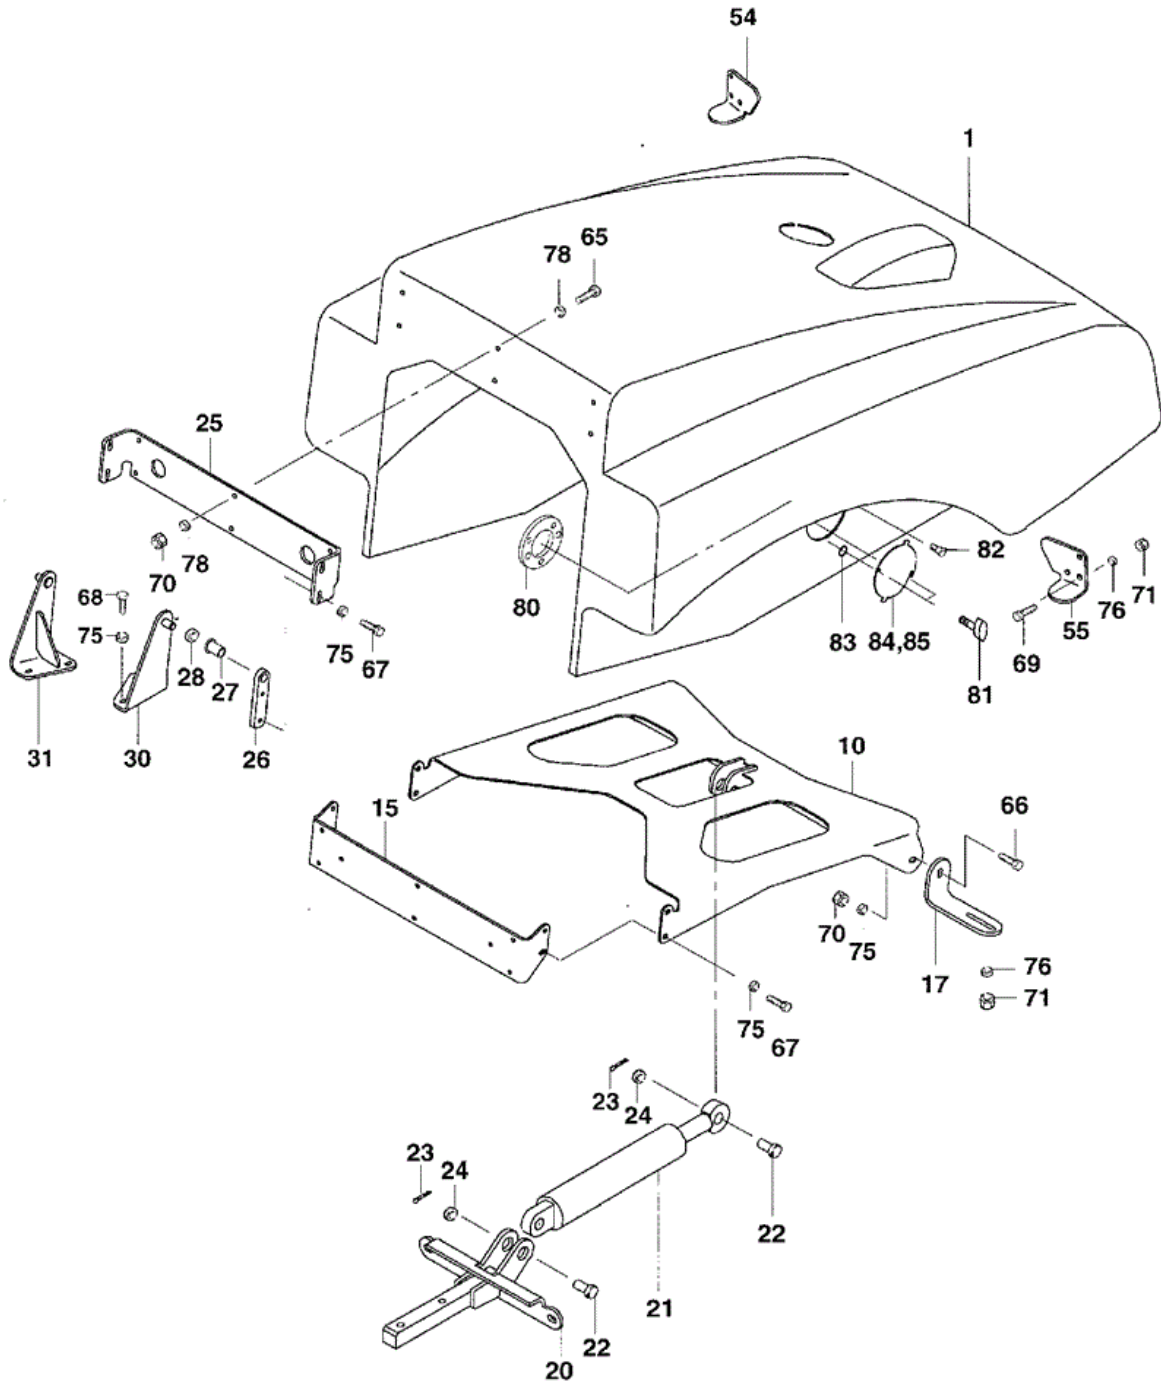

847170


Item	Part #	Change No	Description	Usage Code	QTY
1	7242/53100		Bonnet engine		1
10	7242/53210	Superseded	Frame		1
10	7262/53210	from 1801620	Plate Retaining Complete		1

15	7242/53215		Bracket		1
17	7242/53217		Bracket angle		2
20	7242/53220		Bracket ram support		1
21	7210/60120	Superseded	Ram <i>For ram components see E4-3-1</i>		1
21	332/N4004		Ram complete <i>For ram components see E4-3-2</i> <i>See Note 1</i>		1
22	2441/02570		Pin		2
23	2300/06040	Superseded	Pin		2
23	2103/1311		Pin split cotter, 1/4"		2
24	2201/01025		Washer		6
25	7242/53225		Bracket		1
26	7222/53226		Hinge		2
27	2113/01203		Sleeve		2
28	2201/01020		Washer		4
30	7242/53230		Retainer LEFT		1
31	7242/53233	Superseded	Retainer RIGHT		1
31	7242/53400		Retainer RIGHT		1
54	7242/53254		Bracket right hand side		1
55	7242/53255		Bracket left hand side		1
65	2021/10050	Superseded	Screw		8
65	1315/0412Z		Bolt M10 x 1.5 x 50		8
66	2021/10035	Superseded	Screw Hexagon M10x35		2
66	1315/0409Z		Setscrew M10 x 35		2
67	2021/10030	Superseded	Screw Hexagon M10 x 30		8
67	1315/0408Z		Setscrew M10 x 30		8
68	2021/10025	Superseded	Screw Hexagon M10x25		6
68	1315/0407Z		Setscrew M10 x 25 mm		6
69	2021/08025	Superseded	Screw Hexagon M8x25		6
69	1315/0307Z		Setscrew M8 X 25		6
70	2118/31000		Nut M10		8
71	2118/30800		Nut M8		10
75	2200/00010		Washer		14
76	2200/00008		Washer M8		16
78	2201/00010		Washer M10		18
80	7242/53264		Ring		1
81	2746/08025		Screw Wing		2
82	2028/06016		Screw		3
83	2772/00602		O Ring		2
84	7222/52381		Cover		1
85	7242/53600		Panel noise protection		1

Note 1: Part number stamped on ram body



9802/4745 B1-6-1 GRILLE

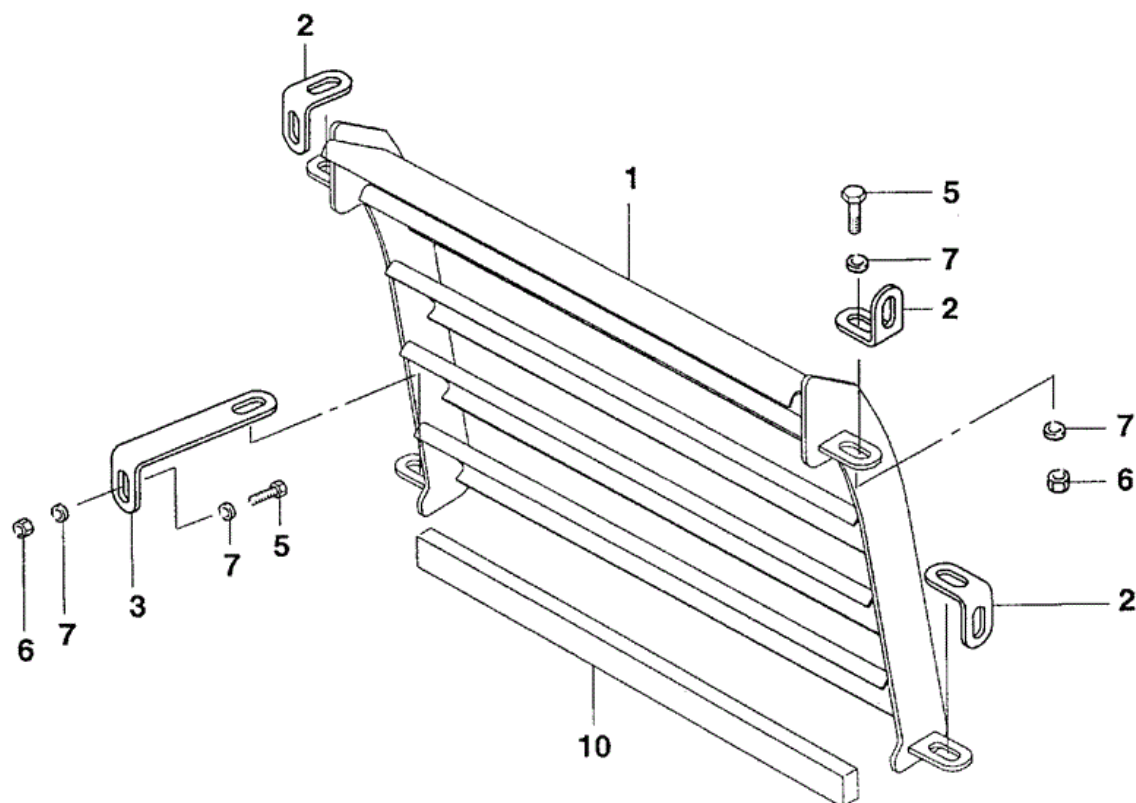

844710

Item	Part #	Change No	Description	Usage Code	QTY
1	7242/53260		Grille		1
2	7242/53252		Bracket		3
3	7242/53253		Bracket		1

5	2021/08020		Screw Hexagon M8x20		8
6	2118/30800		Nut M8		8
7	2201/00008		Washer M8		16
10	7242/53265		Strip rubber		5


This technical drawing is an exploded view of a mechanical assembly, likely a hydraulic cylinder or a similar actuator. The components are numbered 1 through 17. The main body (1) is a rectangular block with a central bore. A piston rod (13) is shown extending from the side of the body. A piston assembly (2, 3, 7, 8, 9) is shown in an exploded state, with the piston (2) and piston ring (3) being key components. A seal assembly (4, 5, 6) is shown at the top of the body. A mounting bracket (11) is shown on the left side, with a mounting pin (12) and a mounting nut (14) shown in an exploded state. A mounting plate (15) is shown on the right side, with a mounting pin (16) and a mounting nut (17) shown in an exploded state. The diagram illustrates the assembly sequence and the relative positions of the various components.

Item	Part #	Change No	Description	Usage Code	QTY
1	7262/14110		Joint		1
2	7262/14015		Seal		4
3	2242/23590		Bearing		4

4	7262/14012		Cap Bearing		2
6	2020/16070		Screw M16x70		24
8	2806/00125		Washer		2
9	7262/14011		Cap Bearing		1
10	2021/16020		Screw		1
11	7262/14010		Plate		1
12	2020/20120		Screw		10
13	4022/64120	Superseded	Cylinder Steering		2
13	332/N1991		Ram steering		2
14	2445/40760		Pin		4
15	2201/01040		Washer		8
16	2300/08080	Superseded	Pin		4
16	2103/1111	Superseded	Pin Split		4
16	2103/1518		Pin split		4



9802/4745 B1-8-2 . CENTRE PIVOT

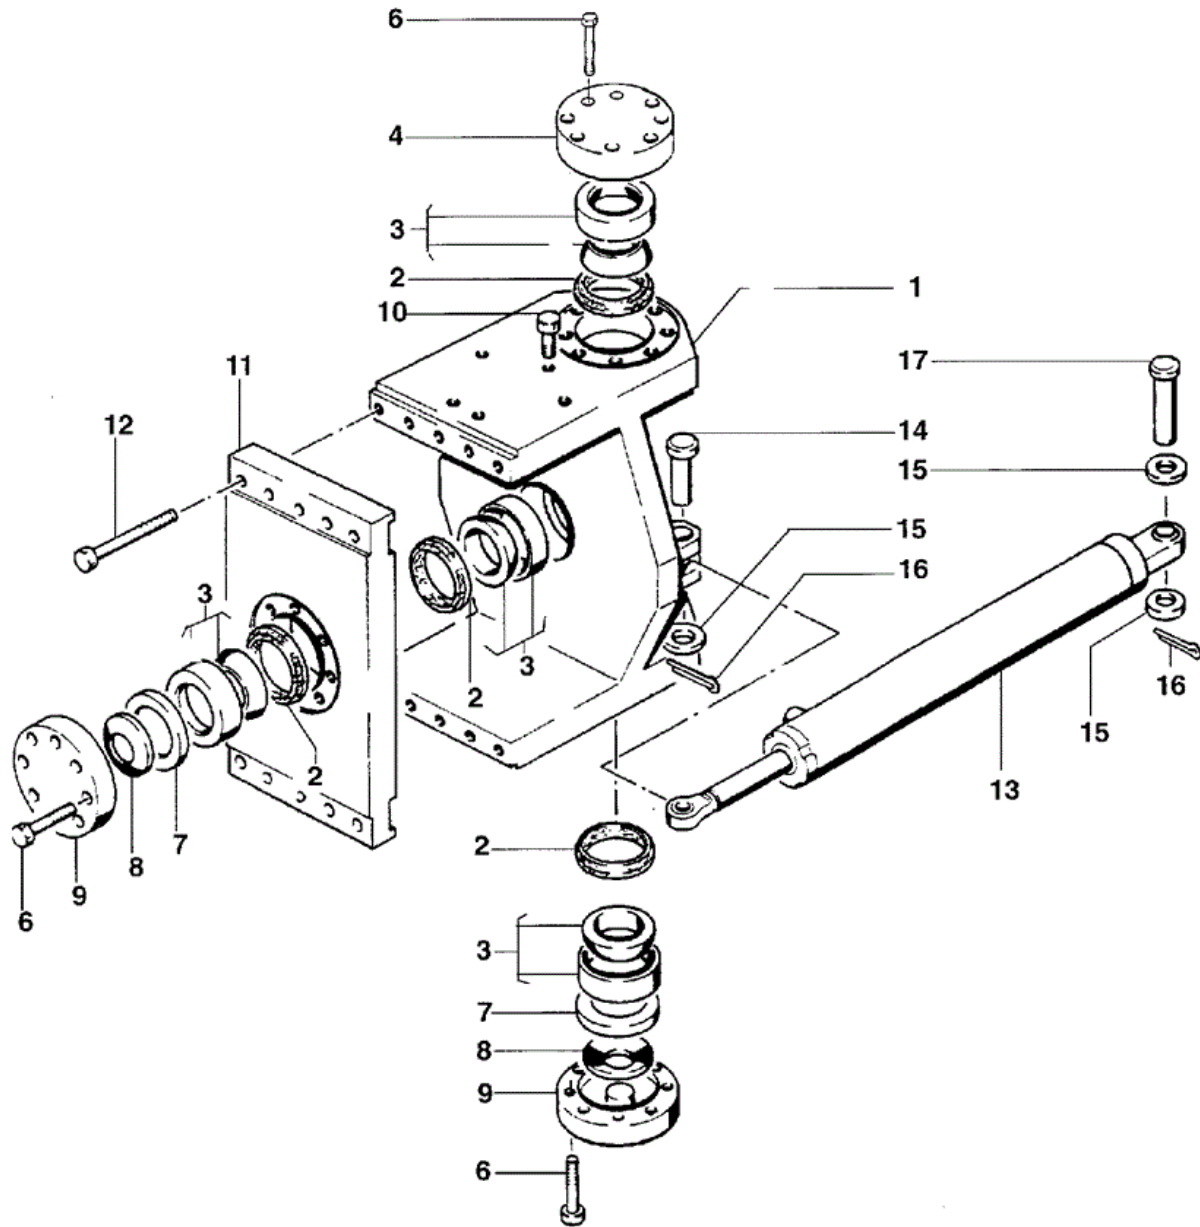

846050


Item	Part #	Change No	Description	Usage Code	QTY
1	7262/14110		Joint		1
2	7262/14015		Seal		4
3	2242/23590		Bearing		4

4	7262/14011		Cap Bearing		2
6	1315/3716Z		Bolt M16 x 70mm		24
8	2806/00125		Washer		2
9	7262/14012		Cap Bearing		1
10	1315/0705Z		Setscrew (M16 x 20)		1
11	7262/14010		Plate		1
12	1315/3822Z		Bolt (M20 x 120)		10
13	332/N1991		Ram steering <i>See E4-2-1 for service parts</i> <i>See Note 1</i>		2
14	2445/40760		Pin		4
15	2201/01040		Washer		8
16	2103/1111	Superseded	Pin Split		4
16	2103/1518		Pin split		4

Note 1: Part number stamped on ram body



9802/4745 B1-9-1 COOLER COVER

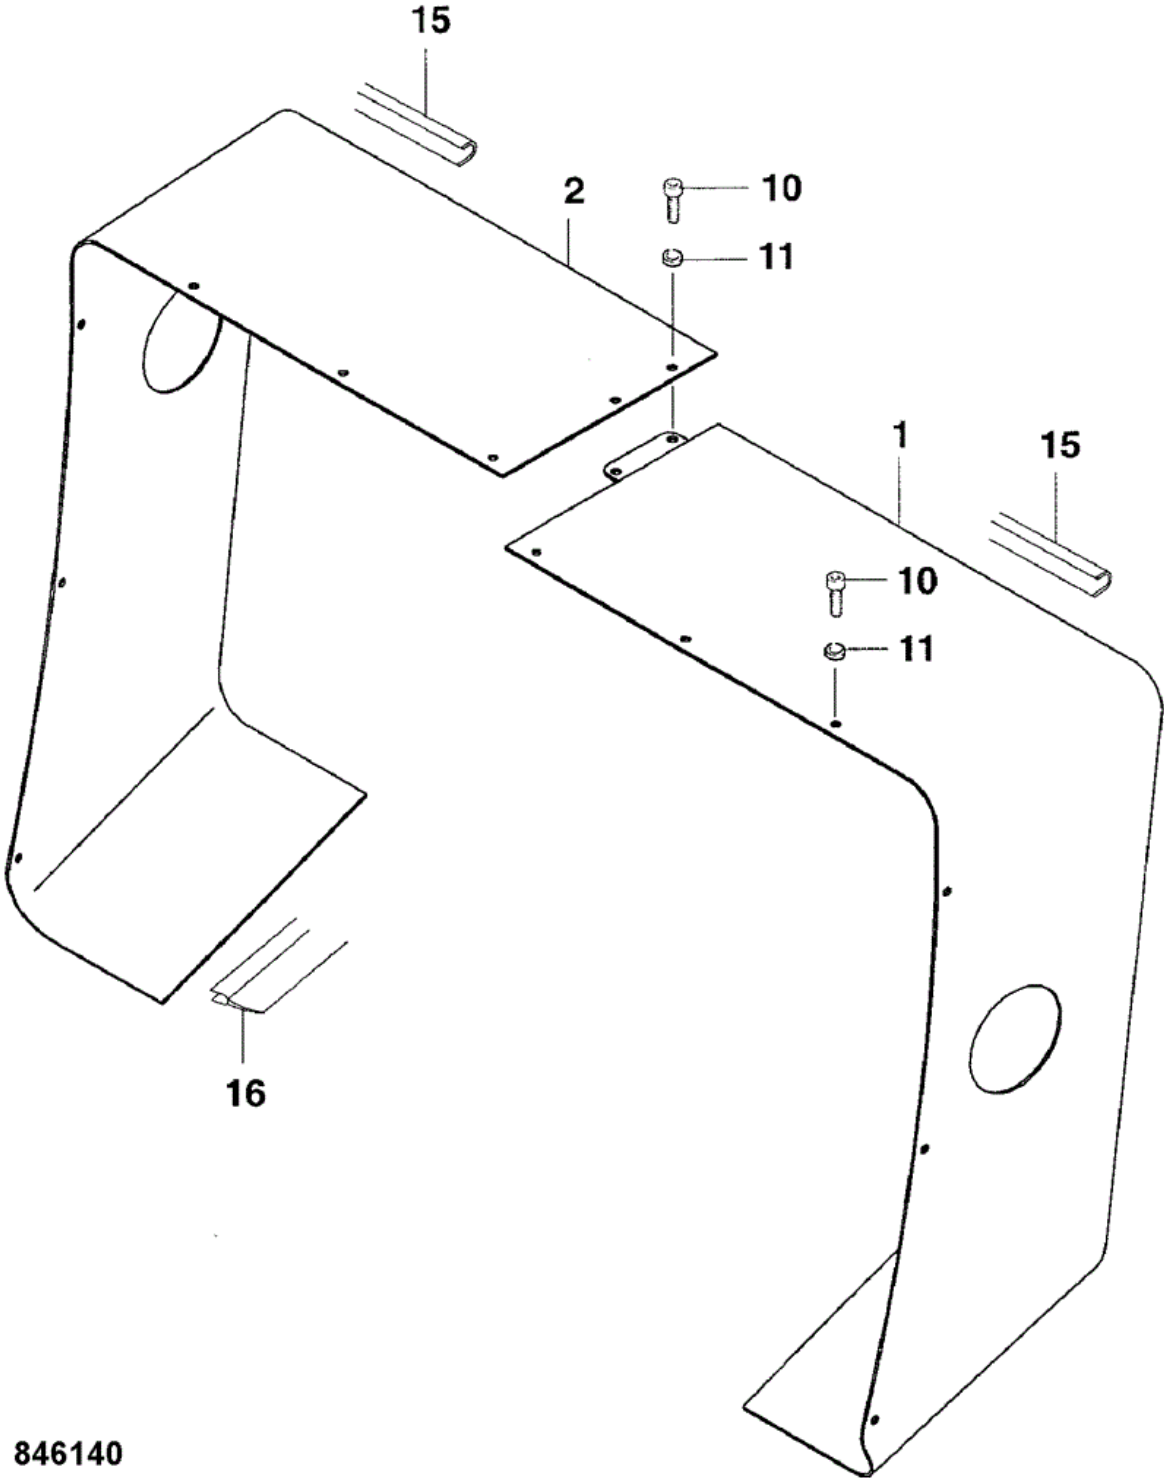


846140

Item	Part #	Change No	Description	Usage Code	QTY
1	7242/51510		Cover left hand		1
2	7242/51520	Superseded	Cover right hand		1
2	7242/51560		Cover Right		1

10	2025/08020		Screw		14
11	2201/00008		Washer M8		14
15	2782/01010		Strip Edge Protection <i>4.0M long</i>		0
16	2782/01015		Seal <i>1.0M long</i>		0



9802/4745 B1-10-1 SIDE FLAP ASSEMBLY

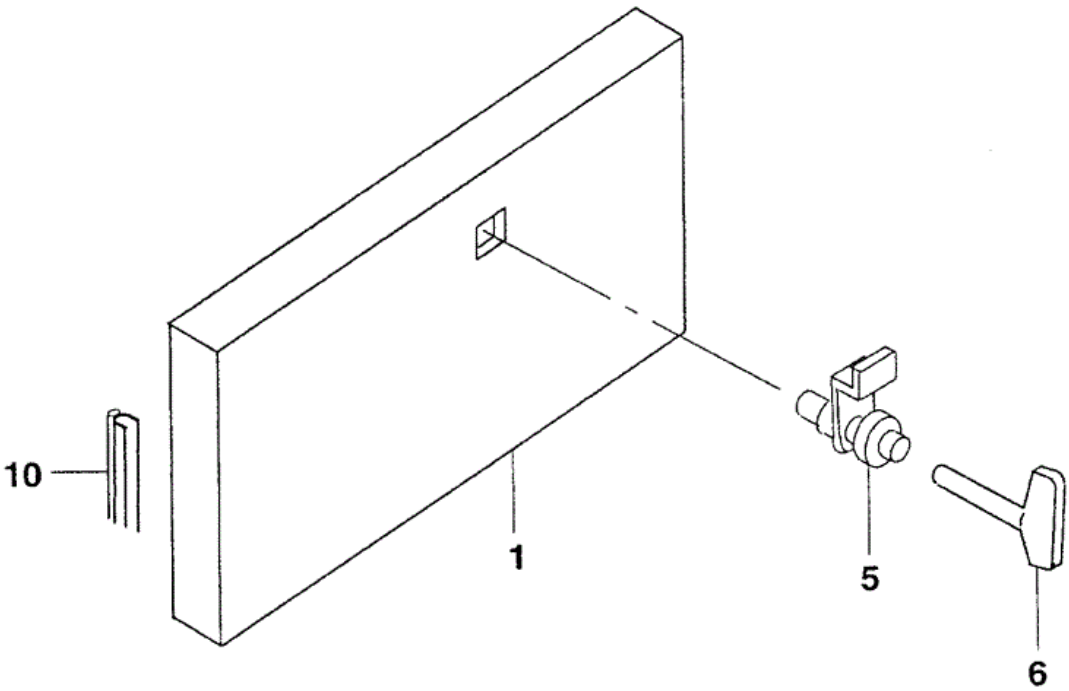

844930

Item	Part #	Change No	Description	Usage Code	QTY
1	7242/42351		Cover side flap		1
5	:7242/42355	Superseded	Lock mechanism		1
5	7242/42356	from 1801620	Lock Mechanism		1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com