

m-3667

NEW HOLLAND

36" Tiller

OPERATOR'S MANUAL

For LS Yard Tractors
Model No.
715704001 – T7P0001 & Up




Introduction

Thank you for purchasing a New Holland product.


All of us at New Holland want you to be completely satisfied with your new product, so feel free to contact your local Authorized Service Dealer for help with service, genuine replacement parts, or other information you may require.

Whenever you contact your Authorized Service Dealer or the factory, always know the model and serial numbers of your product. These numbers will help the Service Dealer or Service Representative provide exact information about your specific product. You will find the model and serial number plate located in a unique place on the product as shown below.

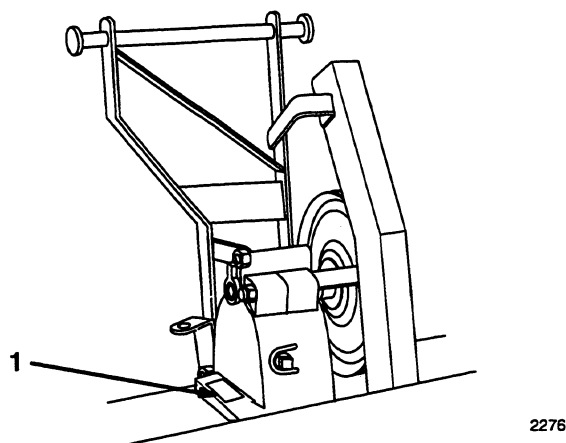

1. Model and Serial Number Plate

For your convenience, write the product model and serial numbers in the space below.

 NEW HOLLAND	
MODEL NO.	SERIAL NO.
COMPONENT	
NEW HOLLAND NORTH AMERICA, INC.	
<small>MADE IN U.S.A.</small>	

The warning system in this manual identifies potential hazards and has special safety messages that help you and others avoid personal injury, even death. **DANGER**, **WARNING** and **CAUTION** are signal words used to identify the level of hazard. However, regardless of the hazard, be extremely careful.

DANGER signals an extreme hazard that will cause serious injury or death if the recommended precautions are not followed.

WARNING signals a hazard that may cause serious injury or death if the recommended precautions are not followed.

CAUTION signals a hazard that may cause minor or moderate injury if the recommended precautions are not followed.

Two other words are also used to highlight information. "Important" calls attention to special mechanical information and "Note" emphasizes general information worthy of special attention.

The left and right side of the machine is determined by sitting on the seat in the normal operator's position.

Contents


	Page		Page
Safety and Instruction Decals	2	Attachment Lift Lever	13
Assembly	3	Attachment Power Lift	13
Loose Parts	3	Adjusting Dial-A-Height	14
Assemble Tiller	5	Adjusting Lift Chain	14
Tractor Set-Up	6	Tips for Tilling	15
Installing Tiller to Tractor	9	Maintenance	16
Removing the Tiller	10	Service Interval Chart	16
Operation	12	Greasing and Lubrication	17
Operating the Power Take Off (PTO)	12	Storage	18

Safety and Instruction Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

**ON TINE SHIELD
LEFT and RIGHT SIDE
(Part No. TR92D7112)**

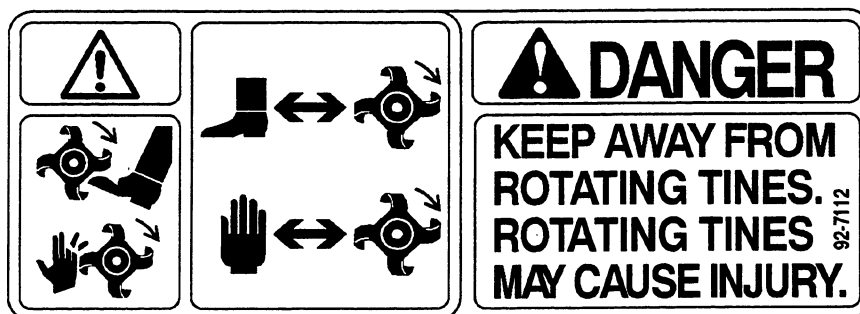

**ON FRONT OF TINE SHIELD
(Part No. TR93D1628)**

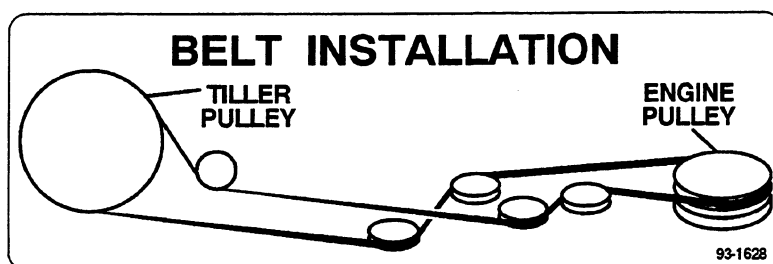

Assembly

Loose Parts

Note: Use the chart below to verify all parts have been shipped

DESCRIPTION	QTY.	USE
Hitch	1	Install tiller hitch to tiller gear case.
Spring bracket	1	
Bolt (installed in case for shipping) 3/8 x 5-1/2"	2	
Nut (installed in case for shipping) 3/8"	2	
Pulley	1	Install drive pulley to tiller gear case.
Key	1	
Set screw 15/16"	1	
Idler pulley	1	Install idler pulley and belt guard.
Spacer	1	
Belt guide	1	
Belt guard	1	
Bolt 3/8-16 x 2-1/4"	1	
Locknut 3/8"	1	
Rear shield	1	Install rear shield to tiller.
Cotter pin 1"	3	
Lift chain	1	Install lift chain to tiller.
Clevis	1	
Clevis pin	1	
Cotter pin 3/4"	1	
Lift lever	1	Install lift to tractor.
Bushing	2	
Shim washer	4	
E-ring	2	
Lift rod	1	
Trunnion	1	
Hairpin cotter	1	
Washer 5/8"	2	
Cotter pin 1"	1	

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com