# 52" Mowers

### for

**Lawn & Garden Tractors** 

Model No. 78280 - 6900001 & Up

Model No. 78285 - 6900001 & Up

Model No. 98280 - 6900001 & Up

Model No. 98285 – 6900001 & Up

Model No. 9863220 - T6T0001 & Up

Model No. 9863221 - T6V0001 & Up


# **Operator's Manual**

**IMPORTANT:** Read this manual carefully. It contains information about your safety and the safety of others. Also become familiar with the controls and their proper use before you operate the product.

### Introduction

We want you to be completely satisfied with your new product, so feel free to contact your local Authorized Service Dealer for help with service, genuine replacement parts, or other information you may require.

Whenever you contact your Authorized Service Dealer or the factory, always know the model and serial numbers of your product. These numbers will help the Service Dealer or Service Representative provide exact information about your specific product. You will find the model and serial number plate located in a unique place on the product as shown below.

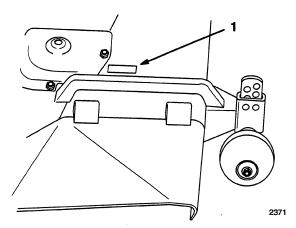

1. Model and Serial Number Plate

For your convenience, write the product model and serial numbers in the space below.

Model No:	 	
Serial No	 	<del></del>

The warning system in this manual identifies potential hazards and has special safety messages that help you and others avoid personal injury, even death. DANGER, WARNING and CAUTION are signal words used to identify the level of hazard. However, regardless of the hazard, be extremely careful.

**DANGER** signals an extreme hazard that will cause serious injury or death if the recommended precautions are not followed.

WARNING signals a hazard that may cause serious injury or death if the recommended precautions are not followed.

**CAUTION** signals a hazard that may cause minor or moderate injury if the recommended precautions are not followed.

Two other words are also used to highlight information. "Important" calls attention to special mechanical information and "Note" emphasizes general information worthy of special attention.


The left and right side of the machine is determined by sitting on the seat in the normal operator's position.



PART NO. 94-2538

**PARTS** CATALOG

52" Rotary Cutting Unit Mulcher Kit

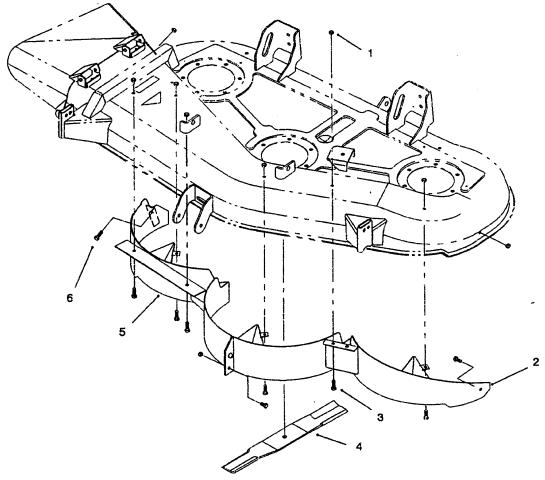

#### **BAFFLE & BLADE ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1 2 3	3296-29 94-2509 322-5	Nut — Lock Baffle — Left Screw — Hex Hd. Cap	7 1 1 1

LAUCLINDLI				
	Ref. No.	Part No.	Description	No. Used
	4 5 6	94-4936 94-2508 322-2	Blade – Recycler Baffle – Right Screw Hex Hd. Cap	3 1 6
	l	ł .	ļ	bnri

C-2545

## **Contents**

	Page		Page
Safety and Instruction Decals	2	Operating the Power Take Off (PTO)	13
Installation	3	Attachment Lift Lever	14
Loose Parts	3	Attachment Power Lift	14
Mower Preparation	4	Adjusting Dial-A-Height	15
Tractor Preparation	6	Adjusting Gage Wheels	15
Installing the Mower	7	Tips for Mowing Grass	16
Transport Height Adjustment	8	Maintenance	17
Side-to-Side Mower Leveling	9	Service Interval Chart	17
Front-to-Rear Blade Slope	10	Cutting Blade	18
Removing the Mower	11	Greasing and Lubrication	20
Removing the Mulching Baffle	12	Blade Drive Belt	20
Installing the Mulching Baffle	12	Power Take Off (PTO) Belt	21
Operation	13	Storage	22
Side Discharge	13	Troubleshooting	23

#### **Safety and Instruction Decals**




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.


ON GRASS DEFLECTOR (Part No. 93-1122) (Part No. TR93D1122)



ON MOWER LEFT AND DISCHARGE CHUTE (Part No. 92-7108) (Part No. TR92D7108)

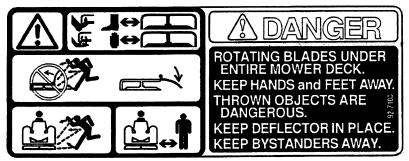


NEXT TO GAGE WHEELS (Part No. 93-7282) (Part No. TR93D7282)

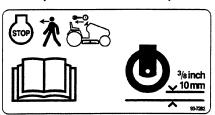


UNDER GRASS DEFLECTOR (Part No. 92-7109) (Part No. TR92D7109)



ON MOWER LEFT SIDE (Part No. 94-2543) (Part No. TR94D2543)

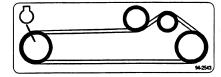

ON MOWER REAR CENTER (Part No. 94–4937) (Part No. TR94D4937)

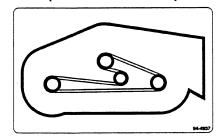

## Installation

#### **Loose Parts**

**Note:** Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Gage wheel	2	
Shoulder bolt	2	Install gage wheels
Lock nut 3/8" (with patch on threads)	2	
Rear link	1	
Washer	2	Install rear link
Cotter pin	2	
Adjustable links	2	
Washer 3/8" (10 mm)	2	Install front mount to mower
Cotter pin 1" (26 mm)	2	
Grass deflector	1	
Spring	2	lookell are as deflected
Bolt 3/8– 24 x 3-1/2" (89 mm)	2	Install grass deflector
Lock nut 3/8"	2	
Up stop	1	Install mower up stop
Hairpin cotter-large	2	
Washer 3/4" (19 mm)	2	
Link pin	1	Install mower to tractor
Hairpin cotter-small	3	
Washer 1/2" (13 mm)	3	
Operator's Manual	1	Read before operating

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com