



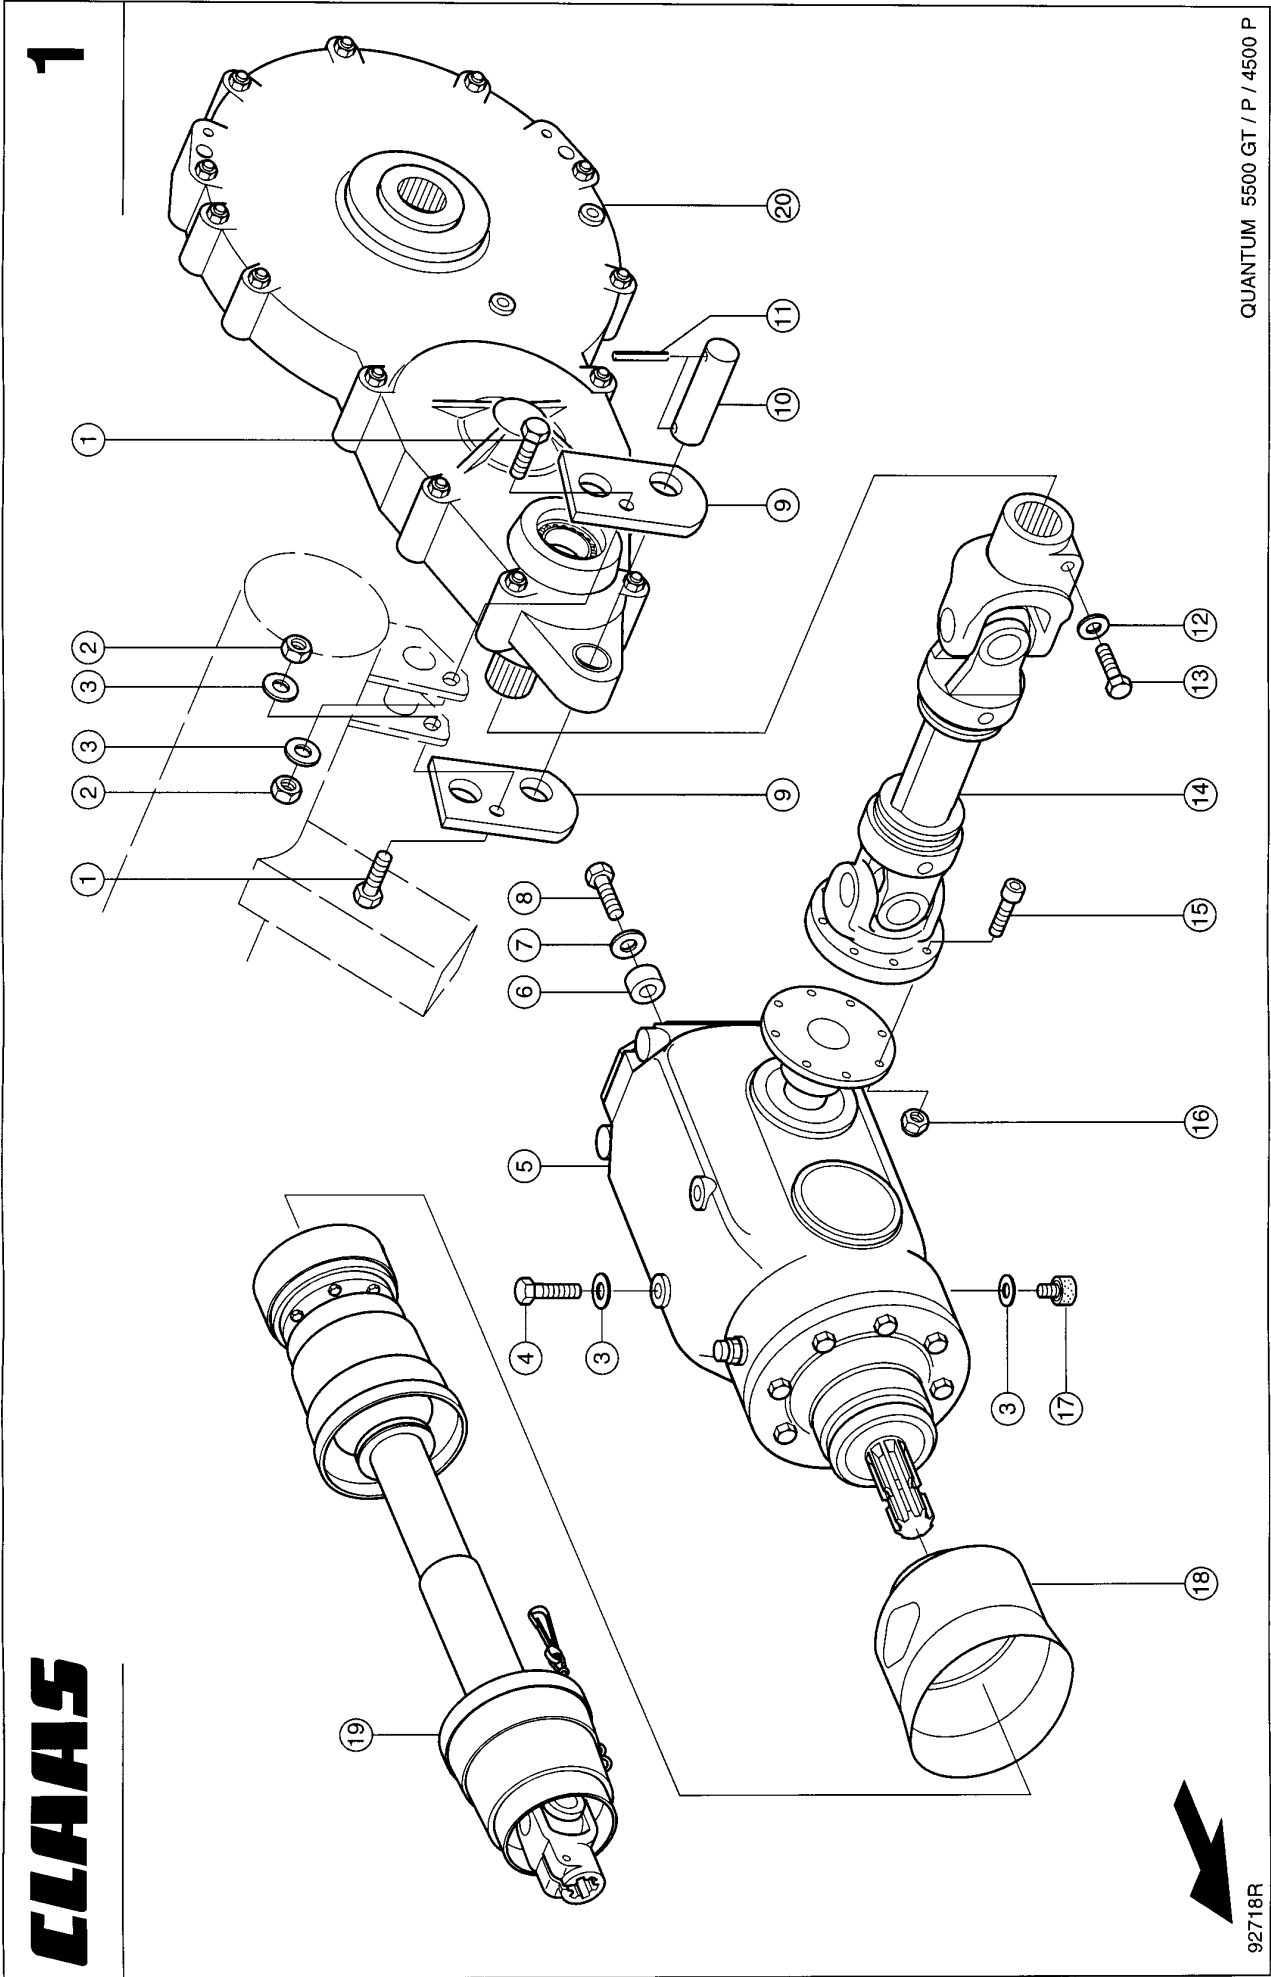


MAIN DRIVE

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0235 585 0	HEXAGON HEAD BOLT	M16X45	2	
2	00 0238 047 0	LOCK NUT	M16	2	
3	00 0239 391 0	CONTACT WASHER	A16	3	
4	00 0235 821 0	HEXAGON HEAD BOLT	M16X40	1	
5	00 0972 140 0	MAIN GEARBOX	1000 U/MIN	1	1)
6	00 0972 115 0	BUSHING	21X35X15	2	
7	00 0212 191 0	CONTACT WASHER	A20	2	
8	00 0242 478 0	HEXAGON HEAD BOLT	M20X50	2	
9	00 0971 934 0	STRAP	100X12X180	2	
10	00 0971 958 0	PIN	D 40 X 133	1	
11	00 0244 585 0	SPRING PIN	12 X 60	2	
12	00 0239 389 0	CONTACT WASHER	A12	1	
13	00 0239 160 0	HEXAGON HEAD BOLT	M12X35-MKL	1	
14	00 0972 011 0	DRIVE SHAFT		1	2)
15	00 0233 214 0	SOCKET HEAD SCREW	M12X 50	8	
16	00 0233 323 0	LOCK NUT	M12	8	
17	00 0972 110 0	RUBBER PAD	D60X40	1	
18	00 0963 402 0	GUARD CUP		1	
19	00 0970 759 1	DRIVE SHAFT		1	3)
19	00 0970 758 1	UNIV.DRIVE SHAFT		1	4)
20	00 0971 953 0	SPUR GEARBOX		1	5)
1)	Remarks	single parts plate 3			
2)	Remarks	single parts plate 77			
3)	Remarks	single parts plate 78			
4)	Remarks	single parts plate 80			
5)	Remarks	single parts plate 4			

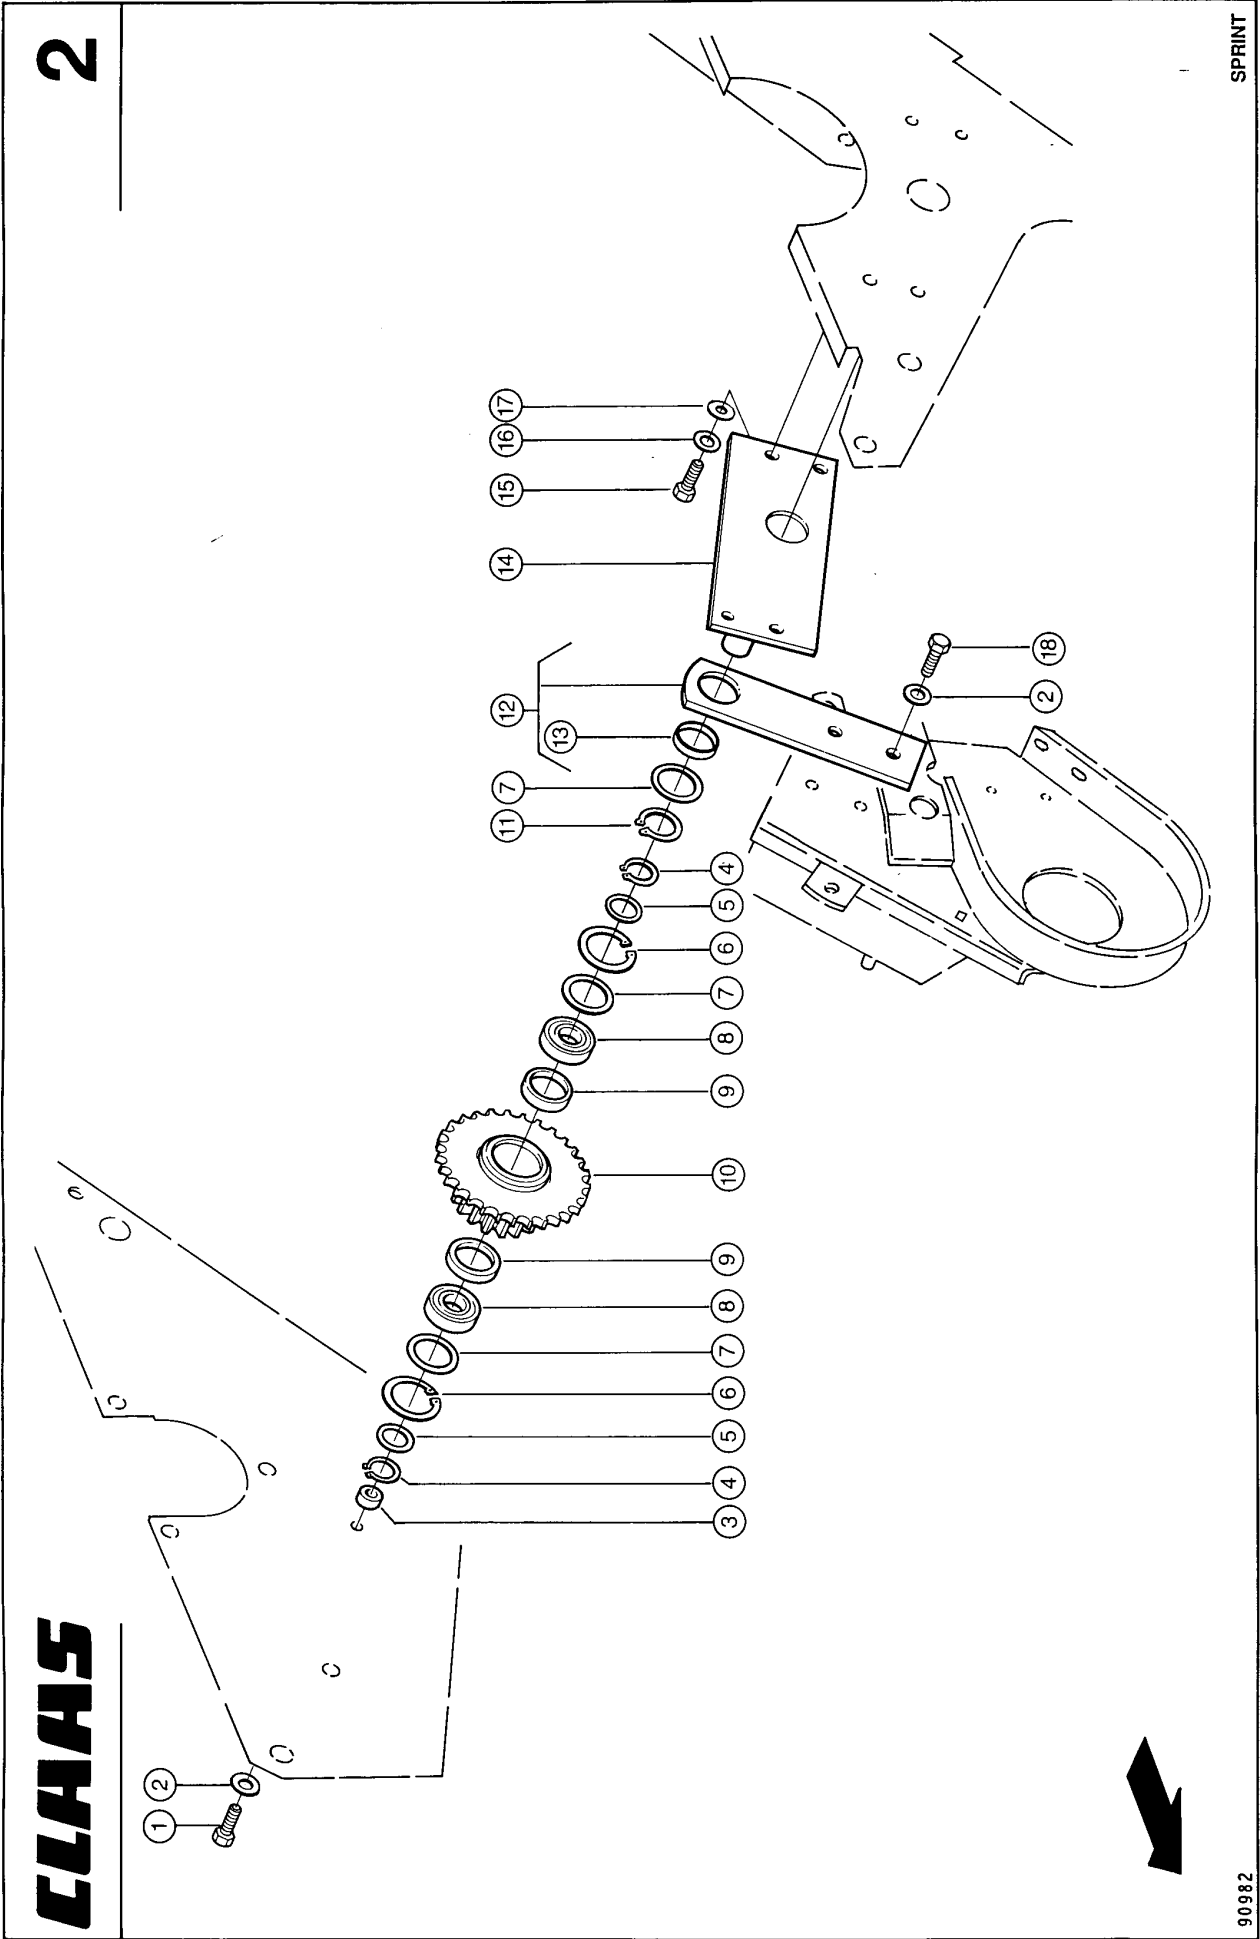

DRIVE R.H.

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0233 441 0	HEXAGON HEAD BOLT	M16X30-MKL	1	
2	00 0239 391 0	CONTACT WASHER	A16	1	
3	00 0963 598 0	BUSHING	25X 4X 14	1	
4	00 0235 164 0	CIRCLIP	35X1,5	2	
5	00 0234 385 0	BACK-UP WASHER	S 35X45	2	
6	00 0235 184 0	CIRCLIP	62X2	2	
7	00 0238 198 0	BACK-UP WASHER	S 50X62X3	3	
8	00 0238 201 0	GRVD.BALL BEARING	6007 LLU/5K	2	
9	00 0961 288 0	SPACER RING	53,9X60,3X 10	2	
10	00 0963 592 0	GEAR	Z 16/29	1	
11	00 0237 862 0	CIRCLIP	50X2	1	
12	00 1315 268 0	BEARING PLATE R.H	RECHTS	1	
12	00 0963 596 0	BEARING PLATE		1	
13	00 0961 124 0	BEARING BUSH	50X 55X 10	1	
14	00 1315 267 0	SHAFT		1	
14	00 0963 588 0	SHAFT		1	
15	00 0237 461 0	HEXAGON HEAD BOLT	M12X30	4	
16	00 0239 389 0	CONTACT WASHER	A12	4	
17	00 0211 394 0	WASHER	13X35X5	4	

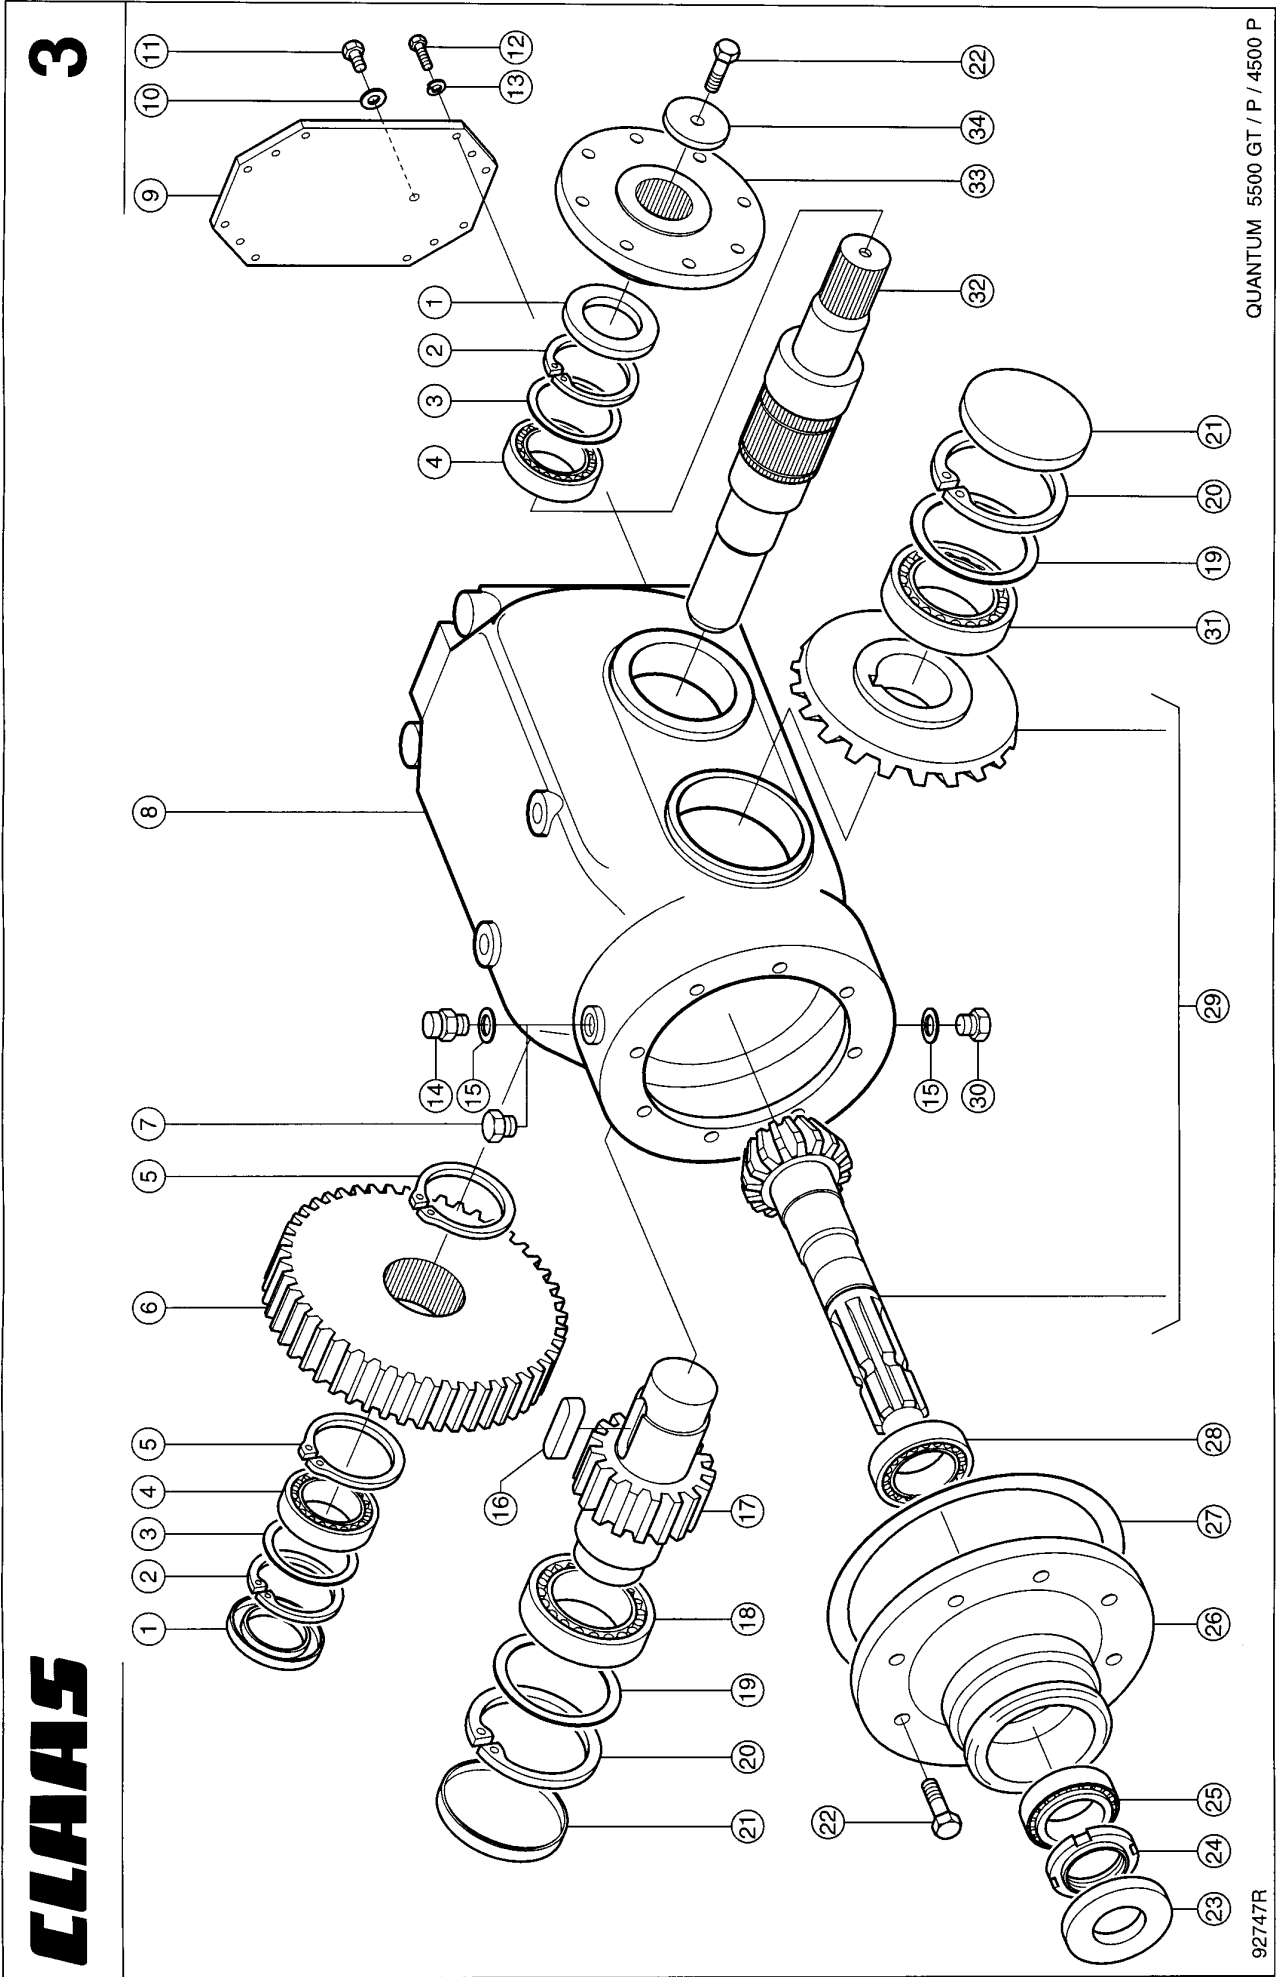

QUANTUM 5500 GT / P / 4500 P


92747R

3

CLAAS

GEARBOX

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0972 140 0	MAIN GEARBOX	1000 U/MIN	1	

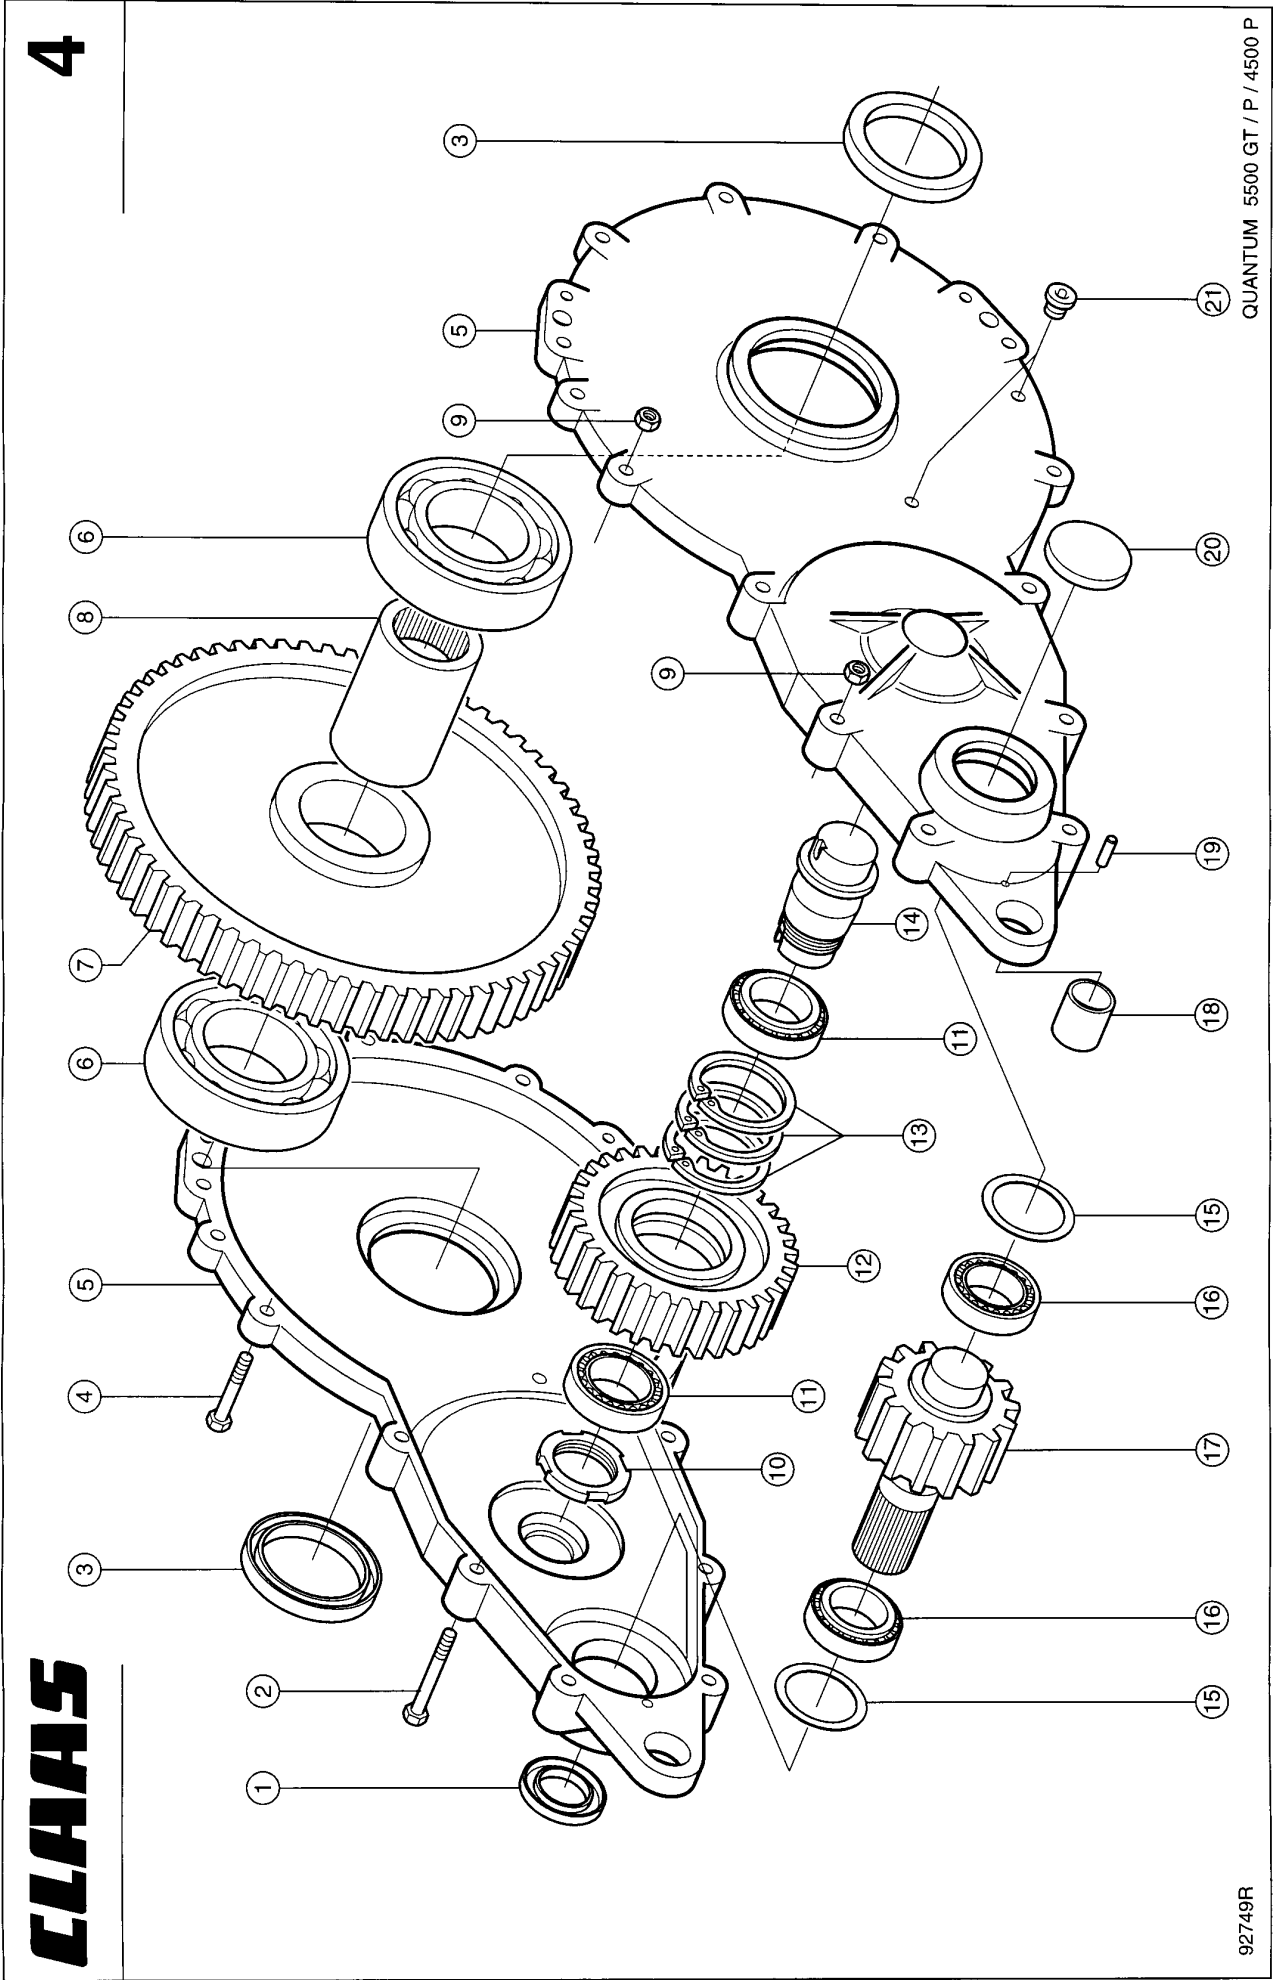


SPUR GEARBOX

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 0971 953 0	SPUR GEARBOX		1	

5

CLAS

Sprint

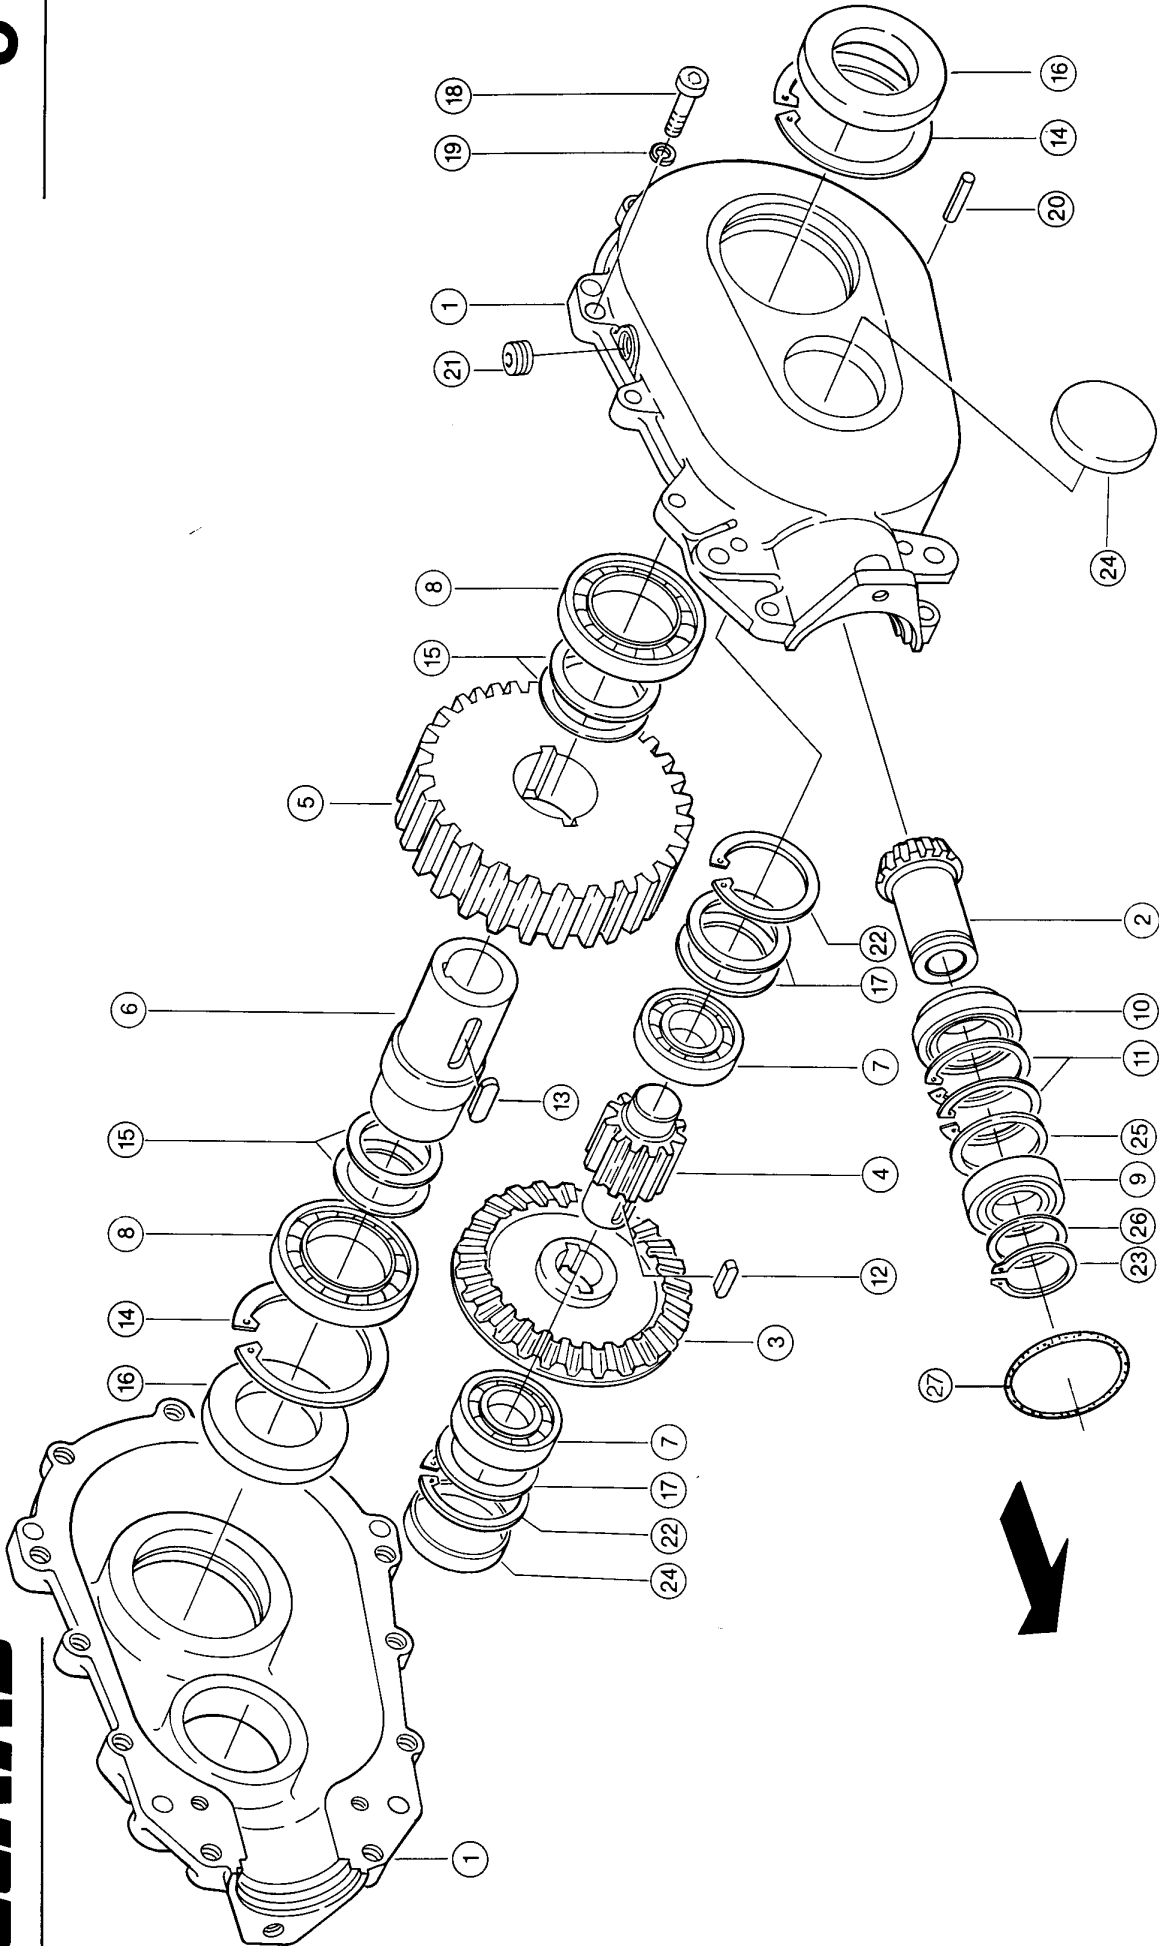


90032

GEARBOX - HYDRAULIC CONVEYOR DRIVE

Pos.	Part No.	Description	Dimension	Quantity	Conditions
0	00 0960 985 0	SPUR GEARBOX		1	
1	00 0921 224 0	GEARBOX HOUSING		1	
2	00 0921 225 0	BEVEL GEAR SHAFT	8827-3	1	
3	00 0921 226 0	BEVEL GEAR	8827-4	1	
4	00 0921 227 0	PINION SHAFT	Z 11 60X117	1	
5	00 0921 228 0	SPUR GEAR	Z 47 210X56	1	
6	00 0921 229 0	HOLLOW SHAFT		1	
7	00 0233 160 0	GRVD.BALL BEARING	6207-C3 -35X72X17	2	
8	00 0236 005 0	GRVD.BALL BEARING	6012 -60X95X18	2	
9	00 0233 154 0	GRVD.BALL BEARING	6008 C3	1	
10	00 0238 641 0	TA.ROLLER BEARING	32008X - 40X68X19	1	
11	00 0235 185 0	CIRCLIP	68X2,5	2	
12	00 0244 775 0	PARALLEL KEY	B 10X 8X 20	2	
13	00 0211 984 0	PARALLEL KEY	B 18X11X 45	2	
14	00 0235 192 0	CIRCLIP	95X3	2	
15	00 0211 975 0	SHIM	60X75X1	4	
16	00 0211 985 0	SHAFT SEAL	BA 60X 95X10	2	
17	00 0234 425 0	SHIM	56X72X0,5	2	
17	00 0234 414 0	SHIM	56X72X0,3	2	
17	00 0234 433 0	SHIM	56X72X1	4	
18	00 0242 241 0	SOCKET HEAD SCREW	M10X 35	13	
19	00 0242 763 1	WASHER	10 -10,2X16,1X2,5	13	
20	00 0244 577 0	SPRING PIN	10 X 36	1	
21	00 0090 121 0	SCREW PLUG	M16X1,5	3	
22	00 0235 186 0	CIRCLIP	72X2,5	2	
23	00 0244 058 0	CIRCLIP	40X2,5	1	
24	00 0921 230 0	LOCK CAP	D72X 9	2	
25	00 0665 022 0	SHIM	55X68X0,5	2	
25	00 0234 413 0	SHIM	55X68X0,3	2	
25	00 0239 370 0	SHIM	55X68X1,0	4	
26	00 0238 434 0	SHIM	40X50X1	1	
27	00 0211 069 0	O-RING	79X3 N	1	

6

SPRINT

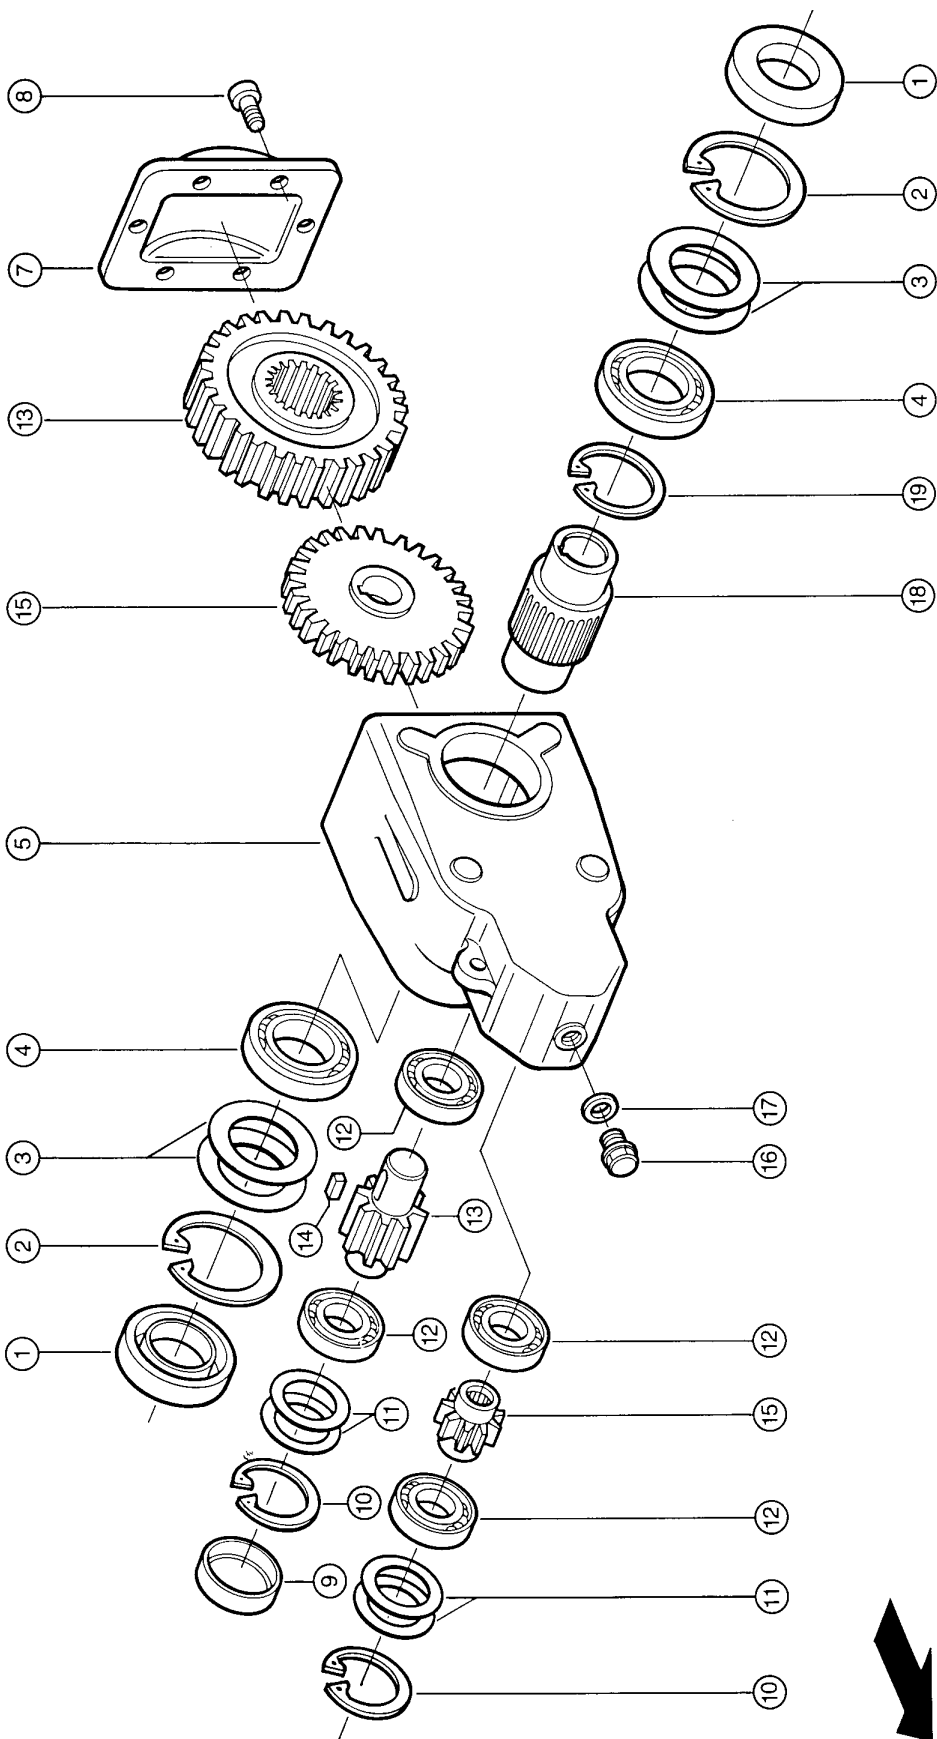

90978


CLAH5

GEARBOX FOR FLOOR CONVEYOR

Pos.	Part No.	Description	Dimension	Quantity	Conditions
0	00 0963 398 0	GEARBOX	GT-2.03 SR	1	
1	00 0212 630 0	SHAFT SEAL	AS 60X 95X10	2	
2	00 0235 192 0	CIRCLIP	95X3	2	
3	00 0239 171 0	SHIM	75X 95X0,1	1	
3	00 0239 170 0	SHIM	75X 95X0,3	1	
3	00 0239 169 0	SHIM	75X 95X1	1	
4	00 0236 005 0	GRVD.BALL BEARING	6012 -60X95X18	2	
5	00 0940 644 0	GEARBOX HOUSING	GT-2.03SR	1	
7	00 0940 645 0	GEARBOX COVER	GT-2.03SR	1	
8	00 0212 635 0	SOCKET HEAD SCREW	M 6X 16	6	
9	00 0921 230 0	LOCK CAP	D72X 9	1	
10	00 0235 186 0	CIRCLIP	72X2,5	2	
11	00 0234 433 0	SHIM	56X72X1	1	
11	00 0215 581 0	SHIM	62X72X0,1	1	
11	00 0215 582 0	SHIM	62X72X0,3	1	
11	00 0215 583 0	SHIM	62X72X0,5 ERS.D. 215583	1	
12	00 0235 916 0	GRVD.BALL BEARING	6207	4	
13	00 0940 647 0	GEAR WHEEL SET	I = 3,92:1	1	
14	00 0244 775 0	PARALLEL KEY	B 10X 8X 20	2	
15	00 0940 646 0	GEAR WHEEL SET	I = 3,92:1	1	
16	00 0244 861 0	SCREW PLUG	A-M16X1,5	1	
17	00 0238 183 0	SEALING RING	A16 X20	1	
18	00 0940 648 0	SHAFT	GT-2.03SR	1	
19	00 0243 045 0	CIRCLIP	68X2,5	1	

PICK-UP - SUPPORT

Pos.	Part No.	Description	Dimension	Quantity	Conditions
0	00 0971 892 0	PICK-UP ASS.		1	
1	00 0665 564 1	COACH BOLT	M6X12	2	
2	00 0963 660 0	GUARD PLATE		1	
3	00 0237 383 0	HEXAGON HEAD BOLT	M10X25	19	
4	00 0239 388 0	CONTACT WASHER	A10-10,2X22,25X1,6	19	
5	00 0963 628 1	SIDE WALL R.H.		1	
6	00 0963 596 0	BEARING PLATE		1	
7	00 0961 124 0	BEARING BUSH	50X 55X 10	2	
8	00 0239 391 0	CONTACT WASHER	A16	4	
9	00 0235 821 0	HEXAGON HEAD BOLT	M16X40	2	
10	00 0237 438 0	HEXAGON HEAD BOLT	M8X12	1	
11	00 0239 387 0	CONTACT WASHER	A8-8,2X18X1,4	5	
12	00 0239 386 0	CONTACT WASHER	A 6	2	
13	00 0237 983 0	HEXAGONAL NUT	M6	2	
14	00 0236 200 0	HEXAGON HEAD BOLT	M8X20	50	
15	00 0215 913 0	RIVETING NUT	M 8X20,	50	
16	00 0986 434 0	STRIPPING PLATE	5-SW11-KL=3-5,5 2 X 57X 921	25	
17	00 0963 627 1	FEED PLATE	5X 300X1623,5	1	
18	00 0963 647 1	BEARING PLATE		1	
19	00 0238 198 0	BACK-UP WASHER	S 50X62X3	1	
20	00 0237 862 0	CIRCLIP	50X2	1	
21	00 0238 047 0	LOCK NUT	M16	2	
22	00 0237 947 0	HEX. NUT WITH CLAMP. PART	M10	13	
23	00 0971 926 0	PICK-UP SUPPORT		1	
24	00 0963 635 1	SIDE WALL L.H.		1	
25	00 0237 841 0	HEXAGON HEAD BOLT	M16X80	2	

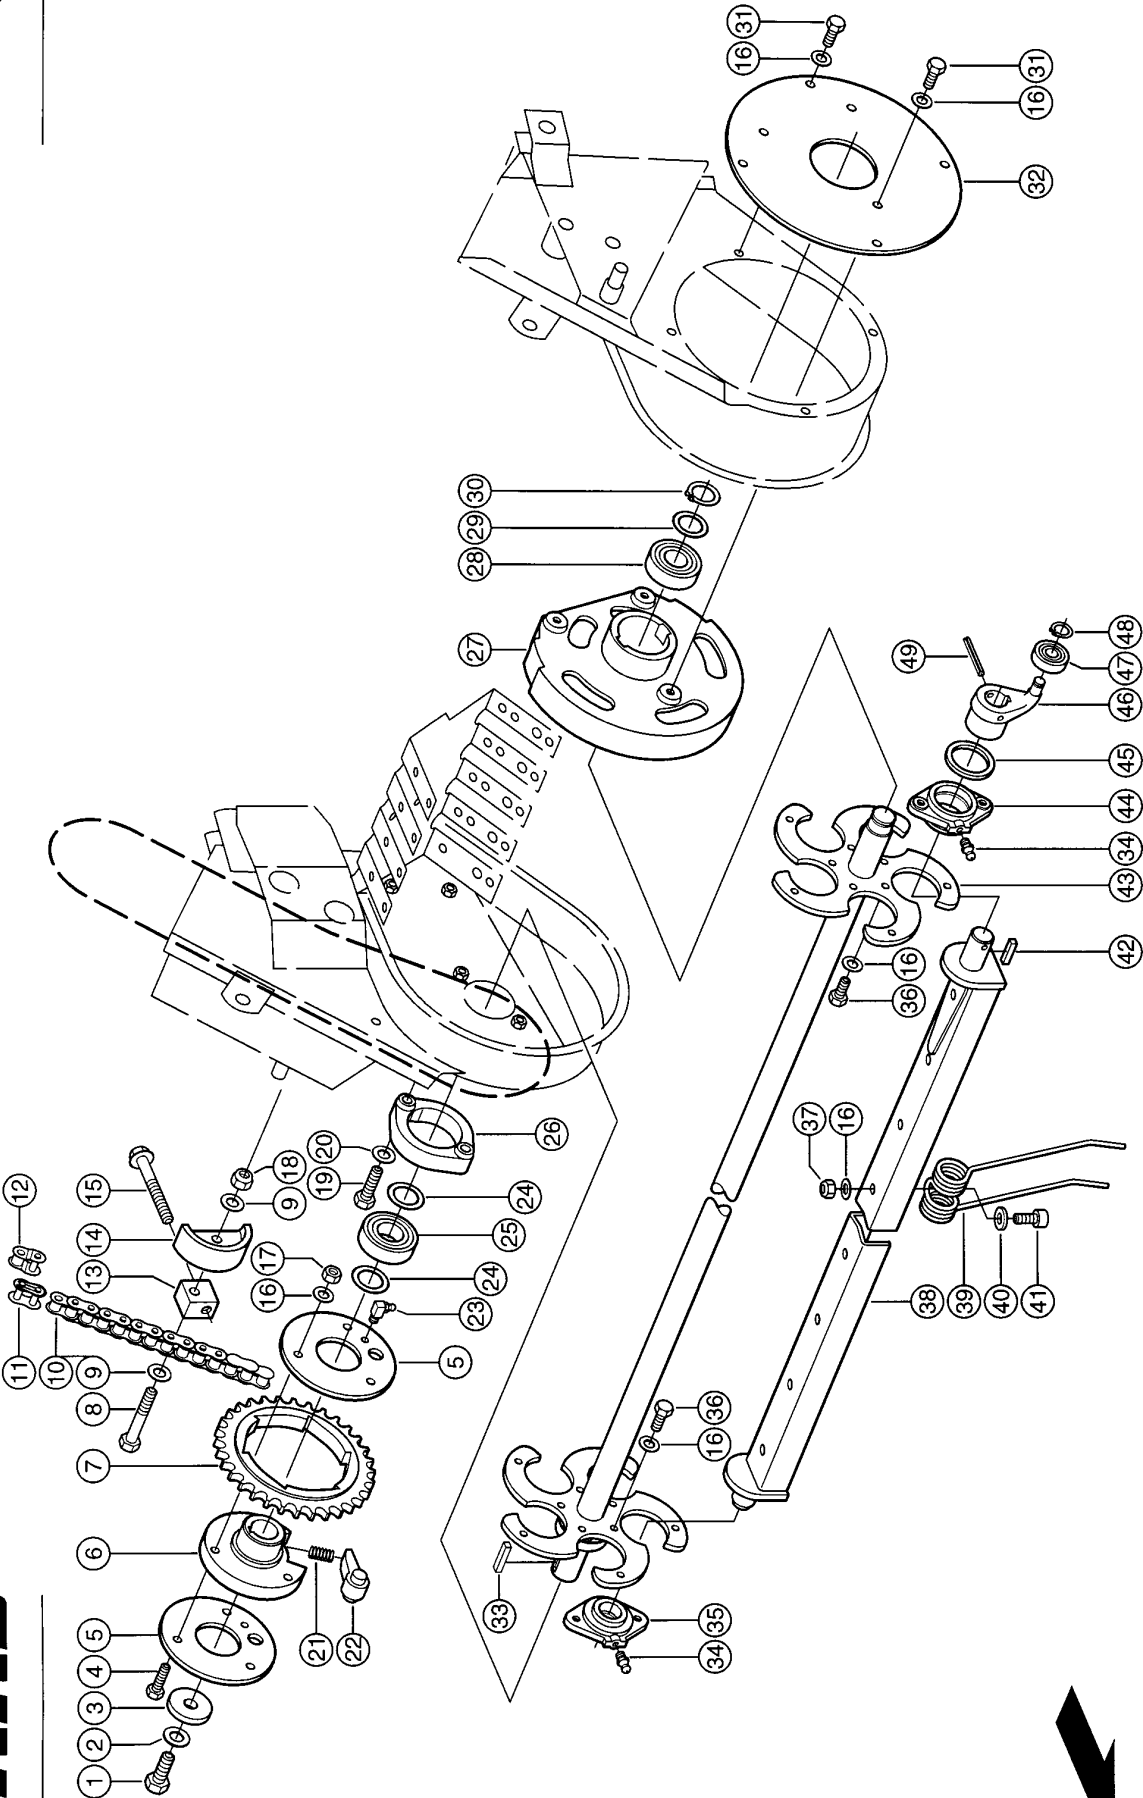

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com