# **CATERPILLAR®**

## Service Repair Manual

## **Models**

# D6R III TRACK-TYPE TRACTOR

Model: D6R III TRACK-TYPE TRACTOR DPS

Configuration: D6R Series III TRACK-TYPE TRACTOR XW, LGP Differential Steering DPS00001-UP (MACHINE) POWERED BY C9 Engine

## **Disassembly and Assembly**D6R Series III Track-Type Tractor Power Train

Media Number -RENR8173-06 Publication Date -01/04/2018

Date Updated -26/04/2018

i02406212

### **Transmission - Disassemble**

**SMCS - 3030-015** 

## **Disassembly Procedure**

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
В	5P-5197	Retaining Ring Pliers	1
С	138-7575	Link Bracket	3
D	5P-4758	Internal Pliers	1
Е	FT-0947	Spring Compressor	2
F	138-7574	Link Bracket	2
G	3K-4897	Spring Pin	8

#### Start By:

a. Separate the transmission and bevel gear. Refer to Disassembly and Assembly, "Transmission and Bevel Gears - Separate".

**Note:** The transmission modulating valves must be recalibrated if any of the following procedures are performed:

- The transmission modulating valve and/or the solenoid is replaced.
- The transmission is serviced or replaced.
- The ECM is replaced.

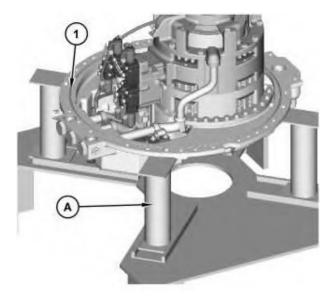


Illustration 1

g01201936

1. Position the transmission on Tooling (A). Put alignment marks on all the housings prior to disassembly.

#### 2. Remove O-ring seal (1).

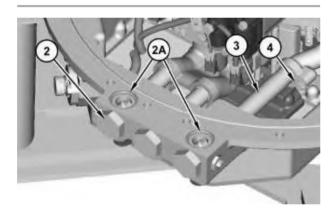


Illustration 2

g01201956

- 3. Remove O-ring seals (2A) and plugs (2).
- 4. Remove retainers (4).
- 5. Remove tubes (3).

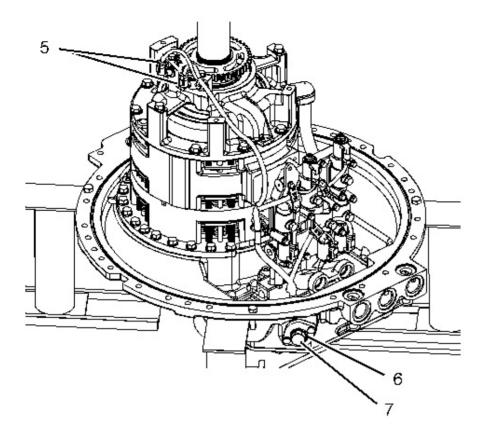


Illustration 3 g01201973

6. Remove locknut (6). Push connector (7) out of the case.



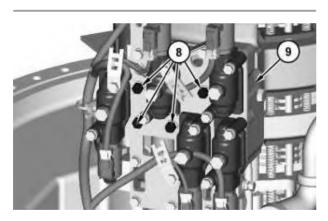


Illustration 4 g01201976

8. Remove bolts (8) and control valve (9).

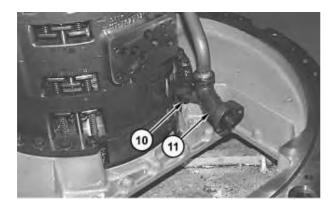


Illustration 5 g01207399

- 9. Remove bolt (10) and tube assembly (11).
- 10. Remove the O-ring seal from tube assembly (11).

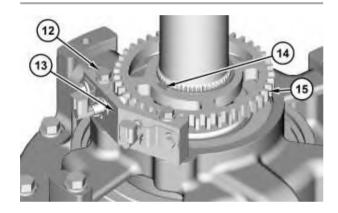


Illustration 6 g01201984

- 11. Remove bolts (12) and bracket assembly (13).
- 12. Use Tooling (B) in order to remove retaining ring (14). Remove rotor (15).

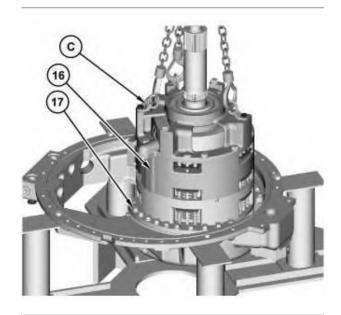


Illustration 7 g01202009

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com