





9802/5409 L1-3-1 BLOCK ASSEMBLY KE BUILD

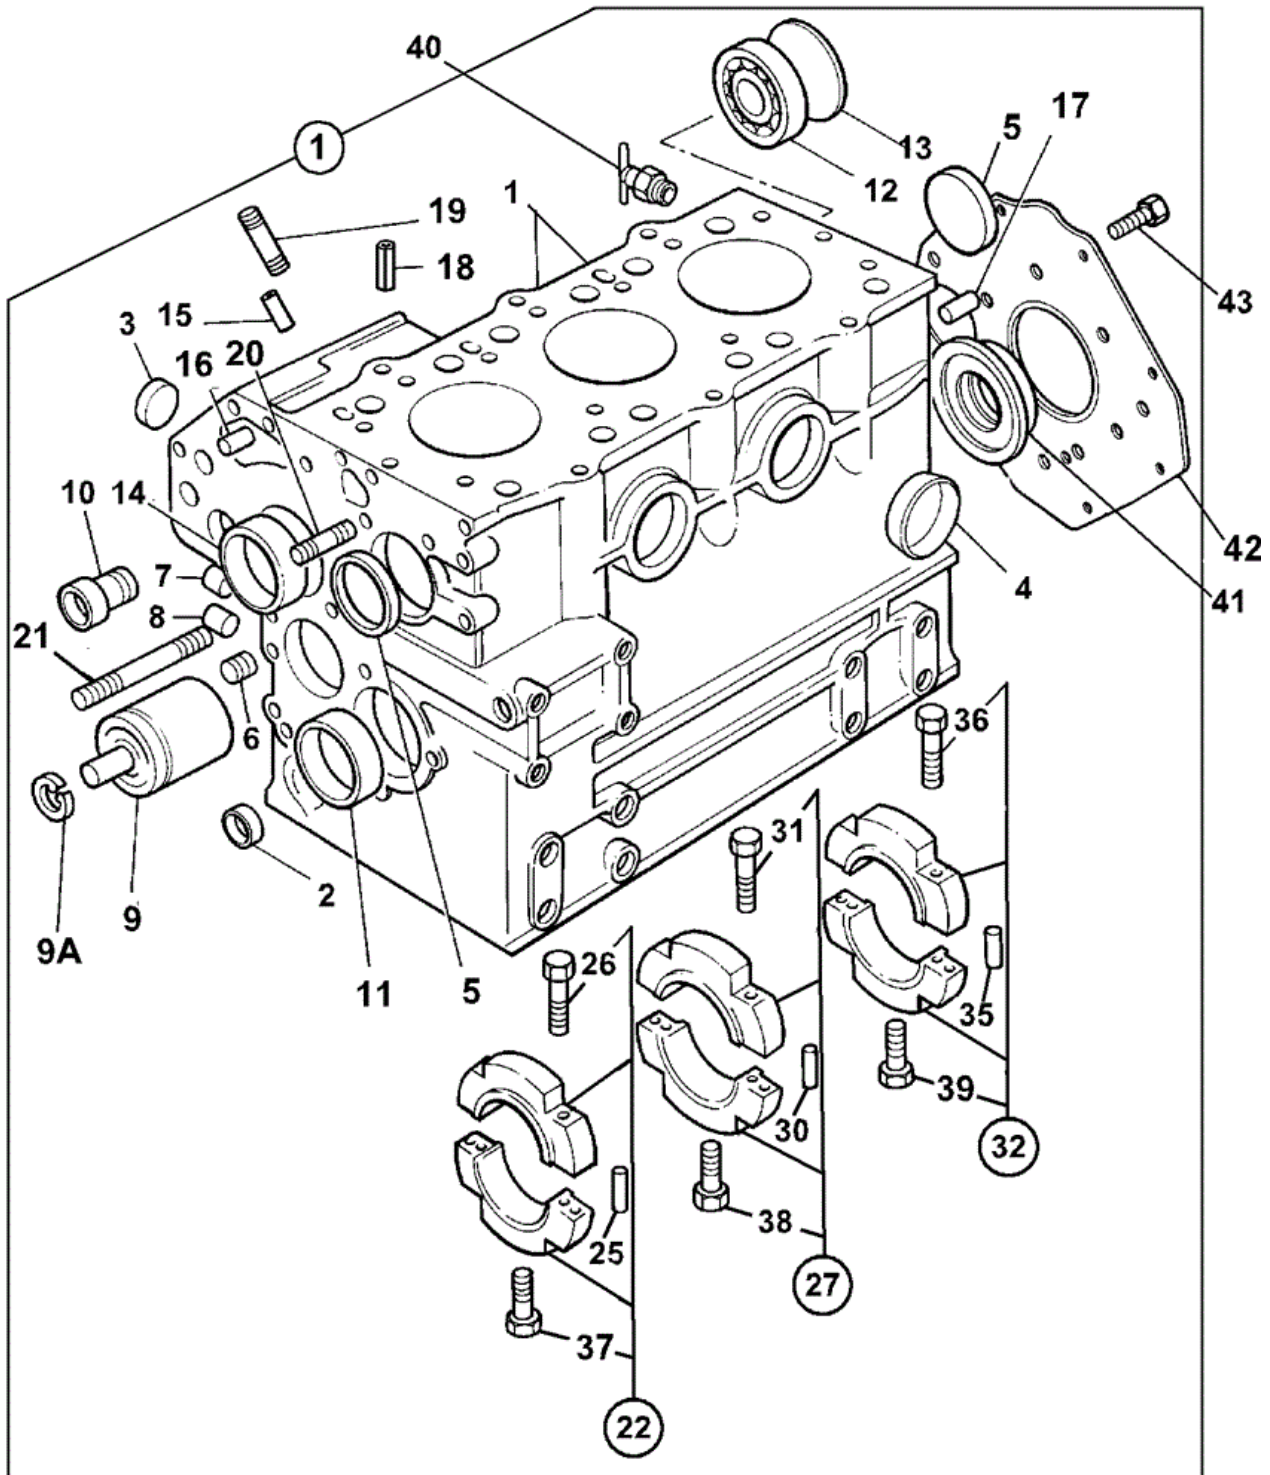

H09822

Item	Part #	Change No	Description	Usage Code	QTY
1	02/630430		Block cylinder assembly		1
2	:02/630001		Plug D=15		1

3	:02/630002		Plug D=25	1
4	:02/630004		Plug D=40mm	2
5	:02/630004		Plug D=40mm	2
6	:02/630702		Plug 10.4mm	3
7	:02/630006		Plug 6.5mm	4
8	:02/630007		Plug 8.4mm	2
9	:02/630703		Hub	1
10	:02/630009		Bush	1
11	:02/630704		Bush	1
11	:02/630705		Bush oversize - 0.25mm <i>Oversize 0.25mm</i>	0
11	:02/630706		Bush oversize - 0.50mm <i>Oversize 0.5mm</i>	0
12	:02/630013		Bearing	1
13	:02/630014		Plug core D=45mm	1
14	:02/630707		Bearing	1
15	:02/630024		Dowel	2
16	:02/630017		Dowel	2
17	:02/630018		Dowel	2
18	:02/630019		Pin	2
19	:826/10719		Stud	2
20	:826/10720		Stud	1
21	:02/630022		Stud	1
22	:02/630709		Cap bearing assembly	1
23	****		None serviced part	1
24	****		None serviced part	1
25	::02/630024		Dowel	2
26	::02/634005		Screw	2
27	:02/630711		Cap bearing assembly	1
28	****		None serviced part	1
29	****		None serviced part	1
30	::02/630024		Dowel	1
31	::02/634005		Screw	2
32	:02/630712		Cap bearing assembly	1
33	****		None serviced part	1
34	****		None serviced part	1
35	::02/630024		Dowel	2
36	::02/634005		Screw	2
37	:826/10744		Screw	1
38	:826/10744		Screw	1
39	:02/630714		Screw	2
40	02/630031		Tap drain	1
41	02/630772		Seal rear oil	1
42	02/630771		Plate	1
43	02/634112		Screw	10

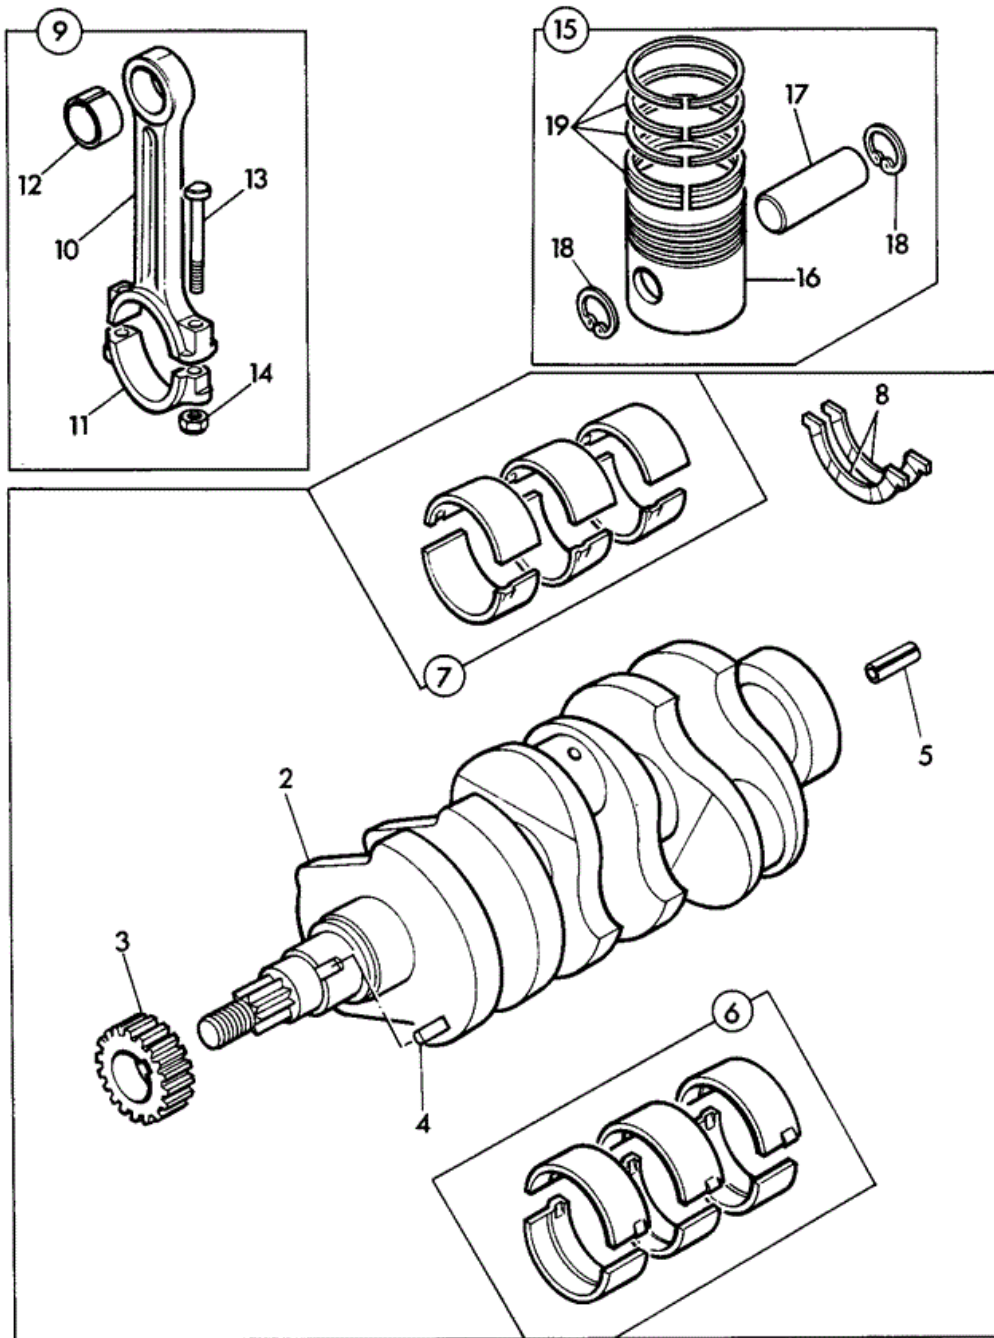


118611

Item	Part #	Change No	Description	Usage Code	QTY
1	02/630715		Crankshaft assembly		1
3	:02/630716		Gear		1
4	:02/630042		Key		1
5	:02/630043		Pin		1
6	:02/630717		Kit-bearing main standard		1

6	:02/630718		Kit-bearing main undersize - 0.25mm		0
6	:02/630719		Kit-bearing main undersize - 0.50mm		0
7	:02/630720		Kit-bearing big end standard		1
7	:02/630721		Kit-bearing big end undersize - 0.25mm		0
7	:02/630722		Kit-bearing big end undersize - 0.50mm		0
8	:02/630723		Washer thrust		2
9	02/630724		Conrod assembly		3
10	****		None serviced part		1
11	****		None serviced part		1
12	:02/630725		Bush small end		1
13	:02/630726		Screw		2
14	:02/630727		Nut		2
15	02/630728		Piston assembly standard		3
15	02/630729		Piston assembly oversize - 0.5mm		0
15	02/630730		Piston assembly oversize - 1.0mm		0
16	:N.S.P.		None serviced part <i>Piston</i>		1
17	:02/630731		Pin gudgeon		1
18	:02/630732		Circlip		2
19	:02/631263		Kit-piston ring standard		1
19	02/631261		Kit-piston ring oversize - 0.5mm		0
19	02/631262		Kit-piston ring oversize - 1.0mm		0




9802/5409 L1-5-1 FANS, PULLEYS & FAN BELT KE BUILD

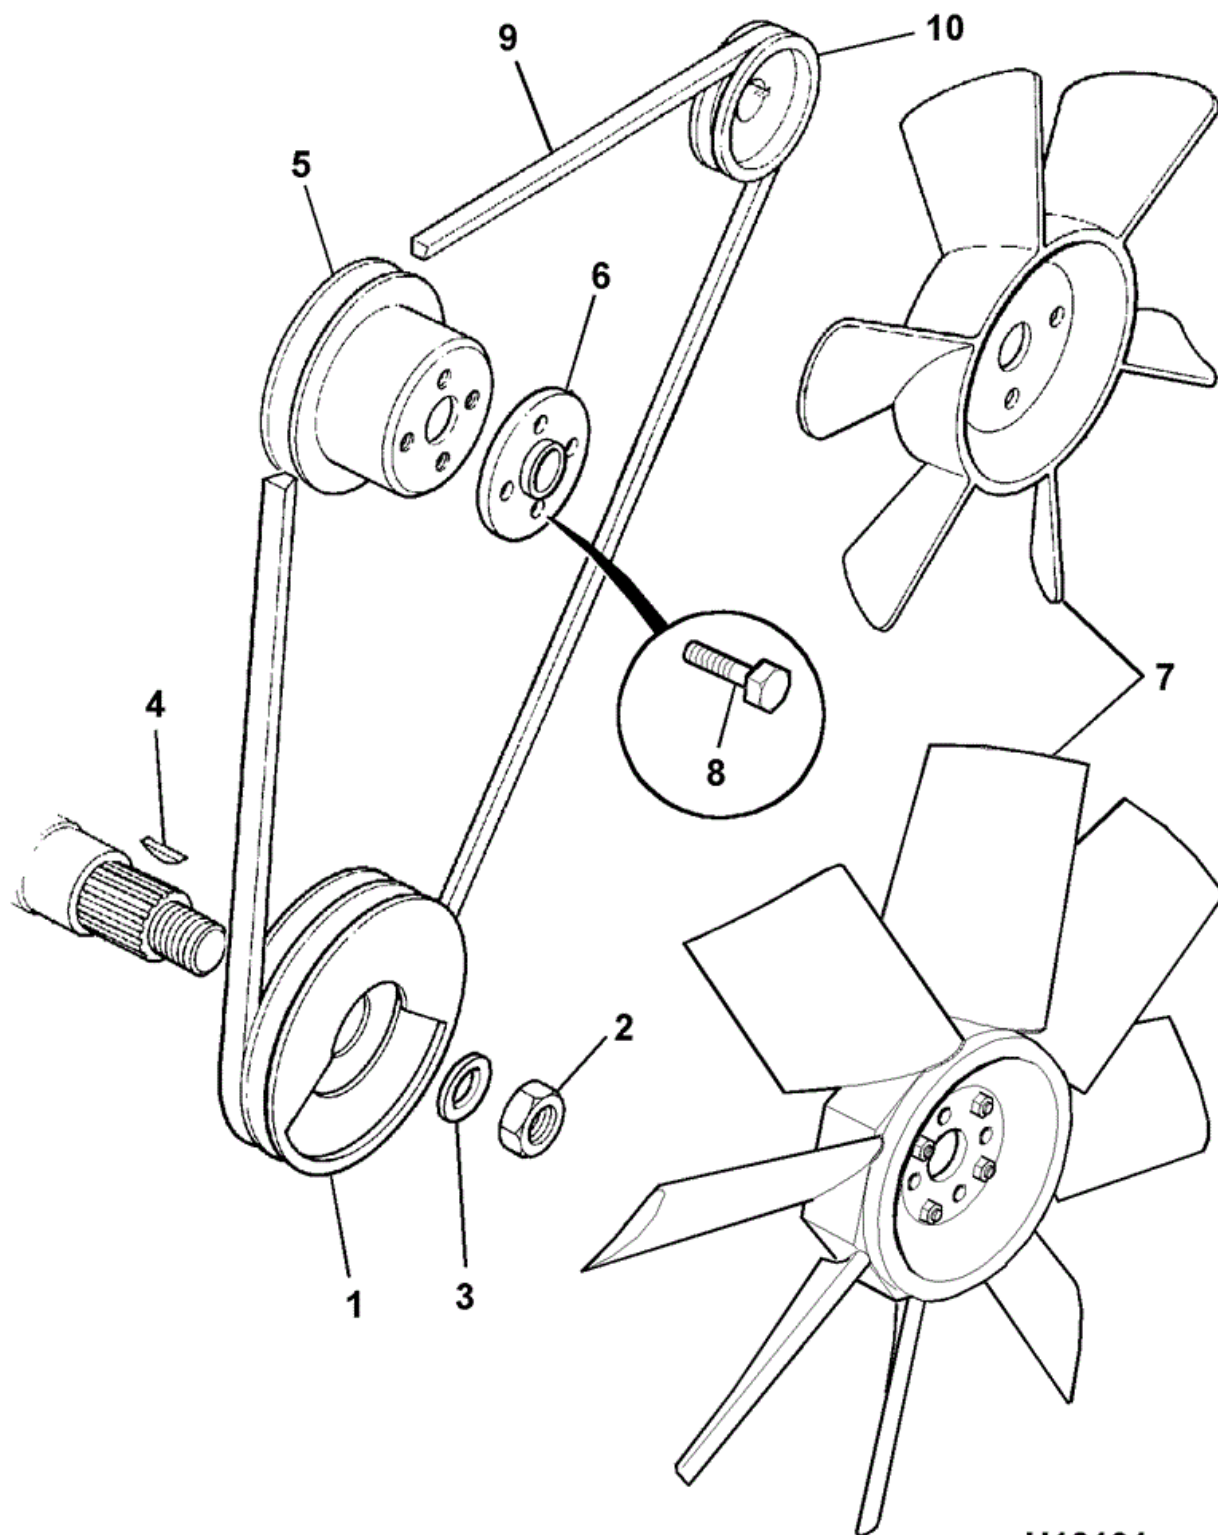

H18191

Item	Part #	Change No	Description	Usage Code	QTY
1	02/630777		Pulley crankshaft		1
2	02/630778		Nut		1
3	02/630779		Washer		1
4	02/630068		Key		1
5	02/630835		Pulley water pump		1
6	02/630831		Spacer fan		1
7	02/630830		Fan <i>7 blade; 802.7, 803, 804 Super</i>		1
7	232/61405		Fan <i>8 blade, 804 Plus only</i>		1
7	232/85401		Fan <i>802.7 only</i>		1
8	02/630832		Screw		4
9	02/630852		Belt fan		1
10	02/102012		Pulley single D=83mm		1

9802/5409 L1-6-1 TIMING CASE CAMSHAFT & GEARS KE BUILD

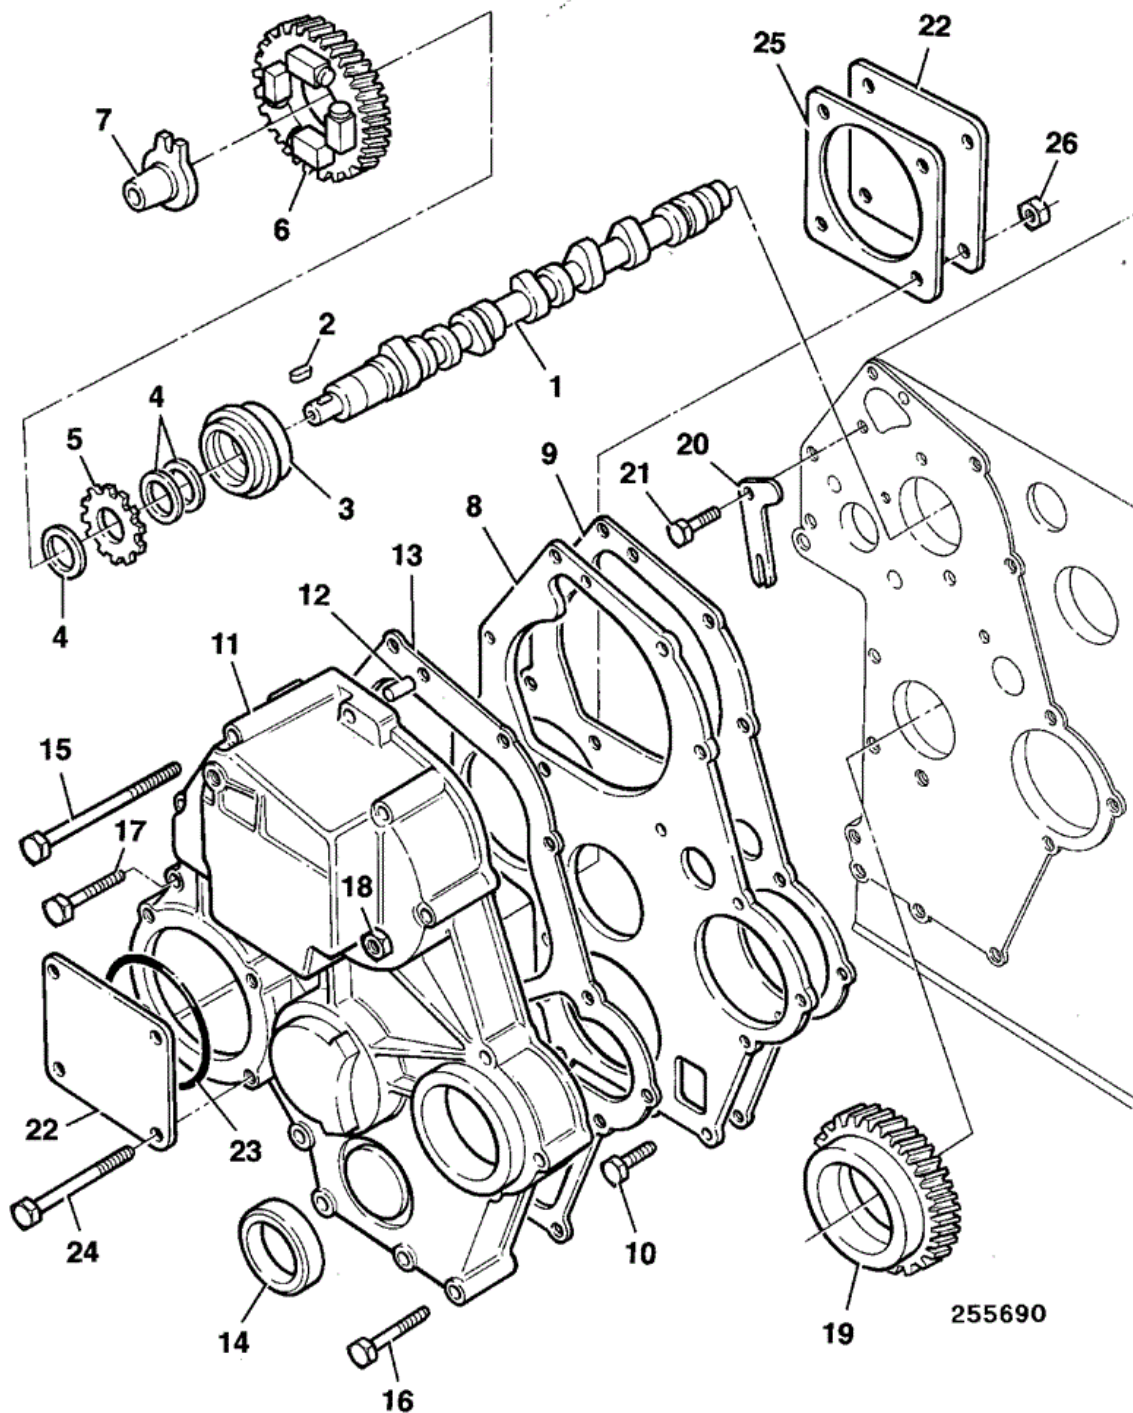


Item	Part #	Change No	Description	Usage Code	QTY
1	02/630435		Camshaft		1

2	:02/630068		Key		1
3	:02/630769		Bearing		1
4	:02/630082		Spacer		3
5	:02/630083		Gear		1
6	:02/630768		Gear		1
7	:02/630085		Tappet		1
8	02/630767		Plate		1
9	02/630766		Gasket		1
10	02/630102		Screw		2
11	02/630436		Casing timing		1
12	02/630089		Pin		1
13	02/630764		Gasket		1
14	02/630763		Seal front oil		1
15	826/10740		Bolt		2
16	826/10730		Screw		7
17	826/10729		Screw		3
18	02/630096		Nut		1
19	****		'See Remark' <i>Oil Pump, See frame L5-2-1</i>		1
20	02/630101		Plate		1
21	02/630102		Screw		2
22	02/630097		Plate		2
23	02/630079		O Ring		1
24	826/10735		Bolt		4
25	02/630098		Gasket		1
26	02/630078		Nut		4



9802/5409 L1-6-2 TIMING LEVERS ARMS & SPRINGS KE BUILD

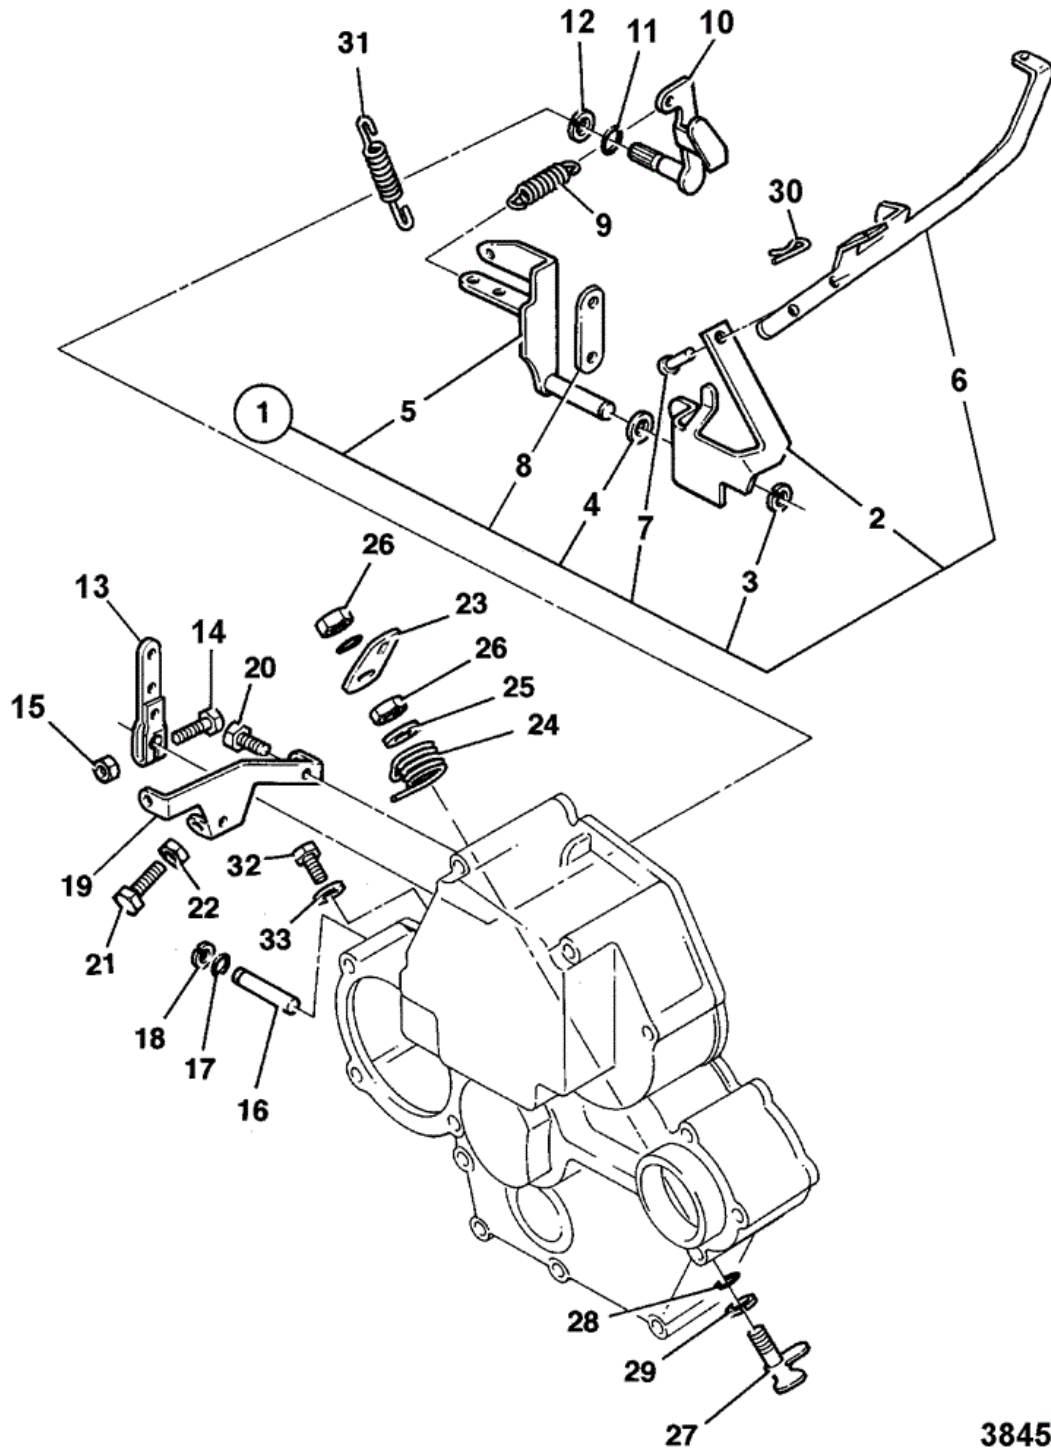


384500

Item	Part #	Change No	Description	Usage Code	QTY
1	02/630780		Lever assembly		1

2	****		None serviced part		1
3	:02/630107		Circlip		1
4	:02/630108		Washer		1
5	:02/630781		Lever		1
6	****		None serviced part		1
7	****		None serviced part		1
8	****		None serviced part		1
9	02/630782		Spring		1
10	02/630113		Arm		1
11	02/630114		O Ring		1
12	02/630107		Circlip		1
13	02/630783		Lever		1
14	02/630116		Screw		1
15	02/630096		Nut		1
16	02/630785		Shaft		1
17	02/630119		O Ring		1
18	02/630120		Circlip		1
19	02/630121		Stay		1
20	02/630122		Screw		2
21	02/630131		Screw		2
22	02/630096		Nut		2
23	02/630124		Lever		1
24	02/630125		Spring		1
25	02/630126		Washer		1
26	02/634053		Nut		2
27	02/630128		Arm		1
28	02/630129		O Ring		1
29	02/630130		Circlip		1
30	02/630111		Pin		1
31	02/630112		Spring		1



9802/5409 L1-7-1 FLYWHEEL & HOUSING

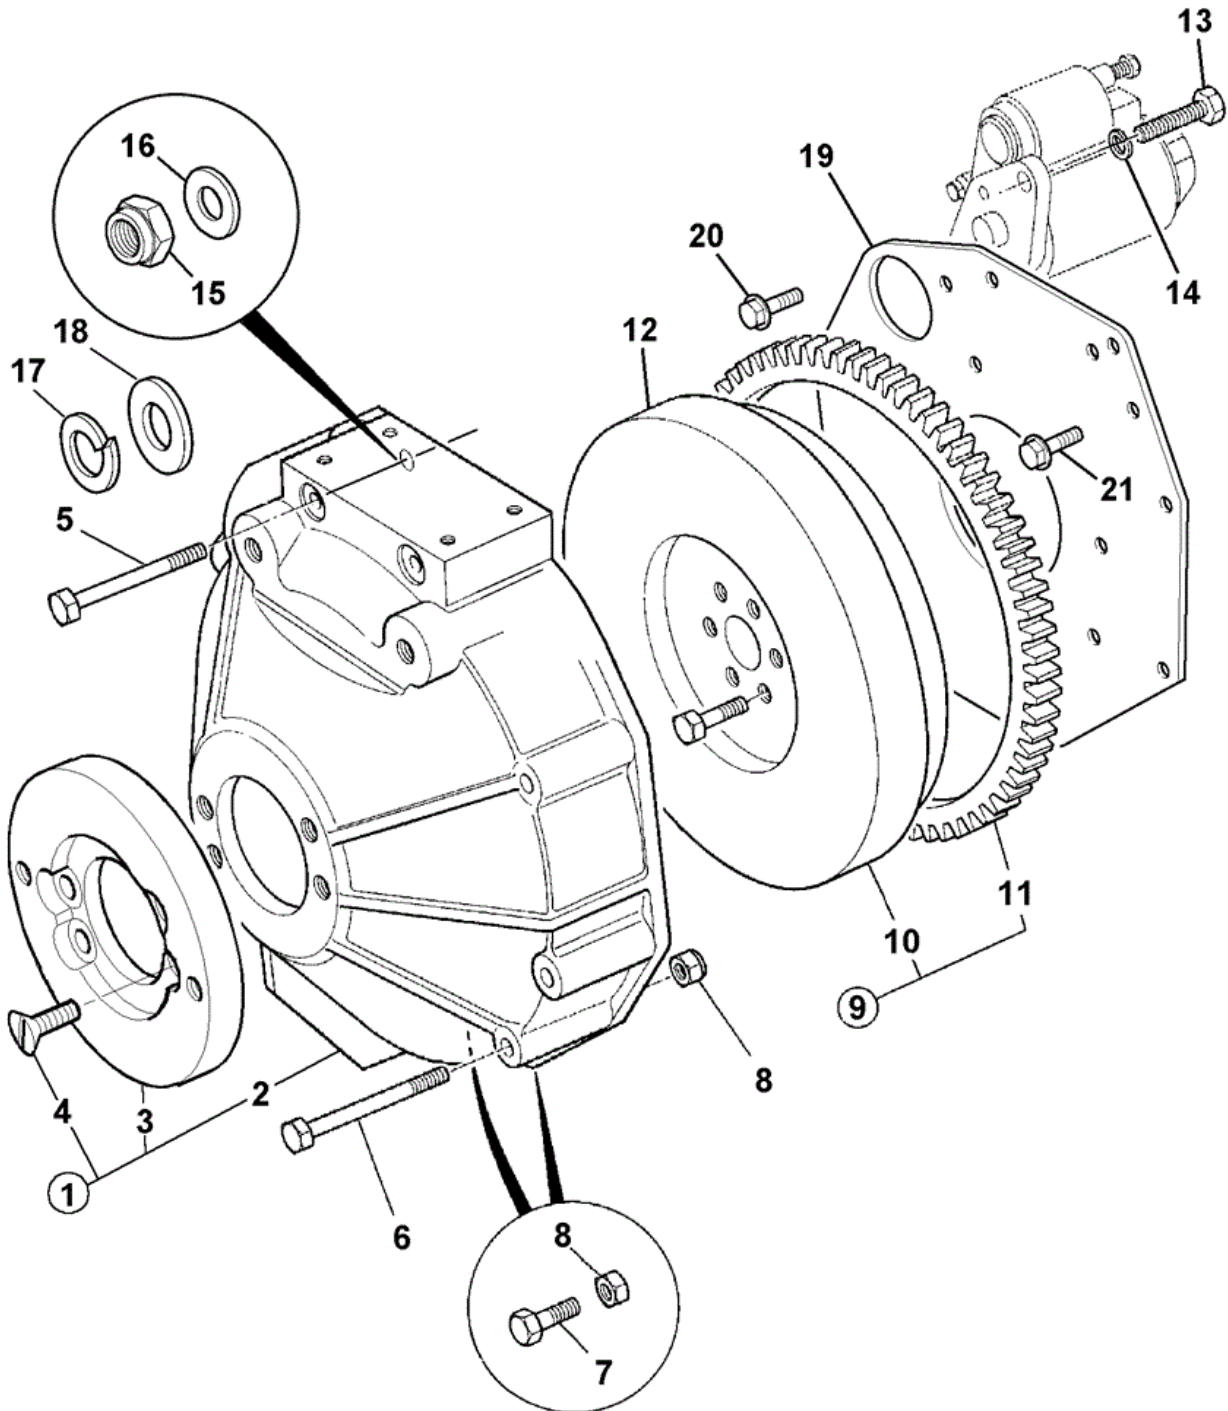


H09802

Item	Part #	Change No	Description	Usage Code	QTY
1	N.L.A		No longer available		1
2	232/40001		Housing Flywheel		1
			Housing Flywheel		

2	232/40001	<M828153	803 PLUS		1
3	232/69902		Plate adaptor		1
4	826/01399		Screw countersunk		4
5	1315/3419Z		Bolt M10x90mm M10 x 90		2
6	1315/3421Z		Bolt M10 x 110		5
7	1315/0409Z		Setscrew M10 x 35 M10 x 35		2
8	1370/0303Z		Nut lock M10		7
9	02/630841		Flywheel assembly		1
10	****		None serviced part		1
11	02/630774		Gear starter ring		6
12	02/630775		Bolt		6
13	826/10732		Screw		2
14	02/630134		Washer spring		2
15	02/634059		Nut		2
16	02/630108		Washer		2
17	1425/0008Z		Spring Washer		2
18	1420/0008Z		Washer (M10)		2
19	02/630771		Plate		1
20	02/634112		Screw		8



9802/5409 L1-7-2 FLYWHEEL & HOUSING

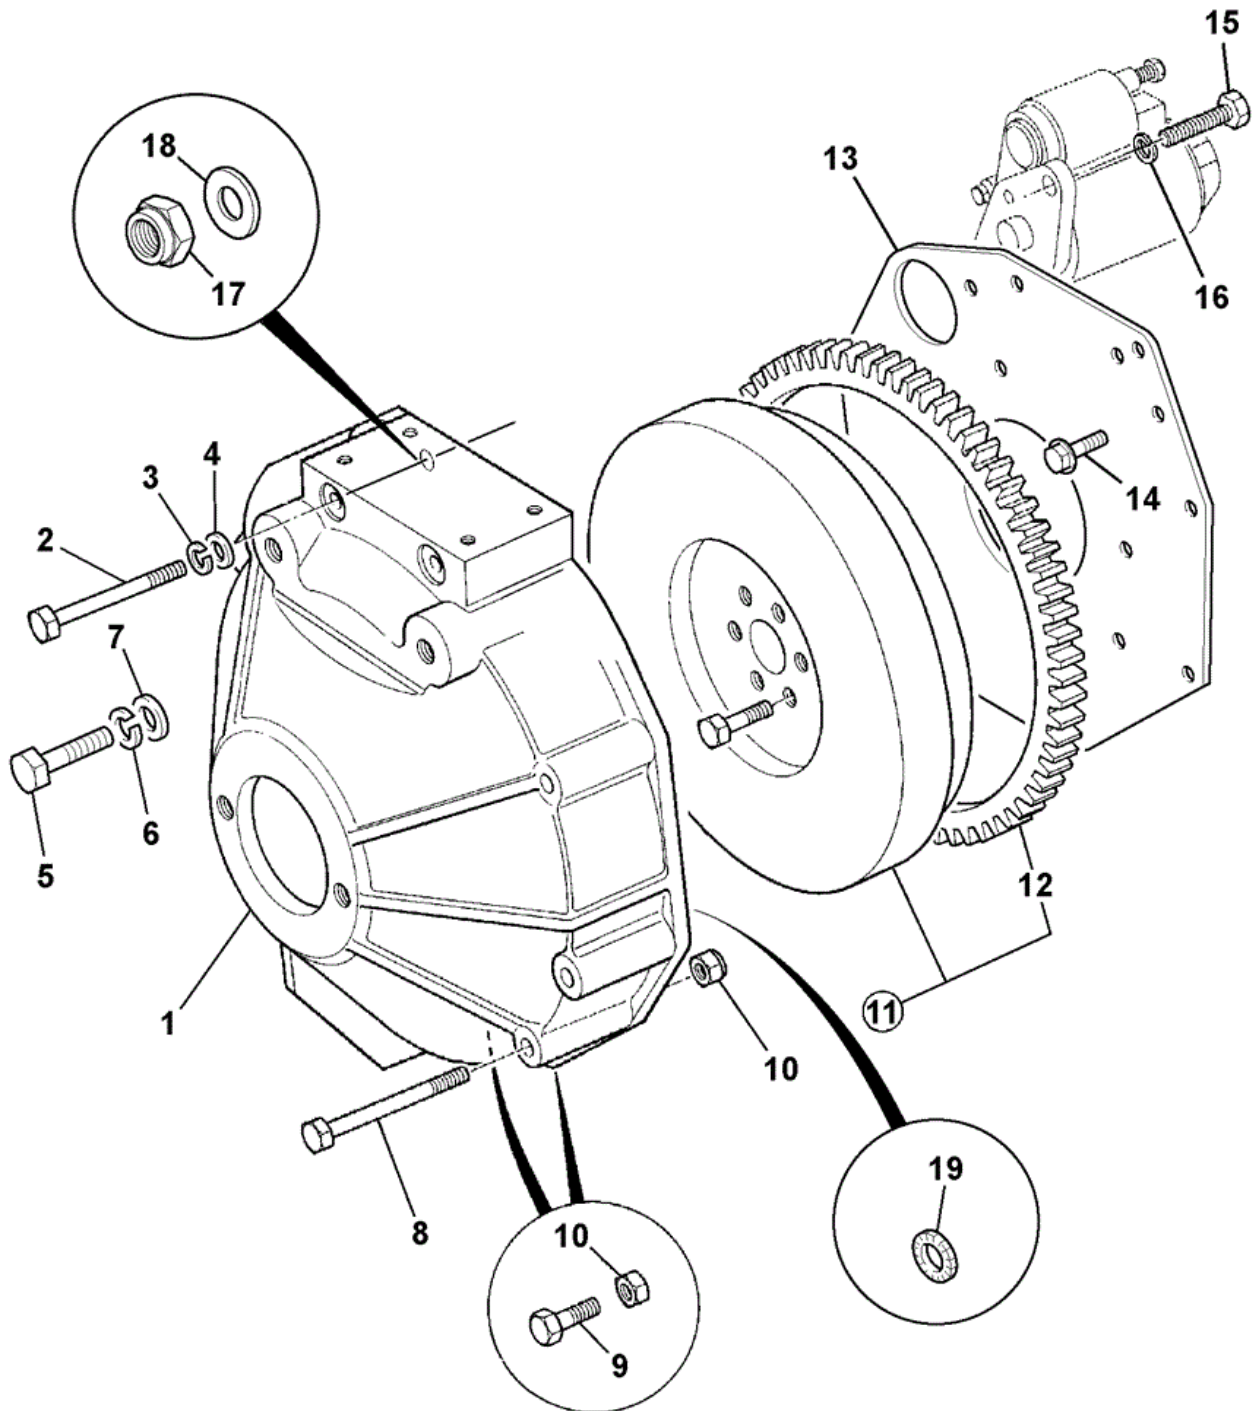


384640

Item	Part #	Change No	Description	Usage Code	QTY
1	331/21277		Housing flywheel		1
2	1315/3419Z		Bolt M10x90mm		2
3	1425/0008Z		Spring Washer		4

4	1420/0008Z		Washer (M10)		2
5	1315/0507Z		Setscrew M12 x 25		5
6	1425/0009Z		Washer Spring M12		9
7	1420/0009Z		Washer (M12)		3
8	1315/3421Z		Bolt M10 x 110		5
9	1315/0409Z		Setscrew M10 x 35		2
10	1370/0303Z		Nut lock M10		7
11	02/630841		Flywheel assembly		1
12	:02/630774		Gear starter ring		1
13	02/630771		Plate		1
14	02/634112		Screw		10
15	826/10732		Screw		2
16	02/630108		Washer		2
17	02/634059		Nut		2
18	02/630134		Washer spring		2
19	823/00532		Washer external lock <i>Used with -VE Battery lead</i>		2



9802/5409 L1-8-1 ENGINE MOUNTINGS

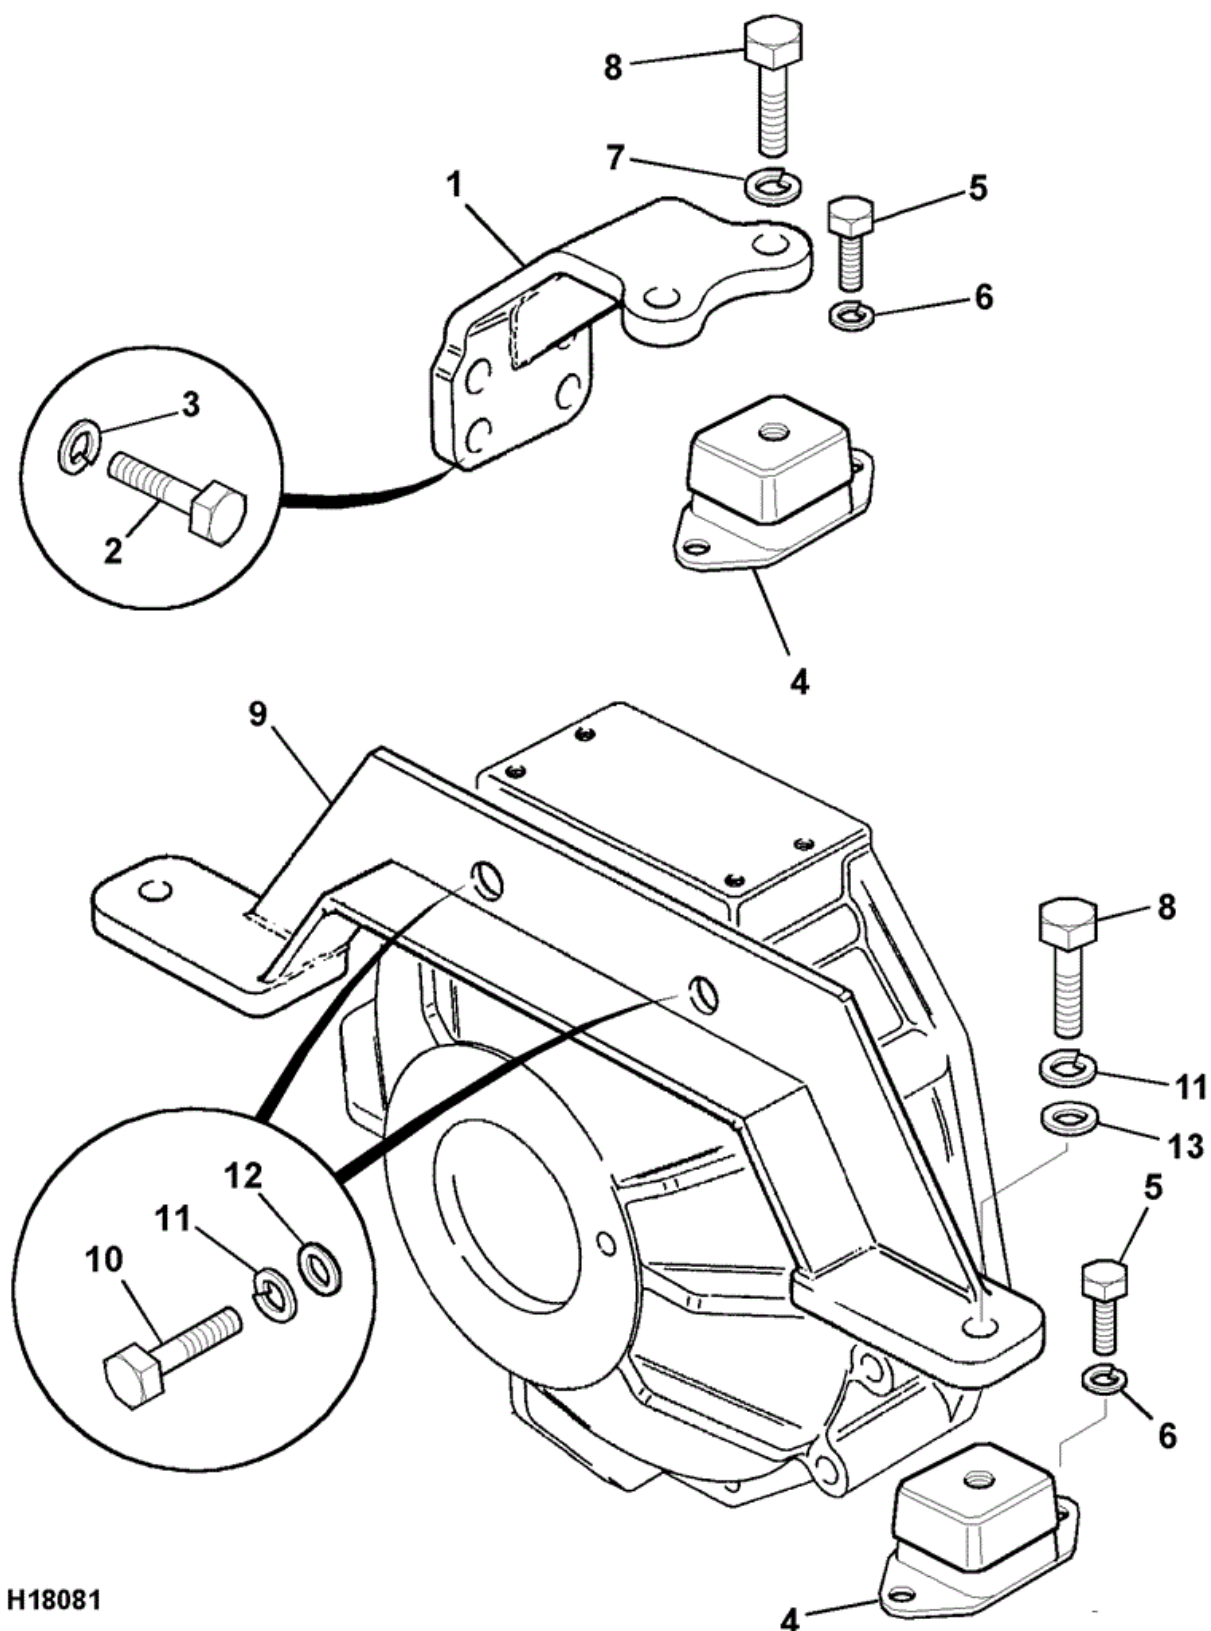

H18081

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com