



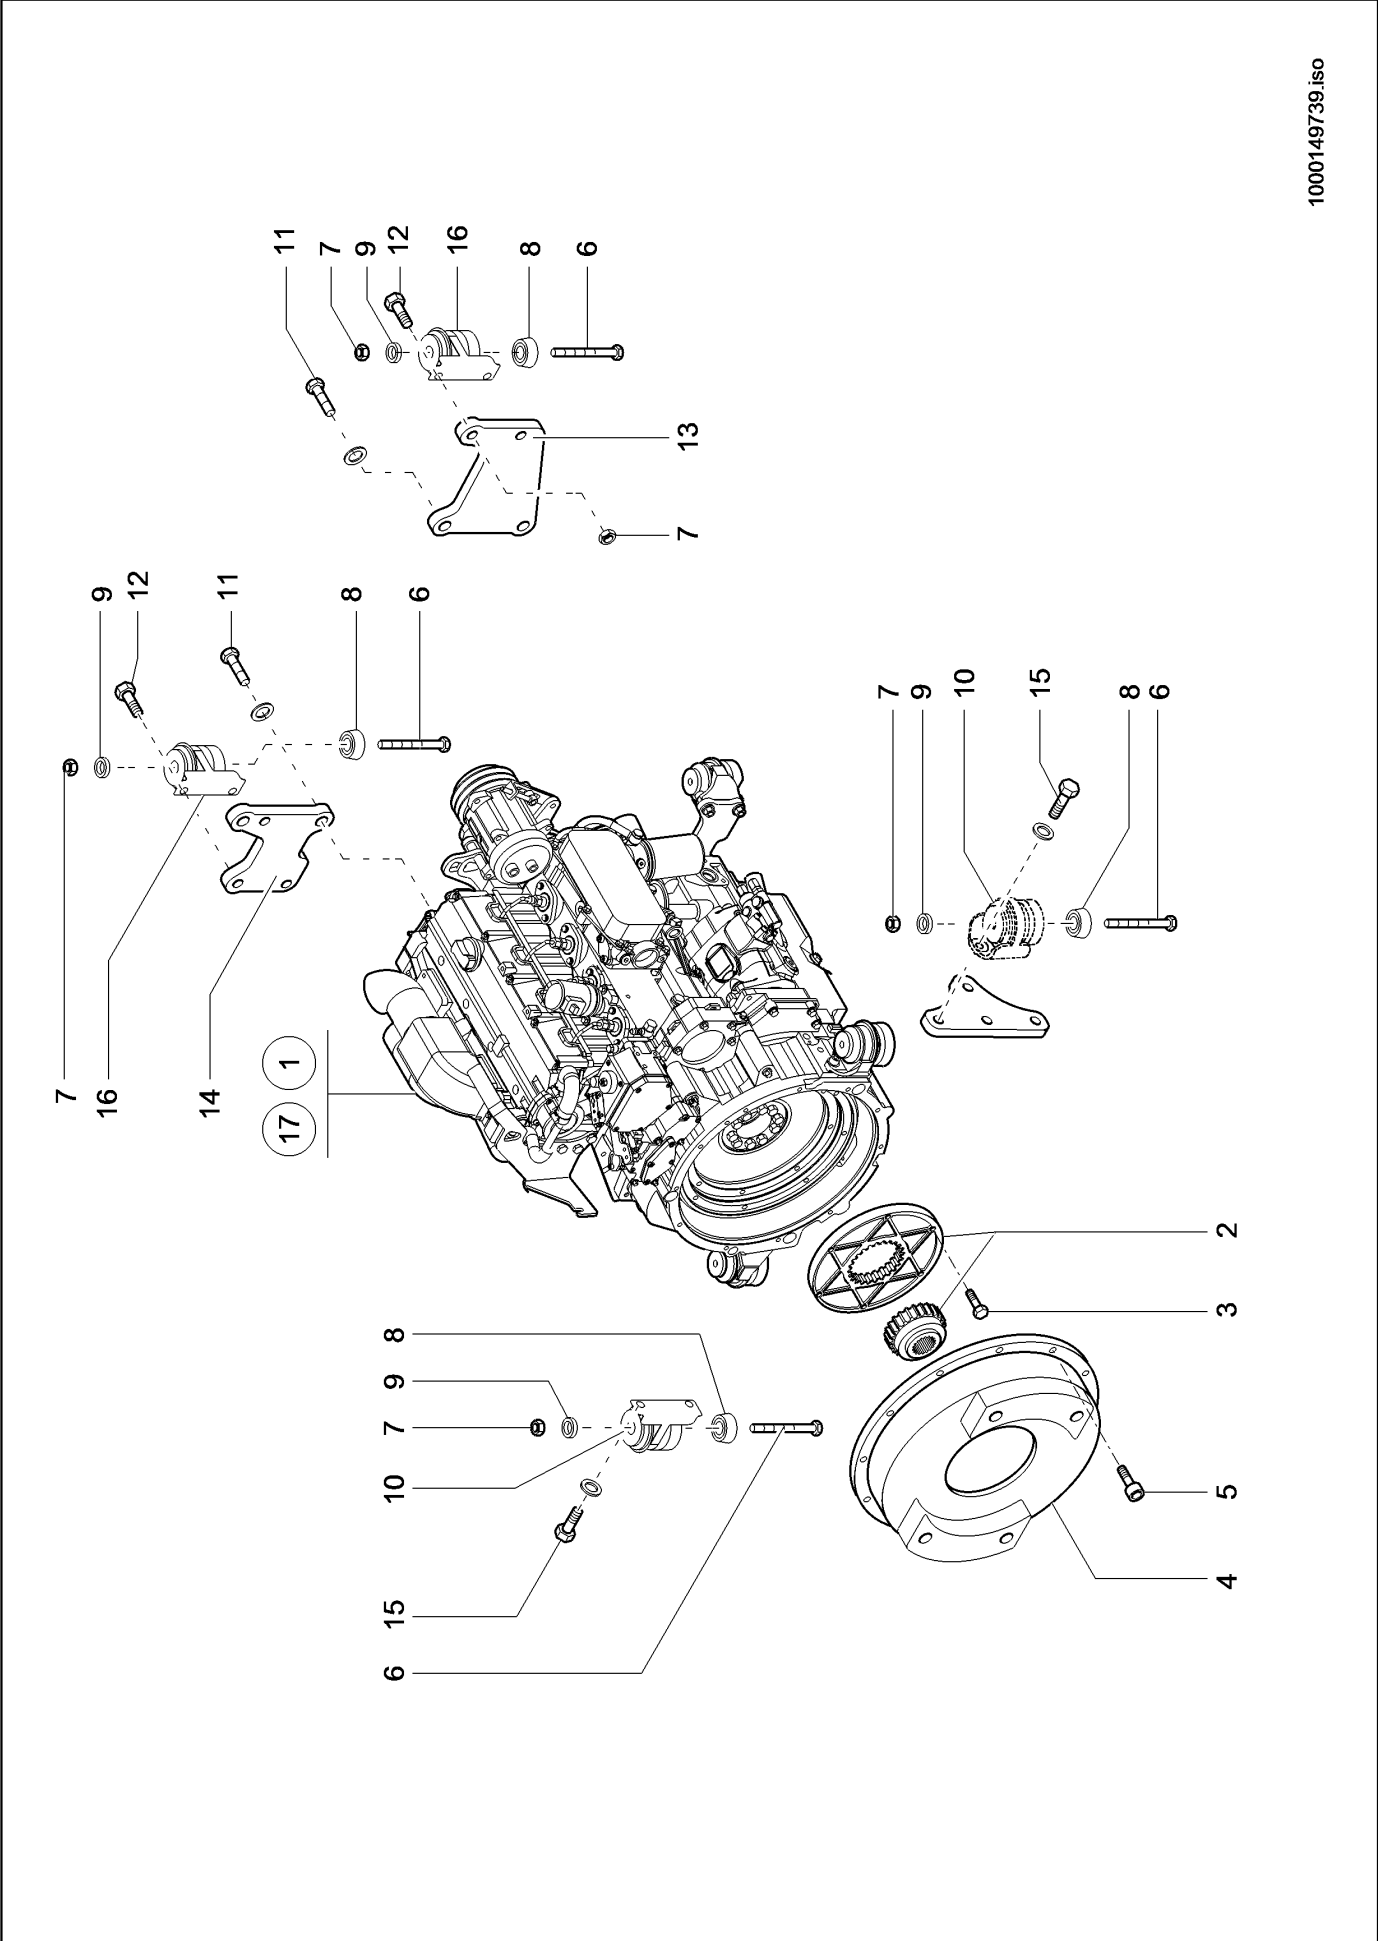

1000149739.iso

100 ENGINE SUSPENSION 1)


Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1301 751 0	DIESEL ENGINE	BF4M2012C 90 KW/2400MIN-	1	2)
2	00 1300 828 1	CLUTCH		1	
3	00 0237 874 0	HEXAGON HEAD BOLT	M10X35	8	
4	00 1300 444 0	FLANGE		1	
5	00 0235 495 1	SOCKET HEAD SCREW	M10X 25	12	
6	00 0242 380 0	HEXAGON HEAD BOLT	M12X120	4	
7	00 0238 315 0	HEXAGONAL NUT	M12	4	
8	00 1301 651 0	SPACER PIECE		4	
9	00 1301 652 0	WASHER		4	
10	00 1301 630 0	SHUT OFF PLATE		2	
11	00 0237 573 0	HEXAGON HEAD BOLT	M12X50	2	
12	00 0214 777 0	SOCKET HEAD SCREW	M12X 40	2	
13	00 1300 481 0	BEARING PLATE		1	
14	00 1300 364 0	BEARING PLATE		1	
15	77 0102 992 4	HEXAGON HEAD SCREW		4	
16	00 1301 870 0	STAND		2	
17	00 1302 286 0	DIESEL ENGINE	TCD 2012 LO4 2V 88 KW/24	1	3)
1)	machine no.	+ up to 400010138 88/90 KW			
2)	Remarks	90 KW			
3)	Remarks	88 KW			

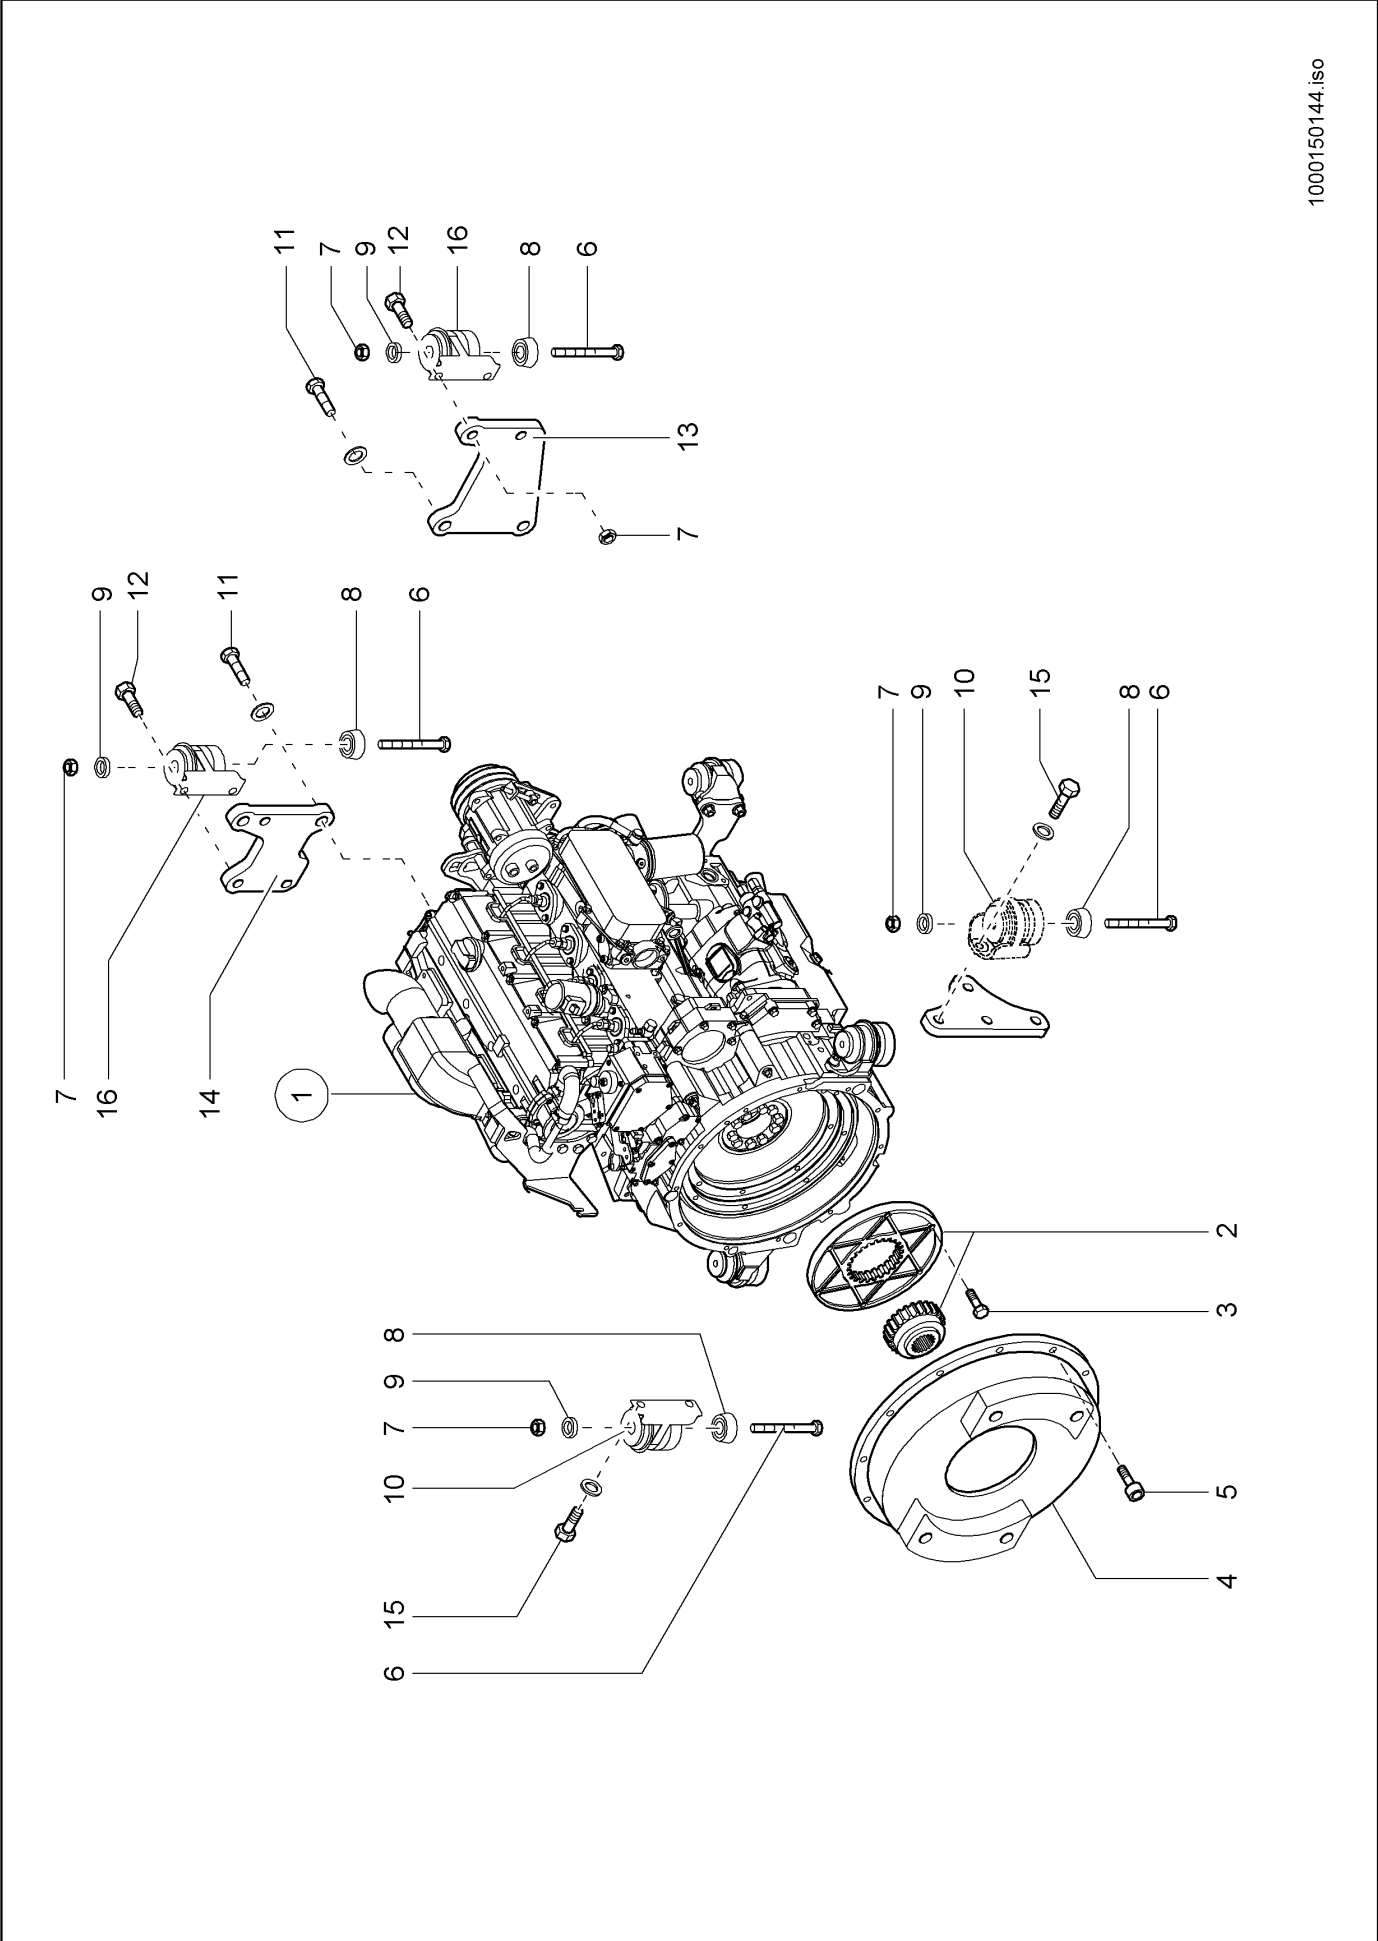

1000150144.iso

100 ENGINE SUSPENSION 1)


Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1301 640 0	DIESEL ENGINE	BF4M2012 75 KW/2400MIN-1	1	
2	00 1300 828 1	CLUTCH		1	
3	00 0237 874 0	HEXAGON HEAD BOLT	M10X35	8	
4	00 1300 444 0	FLANGE		1	
5	00 0235 495 1	SOCKET HEAD SCREW	M10X 25	12	
6	00 0242 380 0	HEXAGON HEAD BOLT	M12X120	4	
7	00 0238 315 0	HEXAGONAL NUT	M12	4	
8	00 1301 651 0	SPACER PIECE		4	
9	00 1301 652 0	WASHER		4	
10	00 1301 630 0	SHUT OFF PLATE		2	
11	00 0237 573 0	HEXAGON HEAD BOLT	M12X50	2	
12	00 0214 777 0	SOCKET HEAD SCREW	M12X 40	2	
13	00 1300 481 0	BEARING PLATE		1	
14	00 1300 364 0	BEARING PLATE		1	
15	77 0102 992 4	HEXAGON HEAD SCREW		4	
16	00 1301 870 0	STAND		2	
1)	Remarks	75 KW			

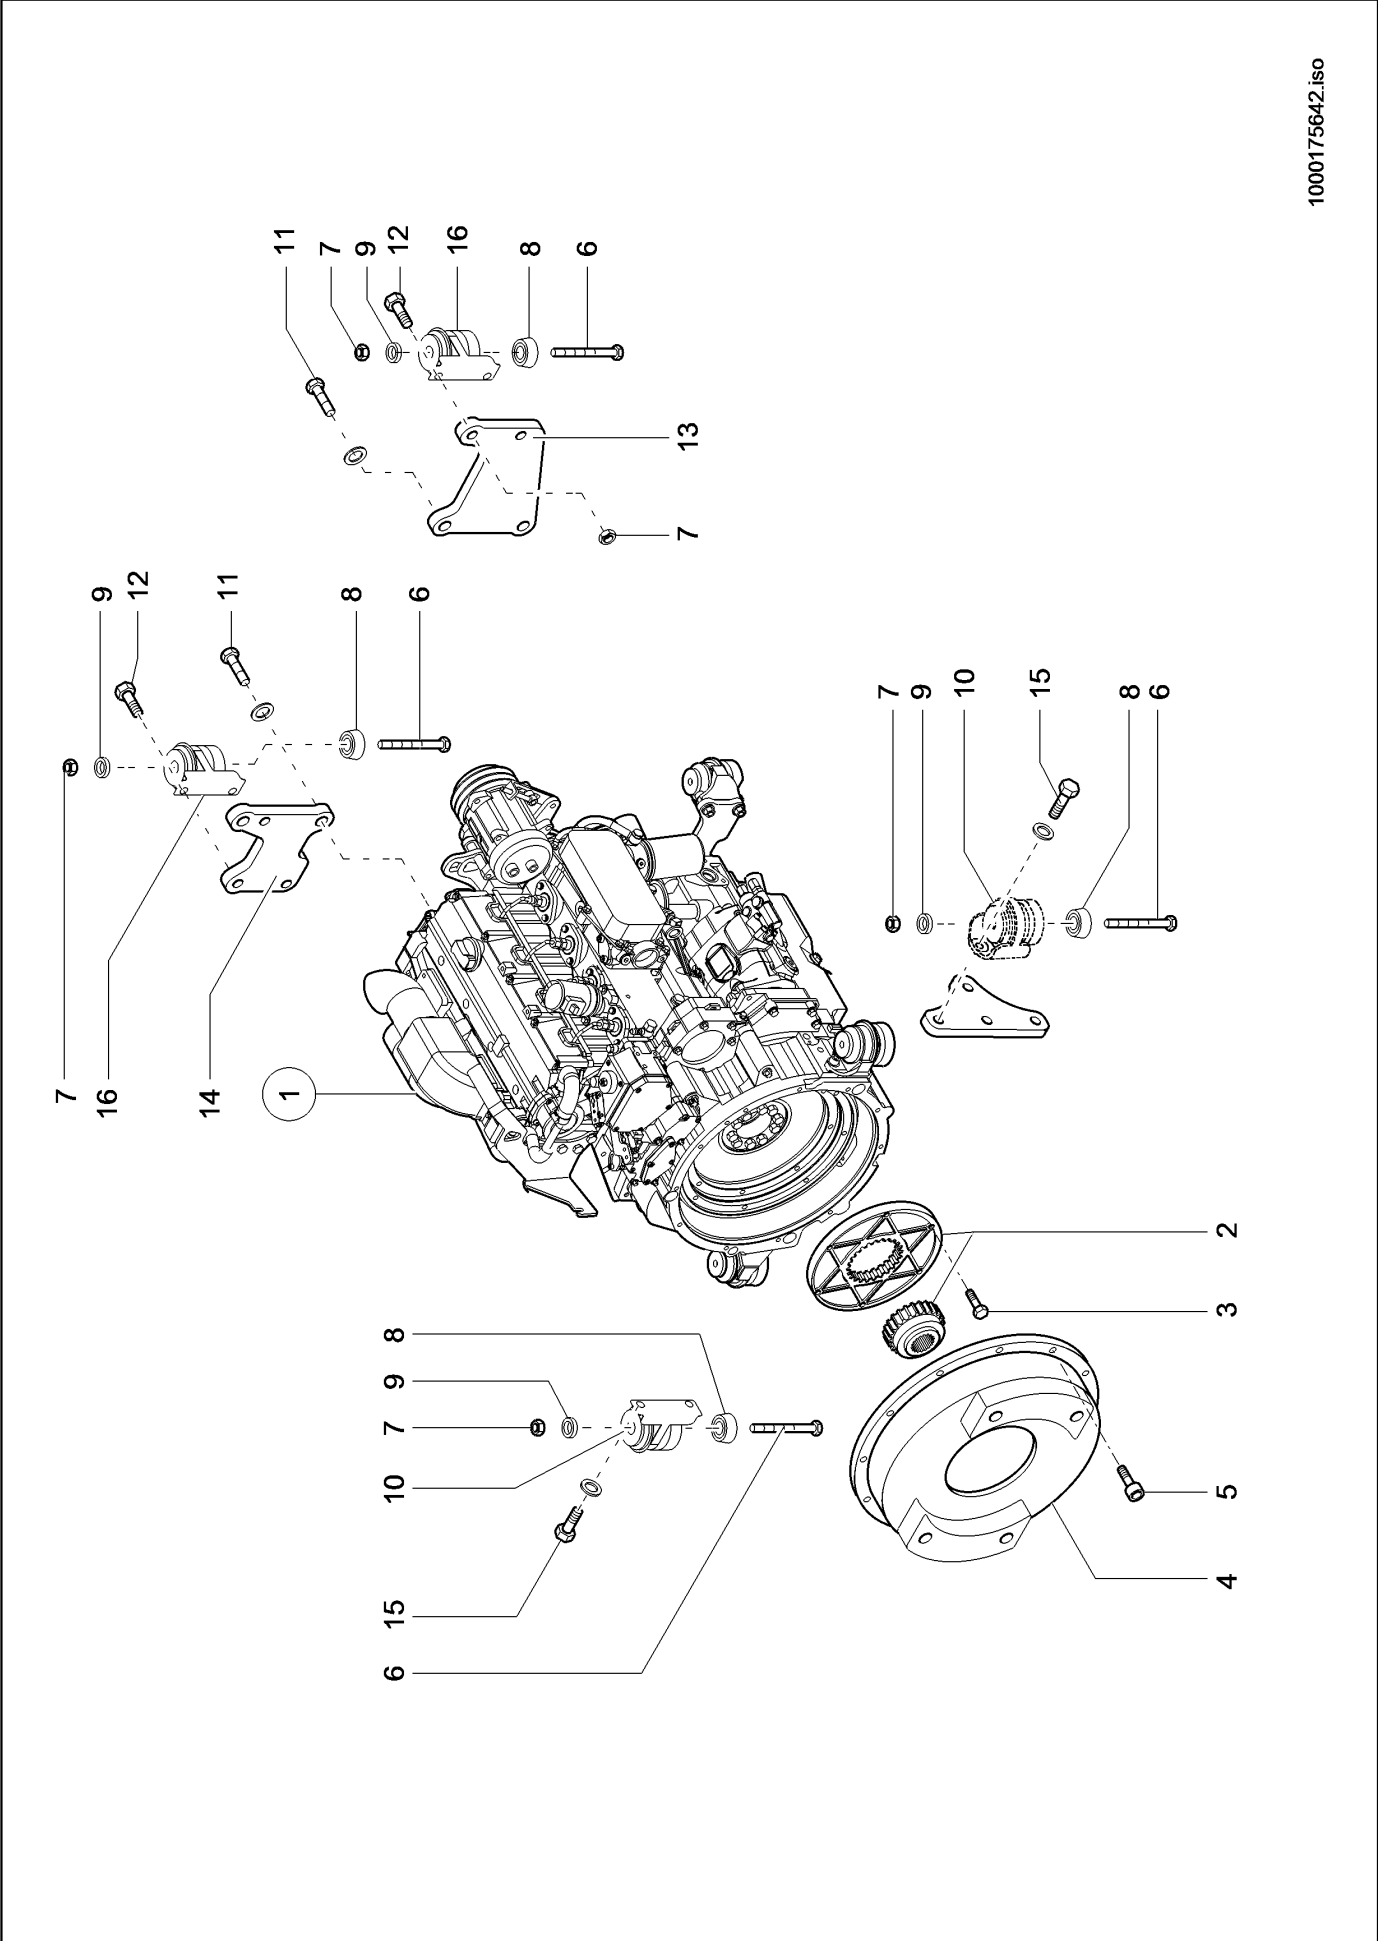

1000175642.iso

100 ENGINE SUSPENSION 1)


Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1302 286 1	DIESEL ENGINE	TCD 2012 LO4 2V 88 KW/24	1	2)
2	00 1300 828 1	CLUTCH		1	
3	00 0237 874 0	HEXAGON HEAD BOLT	M10X35	8	
4	00 1300 444 0	FLANGE		1	
5	00 0235 495 1	SOCKET HEAD SCREW	M10X 25	12	
6	00 0242 380 0	HEXAGON HEAD BOLT	M12X120	4	
7	00 0238 315 0	HEXAGONAL NUT	M12	4	
8	00 1301 651 0	SPACER PIECE		4	
9	00 1301 652 0	WASHER		4	
10	00 1301 630 0	SHUT OFF PLATE		2	
11	00 0237 573 0	HEXAGON HEAD BOLT	M12X50	2	
12	00 0214 777 0	SOCKET HEAD SCREW	M12X 40	2	
13	00 1300 481 0	BEARING PLATE		1	
14	00 1300 364 0	BEARING PLATE		1	
15	77 0102 992 4	HEXAGON HEAD SCREW		4	
16	00 1301 870 0	STAND		2	
1)	machine no.	+ from 400010139 88 KW			
2)	Remarks	88 KW			

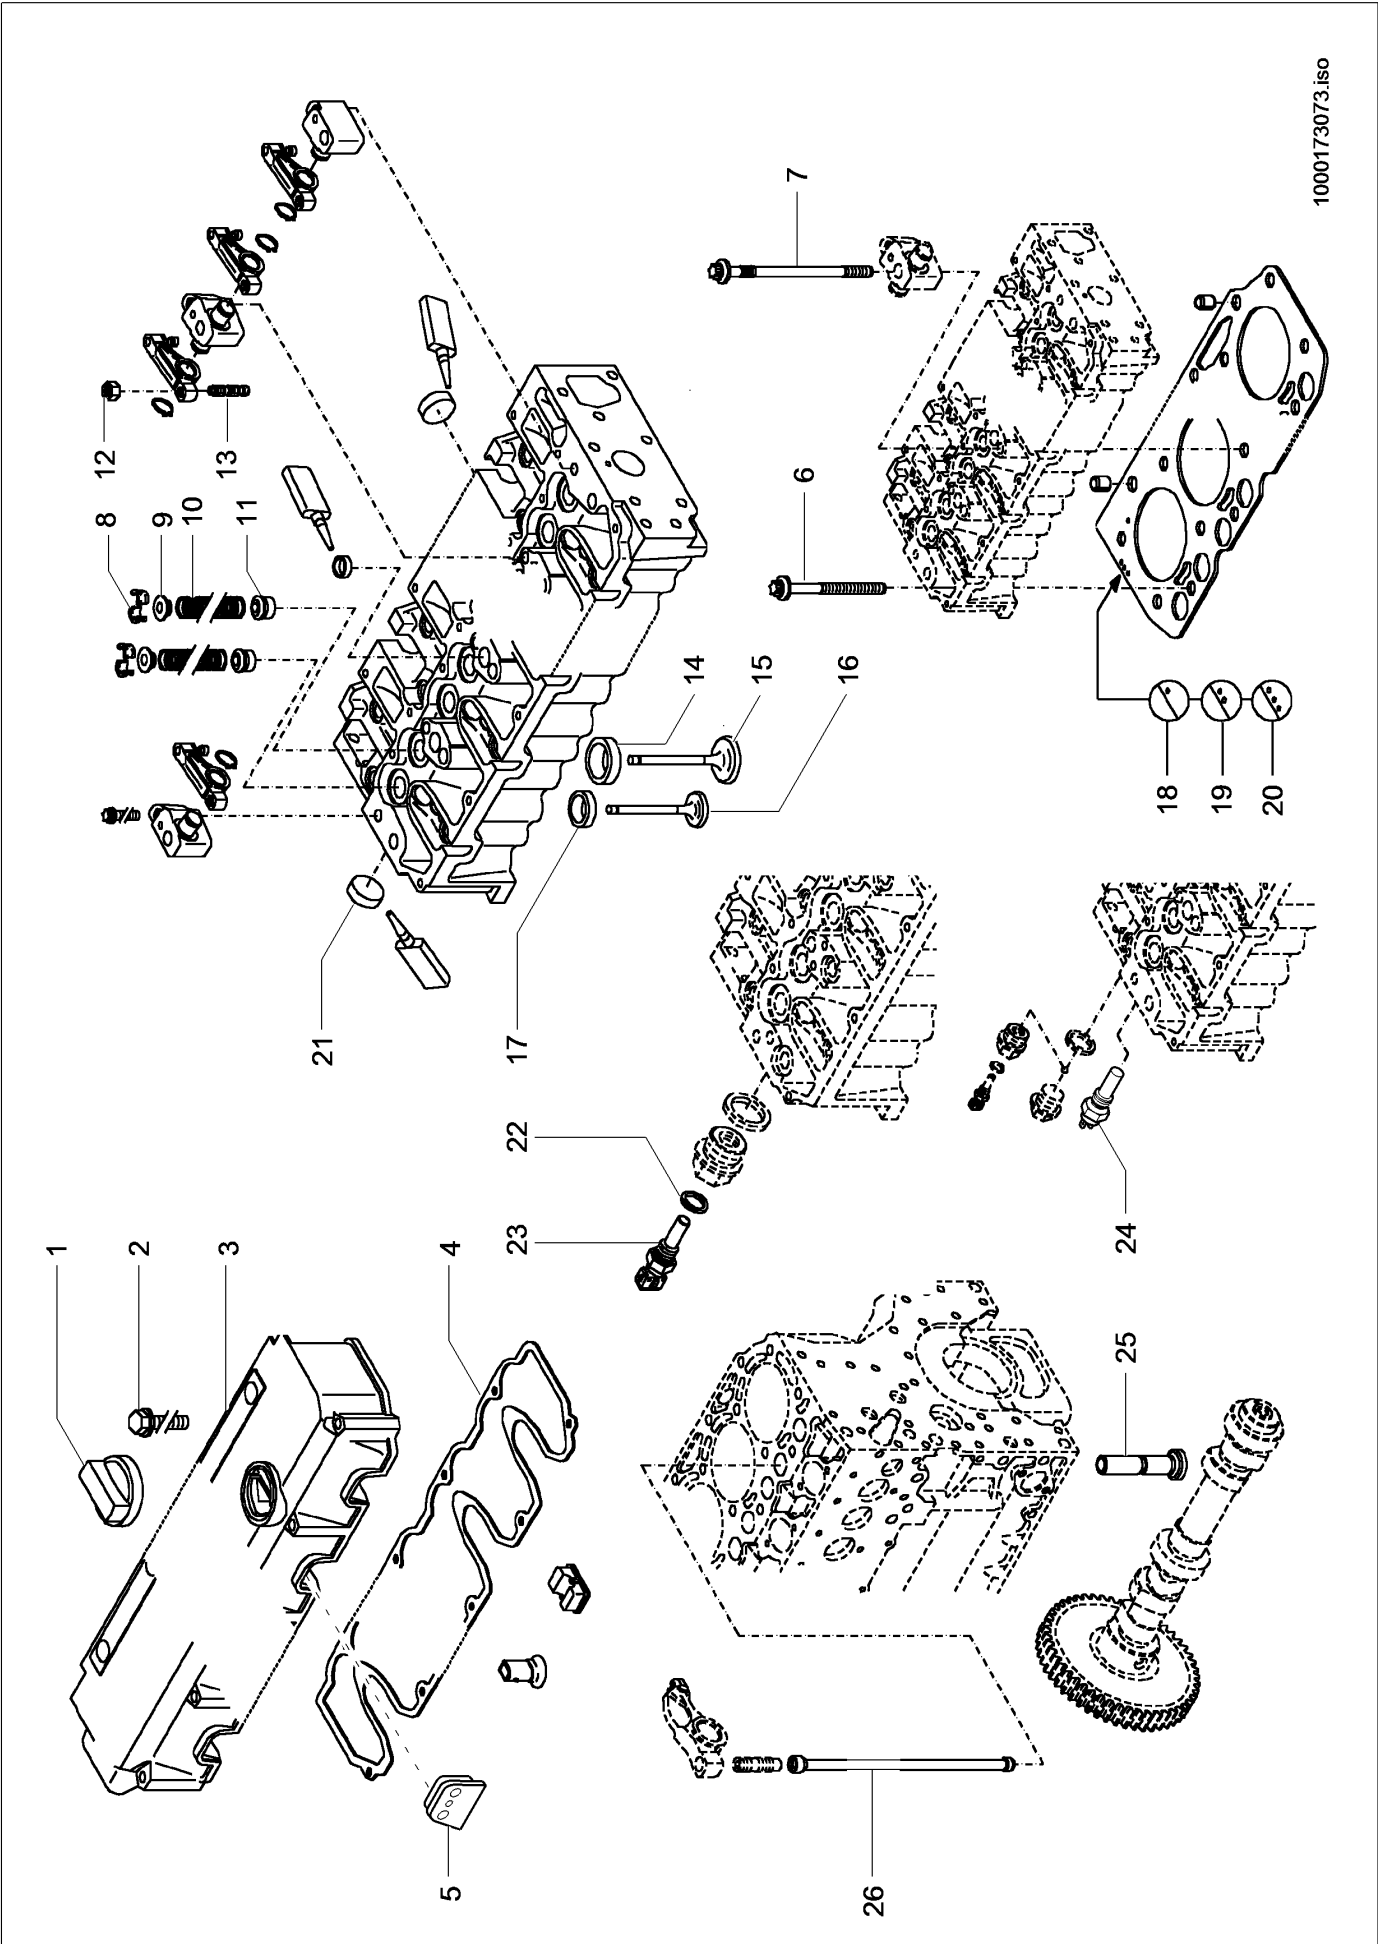

1000173073.iso


100 CYLINDER HEAD

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	60 0502 637 0	LOCKING COVER		1	
2	00 1301 669 0	HEXAGON HEAD SCREW	F-M 6X 75	9	
3	00 1301 670 0	VALVE COVER		1	
4	00 1302 392 0	VALVE COVER SEAL		1	
5	60 0502 647 1	RUBBER HOSE		3	
6	00 1301 675 0	SOCKET HEAD SCREW		13	
7	00 1301 671 0	SOCKET HEAD SCREW		5	
8	60 0501 420 9	VALVE CONE		16	
9	00 1302 403 0	SPRING PLATE		8	
10	00 1301 665 0	COMPRESS.SPRING		8	
11	60 0503 141 5	SEALING RING		8	
12	60 0502 640 4	HEXAGONAL NUT		8	
13	60 0500 072 5	ADJUSTING SCREW		8	
14	00 1301 666 0	VALVE SEAT		4	
15	00 1302 446 0	INLET VALVE		4	
16	00 1302 447 0	OUTLET VALVE		4	
17	00 1301 666 0	VALVE SEAT		4	
18	00 1301 672 0	CYLINDER HEAD GASKET		1	
19	00 1301 673 0	CYLINDER HEAD GASKET		1	
20	00 1301 674 0	CYLINDER HEAD GASKET		1	
21	60 0502 630 0	LOCKING COVER	A 36	3	
22	00 1134 937 0	SEALING RING	A 12 X 15,5 X 1,5 -CU	1	
23	00 1135 524 0	SENDER UNIT		1	
24	00 1300 176 0	TEMPERAT.FEELER	50 - 150°C - M14X1,5	1	
25	00 1301 677 0	PLUNGER		8	
26	00 1301 676 0	BUMPER		8	

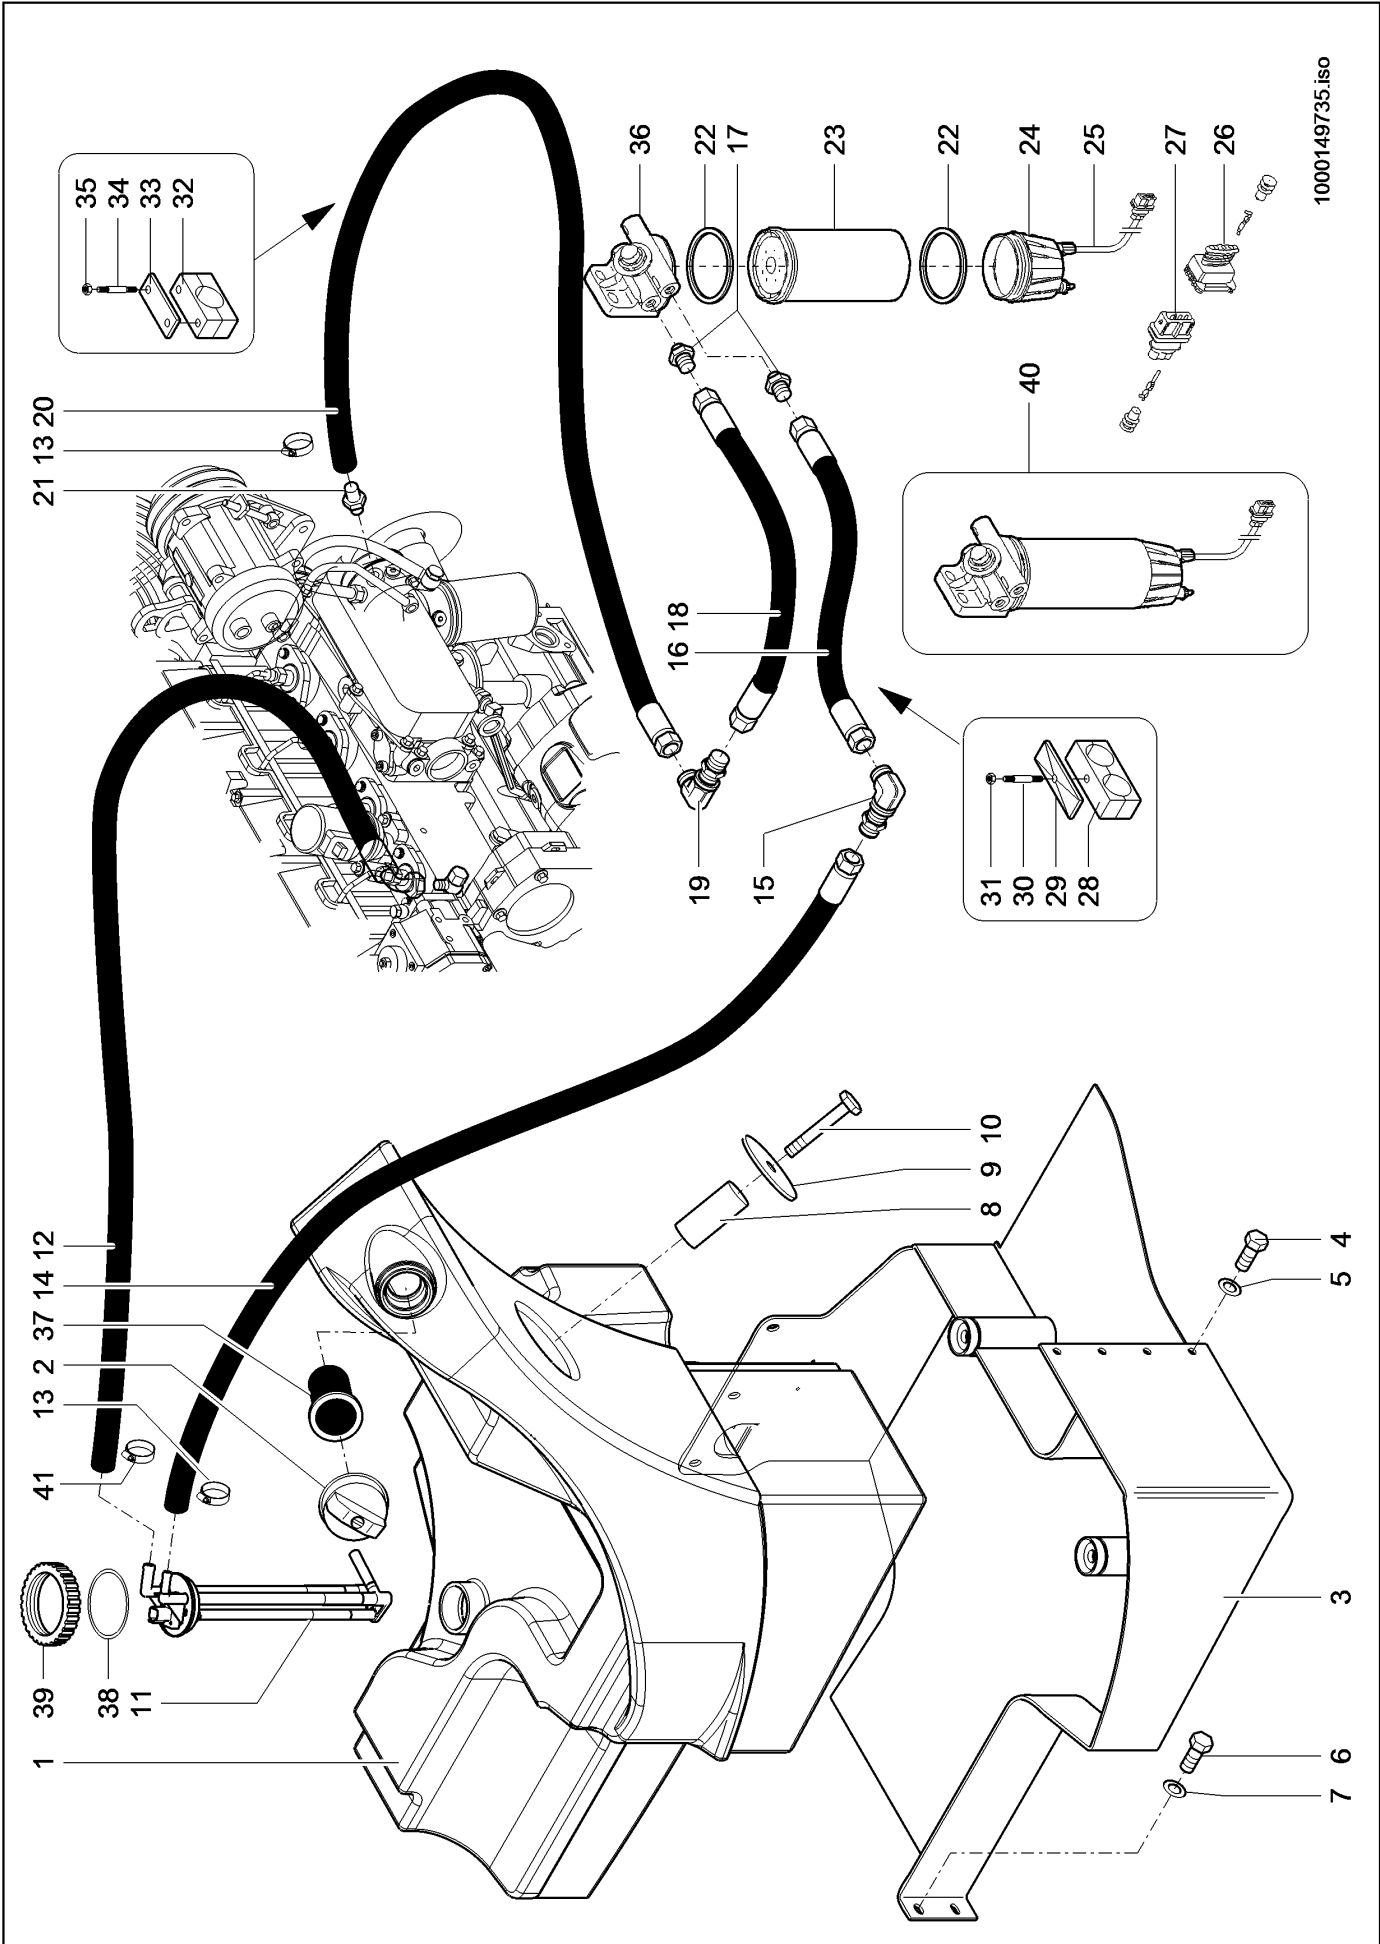

100 FUEL TANK 1)


Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1300 416 0	FUEL TANK		1	
2	00 1305 708 0	LOCKING COVER	KRAFTSTOFFTANK	1	
3	00 1300 611 0	BEARING		1	
4	00 0237 383 0	HEXAGON HEAD BOLT	M10X25	7	
5	00 0215 683 0	WASHER	10,5	7	
6	77 0002 771 6	SECURING SCREW	M16X45-VERBUS RIPP	2	
7	00 0214 612 0	WASHER	16	2	
8	00 1300 436 0	SPACER TUBE		1	
9	00 1301 418 0	WASHER		1	
10	00 0215 898 0	HEXAGON HEAD BOLT	M16X160	1	
11	00 1300 458 1	SUCTION LANCE	MONOSTABILE REEDKONTAKTE	1	
12	00 1301 266 0	HYDR. HOSE		1	
13	00 1301 433 0	CLAMP	A 12-22X9 W1	2	
14	00 1301 240 0	HOSE PIPE		1	
15	00 0215 102 0	ANGLE UNION	BHE-L15	1	
16	00 1301 238 0	HYDR. HOSE		1	
17	00 1301 591 0	SCREW-IN FITTING	SDS-L15XM16X1, 5-TYPE E	2	
18	00 1301 239 0	HYDR. HOSE		1	
19	00 0215 102 0	ANGLE UNION	BHE-L15	1	
20	00 1301 240 0	HOSE PIPE		1	
21	00 1302 368 0	HOSE FITTING		1	
22	00 1301 646 0	SEAL KIT		1	
23	00 1301 644 0	FUEL FILTER		1	
24	00 1301 645 0	WATER CONTAINER		1	
25	00 1301 682 0	CABLE HARNESS	CABLE WITH SENSOR	1	
26	00 0178 556 0	CENTRAL PLUG	3 POLIG, KO-001807211		
27	00 1301 647 0	PLUG		1	
28	00 1301 437 0	CLAMP	Z KP-3-R-20-20-PP	3	
29	00 1300 064 0	COVER PLATE	Z DP-3-W1 ERS.D.313226.	3	
30	00 1301 540 0	STUD BOLT	M8X90	3	
31	00 0236 170 0	HEXAGONAL NUT	M8	3	
32	00 1301 447 0	CLAMP	L KP-3-R-20-PA	1	
33	00 1300 066 0	COVER PLATE	L DP-3-W1	1	
34	00 1301 536 0	STUD BOLT	M6X55	2	
35	00 0211 113 0	LOCK NUT	M6	2	
36	00 1302 108 0	SUPPORT BRACKET		1	
37	00 1302 051 0	FILL IN STRAINER		1	
38	00 1304 554 0	GASKET	75 X 67 X 4 NBR/SBR 65	1	
39	00 1302 876 0	UNION NUT	S80 X 4	1	
40	00 1302 434 0	FILTER HEAD		1	2)
41	00 0223 018 0	CLAMP	COBRA 15/8	1	
1)	Remarks	75/88/90/100 KW			
2)	Remarks	complete			

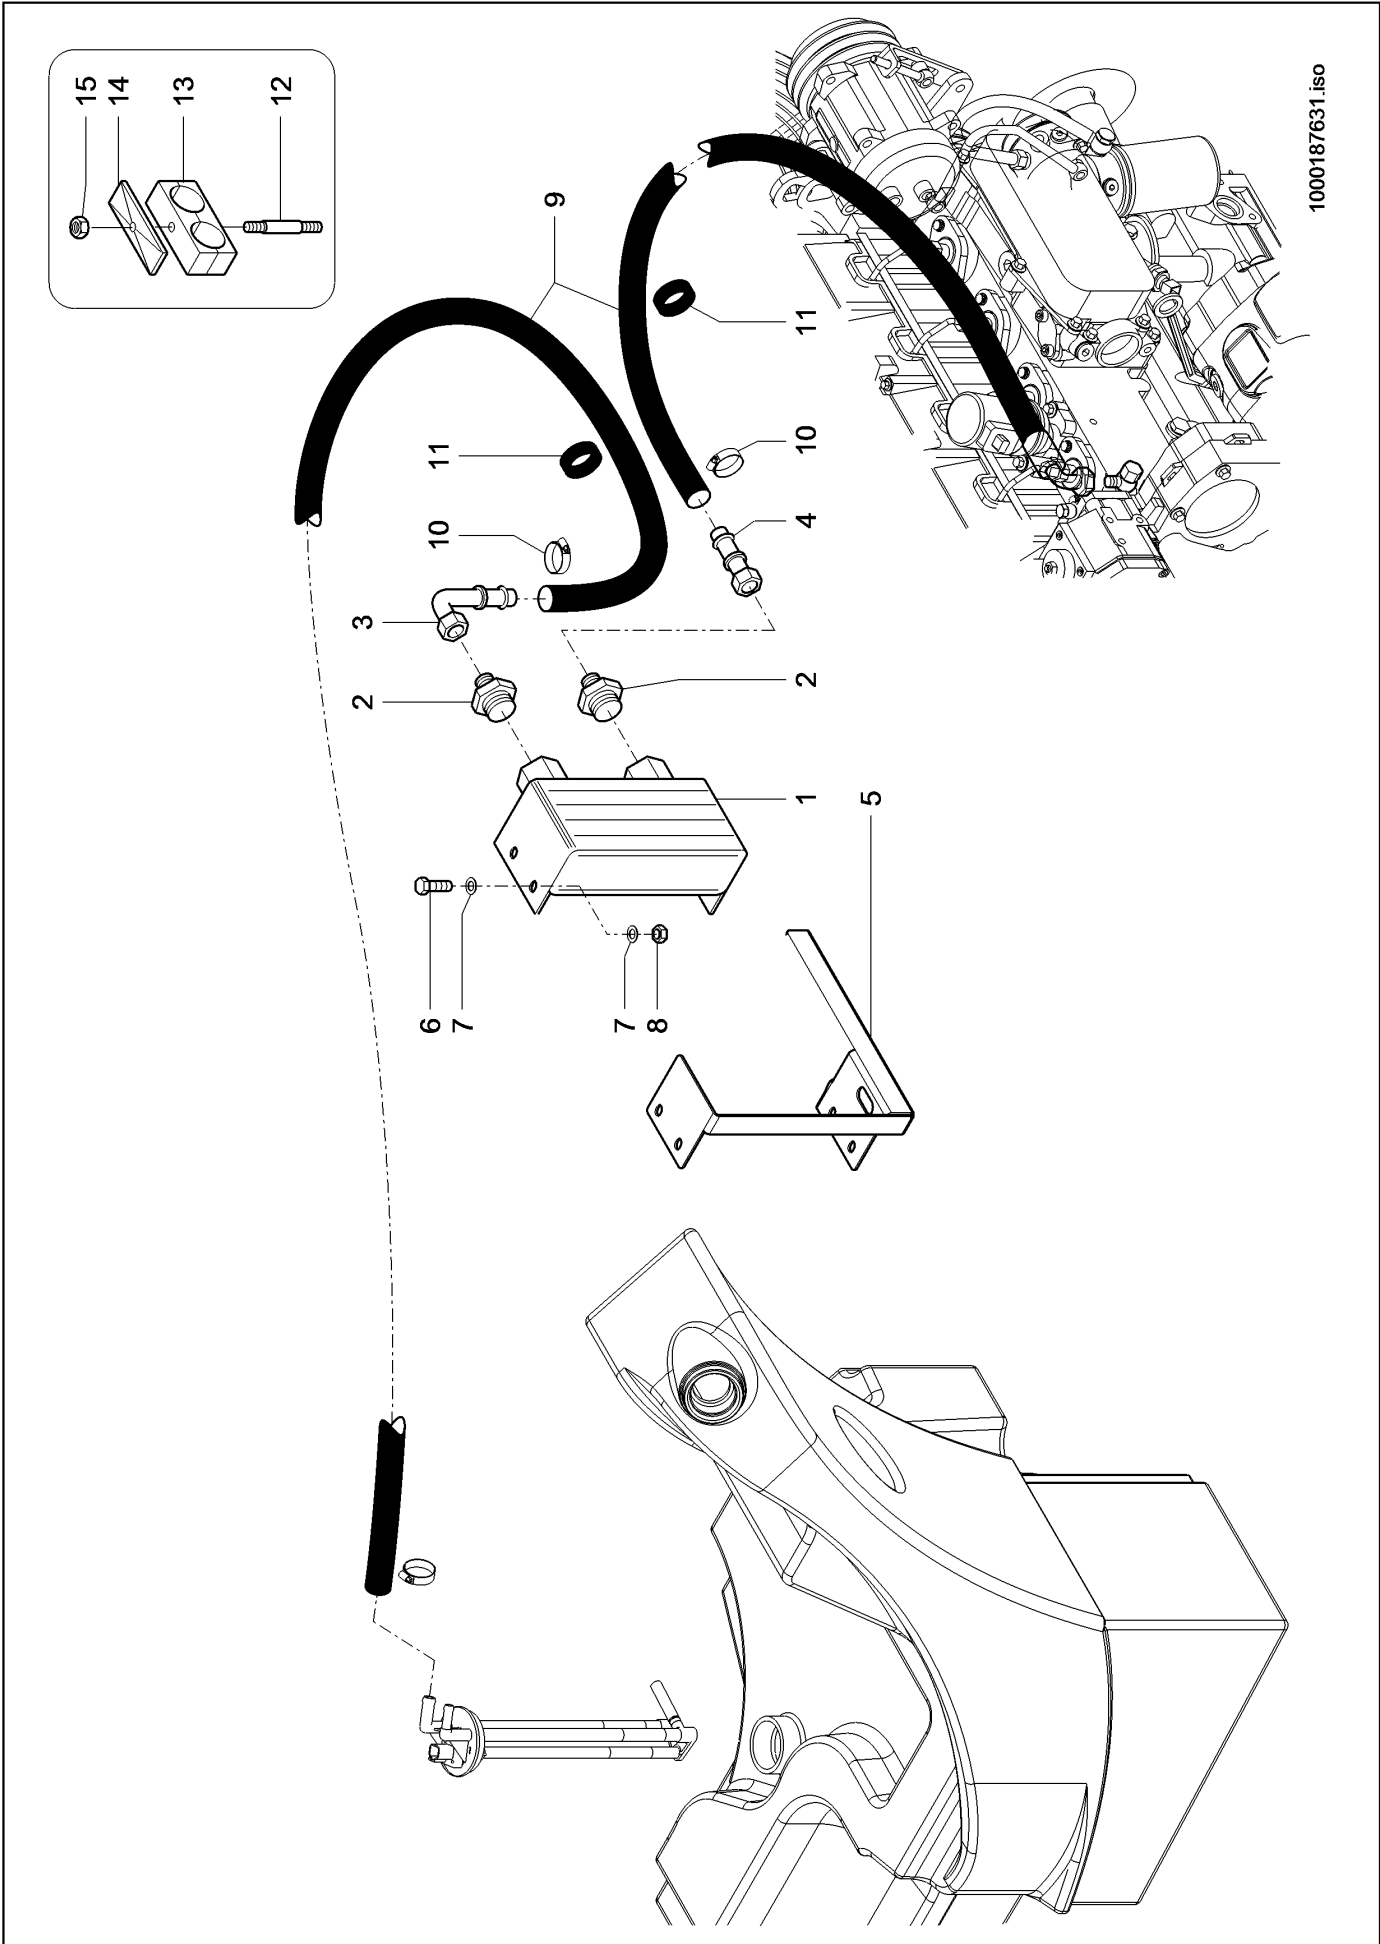

1000187631.iso

180 FUEL COOLER

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1302 690 0	RADIATOR		1	
2	00 0316 185 0	SCREW-IN FITTING	SDS-L12XG3/4A-TYPE E	2	
3	00 0142 279 0	TUBE NIPPLE	DN10 - N90 L12 (M18X1,5)	1	
4	00 1302 686 0	ARMATURE	DN10 - N L12 (M18X1, 5)	1	
5	00 1302 689 0	SUPPORT		1	
6	00 0236 200 0	HEXAGON HEAD BOLT	M8X20	4	
7	00 0237 816 0	WASHER	8-8,4X24X2	12	
8	00 0238 132 0	LOCK NUT	M8	4	
9	00 1302 684 0	HOSE PIPE		1	
10	00 1301 433 0	CLAMP	A 12-22X9 W1	2	
11	00 1302 683 0	CABLE RING	A 19X25X6,5	2	
12	00 1301 538 0	STUD BOLT	M8X55-8.8 A2C	2	
13	00 1301 436 0	CLAMP	Z-KP-2-R-18-18-PP	2	
14	00 0216 994 0	COVER PLATE	Z DP-2-W1	2	
15	00 0238 132 0	LOCK NUT	M8	2	

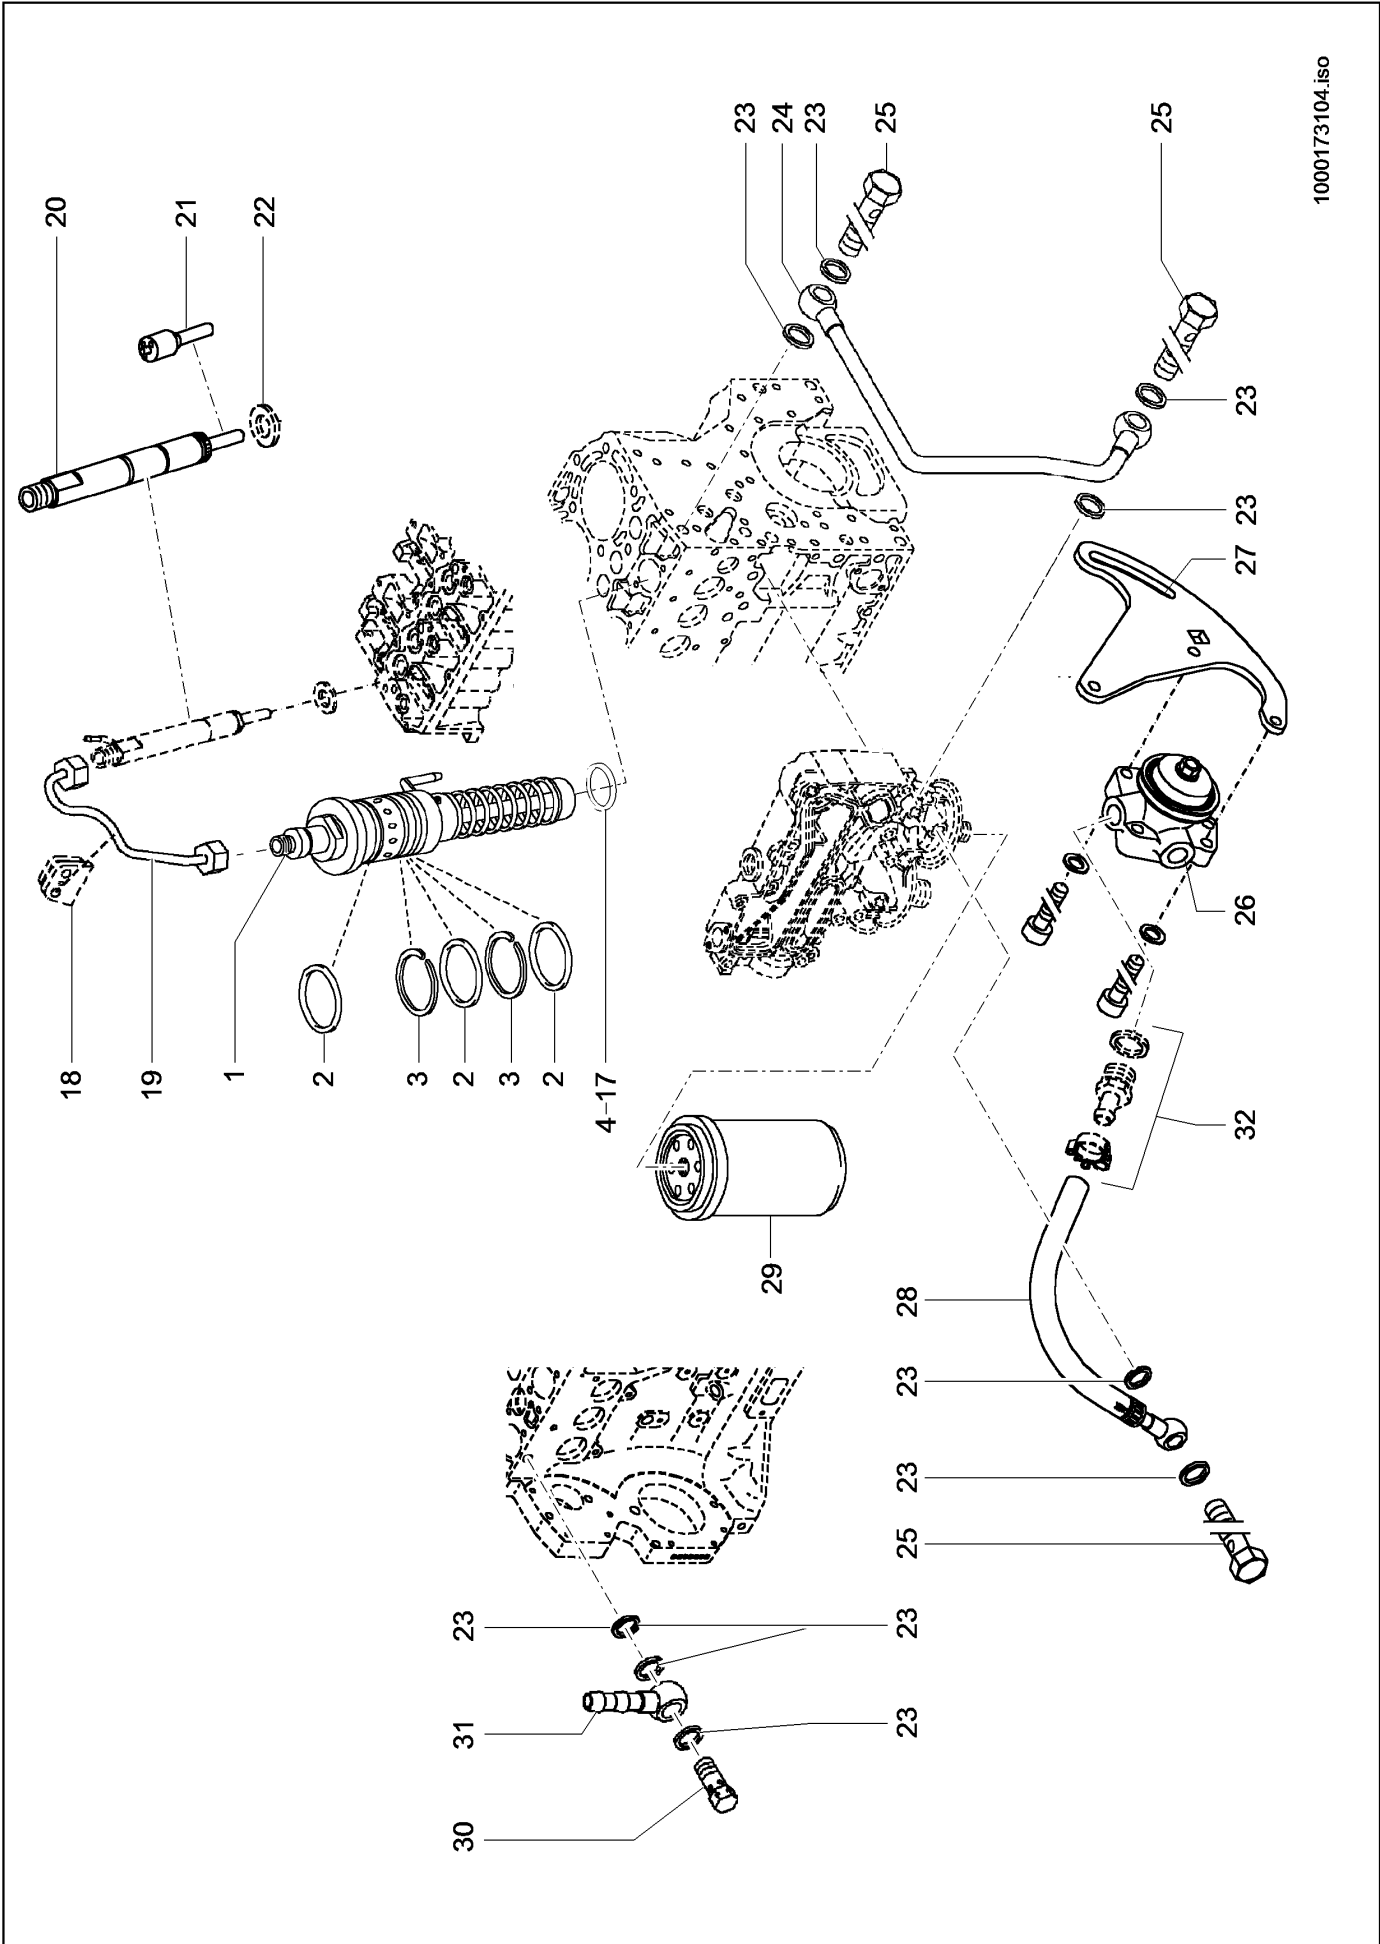


1000173104.iso

200 INJECTION PUMP / HIGH PRESSURE PUMP 1)

Pos.	Part No.	Description	Dimension	Quantity	Conditions
1	00 1301 686 0	INJECTION PUMP		4	2)
2	60 0502 643 6	O-RING		12	
3	60 0502 644 5	SPACER RING		8	
4	00 1132 269 0	ADJUSTING DISC		1	3)
5	60 0502 644 0	ADJUSTING DISC		1	4)
6	60 0503 081 3	ADJUSTING DISC		1	5)
7	60 0503 081 5	ADJUSTING DISC		1	6)
8	60 0503 081 7	ADJUSTING DISC		1	7)
9	60 0503 081 9	ADJUSTING DISC		1	8)
10	00 1132 281 0	ADJUSTING DISC		1	9)
11	00 1132 284 0	ADJUSTING DISC		1	10)
12	00 1132 287 0	ADJUSTING DISC		1	11)
13	00 1132 289 0	ADJUSTING DISC		1	12)
14	60 0503 082 9	ADJUSTING DISC		1	13)
15	60 0503 083 1	ADJUSTING DISC		1	14)
16	60 0503 083 3	ADJUSTING DISC		1	15)
17	60 0503 083 5	ADJUSTING DISC		1	16)
18	60 0502 647 1	RUBBER HOSE		4	
19	00 1301 681 0	INJECTION PIPE		4	
20	00 1302 377 0	INJECTION VALVE		4	2)
21	00 1302 376 0	NOZZLE ELEMENT		4	
22	60 0502 574 8	SEALING RING		4	
23	60 0500 090 3	SEALING RING		9	
24	00 1301 678 0	FUEL PIPE		1	
25	60 0500 911 6	HOLLOW SCREW		3	
26	00 1302 003 0	FUEL PUMP		1	
27	00 1302 411 0	TENSION STRAP		1	
28	00 1301 680 0	HOSE PIPE		1	
29	00 1302 278 0	FUEL FILTER		1	
30	60 0502 647 0	VALVE		1	
31	60 0503 068 7	GREASE NIPPLE	D14X8	1	

1)	Remarks	88 KW
2)	Remarks	complete
3)	Remarks	1.0 mm
4)	Remarks	1.2 mm
5)	Remarks	1.4 mm
6)	Remarks	1.6 mm
7)	Remarks	1.8 mm
8)	Remarks	2.0 mm
9)	Remarks	2.2 mm
10)	Remarks	2.4 mm
11)	Remarks	2.6 mm
12)	Remarks	2.8 mm
13)	Remarks	3.0 mm
14)	Remarks	3.2 mm
15)	Remarks	3.4 mm
16)	Remarks	3,6 mm

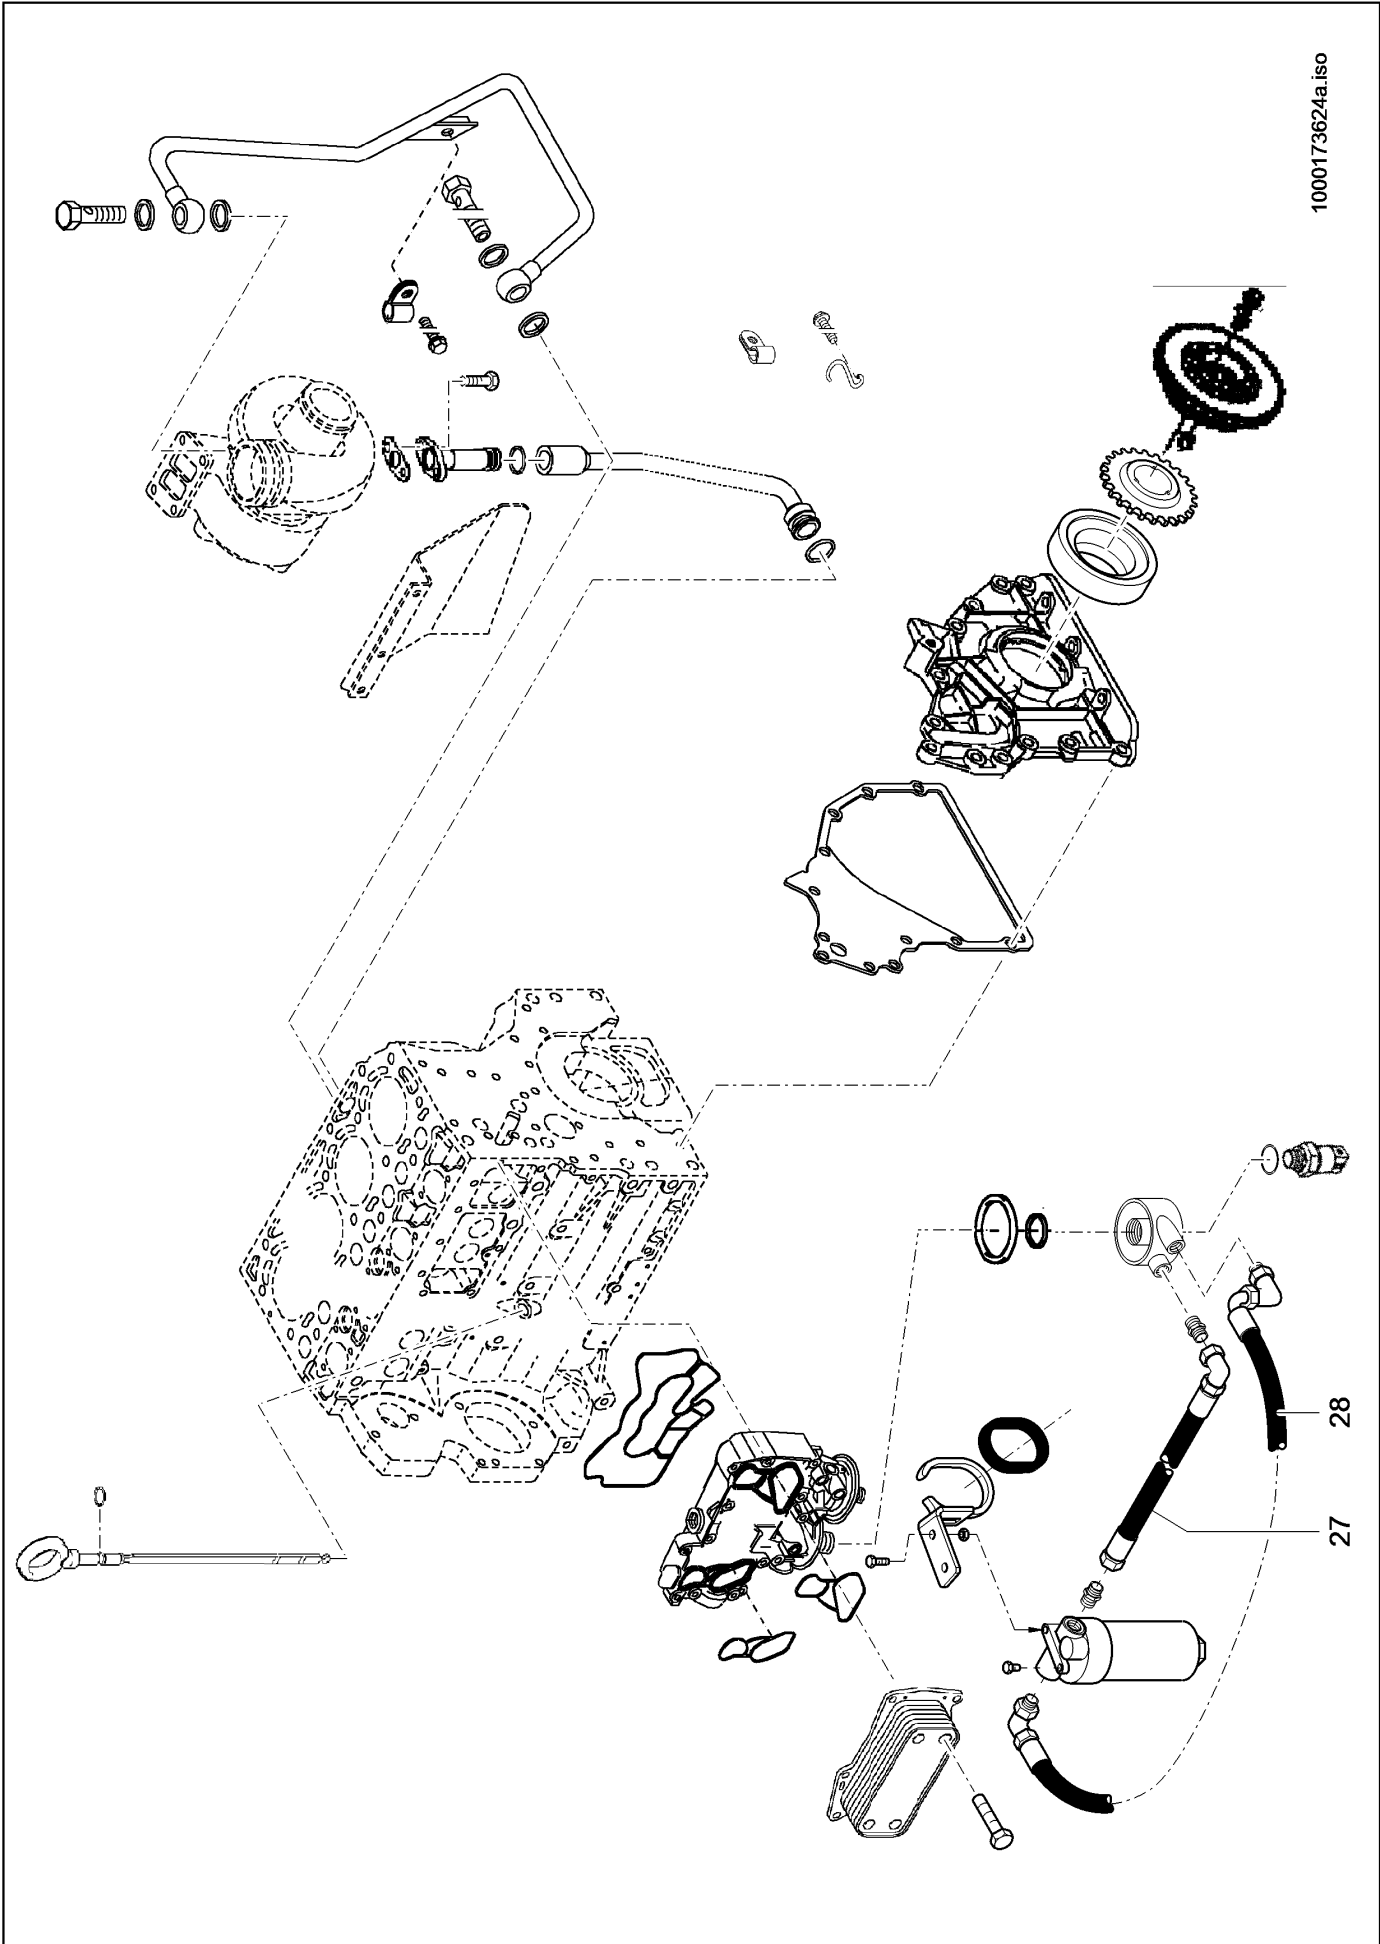

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com