



Service Repair Manual

Models

320D and 320D L Excavator

Product: EXCAVATOR

Model: 320D EXCAVATOR KLM

Configuration: 320D & 320D L Excavators KLM00001-UP (MACHINE) POWERED BY C6.4 Engine

Disassembly and Assembly C6.4 Engine for Caterpillar Built Machines

Media Number -KENR8106-09

Publication Date -01/10/2017

Date Updated -18/10/2017

i01135944

Crankshaft Rear Seal - Remove

SMCS - 1161-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-7600	Slide Hammer Puller	1
B	5P-7312	Seal Distorter	1
	5P-7338	Distorter Ring	2

Start By:

- Remove the flywheel. Refer to Disassembly and Assembly, "Flywheel - Remove".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair

of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.

Dispose of all fluids according to local regulations and mandates.

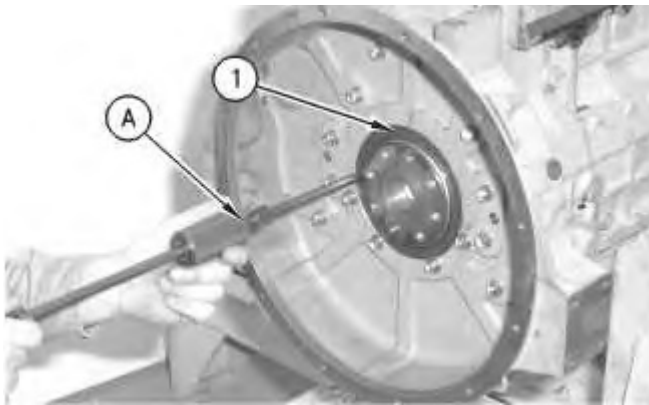


Illustration 1

g00604840

Note: If the oil seal shows a sign of oil leaks, remove the wear sleeve and the oil seal.

1. Drill three evenly spaced 3 mm (0.12 inch) holes in crankshaft rear seal (1).
2. Use Tool (A) to remove the crankshaft rear seal.

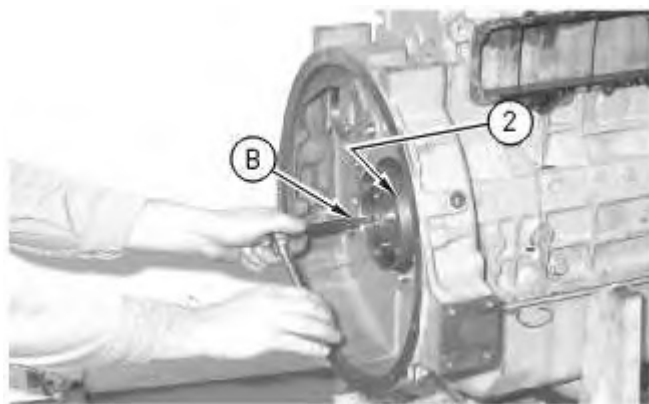


Illustration 2

g00604844

3. Use Tool (B) to remove the wear sleeve (2) (not shown) from the rear of the crankshaft.

Note: When you are removing the wear sleeve, take extreme care not to damage the crankshaft.

Product: EXCAVATOR

Model: 320D EXCAVATOR KLM

Configuration: 320D & 320D L Excavators KLM00001-UP (MACHINE) POWERED BY C6.4 Engine

Disassembly and Assembly C6.4 Engine for Caterpillar Built Machines

Media Number -KENR8106-09

Publication Date -01/10/2017

Date Updated -18/10/2017

i01615317

Crankshaft Rear Seal - Install

SMCS - 1161-012

Installation Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	9U-6169	Installer	1
	9U-6171	Locator	1
	9U-6172	Bolt	2
	5P-8247	Hard Washer	1
	6V-3303	Bolt	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. To install a new wear sleeve that is complete with a seal, use **169-5464** Quick Cure Primer to clean the outer diameter of the crankshaft and the inside diameter of the wear sleeve. Apply **4C-9507** Retaining Compound to the faces of all the mating parts.
-

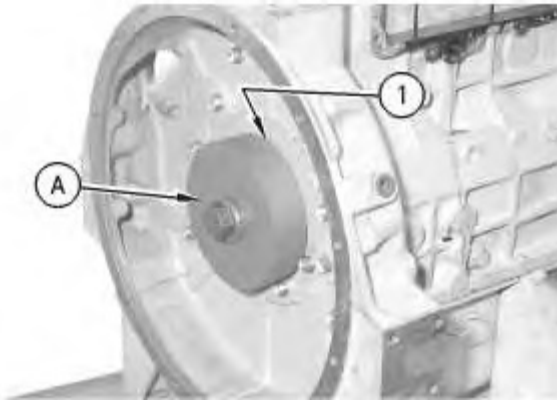


Illustration 1

g00604874

2. Install a new wear sleeve that is complete with a seal (1) (not shown) with Tool (A), as follows:

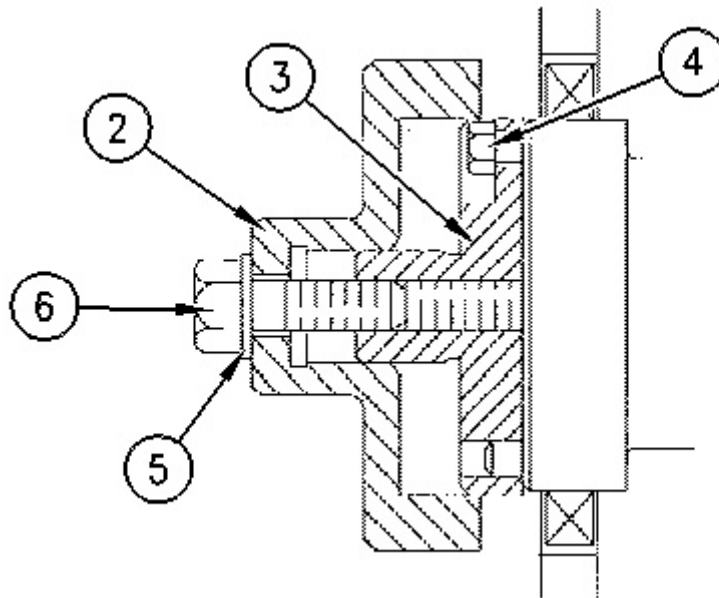


Illustration 2

g00604875

- a. Install **9U-6171** Locator (3) onto the crankshaft with **9U-6172** Bolt (4).
- b. Put the new wear sleeve that is complete with a seal in **9U-6169** Installer (2).
- c. Put **6V-3303** Bolt (6) through **5P-8247** Hard Washer (5) and **9U-6169** Installer (2) and thread into **9U-6171** Locator (3).
- d. Push the wear sleeve that is complete with a seal onto the crankshaft until **9U-6169** Installer (2) bottoms out.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com