

Product: EXCAVATOR

Model: 315C EXCAVATOR CFT

Configuration: 315C & 315C L Excavators CFT00001-UP (MACHINE) POWERED BY 3046 Engine

## Disassembly and Assembly 315C Excavator Machine Systems

Media Number -REN5525-05

Publication Date -01/11/2008

Date Updated -10/11/2008

i01959727

# Travel Motor - Disassemble

SMCS - 4351-015

## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	2
B	1P-0074	Slide Hammer	1
C	9S-9152	Bearing Puller	1
D	1U-9895	Crossblock	1
	3H-0465	Push-Puller Plate	2
	8T-0649	Bolt	2
	9X-8257	Washer	2
E	5P-0975	Plate	1

### Start By:

- a. Remove the piston motor (travel). Refer to Disassembly and Assembly, "Piston Motor (Travel) - Remove".

---

### NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair

**of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.**


**Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat<sup>®</sup> products.**

**Dispose of all fluids according to local regulations and mandates.**

---

**Note:** Put identification marks on the motor and on all hose assemblies for installation purposes and for the purpose of orientation. Plug all hose assemblies. This will help to prevent fluid loss and this helps to keep contaminants from entering the system.

**Note:** Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism.

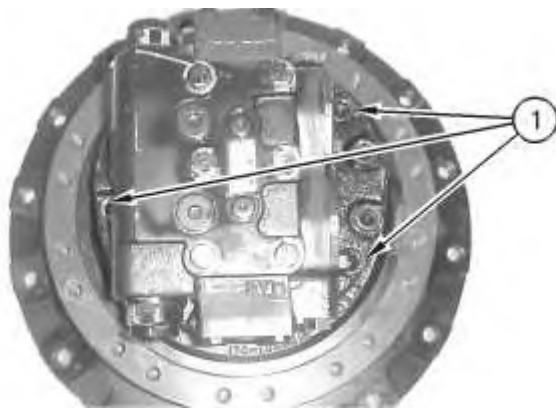


---

Illustration 1

g00779154

1. Remove bolts (1).

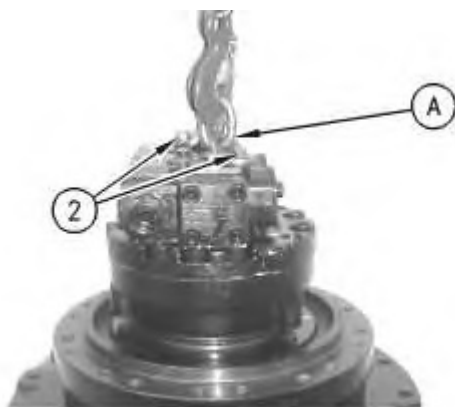

---

Illustration 2

g00779159

2. Remove bolts (2) from the traction control valve in order to install Tooling (A).

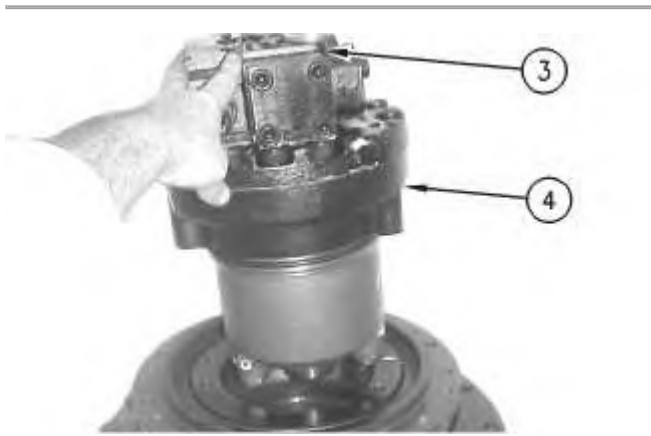


Illustration 3

g00779163

3. Remove traction control valve (3) and travel motor (4) from the final drive.

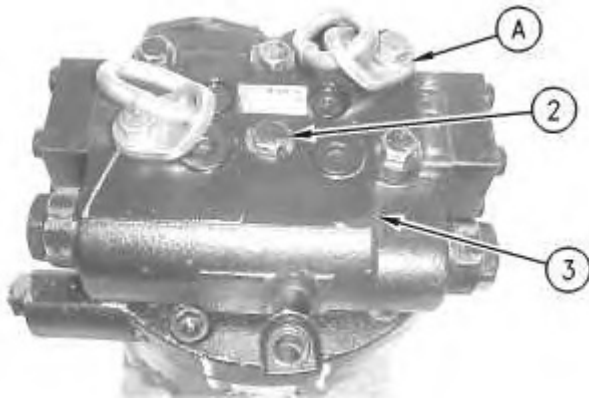


Illustration 4

g00779215

4. Remove Tooling (A). Remove four bolts (2). Remove traction control valve (3).

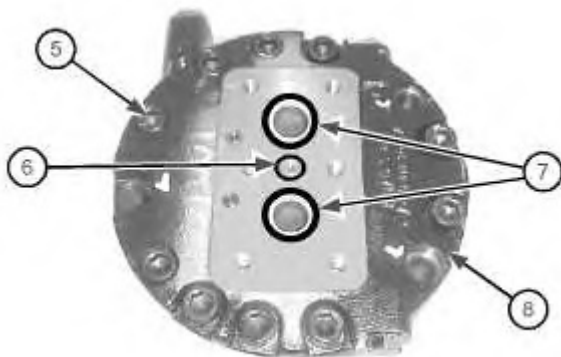


Illustration 5

g01018464

5. Remove socket head bolts (5). Remove O-ring seal (6) and O-ring seals (7). Remove head (8).



Illustration 6

g00779238

6. Remove shim (9).



Illustration 7

g00779248

7. Remove bearing (10).

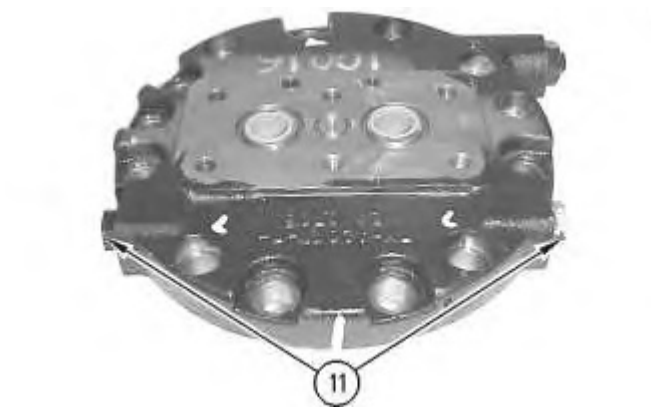


Illustration 8

g00779259

8. Remove plugs (11) and the O-ring seals.

---

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)