


**1270 Tractor**  
**Starting With SN 8736001**  
**Operators Manual**

9-4711

Reprinted

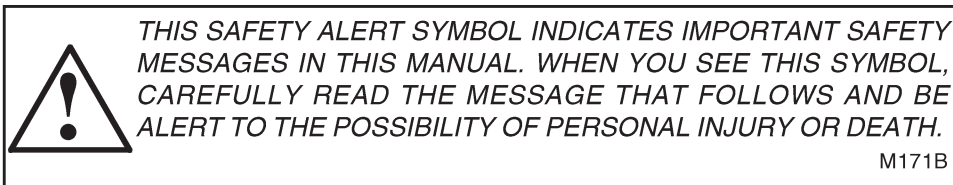


**CASE III**



If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:


- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.

# **WARNING**

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

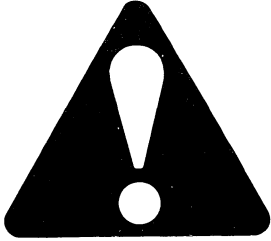

**THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY.**

Tractor accidents kill a number of people in the United States every year. Studies show that 6 in 10 tractor fatalities result from upsets.


Stability is still a very important factor in safety. Let's face it - tractors must be built higher than automobiles to provide the ground clearance necessary in performing their intended function. The use of a tractor over irregularities in the fields calls for careful handling and using good common sense.

Speed is an important element in tractor stability. Speed brings us back to you, the operator. Only you can hold down your speed to match conditions. Think ahead - drive defensively. Equip your tractor with a Case ROPS system available as a factory or field installed option from your Case dealer.

We at Case are continuing to contribute to your safety in two ways: by building tractors with an extra measure of protection and comfort . . . and by passing on these suggestions for safer operation.



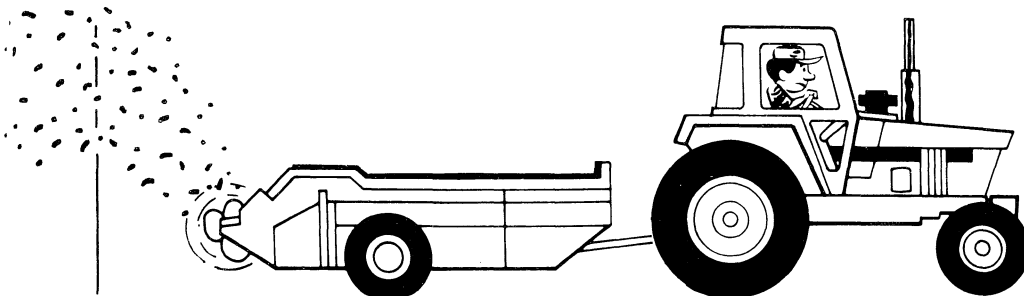

Before starting the engine, place all controls in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.





Before leaving the tractor, stop the engine, place all controls in neutral and set the parking brake.





 Engine starting and control operation must be performed from the operators seat only.

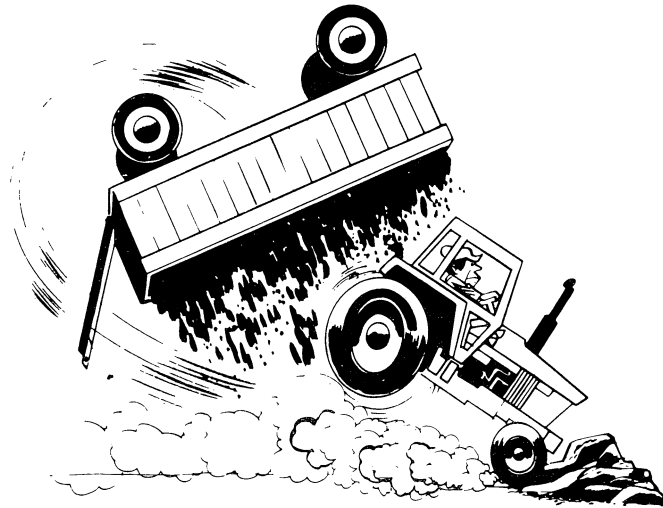
 Tractor travel speed should be such that complete control and tractor stability is maintained at all times. There is potential danger in maneuvering around ditches, gullies, slopes, uneven ground, holes and rocks.




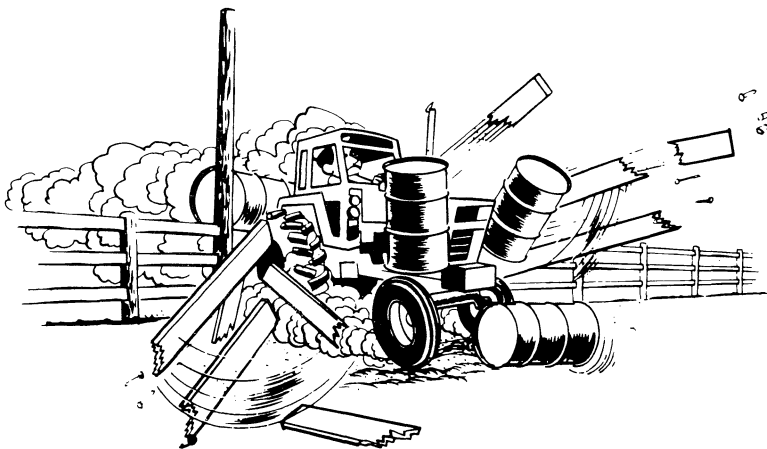
 Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability


 Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways. Use SMV safety emblem and lights for adequate warning to the operators of other vehicles. In this regard, check local government regulations.

 Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off. Shift down before you start up or down a hill with a heavy load. Avoid “free-wheeling”.

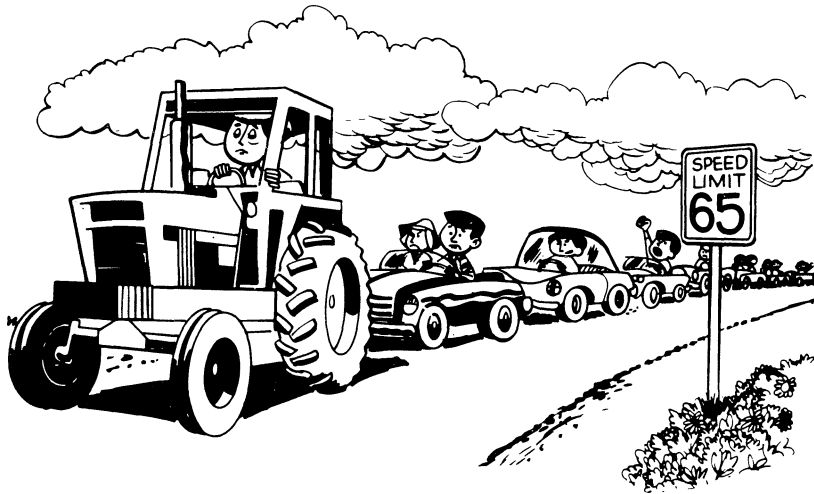


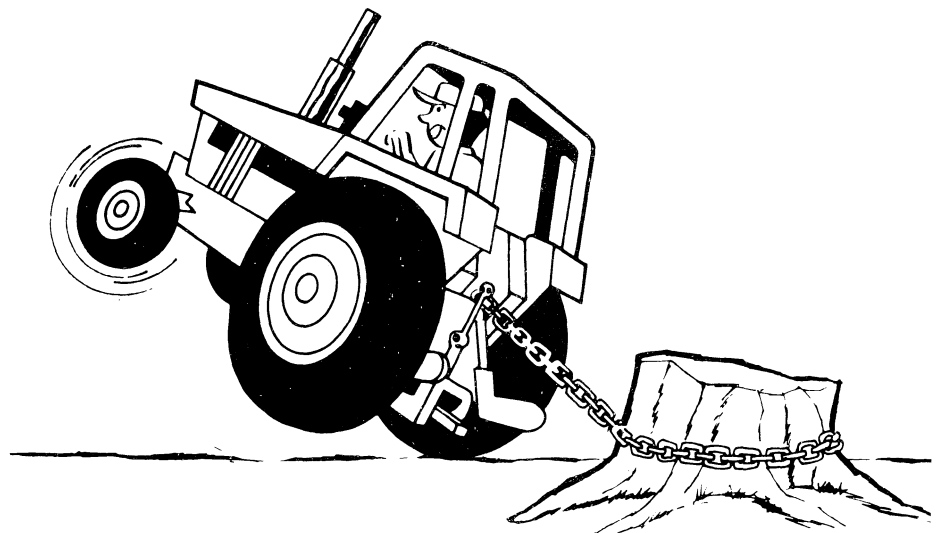
 Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.




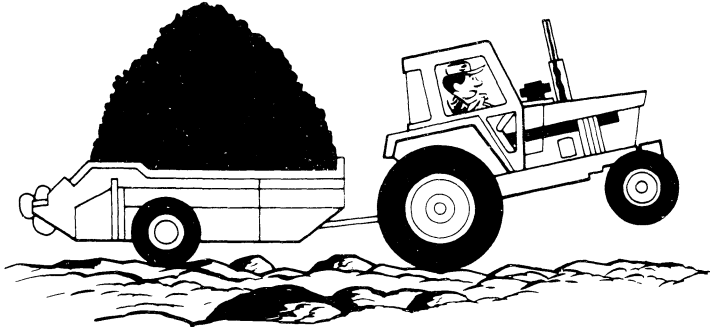
 Keep shields over moving parts. Any unguarded shaft, pulley sprocket or moving part is a potential safety hazard. Wear close fitted clothing.




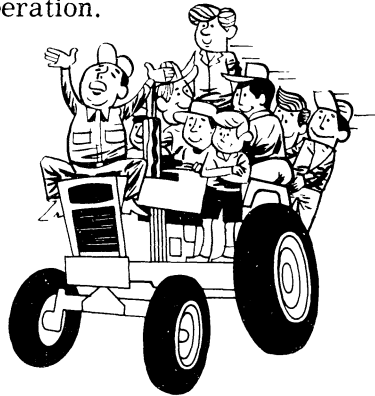
 Hitch to the drawbar, or to other specified hitch points. If you hitch to the axle - or anywhere that's too high - the front end will come up FAST and you have only 7/10 of a second to de-clutch!, or prevent an upset.




 Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the draw-bar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.





 Only one person - the operator - should be permitted on a tractor when it is in operation.





 Never operate the engine in a closed building. Proper ventilation is required under any circumstances.





 Never service or make adjustments to the tractor with the engine running or with the tractor in motion.


 Never refuel the tractor when the engine is hot or running.


 Never smoke while refueling the tractor, servicing the fuel system, checking the batteries or using cold weather starting aids.


 Add coolant to the radiator only when the engine is stopped or slowly idling. To avoid being scalded when the pressure - type filler cap is being removed, turn the cap slowly to the first stop position to relieve pressure before removing the cap.


 When using jumper cables always connect positive jumper cable to battery terminal on starter solenoid. Then use normal starting procedure from operator's seat. Any other method could result in tractor runaway.


 Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.


 If the tractor is equipped with a 4 post ROPS structure or a ROPS protected cab, use the seat belts. The seat belts can help insure your safety if they are used and maintained.

 On a mobile power take-off application, always disengage the PTO before dismounting from the tractor.

 When doing stationary PTO work and dismounting from the tractor with the PTO running, keep clear of all moving parts as they are a potential safety hazard.

 Always stop the tractor engine before working on a PTO driven machine.

 It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.

 Provide a first-aid kit for use in case of accident.



## **TO THE PURCHASER OF A CASE TRACTOR**

The care you give your Case Tractor will greatly determine the satisfaction and service you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

**Your Authorized Case Dealer**


**TO INSURE EFFICIENT AND PROMPT SERVICE, PLEASE FURNISH US WITH THE MODEL, TRACTOR, ENGINE, TRANSMISSION AND CAB SERIAL NUMBERS OF YOUR TRACTOR IN ALL CORRESPONDENCE OR CONTACTS.**

**PRICE \$1.75**



## SERIAL NUMBER

When ordering parts from your Authorized Case Dealer and in all contacts or correspondence with your dealer, relative to your Case Tractor, always specify the Model, Tractor Serial Number, Engine and Transmission Serial Numbers.

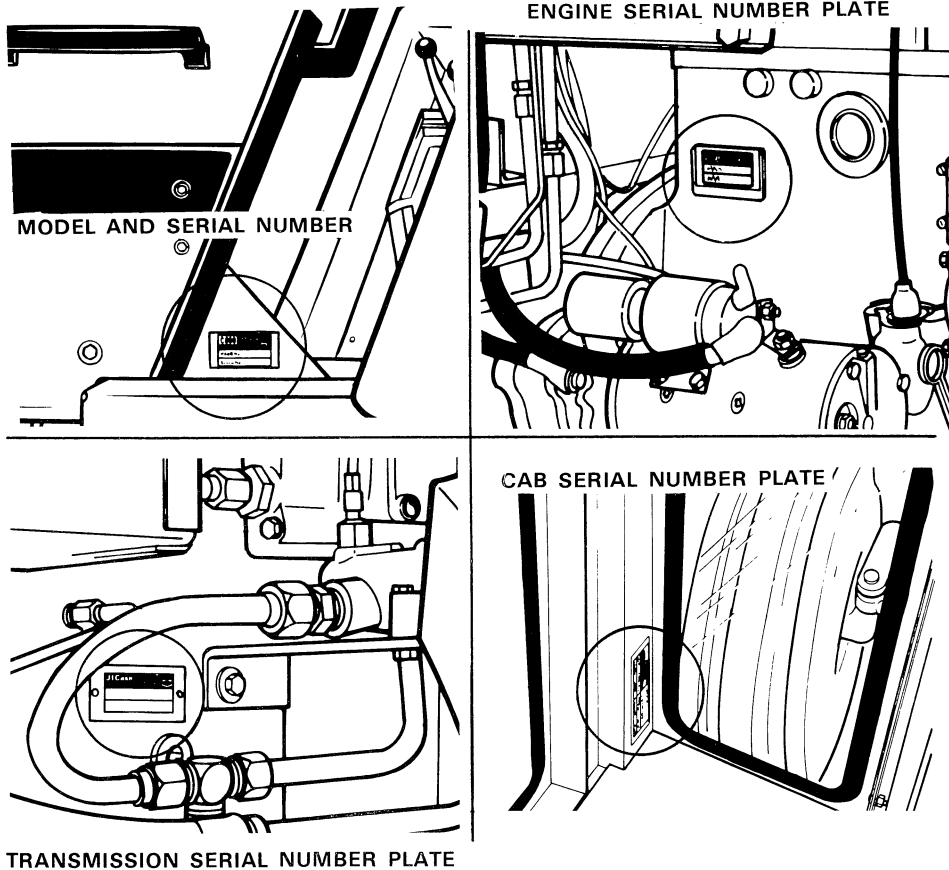

**NOTE:** The terms “Right Hand” and “Left Hand” whenever used in this manual, apply to the tractor when facing in the direction the tractor will move in forward operation.

For reference, fill in the Serial Numbers of your tractor in the spaces provided below.

MODEL DESIGNATION \_\_\_\_\_  
TRACTOR SERIAL NUMBER \_\_\_\_\_  
ENGINE SERIAL NUMBER \_\_\_\_\_  
TRANSMISSION SERIAL NUMBER \_\_\_\_\_  
CAB SERIAL NUMBER \_\_\_\_\_

# Diesel Engine

## SPECIFICATIONS

### General

Type .....	6 Cylinder, 4 Stroke Cycle, Valve-In-Head Turbocharged Diesel Engine
Firing Order .....	1-5-3-6-2-4
Bore .....	4-3/8 Inches (111mm)
Stroke .....	5 Inches (127mm)
Piston Displacement .....	451 Cubic Inches (7 390.6cm <sup>3</sup> )
Compression Ratio .....	15.8 to 1
Cylinder Sleeves .....	Removable Wet Type
No Load Governed Speed .....	2240 to 2280 RPM
Rated Engine Speed .....	2100 RPM
Engine Idling Speed .....	700-750 RPM
*Valve Tappet Clearance (Exhaust) .....	(Hot) .020 Inch (0.508mm) (Cold) .025 Inch (0.635mm)
	(Intake) (Hot and Cold) .015 Inch (0.381mm)

\*Hot Settings Are Made After The Engine Has Operated At Thermostat Controlled Temperature For At Least Fifteen Minutes.

### Piston and Connecting Rod

Rings per Piston .....	3
Number of Compression Rings .....	2
Number of Oil Rings .....	1
Type Pins .....	Full Floating Type
Type Bearings .....	Replaceable Precision, Steel Back with Aluminum or Copper-Lead Alloy Liners.

### Main Bearings

Number of Bearings .....	7
Type Bearings .....	Replaceable Precision, Steel Back with Aluminum or Copper-Lead Alloy Liners.

## Engine Lubrication System

Oil Pressure ..... 45 to 60 PSI (310 to 414 kPa) with  
Engine Warm and Operating at Rated Engine Speed.

Type System ..... Pressure and Spray Circulation  
with Piston Oil Cooling.

Oil Pump ..... Gear Type

Oil Filter (2) ..... Full Flow Spin on Type, Pleated  
with Bypass Valve in Filter Base.

Oil Capacity ..... With Filters, 22 U.S. Qts. (20.8 liters)  
Without Filters, 18 U.S. Qts. (17.1 liters)

Oil Cooler ..... Engine Oil

## Fuel System

Fuel Injection Pump ..... Robert Bosch, Type PES  
(Multiple Plunger.).

Pump Timing ..... 30 Degrees Before Top Dead  
Center (Port Closing).

Fuel Injectors ..... Pencil Type  
(Opening Pressure 3200 PSI). (22 063 kPa)

Fuel Transfer Pump ..... Plunger Type, Integral Part of  
Injection Pump.

Governor ..... Variable Speed, Fly-Weight Centrifugal  
Type; Integral Parts of Injection Pump.

1st Stage fuel filter ..... Full Flow Spin on Type

2nd Stage fuel filter ..... Full Flow Spin on Type

Fuel Tank Water Trap and Drain ..... Located in Base  
of Fuel Tank.

Fuel Tank Capacity ..... 80 U.S. Gallons (302.8 liters)

Fuel Level Gauge ..... Electric, Located on Instrument Panel.

Hand Primer Pump ..... Located on Top of the  
Fuel Transfer Pump.

Preliminary Fuel Filter ..... Located at the Bottom  
of the Fuel Transfer Pump.

# *general specifications*

## **Cooling System**

Capacity of System .....	42 U.S. Quarts (39.7 liters)
Type of System .....	Pressurized, Thermostat Controlled By-Pass Type: Forced Circulation, (Impeller Type Pump).
Radiator .....	Heavy Duty Fin and Tube Type
Thermostat (2) .....	Starts to Open at Approximately 175°F. (79°C.), Fully Open at 202°F. (94°C.)
Pressure Cap Required .....	14 PSI (96.5 kPa)

## **Electrical System**

Type of System .....	12 Volt Negative Ground
Batteries .....	(2) 12 Volt Batteries Connected in parallel, Group Size 30H, Rated in 1.255 to 1.265 Specific Gravity. Discharge Rate 300 Amps at 0°F. Voltage Drops to 9.2 after 10 Seconds. Voltage Drops 1.0 Volt per Cell after 4 min.
Alternator .....	12 Volt 55 Amp Output, Negative Ground
Voltage Regulator .....	12 Volt, Solid State, Mounted on Alternator.
Starter Motor .....	12 Volt with Solenoid Switch
Head Lights (2) .....	12 Volt, 40/40 Watt Sealed High-Low Beam
Front Flood Lights (2) (optional) .....	12 Volt, 35 Watt Sealed Beam
R.Rear Flood Light (1) (optional) .....	12 Volt, 60 Watt, Sealed Beam
Amber Warning Lights (2) .....	12 Volt, Double Face, Flasher Type
L. Rear Flood and Tail Light (1) .....	12 Volt, 60 Watt Sealed Beam Combination Tail and Flood Lamp.
Circuit Breaker System Over Load Check .....	12 Volt Twin 40 AMP Breakers Connected in Parallel, 80 Amp Rating. 60 Amp. Min. Continuous Capacity.
Lights Circuit Breaker .....	40 Amp., Located on Light Switch
Parking Brake Warning Light .....	12 Volt, Red Flasher Type

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)