

**4894 Tractor**  
**Operators Manual**

9-9861





***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



**IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.**

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TO THE OWNER OF A CASE INTERNATIONAL TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case International Tractor will work well for many years.

Your Dealer can assist you with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.

*Your Authorized Case Dealer*



**Figure 1**

**NOTE:** When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

# TABLE OF CONTENTS

TO THE OWNER .....	I	OPERATING INSTRUCTIONS .....	41-156
SAFETY .....	IV-XVIII	Run-In Procedure .....	41
Safety Rules .....	IV	Before Starting the Engine .....	42
Before Starting .....	IV-V	True Ground Speed Sensor .....	43
Operation .....	VI-XIV	Digital Instrument Cluster .....	44-69
Service .....	XV-XVIII	English/Metric Selection .....	45
HAND SIGNALS .....	XIX-XX	Engine Hour Meter .....	45
DECALS .....	XXI-XXIV	Turn Signal Indicator .....	45
SERIAL NUMBERS.....	1	Service Monitor and Indicators .	46-52
DIESEL ENGINE SPECIFICATIONS ...	2,3	Function Buttons .....	53-57
GENERAL SPECIFICATIONS .....	4-7	Engine RPM Function .....	53
TRACTOR SPEEDS .....	8,9	PTO RPM Function .....	53
OVER ALL MEASUREMENTS .....	10	Timer Function .....	54
TRANSPORT WEIGHT .....	10	Area/Hour Function .....	55
MAXIMUM GROSS MACHINE WEIGHT .	10	Area Done Function .....	55
TIRE AND WHEEL EQUIPMENT ....	11-14	Wheel Slip Function .....	56,57
TIRE INFLATION PRESSURE .....	12,13	Ground Speed Function .....	57
AXLE STOP SPACERS .....	14	Instrument Cluster	
WHEEL TREAD POSITIONS .....	15-19	Programming .....	58-67
DUAL WHEELS .....	19,20	Programming Tire Size .....	59-64
FUEL SPECIFICATIONS .....	21	Standard Code Number .....	59
FUEL CONDITIONER .....	22	Dynamic Tire Code Number ..	60,61
LUBRICATION .....	23-39	Static Code Number .....	62-64
Engine Hourmeter .....	23	Programming	
Engine Lubrication .....	24,25	Attachment Width .....	65,66
Lubrication Chart .....	26,27	Programming Rear Wheel	
Engine Oil Change .....	28	Position Monitor .....	66,67
Engine Oil Cleaner .....	29-31	Automatic Shutdown System .....	68
Turbocharger Oil Filter .....	32	Instrument Cluster	
Rear Steering Valve Filter .....	33	Functional Checks .....	69
Rear Steering Hydraulic Oil Filter ....	34	Operating Controls .....	70-106
Transmission Oil Level		Range Shift Quadrants .....	76,77
Check & Change .....	35	Steering Column Tilt .....	78
Hydraulic Oil Filters .....	35,36	Moving the Telescopic	
Planetary Oil Level Check & Change .	37	Steering Column .....	79
Differential Oil Level Check & Change .	38	Operators Console .....	80-89
Tractor Brakes .....	39	Park Brake Control .....	90
TOWING .....	40	Heater Stop Valve .....	91
		Fuel Tank Water Traps .....	91
		Cab Headliner Controls .....	92,93
		Cab Air Flow Control .....	94
		Cab Defroster Control .....	94
		Cab Air Flow Arrangements ....	95-97
		Air Conditioner Operation .....	98
		Cab Door Lock .....	98
		Ash Tray .....	98
		Rear View Mirrors .....	99
		Cab Window Lever .....	99
		Operators Seat .....	100,101
		Seat Belts .....	102
		Amber Warning Lamps, Direction	
		Turn Signals & SMV .....	103,104
		Implement Warning Lamps and	
		SMV Symbol .....	105
		Auxiliary Outlet Socket .....	106
		Normal Starting Procedure .....	107-109
		Stopping The Engine .....	109,110

# TABLE OF CONTENTS

OPERATING INSTRUCTIONS (CONT'D)	
Cold Temperature Operation .....	110
Preparing Tractor For Operating in	
Cold Temperatures .....	111
Cold Temperature Starting .....	112-115
Coolant Heater .....	112
Ether Starting Attachment .....	113,114
Starting Fluid Container	
Replacement .....	115
Power Shift Transmission .....	116,117
Power Takeoff .....	118-120
Operating PTO .....	118
Guards .....	119
Operating Safety .....	120
Drawbar .....	121-123
Three Point Hitch System .....	124
Hitch System Adjustments .....	125-127
Anti-Sway Chain .....	126
Hitch Operation .....	128-132
Hitch Control Lever .....	128
To Lift an Implement .....	128
To Lower an Implement .....	128
Electronic Hitch System .....	129,130
Controlling Maximum Depth .....	131
Stationary Depth Operation .....	131
Hydraulic Float Control .....	132
Hitch Coupler - Category III .....	133
Remote Hydraulic Control .....	134-141
Remote Control Levers .....	134,135
Variable Flow Control .....	136,137
Operating the Remote System .....	138,139
Hydraulic Hose Couplers .....	140
Hydraulic Hose Coupling .....	141
Remote Cylinder .....	142
Hydraulic Cylinder Jack Pads .....	143
Wheel Mounting .....	144
Wheel Rim Adjustment & Mounting .....	145
Wheel Positions and	
Clamp Adjustment .....	146
Dual Wheel Mounting .....	147,148
Tire Mounting .....	149
Loads Matched to Tractor .....	149
Tractor Ballast .....	150-156
Tractor Weight Distribution .....	150-152
Tractor and Equipment Weight .....	153
Front End Weights .....	154
Tire Liquid Weight .....	155
Measuring Wheel Slip .....	156
PREVENTIVE MAINTENANCE .....	158-215
Hood and Side Panels .....	158
Cooling System .....	159-169
Pressure Cooling System .....	159
Coolant Solutions .....	160
Engine Cooling System Treatment .....	160
Radiator Cleaning .....	160
Cooling System Service .....	161
PREVENTIVE MAINTENANCE (CONT'D)	
Thermostat Check .....	162
Thermostat Replacement .....	162-164
Water Filter and Conditioner .....	165,166
Fan Belt Adjustment .....	167
Fan Belt Replacement .....	168,169
Fuel System .....	170-175
Service Intervals .....	170
Fuel Filter Replacement .....	171,172
Fuel Strainer .....	173,174
Air Removal .....	174,175
Air Induction System .....	176
Air Filter Service Interval .....	177
Air Filter Service .....	178,181
Aspirated Strata Tube Service .....	182,183
Tubes and Hose .....	184
Neutral Start Switch Service .....	185,186
Park Brake Adjustment .....	187
Electrical System .....	188-194
Head Lamps .....	188
Flood Lamps .....	188
Flashing Amber Warning Lamps .....	189
Tail Lamps .....	189
Instrument Cluster Lamps .....	190
Fuse Panel .....	190
Head Lamp Adjustment .....	191
Batteries .....	192-194
Vent Caps .....	192
Removal & Installation of Batteries .....	193
When Batteries Are Not in Use .....	193
Battery Cables and Terminals .....	193
Auxiliary Battery Connections .....	194
Alternator Charging systems .....	195
Roll Over Protective Structure	
(ROPS) .....	196-198
Tractor Roll Over .....	197
Safety Rules .....	197
ROPS Label .....	197
Maintenance and Inspection .....	198
Operators Cab .....	199-213
Seat Belt Inspection	
and Maintenance .....	199
Preventive Maintenance .....	199-201
Air Filter Service .....	202-204
Operators Seat .....	205,206
Compressor Belt Adjustment .....	207
Compressor Belt Replacement .....	208
Compressor Belt Alignment .....	209
Refrigerant Check .....	210,211
Dome Lamp .....	212
Tool Box .....	212
Console Lamp .....	213
Valve Tappet Adjustment .....	214,215
CASE TECHNICAL MANUALS .....	217

# SAFETY

## Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.

## Before Starting



**CAUTION:** Check the machine for leaks or any parts that are broken, not working correctly, or not there at all. Before you start the machine, tighten all caps, dipsticks, battery covers, etc.



**CAUTION:** To help prevent personal injuries during operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.



**CAUTION** Provide a first aid kit for use in case of accident.



**CAUTION:** It is good practice to carry a fire extinguisher on the machine. Be sure that the extinguisher is properly maintained and be familiar with its proper use.

**WARNING** Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.


Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



**WARNING:** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of power driven equipment.

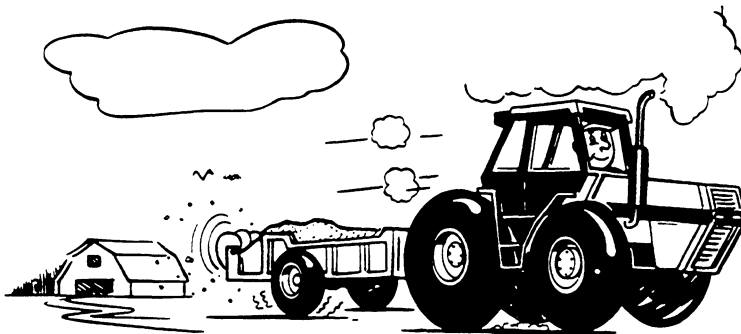

**WARNING:** If the steering mode selector switch is turned to another mode position while the tractor is not in operation, the rear wheels can move when the tractor is started again. To prevent possible injury from the rear tires moving, make sure no person is between the rear tires and tractor frame before you start the tractor engine.



**WARNING:** To help prevent injury:

**BEFORE STARTING ENGINE** - Put shields in place. Sit in the seat. Place controls in neutral.

**BEFORE OPERATING MACHINE** - Clear people away. No riders. Fasten seat belt.

**WHEN OPERATING MACHINE** - Keep away from power driven parts. Avoid steep slopes, embankments, ditches and rough terrain. Reduce speed when turning. In high speed travel, couple brake pedals together where applicable. On road travel, use flashing warning lights where permitted and keep SMV emblem visible from rear.

**WHEN MACHINE IS STOPPED** - Engage park lock or brake. Lower raised equipment to ground. Stop engine before dismounting to service or clear machine(s).




## Operation



**CAUTION** With the engine running and the tractor in motion, if the ignition key switch is turned off and then back on, the tractor can move forward rapidly. The higher the throttle setting the more rapid the move forward will be. When the ignition key is turned off, electric solenoids close all valves to the hydraulic power shift clutches. When the key is turned back to on, oil will immediately flow to and close the clutches controlled by the power shift lever position and the tractor will move forward rapidly.



**CAUTION** Do not turn off the switch to stop the tractor with the transmission in gear when the engine is running. Power shift clutch friction could cause tractor movement on a smooth, level surface. If the ignition key is turned off for any reason, the engine should also be shutoff using the engine stop control.

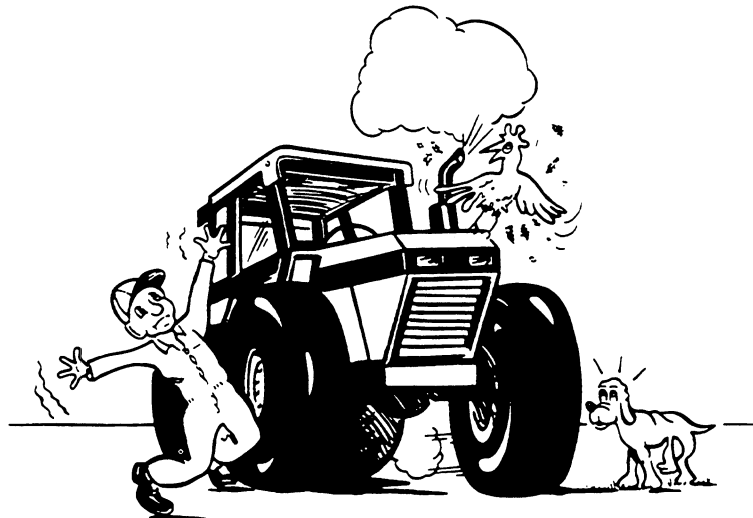


**WARNING:** Engine can start with transmission in gear when neutral or safety start switch is by-passed:

1. Do not connect across terminals on starter.
2. Attach booster batteries according to safe method in Operators Manual. Then use recommended starting procedure from operators seat.
3. When necessary, repair electrical system components promptly so that "jump starting" will not be attempted.

Machine run-away can cause injury or death to operator and bystanders.



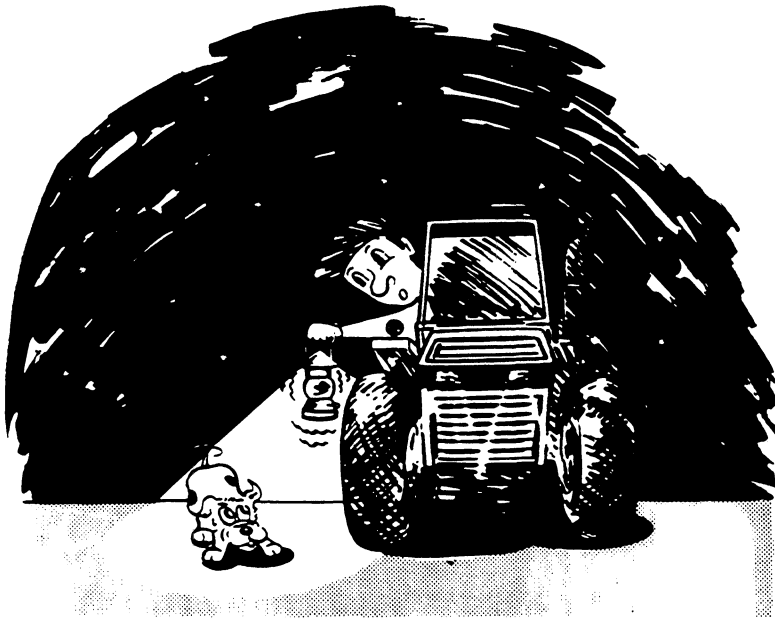

**WARNING:** Collision of high speed road traffic and slow moving machines can cause personal injury or death. On roads, use flasher/-lights according to local laws. Keep SMV emblem visible.




**CAUTION** Radial ply tires are much more flexible than bias ply tires. At higher speeds, the sideward flexing of radial tires can cause steering control difficulty. This problem is more severe with: (1) heavy loads carried on the three point hitch; and (2) single wheel installations as compared to dual wheel installations.

*During transport, keep speed slow enough to maintain steering control.*



**CAUTION** *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*

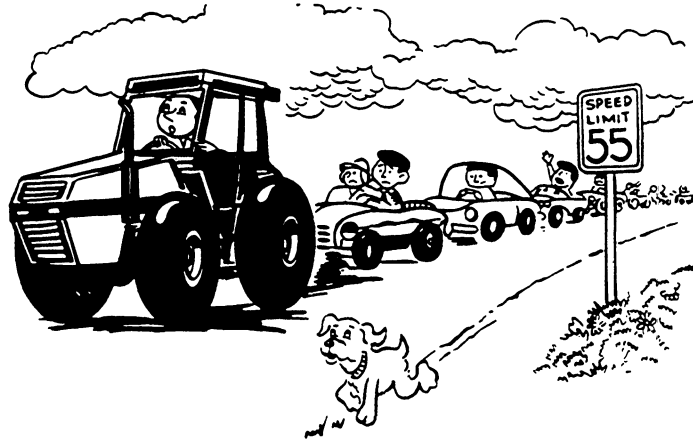

**CAUTION** *During road transport use front steering only.*



**WARNING:** *Extra weight and bad traction conditions such as mud or ice increase your stopping distance. Remember that liquid in the tires, weights on the machine or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*






**CAUTION:** Make sure that the weight of a trailed vehicle that is not equipped with brakes, **NEVER EXCEEDS** the weight of the machine that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.



**WARNING:** A frequent cause of personal injury or death is persons falling off and being run over. Do not permit others to ride. Only one person - the operator - should be on the machine when it is in operation.

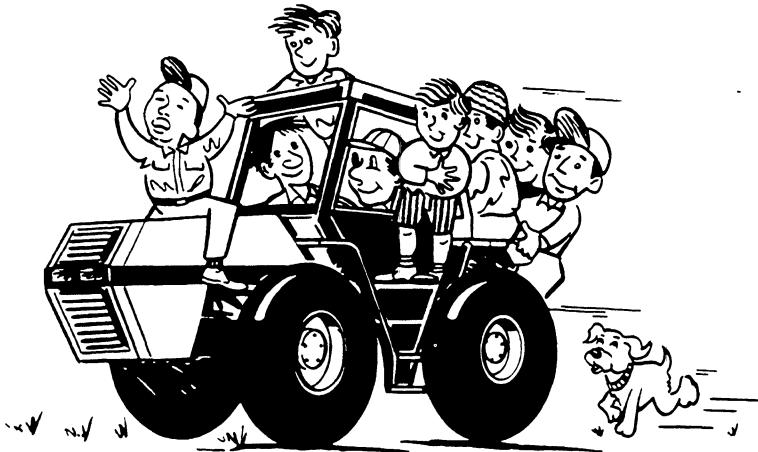

**WARNING** When the reset button is used, with the engine running, the hitch will raise or lower according to where the hitch control lever is set. Clear the area of other persons before actuating the electronic hitch system.



**CAUTION** Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the drawbar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.



**WARNING:** Travel speed should be such that complete control and machine stability is maintained at all times. Where possible, avoid operating near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.




**WARNING:** Rotating machine parts, stay clear, keep shields installed to help protect from clothing entanglement and injury. Wear close-fitted clothing.



**WARNING:** Replace fan if it has been bent, modified, or damaged in any way. Stop and make corrections if fan strikes any part of the machine.



**WARNING** *Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".*

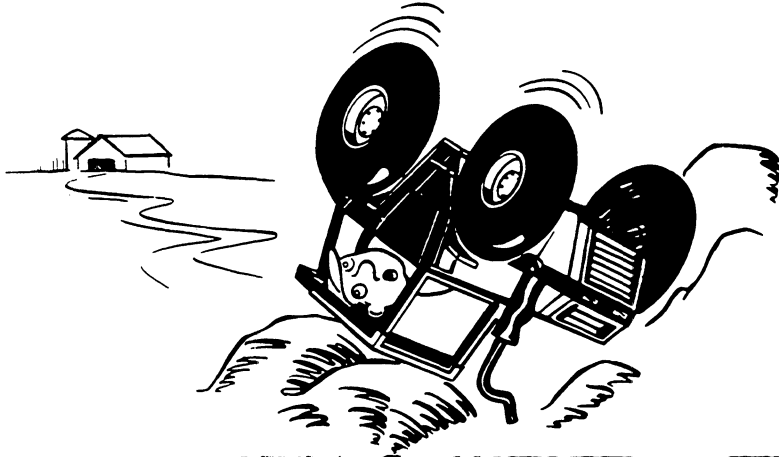

**WARNING:** *Operate the machine with the door closed to provide proper ROPS protection and to properly utilize the heating, ventilating or cooling systems.*



**WARNING:** *Securely fasten your seat belt if the machine has a ROPS frame or cab. The seat belt can help insure your safety if it is used and maintained.*



**CAUTION** *Never wear a seat belt loosely or with slack in the belt system. Never wear the belt in a twisted condition or pinched between the seat structural members.*



**CAUTION:** *Installing an adapter on the PTO shaft, to convert the shaft diameter or to convert the number of splines on the shaft, moves the driveline connection rearward. This exposes the front universal joint and attaching mechanism. Adapters must not be installed unless the original master shield on the tractor is extended with equivalent shielding.*

*The use of an adapter is not recommended.*



**WARNING** *Incorrect positioning of adjustable length drawbar can cause implement driveline separation or bottoming. See tractor and implement Operators Manuals for dimension from end of tractor PTO shaft to hitch pin hole in drawbar. Driveline separation or bottoming can cause machine damage or personal injury.*



**WARNING:** PTO driven machinery can cause serious injury. Before working on or near the PTO shaft, or servicing or clearing the driven machine, put the PTO lever in the **DISENGAGE** position and **STOP** the engine.



**WARNING** When doing stationary PTO work and dismounting from the tractor with the PTO running, keep clear of all moving parts as they are a potential safety hazard.



**WARNING:** Whenever a PTO driven machine is in operation, the PTO guard must be in place for most operations to prevent injury to the operator or bystanders. Where attachments, such as pumps, are installed on the PTO shaft (especially if the tractor PTO guard is moved upward or removed) extended shielding equivalent to the PTO guard must be installed with the attachment. Install the PTO guard to its original position immediately when the attachment is removed. When the PTO is not in use, the tubular guard must be installed over the end of the PTO shaft.



**WARNING** If this tractor is equipped with a 1000 RPM PTO, be sure implements are matched for this drive speed. Center and lock drawbar when using PTO.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)