

Service Manual

Chassis, Mast & Options

GP40K	T29C-00011-up	DP40K	T19C-00011-up
GP40KL	T29C-50001-up	DP40KL	T19C-50001-up
GP45K	T29C-80001-up	DP45K	T19C-80001-up
GP50K	T33B-50001-up	DP50K	T28B-50001-up

FOREWORD

This service manual is a guide for servicing Cat® lift trucks. For your convenience the instructions are grouped by systems as a ready reference.

The long productive life of your lift truck(s) depends on regular and proper servicing. Servicing consistent with what you will learn by reading this service manual. Read the respective sections of this manual carefully and familiarize yourself with all of the components before attempting to start a test, repair or rebuild job.

The descriptions, illustrations and specifications contained in this manual are for trucks with serial numbers in effect at the time of printing. Cat Lift Trucks reserves the right to change specifications or design without notice and without incurring obligation.

The trucks listed in this manual are powered by TB45 gasoline engines or S6S diesel engines. For engine servicing, please refer to the applicable engine service manual.

Safety Related Signs

The following safety related signs are used in this service manual to emphasize important and critical instructions:



Indicates a specific potential hazard resulting in serious bodily injury or death.




Indicates a specific potential hazard resulting in bodily injury, or damage to, or destruction of, the machine.



Indicates a condition that can cause damage to, or shorten service life of, the machine.


HOW TO READ THIS MANUAL

Disassembly diagram (example)

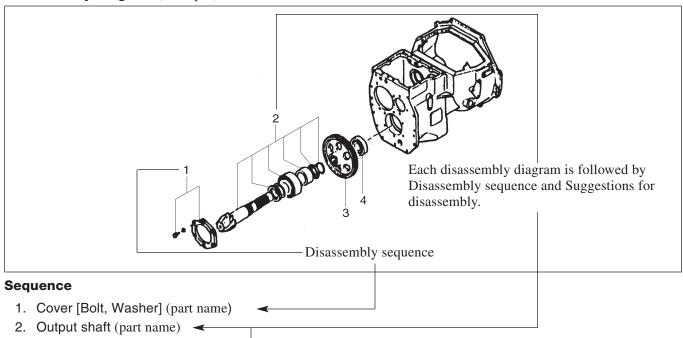

Suggestion for disassembly

(1) Output shaft removal

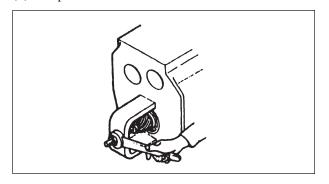

		Unit: mm (in.
Clearance between	A	0.020 to 0.105 (0.00079 to 0.00413)
cylinder and piston	В	0.15 (0.0059)

Symbols or abbreviations

OP	.Option
R1/4	.Taper pipe thread (external) 1/4 inch (formerly PT1/4)
Rc1/8	.Taper pipe thread (internal) 1/8 inch (formerly PT1/8)
G1/4A	.Straight pipe thread (external) 1/4 inch (formerly PF1/4-A)
Rp1/8	.Straight pipe thread (internal) 1/8 inch (formerly PS1/8)



SAFETY

MARNING

The proper and safe lubrication and maintenance for these lift trucks, recommended by Cat lift truck, are outlined in the OPERATION & MAINTENANCE MANUAL for these trucks.

Improper performance of lubrication or maintenance procedures is dangerous and could result in injury or death. Read and understand the OPERATION & MAINTENANCE MANUAL before performing any lubrication or maintenance on these trucks.

The serviceman or mechanic may be unfamiliar with many of the systems on this truck. This makes it important to use caution when performing service work. A knowledge of the system and/or components is important before the removal or disassembly of any component.

Because of the size of some of the truck components, the serviceman or mechanic should check the weights noted in this Manual. Use proper lifting procedures when removing any components.

Following is a list of basic precautions that should always be observed.

- 1. Read and understand all warning plates and decals on the truck before operating, lubricating or repairing the product.
- 2. Always wear protective glasses and protective shoes when working around trucks. In particular, wear protective glasses when pounding on any part of the truck or its attachments with a hammer or sledge. Use welders gloves, hood/goggles, apron and other protective clothing appropriate to the welding job being performed. Do not wear loose-fitting or torn clothing. Remove all rings from fingers when working on machinery.
- Do not work on any truck that is supported only by lift jacks or a hoist. Always use blocks or jack stands to support the truck before performing any disassembly.

MARNING

Do not operate these trucks unless you have read and understood the instructions in the OPERATION & MAINTENANCE MANUAL. Improper truck operation is dangerous and could result in injury or death.

- 4. Lower the forks or other implements to the ground before performing any work on the truck. If this cannot be done, make sure the forks or other implements are blocked correctly to prevent them from dropping unexpectedly.
- 5. Use steps and grab handles (if applicable) when mounting or dismounting a truck. Clean any mud or debris from steps, walkways or work platforms before using. Always face truck when using steps, ladders and walkways. When it is not possible to use the designed access system, provide ladders, scaffolds, or work platforms to perform safe repair operations.
- 6. To avoid back injury, use a hoist when lifting components which weigh 23 kg (50 lb.) or more. Make sure all chains, hooks, slings, etc., are in good condition and are of the correct capacity. Be sure hooks are positioned correctly. Lifting eyes are not to be side loaded during a lifting operation.
- 7. To avoid burns, be alert for hot parts on trucks which have just been stopped and hot fluids in lines, tubes and compartments.
- 8. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located at opposite ends of the cover or device and pry cover loose to relieve any spring or other pressure, before removing the last two bolts or nuts completely.
- 9. Be careful when removing filler caps, breathers and plugs on the truck. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. The danger is even greater if the truck has just been stopped because fluids can be hot.

- 10. Always use tools that are in good condition and be sure you understand how to use them before performing any service work.
- 11. Reinstall all fasteners with same part number.

 Do not use a lesser quality fastener if replacements are necessary. Do not mix metric fasteners with standard nuts and bolts.
- 12. If possible, make all repairs with the truck parked on a level, hard surface. Block truck so it does not roll while working on or under truck.
- 13. Disconnect battery and discharge any capacitors (electric trucks) before starting to work on truck. Hang "Do not Operate" tag in the Operator's Compartment.
- 14. Repairs, which require welding, should be performed only with the benefit of the appropriate reference information and by personnel adequately trained and knowledgeable in welding procedures. Determine type of metal being welded and select correct welding procedure and electrodes, rods or wire to provide a weld metal strength equivalent at least to that of parent metal.
- 15. Do not damage wiring during removal operations. Reinstall the wiring so it is not damaged nor will it be damaged in operation by contacting sharp corners, or by rubbing against some object or hot surface. Do not connect wiring to a line containing fluid.
- 16. Be sure all protective devices including guards and shields are properly installed and functioning correctly before starting a repair. If a guard or shield must be removed to perform the repair work, use extra caution.
- 17. Always support the mast and carriage to keep carriage or attachments raised when maintenance or repair work is performed, which requires the mast in the raised position.
- 18. Loose or damaged fuel, lubricant and hydraulic lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones which have been bent or damaged. Inspect lines, tubes and hoses carefully. Do not check for leaks with your hands. Pin hole (very small) leaks can result in a high velocity oil stream that will be invisible close to the hose. This oil can penetrate the skin and cause personal injury. Use cardboard or paper to locate pin hole leaks.

- 19. Tighten connections to the correct torque. Make sure that all heat shields, clamps and guards are installed correctly to avoid excessive heat, vibration or rubbing against other parts during operation. Shields that protect against oil spray onto hot exhaust components in event of a line, tube or seal failure, must be installed correctly.
- 20. Relieve all pressure in air, oil or water systems before any lines, fittings or related items are disconnected or removed. Always make sure all raised components are blocked correctly and be alert for possible pressure when disconnecting any device from a system that utilizes pressure.
- 21. Do not operate a truck if any rotating part is damaged or contacts any other part during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing.


GROUP INDEX

GROUP INDEX	Items
GENERAL INFORMATION	Model View, Truck Models Covered, Serial Number Locations, Chassis and Mast Model Identification, Dimensions, Technical Data
COOLING SYSTEM	Structure, Removal and Installation, Inspection and Adjustment
ELECTRICAL SYSTEM	Structure and Functions, Major Electrical Components, Lamp Bulb Specifications, Battery Maintenance, Disassembly and Reassembly, Troubleshooting, Electrical Schematic
POWER TRAIN	Removal and Installation
CLUTCHES	Dry Type Clutch, Wet Type Clutch, Pressure Plate Assembly, Clutch Booster, Clutch Master Cylinder, Clutch Release Cylinder, Adjustment, Troubleshooting, Service Data
MANUAL TRANSMISSION	Structure and Functions, Removal and Installation, Disassembly, Inspection and Repair, Reassembly, Troubleshooting, Service Data
POWERSHIFT TRANSMISSION	1-Speed Transmission, Automatic 2-Speed Transmission, Troubleshooting, Service Data
FRONT AXLE AND REDUCTION DIFFERENTIAL	Structure and Function, Removal and Installation, Axle shafts and Hubs, Reduction Differential, Troubleshooting, Service Data
REAR AXLE	(SIS) Structure, Removal and Installation, Rear Axle Assembly, Adjustment, Troubleshooting, Service Data, (FHS) Structure, Removal and Installation, Rear Axle Assembly, Steering Cylinder, Adjustment, Troubleshooting, Service Data
BRAKE SYSTEM	Structures and Functions, Master Cylinder, Wheel Cylinders, Wheel Brakes, Adjustment and Test, Troubleshooting, Service Data
STEERING SYSTEM	(SIS) Structure and Function, Removal and Installation, Steering Gear, Power Cylinder, Troubleshooting, Service Data, (FHS) Structure and Functions, Removal and Installation, Steering Valve, Troubleshooting, Service Data
HYDRAULIC SYSTEM	Structure and Functions, Removal and Installation, Hydraulic Pumps, Control Valve, Lift Cylinders, Tilt Cylinders, Flow Regulator Valve, Down Safety Valve, Inspection and Adjustment, Testing, Hydraulic Circuit Diagram, Piping of Hydraulic System, Troubleshooting, Service Data
MASTS AND FORKS	Specifications, Structure, Removal and Installation, Disassembly and Reassembly, Inspection and Adjustment, Troubleshooting, Service Data
SERVICE DATA	Tightening Torque for Standard Bolts and Nuts, Maintenance Schedule, Parts to be Changed Periodically, Lubrication Instructions, Special Tools
OPTIONS	Radiator Screen Kit, Plate Fin Type Radiator Kit, Elevated Exhaust Kit, Headlamp Kit, Tail Lamp Upper Relocate Kit, Battery Switch Kit, Extinguisher Kit, Back Mirror Kit, Drawbar Pin, Low Head Guard Kit, Semi Under Side Guard Kit, Torque Converter Oil Filter Kit, Hydraulic Oil Cooler Kit, Gear Pump Seal Kit

GENERAL INFORMATION

Model View	1 – 1
Truck Models Covered	1 – 1
Serial Number Locations	1 – 2
Chassis and Mast Model Identification	1 – 3
Dimensions	1 – 4
Technical Data	1 _ 6

Model View

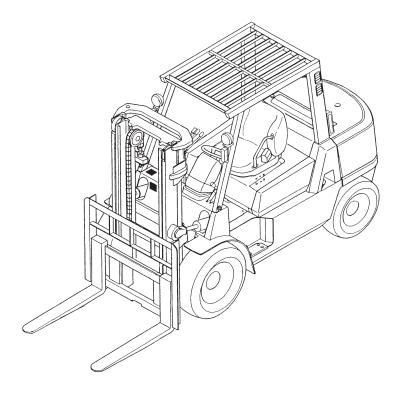

103190

Truck Models Covered

This Service Manual provides servicing and maintenance information for the following trucks:

Truck model	Transmission	Model code – Serial number	Engine mounted	
GP40K	Powershift	T29C – 00011- up	TB45 gasoline engine	
GP40KL	Powershift	T29C – 50001- up	TB45 gasoline engine	
GP45K	Powershift	T29C – 80001- up	TB45 gasoline engine	
GP50K	Powershift	T33B – 50001- up	TB45 gasoline engine	
DP40K	Manual	T19C – 00011- up	S6S diesel engine	
	Powershift	119C – 00011- up		
DP40KL	Manual	T19C – 50001- up	S6S diesel engine	
DF40KL	Powershift	119C – 30001- up		
DP45K	Manual	T19C – 80001- up	S6S diesel engine	
	Powershift	119C – 60001- up	303 diesei eligilie	
DP50K	Powershift	T28B – 50001- up	S6S diesel engine	


Serial Number Locations

Chassis serial number (Gasoline- and LP-Gasengine models) (Diesel-engine models) Name plate (Gasoline- and LP-Gas-engine models) Mast serial number (Diesel-engine models) Transmission serial number


202761A


Engine serial number

Chassis and Mast Model Identification

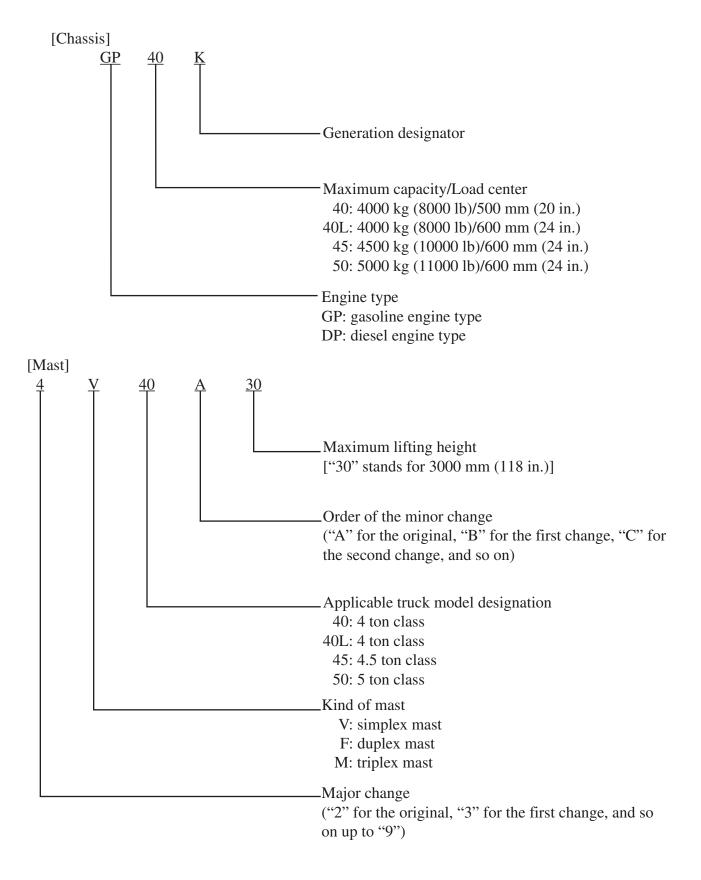

Dimensions

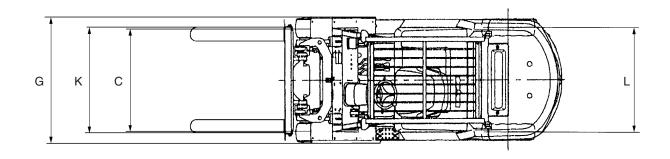

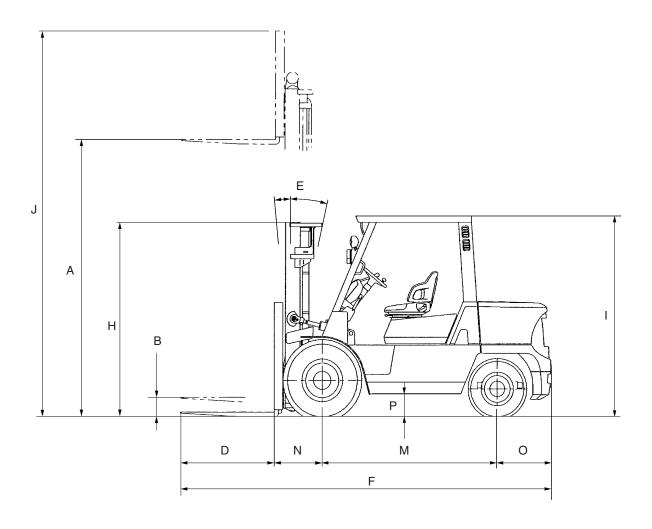

202762A

Unit: mm (in.)

Ref. No.	Truck Model Item		GP40K DP40K	GP40KL DP40KL	GP45K DP45K	GP50K DP50K	
Α	Maximum lift			3000 (118)			
В	Free lift		150 (5.9)			160 (6.5)	
С	Fork spread (outside)			300 to 1190	0 (12 to 47)		
D	Fork length			1070 (42)		1220 (48)	
Е	Tilt angle (forward – backward)		6° –	10°			
F	Overall length		4140 (163.0)	4190 (165.0)	4245 (167.1)	4525 (178.2)	
G	Overall width (outside of tires)	Single tire	1415 (55.7)	1460 (57.5)			
G	Overall width (outside of thes)	Dual tire		1780 (70.1)		1965 (77.4)	
Н	Overall height (to top of mast lowered)		2170 (85.4) 2250		(88.6)		
I	Overall height (to top of overhead	d guard)	2250 (88.6)				
J	Overall height (mast extended)		4270 (168.1) 4290 (168			4290 (168.9)	
K	Tread (front)	Single tire	1175 (46.3)				
	Dual tire		1310 (51.6)				
L	Tread (rear)		1180 (46.5)				
М	Wheelbase		2000 (78.7) 2150 (8			2150 (84.6)	
N	Front overhang		557 ((21.9)	562 (22.1)	582 (22.9)	
0	Rear overhang		513 (20.2)	563 (22.2)	613 (24.1)	573 (22.6)	
Р	Underclearance (at frame)			252	(9.9)		

Technical Data

Truck Model Item			GP40K DP40K	GP40KL DP40KL	GP45K DP45K	GP50K DP50K
Model code				GP: F33B DP: F28B		
Тур	pe			Stan	dard	
	Capacity/load center kgf/mm (lbf/in.)		4000/500 (8000/24)	4000/600 (9000/24)	4500/600 (10000/24)	5000/600 (11000/24)
	Maximum lift	mm (in.)		3000	(118)	
General	Lift speed (rate load)	n/sec (fpm)		0 (100) 00 (98) GP: 440 (87) DP: 430 (85)		GP: 430 (85) DP: 420 (83)
Ge	Lowering speed (rate	load) n/sec (fpm)		500	(98)	
	Tilt angle (forward – backward)			6° –	· 10°	
	Free lift mm (in.)			150 (5.9)		160 (6.5)
	Travel speed of powershift	Forward	19.5 (12.1)			23.5 (14.6)
	transmission models km/h (mph)	Reverse		19.5 (12.1)	23.5 (14.6)	
Performance	Minimum turning radius mm (in.)		2735 (107.7)	2775 (109.3)	2820 (111)	2965 (116.7)
erfor	Staaring angle	Inside	83°			
Ъ	Steering angle	Outside	56°33'			
	Minimum intersecting aisle	Single tire	2360 (92.9)	2400 (94.5)	2450 (96.5)	2510 (98.8)
	mm (in.)	Dual tire	2490 (98)	2520 (99.2)	2570 (101.2)	2740 (107.9)
	Front tires (size and inflation Single tire		8.25-15-12PR (I) 800 (8.2) [116]	300-15-18PR (I) 800 (8.2) [116]		
Tires	pressure) kPa (kgf/cm²) [psi]	Dual tire		7.50-16-12PR (I) 800 (8.2) [116]		8.25-15-12PR (I) 800 (8.2) [116]
	Rear tires (size and inflation pressure) kPa (kgf/cm²) [psi]			7.00-12-12PR (I) 800 (8.2) [116]		7.00-12-12PR (I) 800 (8.2) [116]
veight	Single drive tire (unloaded) kg (lb)		GP: 5530 (12190) DP: 5630 (12400)	GP: 5930 (13070) DP: 6030 (13300)	GP: 6490 (14300) DP: 6590 (14500)	GP: 7010 (15400) DP: 7100 (15650)
Truck weight	Dual drive tire (unloa	kg (lb)	GP: 5660 (12480) DP: 5760 (12700)	GP: 6010 (13250) DP: 6110 (13470)	GP: 6570 (14490) DP: 6670 (14700)	GP: 7090 (15630) DP: 7180 (15830)

Truck Model Item		GP40K	GP40KL	GP45K	GP50K	
	Engine model	TB45				
	Туре		Gaso	oline		
	Cooling system		Water	cooled		
	No. of cylinders – arrangement		6 – ir	n-line		
	No. of strokes		2	1		
	Type of combustion chamber		Semi -s	pherical		
	Valve arrangement		Over	head		
	Type of cylinder liners		Inte	gral		
	Cylinder bore × stroke mm (in.)	99.5×96.0 (3.92 × 3.78)				
gas)	Displacement cc (cu in.)	4500 (275)				
nd LP-	Compression ratio	9.2:1				
line ar	Rated output kW/rpm	72/2450				
Engine (gasoline and LP-gas)	Rated torque N·m (kgf·m) [lbf·ft]/rpm	280 (28.5) [207]/1200				
Engi	Minimum engine speed rpm	650 to 700				
	Maximum engine speed rpm	2450				
	Dimensions (L \times W \times H) mm (in.)	$907 \times 649.5 \times 781$ (35.7 × 25.5 × 30.7)				
	Weight kg (lb)	290 (639)				
	Installation position	Rear				
	Ignition	Spark				
	Firing order	1-5-3-6-2-4				
	Initial ignition timing BTDC deg	10 ± 1				
	Fuel tank capacity liter (U.S. gal.)		115	(30)		

Truck Model			GP40K	GP40KL	GP45K	GP50K	
Item							
	Ignition coil	type		Mo	old		
	Туре		Pointless				
Ignition system	Distributor	Type of spark advance control		Internal solid state circuit			
gnitio		Model		BPR4ES			
I	Spark plug	Size mm (in.)		_			
		Gap mm (in.)		0.8 to 0.9 (0.	031 to 0.035)		
Fuel system	Fuel pump t	ype		Electron	nagnetic		
Air cleaner	Type × Num	ber	Cyclone with paper element \times 1				
	Туре		Pressure feed				
	Oil pump		Gear pump				
/stem	Oil filter		Paper element				
tion sy	Oil cooler		Oil to water type				
Engine lubrication system		Oil pan liter (U.S. gal.)		7.3 (1.93)		
Engin	Refill capacities	Oil filter & cooler liter (U.S. gal.)	0.3 (0.08)				
		Total liter (U.S. gal.)	7.6 (2.01)				
	Туре		Forced circulation				
stem	Radiator		Corrugated fin with pressure type				
Cooling system	Refill capaci	ity liter (U.S. gal.)	15.3 (4.04)				
Cooli	Water pump		Centrifugal type driven by V-belt				
	Thermostat			Wax	type		

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com