



Service Repair Manual

Models

416D Backhoe Loader

Product: BACKHOE LOADER

Model: 416D BACKHOE LOADER BGJ

Configuration: 416D Backhoe Loader BGJ00523-01315 (MACHINE) POWERED BY 3054 Engine

Disassembly and Assembly 416D, 420D, 424D, 428D, 430D, 432D, 438D and 442D Backhoe Loaders Power Train

Media Number -REN3578-12

Publication Date -01/04/2010

Date Updated -13/04/2010

i01380368

Transmission (Direct Drive) - Disassemble

SMCS - 3030-015-DD; 3066-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-5750	Engine Stand	1
B	6V-2157	Link Bracket	1
C	9S-9152	Puller Assembly	1
C	5F-7465	Puller	1
C		3/8inch x 6inch Bolt	2
D	4C-3652	Spring Compressor	1
E	1U-6405	Puller	1
F	4C-3802	Puller	1
G	8H-0663	Puller	1
G	5F-7465	Puller	1
H	8B-7551	Puller	1
H	6V-3010	Puller	1
I	137-8102	Spring Compressor	1
J	4C-3089	Puller	1

Start By:

- A. Remove the transmission. Refer to Disassembly and Assembly, "Transmission (Direct Drive) - Remove".

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide" for tools and supplies suitable to collect and contain fluids on Caterpillar products.

Dispose of all fluids according to local regulations and mandates.

Note: Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism.

Note: The transmission will be disassembled in major components. The major components will then be disassembled.

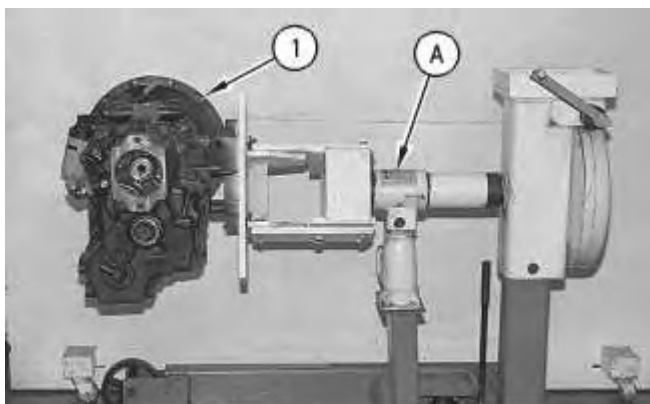


Illustration 1

g00728888

1. Install transmission (1) on tooling (A).
-

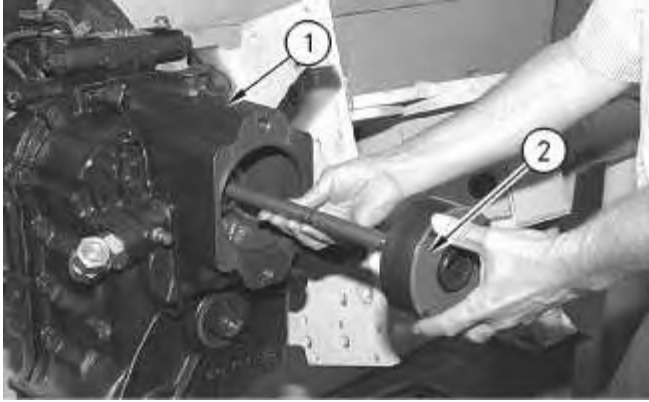


Illustration 2

g00728895

2. Remove Implement pump drive shaft (2) from transmission (1) .

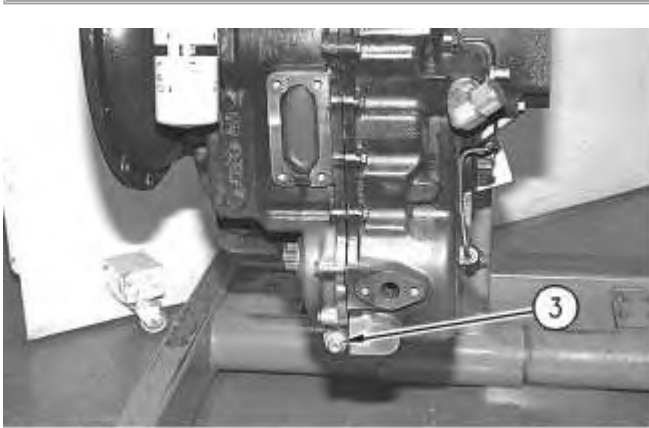


Illustration 3

g00728902

3. Remove plug (3). Drain the transmission oil into a suitable container. The capacity of the transmission is 11.3 L (3 US gal).

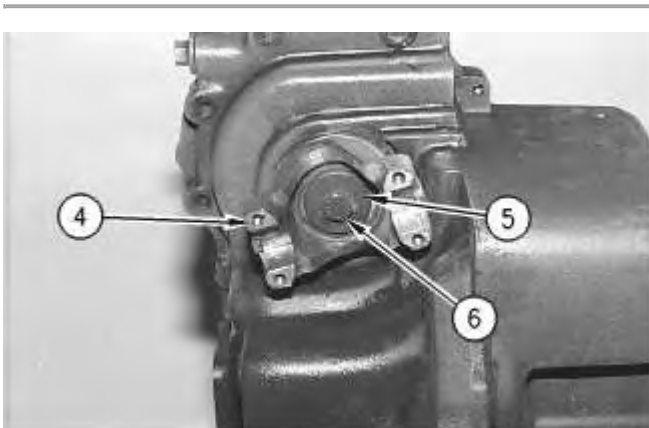


Illustration 4

g00728906

4. Remove bolt (6), washer (5), and yoke (4) .

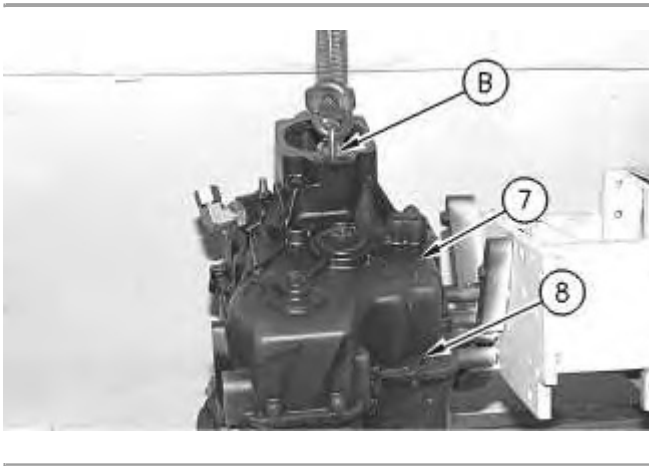


Illustration 5

g00728913

5. Attach tooling (B) to case (7). Attach a suitable lifting device to tooling (B). Remove fourteen bolts (8). Remove case (7) from the transmission. The weight of case (7) is 42 kg (94 lb).

(Direct Drive) Output Shaft (Front)



Illustration 6

g00728940

1. Remove front output shaft (9) .
-

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com