



# Service Repair Manual

## **Models**

# 730 Articulated Truck

---

Product: ARTICULATED TRUCK

Model: 730 ARTICULATED TRUCK B1M

Configuration: 730 Articulated Truck B1M00001-UP (MACHINE) POWERED BY C11 Engine

## Disassembly and Assembly 725, 730 and 730 EJECTOR Articulated Trucks Power Train

Media Number -REN3448-14

Publication Date -01/09/2014

Date Updated -28/06/2018

i04745120

# Torque Converter - Disassemble

SMCS - 3101-015

## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7573	Link Bracket	3
B	-	M12 Guide Bolts	3
C	1P-0510	Driver Gp	1
D	8T-4182	Bolt	2
E	1P-1863	Retaining Ring Pliers	1
F	8B-7551	Bearing Puller Gp	1

### Start By:

- A. Separate the torque converter housing from the planetary transmission. Refer to Disassembly and Assembly, "Torque Converter Housing - Remove".



**WARNING**

**Personal injury or death can result from improper lifting or blocking.**

**When a hoist or jack is used to lift any part or component, stand clear of the area. Be sure the hoist or jack has the correct capacity to lift a**

**component. Install blocks or stands before performance of any work under a heavy component.**

**Approximate weights of the components are shown. Clean all surfaces where parts are to be installed.**

---

### **NOTICE**

**Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.**

**Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.**

**Dispose of all fluids according to local regulations and mandates.**

---

### **NOTICE**

**Keep all parts clean from contaminants.**

**Contaminants may cause rapid wear and shortened component life.**

---

**Note:** Place identification marks on all parts for assembly purposes.

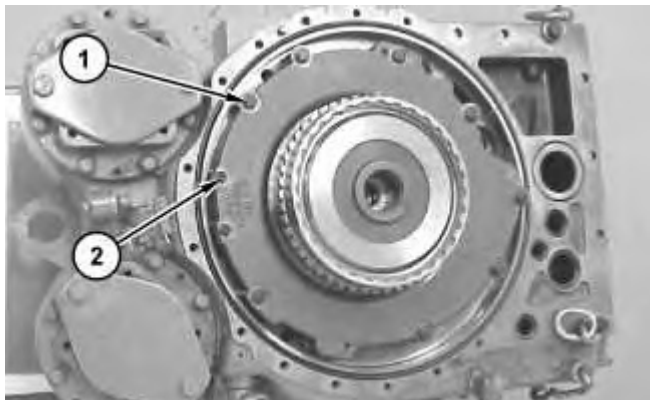


Illustration 1

g01320995

1. Remove bolts (1) and allen head screws (2) that secure the retarder in position.

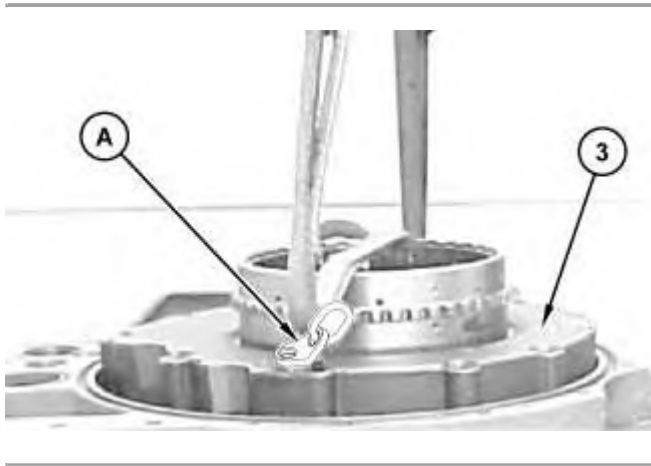


Illustration 2

g01321002

2. Use Tooling (A) and a suitable lifting device to remove retarder (3) from the center shaft of the torque converter. The weight of retarder (3) is approximately 48 kg (105 lb).



Illustration 3

g01321003

3. Remove allen head screws (4) and the washers from the torque converter housing.
-

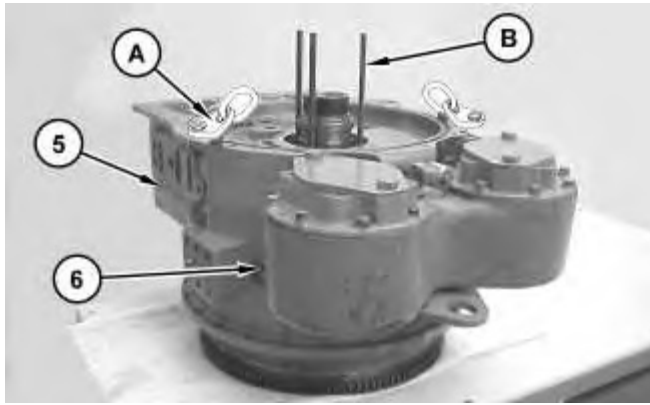


Illustration 4

g01321005

4. Remove bolts (6) from torque converter housing (5) in order to release the separator plate.
5. Attach Tooling (A) and a suitable lifting device to the carrier assembly. Install Tooling (B) to the torque converter housing (5) .
6. Use Tooling (A) and the suitable lifting device to raise torque converter housing (5) approximately 5 mm (0.197 inch) from the torque converter. The weight of torque converter housing (5) is approximately 159 kg (350 lb).

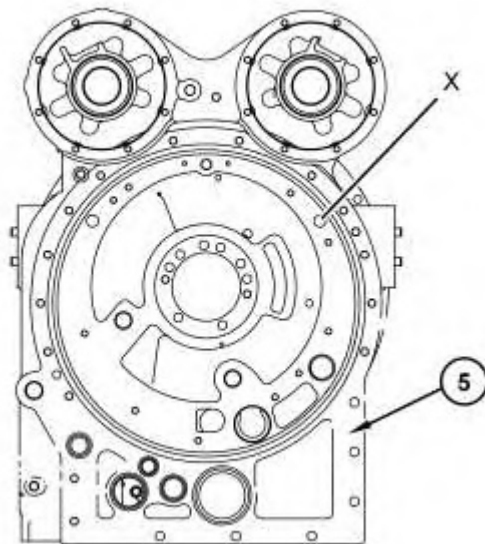


Illustration 5

g01321010

**Note:** Insert the soft drift into hole (X) .

7. Use a hammer and a suitable soft drift to tap the separator plate from torque converter housing (5) . This will enable the separator plate to remain with the torque converter.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)